

RA2L1 Group

CTSU 3D Gesture Electrode Board Sample Software

Introduction

RA2L1 Group is equipped with the hardware called "Capacitive Touch Sensing Unit2 (CTSU2)" that detects human touch by measuring capacitance generated between touch electrodes and the human hand.

This application note describes the software specification of the 3D Gesture Electrode Board (RTK0EG0023B01002BJ) as a sample application of mutual capacitance method used in CTSU2. This product is used in combination with the CPU board of the Capacitive Touch Evaluation System.

Target Device

RA2L1 Group

Related Documents

- 1. RA Family Using QE and FSP to Develop Capacitive Touch Applications (R01AN4934)
- RA2L1 Group Renesas Solution Starter Kit Capacitive Touch Evaluation System User's Manual (R12UZ0084)
- RX130 Group CTSU Application Example: 3D Gesture Demo Set Small version (Hardware) (R01AN4320)
- 4. RX231 Group CTSU Application Example: 3D Gesture Demo Set (Hardware) (R01AN4219)
- 5. RX Family CTSU 3D Gesture Demo Set Sample Software (R01AN4101)
- 6. RX Family CTSU 3D Gesture Demo Set Evaluation Tool '3D Monitor' (R20AN0501)
- 7. RA2L1 Group 3D Gesture Electrode Board (Hardware) (R01AN6126)



Contents

1.	Overview
1.1	Software Structure
1.2	File Structure
2.	Operation Confirmation Environment5
3.	3D Position Calculation
4.	3D Position Calculation Software Specification
4.1	File Configuration6
4.2	Constants
4.3	Structures
4.4	API Function Specifications9
5.	Gesture Recognition Library Specification10
5.1	File Configuration
5.2	Constants
5.3	Structures
5.4	API Function Specifications10
6.	Sample Application
6.1	Touch Interface Configuration
Rev	ision History12



1. Overview

This application note describes the sample software that runs on the 3D Gesture Electrode Board (RTK0EG0023B01002BJ). For descriptions of the corresponding hardware, please refer to the related document "RA2L1 Group 3D Gesture Electrode Board (Hardware) (R01AN6126)".

1.1 Software Structure

Figure 1-1 shows software structure.

Capacitive measurement with CTSU2 employs software generated by QE for Capacitive Touch, a development support tool for capacitive touch sensor application, and FSP configurator. The software is referred to as QE Touch module and QE CTSU module, respectively.

The gesture recognition library is used to analyze changes in the 3D position and determine gestures.

The application notifies the user of the 3D position calculation and gesture recognition results via USB communication with the user's PC.

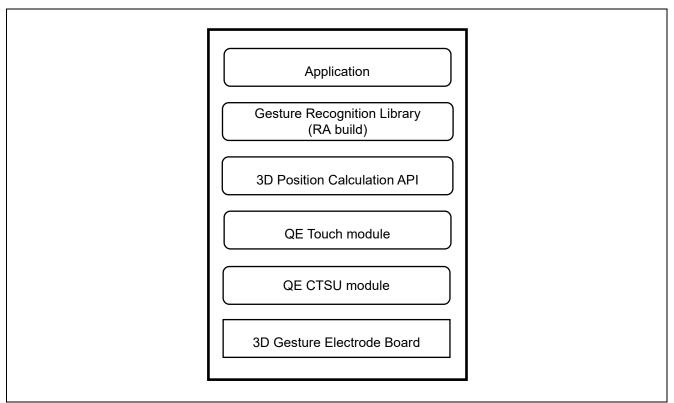


Figure 1-1 Software Structure



1.2 File Structure

Table 1-1 shows the application's file structure. Source files and header files generated by QE touch module and FSP configurator have been omitted for brevity.

	Folder/File Name	Description	
3d_gesture_electrode_sample_project_ra2l1		Project folder	
	cproject	C project file	
	project	Project file	
	d_gesture_electrode_sample_project_ra2l1)ebug_Flat.launch	Debug configuration file	
С	onfiguration.xml	FSP configurator configuration file	
li	bGesture_Recognition_RA.a	Gesture recognition library	
q	e_gen	Source/header file storage folder	
	qe_touch_config.c	QE Touch configuration definition source file	
	qe_touch_config.h	QE Touch configuration definition header file	
	qe_touch_define.h	QE Touch configuration definition header file	
	qe_touch_sample.c	Application file	
s	rc		
	r_cap_position.c	3D position calculation API source file	
	r_cap_position_config.h	3D position calculation API config file	
	r_cap_position_measure.h	3D position calculation API pre-measurement file	
	r_cap_position_if.h	3D position calculation API interface file	
	r_cap_position.h	3D position calculation API header file	
	r_cap_gesture_if.h	Gesture recognition interface file	
0	RE-Touch	QE for Capacitive Touch generated folder	
	3d_gesture_electrode_sample_project_ra2l1. tifcfg	Touch I/F configuration file	

Table 1-1 File Structure



2. Operation Confirmation Environment

Table 2-1 lists the operating conditions of the software.

Table 2-1	Operating	Environment
	operating	

Item	Description
Evaluation board	RTK0EG0018C01001BJ
MCU used	RA2L1 (R7FA2L1AB2DFP)
Operating frequency	48MHz
Operating voltage	5.0V
Integrated Development Environment	e ² studio V2021-10
C compiler	GCC ARM Embedded 9.3.1.20200408
Capacitance touch IDE	QE for Capacitive Touch V2.0.0
Emulator	E2 Emulator Lite

Figure 2-1 shows the connection diagram for the 3D Gesture Electrode Board.

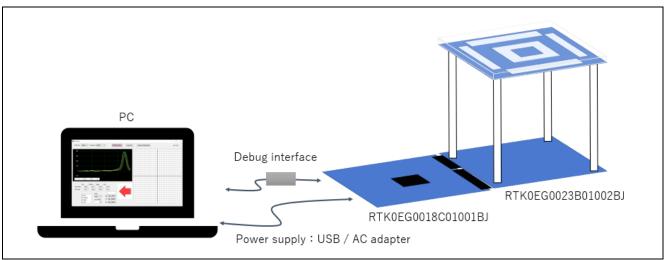


Figure 2-1 3D Gesture Electrode Board Connection Diagram

3. 3D Position Calculation

For 3D position calculation, please refer to the section 4 in "RX Family CTSU 3D Gesture Demo Set Sample Software (R01AN4101)".



4. 3D Position Calculation Software Specification

4.1 File Configuration

Table 4.1 shows the source file used in this sample software.

Table 4-1	Source File

File Name	Description	Notes
r_cap_position.c	3D position calculation API source file	-

Table 4.2 shows the header files.

Table 4-2 Header Files

File Name	Description	Notes
r_cap_position_config.h	3D position calculation API config file	-
r_cap_position_measure.h	3D position calculation API pre- measurement file	-
r_cap_position_if.h	3D position calculation API interface file	-
r_cap_position.h	3D position calculation API header file	For use in 3D position calculation API

4.2 Constants

Table 4.3 shows the r_cap_positon_if.h constants.

Table 4-3 Constants (r_cap_position_if.h)

Constant Name	Setting Value	Description
CAPPOS_NODETECT	(0x3FFF)	Value displayed when no 3D position calculation results are detected
CAPPOS_SUCCESS	(0x00)	3D position calculation API completed normally
CAPPOS_ERROR	(0x01)	3D position calculation API error occurred
CAPPOS_NORMAL	(0x00)	Value displayed when result of noise environment is normal
CAPPOS_NOISY	(0x01)	Value displayed when result of noise environment is noise detection

Table 4.4 shows the r_cap_position_config.h constants.

The default setting value is the value for the 3D Gesture Electrode Board; change as necessary to fit the usage environment.

Table 4-4 Constants (r_cap_position_config.h)

Constant Name	Setting Value	Description
CAPPOS_CNF_MOVAVG_NUM	(15)	Moving average setting value
CAPPOS_CNF_DRIFT_NUM	(150)	Drift measurement number
CAPPOS_CNF_DRIFT_THR	(25)	Drift threshold
CAPPOS_CNF_RESUME_NUM	(25)	resume measurement number
CAPPOS_CNF_RESUME_THR	(20)	Resume threshold
CAPPOS_CNF_NOISE_THR_A	(150)	Noise threshold A (difference with reference value)
CAPPOS_CNF_NOISE_THR_B	(50)	Noise threshold B (difference with past value)
CAPPOS_CNF_MAX_X	(100)	X direction calculation range [mm]
CAPPOS_CNF_MAX_Y	(100)	Y direction calculation range [mm]



Table 4.5 shows the r_cap_position_measure.h constants.

The default setting value is the value for the 3D Gesture Electrode Board; change as necessary to fit the usage environment.

Constant Name	Setting Value	Description
CAPPOS_MEAS_Z0	(10)	Measured Z direction position [mm]
(10)		Set to 1 or higher.
CAPPOS_MEAS_Z1 (20)		Measured Z direction position [mm]
	(20)	Set to a value higher than CAPPOS_MEAS_Z0
CAPPOS_MEAS_Z2	(30)	Measured Z direction position [mm]
	(00)	Set to a value higher than CAPPOS_MEAS_Z1
CAPPOS_MEAS_Z3		Measured Z direction position [mm].
	(40)	Set to a value higher than CAPPOS_MEAS_Z2.
	(10)	If positions were measured in 3 locations, set to 0 for this constant and all
		"CAPPOS_MEAS_*_3" constants.
CAPPOS_MEAS_Z4		Measured Z direction position [mm].
	(50)	Set to a value higher than CAPPOS_MEAS_Z3.
		If positions were measured in 4 locations, set to 0 for this constant and all "CAPPOS_MEAS_*_4" constants.
CAPPOS_MEAS_Z5		Measured Z direction position [mm].
		Set to a value higher than CAPPOS_MEAS_Z4.
	(60)	If positions were measured in 5 locations, set to 0 for this constant and all
		"CAPPOS_MEAS_*_5" constants.
CAPPOS MEAS Z6		Measured Z direction position [mm].
		Set to a value higher than CAPPOS_MEAS_Z5.
	(70)	If positions were measured in 6 locations, set to 0 for this constant and all
		"CAPPOS_MEAS_*_6" constants.
CAPPOS_MEAS_Z7		Measured Z direction position [mm].
	(80)	Set to a value higher than CAPPOS_MEAS_Z6.
	(00)	If positions were measured in 7 locations, set to 0 for this constant and all
		"CAPPOS_MEAS_*_7" constants.
CAPPOS_MEAS_Z8		Measured Z direction position [mm].
	(90)	Set to a value higher than CAPPOS_MEAS_Z7.
	()	If positions were measured in 8 locations, set to 0 for this constant and all
		"CAPPOS_MEAS_*_8" constants.
CAPPOS_MEAS_Z9		Measured Z direction position [mm].
	(100)	Set to a value higher than CAPPOS_MEAS_Z8.
		If positions were measured in 9 locations, set to 0 for this constant and all
CARROS MEAS Y		"CAPPOS_MEAS_*_9" constants. Measured X direction position [mm]
CAPPOS_MEAS_X	(60)	If the X direction is not measured, set to 0 for this constant.
CAPPOS_MEAS_Y		Measured Y direction position [mm]
CAFFOS_WEAS_T	(0)	If the Y direction is not measured, set to 0 for this constant.
CAPPOS MEAS TOP	(15284)	
CAPPOS_MEAS_TOP	(14017)	Top electrode count value when nothing is in vicinity of board Bottom electrode count value when nothing is in vicinity of board
CAPPOS_MEAS_BTM CAPPOS_MEAS_RGT	(14017)	Right electrode count value when nothing is in vicinity of board
CAPPOS_MEAS_KGT	(11348)	Left electrode count value when nothing is in vicinity of board
CAPPOS_MEAS_LFT CAPPOS_MEAS_TOP0	(1346)	
	,	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z0)
CAPPOS_MEAS_TOP1	(14451)	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z1)
CAPPOS_MEAS_TOP2	(14791)	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z2)

Table 4-5	Constants	(r_cap_position_	_measure.h)
-----------	-----------	------------------	-------------



CTSU 3D Gesture Electrode Board Sample Software

CAPPOS_MEAS_TOP3	(14967)	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z3)
CAPPOS_MEAS_TOP4	(15060)	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z4)
CAPPOS_MEAS_TOP5	(15117)	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z5)
CAPPOS_MEAS_TOP6	(15165)	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z6)
CAPPOS MEAS TOP7	(15206)	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z7)
CAPPOS MEAS TOP8	(15215)	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z8)
CAPPOS MEAS TOP9	(15239)	Top electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z9)
CAPPOS MEAS BTM0	(12637)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z0)
CAPPOS MEAS BTM1	(13297)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z1)
CAPPOS MEAS BTM2	(13565)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z2)
CAPPOS MEAS BTM3	(13717)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z3)
CAPPOS MEAS BTM4	(13801)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z4)
CAPPOS MEAS BTM5	(13852)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z5)
CAPPOS MEAS BTM6	(13894)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z6)
CAPPOS MEAS BTM7	(13926)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z7)
CAPPOS_MEAS_BTM8	(13950)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z8)
CAPPOS MEAS BTM9	(13976)	Bottom electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z9)
CAPPOS MEAS RGT0	(10725)	Right electrode count value measured when coordinates are (0, 0, 0, APPOS MEAS Z0)
CAPPOS MEAS RGT1	(11347)	Right electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z1)
CAPPOS MEAS RGT2	(11597)	Right electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z2)
CAPPOS MEAS RGT3	(11729)	Right electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z3)
CAPPOS MEAS RGT4	(11805)	Right electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z4)
CAPPOS MEAS RGT5	(11852)	Right electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z5)
CAPPOS_MEAS_RGT6	(11890)	Right electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z6)
CAPPOS MEAS RGT7	(11918)	Right electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z7)
CAPPOS MEAS RGT8	(11930)	Right electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z8)
CAPPOS MEAS RGT9	(11950)	Right electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z9)
CAPPOS MEAS LFT0	(10229)	Left electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z0)
CAPPOS MEAS LFT1	(10785)	Left electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z1)
CAPPOS MEAS LFT2	(11009)	Left electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z2)
CAPPOS MEAS LFT3	(11124)	Left electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z3)
CAPPOS MEAS LFT4	(11192)	Left electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z4)
CAPPOS_MEAS_LFT5	(11230)	Left electrode count value measured when coordinates are (0, 0, CAPPOS_MEAS_Z5)
CAPPOS MEAS LFT6	(11261)	Left electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z6)
CAPPOS MEAS LFT7	(11279)	Left electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z7)
CAPPOS MEAS LFT8	(11297)	Left electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z8)
CAPPOS MEAS LFT9	(11317)	Left electrode count value measured when coordinates are (0, 0, CAPPOS MEAS Z9)
CAPPOS MEAS X RGT0	(10956)	Right electrode count value measured when coordinates are (CAPPOS MEAS X, 0, CAPPOS MEAS Z0)
CAPPOS MEAS X RGT1	(11417)	Right electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z1)
CAPPOS MEAS X RGT2	(11640)	Right electrode count value measured when coordinates are (CAPPOS MEAS X, 0, CAPPOS MEAS Z2)
CAPPOS MEAS X RGT3	(11760)	Right electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z3)
CAPPOS MEAS X RGT4	(11828)	Right electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z4)
CAPPOS MEAS X RGT5	(11869)	Right electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z5)
CAPPOS MEAS X RGT6	(11905)	Right electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z6)
CAPPOS MEAS X RGT7	(11924)	Right electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z7)
CAPPOS MEAS X RGT8	(11948)	Right electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z8)
CAPPOS MEAS X RGT9	(11940)	Right electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_20)
CAPPOS MEAS X LFT0	(11330)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z0)
CAPPOS_MEAS_X_LITO	(11123)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_A, 0, CAPPOS_MEAS_20) Left electrode count value measured when coordinates are (CAPPOS_MEAS_A, 0, CAPPOS_MEAS_21)
CAPPOS_MEAS_X_LITT	(11232)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_A, 0, CAPPOS_MEAS_21) Left electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_22)
CAPPOS_MEAS_X_LFT2	(11252)	
	(11237)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z3)



CAPPOS_MEAS_X_LFT4	(11278)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z4)
CAPPOS_MEAS_X_LFT5	(11290)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z5)
CAPPOS_MEAS_X_LFT6	(11307)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z6)
CAPPOS_MEAS_X_LFT7	(11308)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z7)
CAPPOS_MEAS_X_LFT8	(11327)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z8)
CAPPOS_MEAS_X_LFT9	(11332)	Left electrode count value measured when coordinates are (CAPPOS_MEAS_X, 0, CAPPOS_MEAS_Z9)
CAPPOS_MEAS_Y_TOP0	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z0)
CAPPOS_MEAS_Y_TOP1	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z1)
CAPPOS_MEAS_Y_TOP2	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z2)
CAPPOS_MEAS_Y_TOP3	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z3)
CAPPOS_MEAS_Y_TOP4	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z4)
CAPPOS_MEAS_Y_TOP5	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z5)
CAPPOS_MEAS_Y_TOP6	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z6)
CAPPOS_MEAS_Y_TOP7	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z7)
CAPPOS_MEAS_Y_TOP8	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z8)
CAPPOS_MEAS_Y_TOP9	(0)	Top electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z9)
CAPPOS_MEAS_Y_BTM0	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z0)
CAPPOS_MEAS_Y_BTM1	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z1)
CAPPOS_MEAS_Y_BTM2	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z2)
CAPPOS_MEAS_Y_BTM3	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z3)
CAPPOS_MEAS_Y_BTM4	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z4)
CAPPOS_MEAS_Y_BTM5	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z5)
CAPPOS_MEAS_Y_BTM6	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z6)
CAPPOS_MEAS_Y_BTM7	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z7)
CAPPOS_MEAS_Y_BTM8	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z8)
CAPPOS_MEAS_Y_BTM9	(0)	Bottom electrode count value measured when coordinates are (0, CAPPOS_MEAS_Y, CAPPOS_MEAS_Z9)

4.3 Structures

Table 4.6 shows the st_position_result_t structures.

Table 4-6 st_cappos_result_t Structures

Туре	Member	Description
int16_t	coord_x	x position calculation result [mm]
int16_t	coord_y	y position calculation result [mm]
int16_t	coord_z	z position calculation result [mm]
uint8_t	noise	Result of noise environment detection

Table 4.7 shows the st_captouch_data_t structures.

Туре	Member	Description
uint16_t	top	Top electrode count value
uint16_t	btm	Bottom electrode count value
uint16_t	rgt	Right electrode count value
uint16_t	lft	Left electrode count value

4.4 API Function Specifications

For API function specification, please refer to "5.4 API Function Specification" in the related document "RX Family CTSU 3D Gesture Demo Set Sample Software (R01AN4101EJ)".



5. Gesture Recognition Library Specification

5.1 File Configuration

Table 5.1 shows the library files.

Table 5-1 Library Files

File Name	Description
libGesture_Recognition_RA.a	Gesture recognition library file (RA build)

Table 5.2 shows the header file.

Table 5-2 Header File

File Name	Description
r_cap_gesture_if.h	Gesture recognition API interface file

5.2 Constants

Table 5.3 shows the constants. These are defined by enumerated type e_gesture_result_t.

Constant Name	Setting Value	Description
GESTURE_RESULT_NONE	(0)	No recognition
GESTURE_RESULT_RIGHT_SWIPE	(1)	Right swipe
GESTURE_RESULT_LEFT_SWIPE	(2)	Left swipe
GESTURE_RESULT_FRONT_SWIPE	(3)	Front swipe
GESTURE_RESULT_BACK_SWIPE	(4)	Back swipe
GESTURE_RESULT_DOWN_SWIPE	(5)	Push
GESTURE_RESULT_CW_SLOW	(6)	Draw circle (Clockwise, Slow)
GESTURE_RESULT_CW_FAST	(7)	Draw circle (Clockwise, Fast)
GESTURE_RESULT_RESERVE	(8)	Reserved
GESTURE_RESULT_CCW_SLOW	(9)	Draw circle (Counter clockwise, Slow)
GESTURE_RESULT_CCW_FAST	(10)	Draw circle (Counter clockwise, Fast)
GESTURE_RESULT_RESERVE2	(11)	Reserved2

Table 5-3 Constants

5.3 Structures

Table 5.4 shows the st_cappos_input_t structure.

Table 5-4 st_cappos_input_t Structures

Туре	Member	Description
int16_t	coord_x	x position calculation result [mm]
int16_t	coord_y	y position calculation result [mm]
int16_t	coord_z	z position calculation result [mm]
uint8_t	noise	Result of noise environment detection

5.4 API Function Specifications

For API function specification, please refer to "6.4 API Function Specification" in the related document "RX Family CTSU 3D Gesture Demo Set Sample Software (R01AN4101)".



6. Sample Application

This section describes the sample application. The 3D Gesture sample application has been added based on the QE Touch module application file qe_touch_sample.c.

• 3D Gesture Electrode Board initialization

Initialization function SampleInitialize() has been added before the qe_touch_main function loop.

Results notification

Function SampleApplication() that notifies the user of the 3D position calculation and gesture recognition results has been added to the qe_touch_main function loop. Based on this, SampleApplication() is called for each touch measurement cycle.

The 3D position calculation and gesture recognition results can be confirmed with the evaluation tool '3D Monitor'. For detail, please refer to the related document "RX Family CTSU 3D Gesture Demo Set Evaluation Tool '3D Monitor' (R20AN0501)".


Function SampleAplReceive() is called at the completion of receiving SCI6 receive interrupt function user_uart_callback(). When receiving the "Monitor Start" command from the evaluation tool, the 3D position calculation and gesture recognition results are transmitted to the tool. When receiving the "Monitor Stop" command, transmission is stopped. For the format of communication with the evaluation tool, please refer to "7. Sample Application" in the related document "RX Family CTSU 3D Gesture Demo Set Sample Software (R01AN4101)".

Table 6-1 shows UART settings.

Setting	Value
Baud rate	38400bps
Data length	8bit
Parity	None
Stop bit	1bit
Flow control	None

6.1 Touch Interface Configuration

In this software, TS pins are configured as shown in Figure 6-1

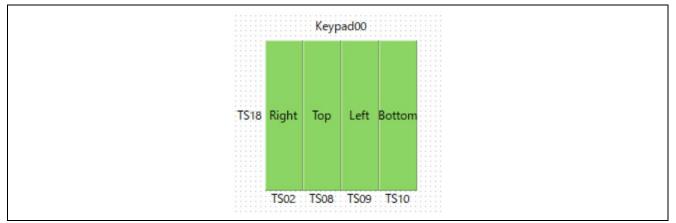





Revision History

		Description	
Rev.	Date	Page	Summary
1.00	2021.12.6	-	First edition issued



General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power is supplied until the power is supplied until the power reaches the level at which reseting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a systemevaluation test for the given product.

Notice

- Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
- 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
- 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
- 5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
- 6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

- 7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
- 8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
- 9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
- 10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
- 12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
- This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
 Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit: www.renesas.com/contact/.