



Integrated Device Technology, Inc.
2975 Stender Way, Santa Clara, CA - 95054

PRODUCT/PROCESS CHANGE NOTICE (PCN)

PCN #: **A-0408-01 REV.1** DATE: 10/22/2004

Product Affected: PQFP package family
(see attachment for affected part #s).

Date Effective: 11/17/2004

MEANS OF DISTINGUISHING CHANGED DEVICES:

- ☐ Product Mark
☒ Back Mark Lot Number will have "N1" suffix
☐ Date Code
☐ Other

Contact: Geoffrey Cortes

Title: Manager, Corporate Quality & Reliability

Attachment: ☒ Yes ☐ No

Phone #: (408) 492-8321

Fax #: (408) 727-2328

Samples: See attachment

E-mail: Geoffrey.Cortes@idt.com

DESCRIPTION AND PURPOSE OF CHANGE:

- ☐ Die Technology
☐ Wafer Fabrication Process
☐ Assembly Process
☐ Equipment
☒ Material IDT has qualified the PQFP package family using new mold compound material from Sumitomo and a new die attach material from Ablestik. This notification is to advise our customer of qualification and addition of new assembly materials. The new mold compound and die attach material can meet 260°C peak reflow temperature requirements. Please see attachment for qualification data and additional details.
☐ Testing
☐ Manufacturing Site
☐ Data Sheet
☐ Other

REV.1 Revised the material set information for PM64 package on page 1 of attachment. The PCN effective date will be the same as the original PCN.

RELIABILITY/QUALIFICATION SUMMARY:

Please see attached reliability qualification data.

CUSTOMER ACKNOWLEDGMENT OF RECEIPT:

IDT records indicate that you require written notification of this change. Please use the acknowledgement below or E-Mail to grant approval or request additional information. If IDT does not receive acknowledgement within 30 days of this notice it will be assumed that this change is acceptable.

IDT reserves the right to ship either version manufactured after the process change effective date until the inventory on the earlier version has been depleted.

Customer: _____

☐ *Approval for shipments prior to effective date.*

Name/Date: _____

E-Mail Address: _____

Title: _____

Phone# /Fax# : _____

CUSTOMER COMMENTS: _____

IDT ACKNOWLEDGMENT OF RECEIPT:

RECD. BY: _____

DATE: _____



Integrated Device Technology, Inc.
2975 Stender Way, Santa Clara, CA - 95054

PRODUCT/PROCESS CHANGE NOTICE (PCN)

ATTACHMENT - PCN #: A-0408-01 REV.1

PCN Type: Assembly Material Change
Data Sheet Change: None
Detail Of Change:

IDT has qualified the PQFP package family using new mold compound material from Sumitomo and a new die attach material from Ablestik. The successful completion of this qualification has improved IDT's support of current and future production needs for components that can meet 260°C peak reflow temperature requirements. There is no change in Moisture Sensitive Level (MSL). Products will be shipped at the existing MSL and each shipment is labeled with the correct MSL. Please refer to the label on each shipment for MSL information. Customer should not be adversely impacted by this change.

Description	Affected Package Types	Material	
		Existing	Add
Mold Compound Material	DB44, PM80/100/144/160/208, PX128, PU128/144	Sumitomo 6300 series	Sumitomo EME-G700 series
	DN52 / PM64	Sumitomo 6650RA	Sumitomo EME-G700 series
Die Attach Material	DB44, PM80/100/144/160/208, PX128, PU128/144	Ablestik 84-1MISR4	Ablestik 3230
	DN52 / PM64	Ablestik 8361J	Ablestik 2200

The affected products are as follow:

Industry Package	IDT Part No	Industry Package	IDT Part No	Industry Package	IDT Part No
PQFP 44	IDT728980DB	PQFP 64	IDT821054PQF	PQFP 144	IDT77V1253L25PGI
PQFP 44	IDT728981DB	PQFP 64	IDT821064PQF	PQFP 144	IDT77V1254L25PGI
PQFP 44	IDT728985DB	PQFP 100	IDT7290820PQF	PQFP 144	IDT77V1264L200PG
PQFP 44	IDT72V8980DB	PQFP 100	IDT72V70200PQF	PQFP 144	IDT77V1264L200PGI
PQFP 44	IDT72V8981DB	PQFP 100	IDT72V90823PQF		
PQFP 44	IDT72V8985DB	PQFP 128	IDT821068PX		
PQFP 44	IDT72V8988DB	PQFP 128	IDT82V2108PX		
PQFP 52	IDT821034DN	PQFP 144	IDT77V1253L25PG		

Note: For T & R (shipping method) "8" is added to the p/n and for industrial grade "I" is added to the part number.

Samples are not built ahead of the change and are limited to selective devices. Please contact your local field sales representative for sample availability and additional information.



Integrated Device Technology, Inc.
2975 Stender Way, Santa Clara, CA - 95054

PRODUCT/PROCESS CHANGE NOTICE (PCN)

ATTACHMENT - PCN #: A-0408-01 REV.1

Qualification Plan #: P02-11-11

Test Vehicle: IDT82V2108PX/IDT821034DN

Qualification Test Plan and Results:

Test Description	Test Method	Sample Size / # of Fails	Test Results Pkg - PX128 IDT82V2108PX	Test Results Pkg - DN52 IDT821034DN
* High Accelerated Stress Test (Biased, 130 °C/85% RH, 100 Hrs)	JESD22-A110-B	45/0	45/0	45/0
* Temperature Cycling (-65 °C to 150 °C, 500 cycle)	JESD22-A104-B	45/0	45/0	45/0
* Auto Clave (121 °C, 2 ATM, 168 Hrs)	JESD22-A102-C	45/0	45/0	45/0
Life Test (125 °C, 1000 Hrs)	JESD22-A108-B	77/0	77/0	77/0
High Temp Stabilization Bake (150 °C, 1000 Hrs)	JESD22-A103-B	77/0	77/0	77/0
Moisture Sensitivity Classification	J-STD-020B	90/0	90/0	90/0
Internal Visual Inspection	MIL-STD-883 Method - 2010	5/0	5/0	5/0
External Visual Inspection	JESD22-B101	25/0	25/0	25/0
X-ray Examination	MIL-STD-883 Method - 2015	45/0	45/0	45/0
Bond Pull Test	MIL-STD-883 Method - 2011	5/0	5/0	5/0
Lead Integrity Test	JESD22-B105C	3/0	3/0	3/0
Solderability Test	JESD22-B102-C J-STD-002	5/0	5/0	5/0
Bake & Ball Shear Strength	JESD22-B116	5/0	5/0	5/0
Physical Dimensions	JESD22-B100-B	5/0	5/0	5/0
Die Shear Strength	MIL-STD-883 Method - 2019	5/0	5/0	5/0

Notes: * Test requires moisture pre-conditioning sequence per JESD22-A113C.

SUMITOMO BAKELITE

SUMIKON[®]

EME-G700

MULTI-AROMATIC RESIN
Br/Sb FREE
FOR Pb FREE PKG
LOW WATER ABSORPTION

EME-G700

TYPICAL PROPERTIES:

ITEM	TEST METHOD	UNIT	VALUES
SPIRAL FLOW	SB-U-03-003	cm	110
GEL TIME (at 175°C)	SB-U-03-005	sec	30
THERMAL EXPANSION α_1	SB-U-02-002	$\times 10^{-5} 1/^\circ\text{C}$	1.2
THERMAL EXPANSION α_2	SB-U-02-002	$\times 10^{-5} 1/^\circ\text{C}$	4.9
T _g	SB-U-02-002	°C	130
THERMAL CONDUCTIVITY	SB-U-02-004	W/m \cdot °C	88×10^{-2}
FLEXURAL STRENGTH	SB-U-01-001	N/mm ²	
(at 25°C)			170
(at 240°C)			21
FLEXURAL MODULUS	SB-U-01-002	$\times 10^2 \text{ N/mm}^2$	
(at 25°C)			190
(at 240°C)			6.0
SPECIFIC GRAVITY	SB-U-03-018	-----	1.95
VOLUME RESISTIVITY	SB-U-00-004	$\Omega \cdot \text{cm}$	1×10^{12}
(at 150°C)			
UL FLAME CLASS	SB-U-03-003	UL-94	V-0
WATER ABSORPTION	SB-U-03-002	% weight gain	0.15
(boiling, 24 h)			
EXTRACTED Na ⁺	SB-U-04-043	ppm	1
EXTRACTED Cl ⁻	SB-U-04-043	ppm	5

TYPICAL, NOT GUARANTEED PROPERTIES

MOLDING AND POST MOLD CURE CONDITIONS:

	STANDARD	RANGE
TRANSFER PRESSURE	$80 \times 10^5 \text{ Pa}$	$70\text{-}120 \times 10^5 \text{ Pa}$
MOLD TEMPERATURE	180°C	175-185°C
CURE TIME (C or A)#	A/90 sec	70-120 sec
POST-MOLD CURE TEMP	175°C	170-180°C
POST-MOLD CURE TIME	6 h	4-8 h

#Conventional or Auto

rev. Feb. '03

The information contained herein is true and accurate to our best knowledge. Sumitomo Bakelite Co., makes no warranty or guarantee of results and assumes no obligation or liabilities from the use of any products mentioned herein. This publication is not to be taken as license to operate under or recommendations to infringe upon any patents.



SUMITOMO BAKELITE CO., LTD.

Tennoz Parkside Building, 5-8 Higashi-Shinagawa, 2-Chome Shinagawa-ku, Tokyo 140, Japan

ABLEBOND® 2200

SNAP CURE LOW STRESS DIE ATTACH ADHESIVE

DESCRIPTION

ABLEBOND® 2200 low stress die attach adhesive is designed for high reliability metal leadframe packaging applications. This adhesive, which is based on Ables-

tik's proprietary hybrid chemistry, features low modulus and increased hot wet die shear strength for improved JEDEC performance.

FEATURES

- Low stress
- Snap/spot cure
- Improved JEDEC performance
- Excellent hot/wet adhesion to metal leadframes
- Low moisture absorption
- Bondline thickness control
- Solvent-free

Typical Uncured Properties		ABLEBOND 2200		Test Description							Test Method
Filler Type		Silver									
Viscosity @ 25°C		9000 cP		Brookfield CP51 @ 5 rpm							ATM-0018
Thixotropic Index		4.8		Viscosity @ 0.5/Viscosity @ 5 rpm							ATM-0089
Est Work Life @ 25°C		24 hours		25% increase in viscosity @ RT							ATM-0087
Est Storage Life @ -40°C		1 year									ATM-0068
Cure Process Data		ABLEBOND 2200		Test Description							Test Method
Weight Loss on Cure		1.7%		10 x 10 mm Si die on glass slide							ATM-0031
Recommended Cure Condition		Fast Oven Cure		30 minutes @ 175°C							
Alternate Cure Condition		Hot Plate Spot Cure		30 seconds @ 200°C							
Snap Cure Profile		Zone Number	1	2	3	4	5	6	7	Time	
		Temp °C	165	185	200	220	220	220	220	60 sec	
		N ₂ Flow	10 liters/minute @ 150°C								
PHYSIOCHEMICAL PROPERTIES - Post Cure		ABLEBOND 2200		Test Description							Test Method
Ionics	Chloride Sodium Potassium	< 5 ppm < 5 ppm < 5 ppm		Teflon flask, 5 gm sample/20-40 mesh, 50 gm DI water, 100°C for 24 hours							ATM-0007
Water Extract Conductivity		26 µmhos/cm		Conductometer							ATM-0044
pH		4.8		pH meter							ATM-0002
Weight Loss @ 300°C		1.4%		Thermogravimetric analysis							ATM-0073

The figures shown above are typical values only. If you need to write a specification, please request our current Standard Release Specification.

2200				
PHYSIOCHEMICAL PROPERTIES - Post Cure	ABLEBOND 2200		Test Description	Test Method
Glass Transition Temperature	-15°C		TMA penetration mode	ATM-0058
Coefficient of Thermal Expansion Below Tg Above Tg	66 ppm/°C 290 ppm/°C		TMA expansion mode	ATM-0055
Dynamic Tensile Modulus @-65°C @ 25°C @ 150°C @ 250°C	2600 MPa (370,000 psi) 170 MPa (24,000 psi) 81 MPa (12,000 psi) 120 MPa (17,000 psi)		Dynamic mechanical thermal analysis (DMTA) using <0.5mm thick sample	ATM-0112
Moisture Absorption @ Saturation	0.24%		Dynamic vapor sorption after 85°C/85% RH exposure	ATM-0093
THERMAL/ELECTRICAL PROPERTIES - Post Cure	ABLEBOND 2200		Test Description	Test Method
Thermal Conductivity	2.0 W/mK		C-MATIC conductance tester	ATM-0017
Volume Resistivity	Oven Cured	0.001 ohm-cm	4-point probe	ATM-0020
	Snap Cured	0.0005 ohm-cm		
MECHANICAL PROPERTIES - Post Cure	ABLEBOND 2200		Test Description	Test Method
Die Shear Strength @ 25°C	7.0 kg _f /die		2 x 2mm (80 x 80 mil) Si die on Ag/Cu leadframe	ATM-0052
Die Shear Strength (kg _f /die) vs. Temperature	@25°C	12	3 x 3 mm (120 x 120 mil) Si die on Ag/Cu leadframe	ATM-0052
	@150°C	7.0		
	@200°C	6.2		
	@250°C	4.7		
Die Shear Strength (kg _f /die) after 85°C/85% RH exposure for 168 hours	@25°C	16	3 x 3 mm (120 x 120 mil) Si die on Ag/Cu leadframe	ATM-0052
	@150°C	6.2		
	@200°C	6.2		
	@250°C	5.6		
Chip Warpage @ 25°C vs. Chip Size	Post Cure	15 μm	12.7 x 12.7 x0.38mm (500 x 500 x 15 mil) Si die on 0.2mm (8 mil) thick Ag/Cu LF	ATM-0059
	+ Wirebond (1 min @ 250°C)	18 μm		
	+ Post Mold Bake (4 hrs @ 175°C)	18 μm		

APPLICATION GUIDELINES

SHIPMENT

This Ablestik product is packed and shipped in dry ice at -80°C . Inside every dry ice shipment of Ablestik's products is a small packet containing the ABLECUBE. This is a small blue cube which retains its shape at -40°C . If the ABLECUBE is exposed to temperatures higher than -40°C , the cube will melt.

Please check the state of the ABLECUBE to ensure the integrity of the shipment. If the ABLECUBE has melted upon receiving inspection, place the entire shipment in a -40°C freezer and contact your Ablestik Customer Service or Sales Representative.

UNPACKING

Transfer the syringes from the dry ice to a -40°C freezer without ANY delays. Freeze-thaw voids will form in the syringes if the syringes are repeatedly thawed and refrozen.

STORAGE

This Ablestik product must be stored at -40°C . The shelf life of the material is only valid when the material has been stored at the specified storage condition. Incorrect storage conditions will degrade the performance of the material in both handling (e.g. dispensing or screen printing) and final cured properties.

THAWING

Allow the container to reach room temperature before use. After removing from the freezer, set the syringes to stand vertically while thawing. Refer to the Syringe Thaw Time chart for the thaw time recommendation.

DO NOT open the container before contents reach ambient temperature. Any moisture that collects on the thawed container should be removed prior to opening the container.

DO NOT re-freeze. Once thawed to room temperature, the adhesive should not be re-frozen.

ADHESIVE APPLICATION

Thawed adhesive should be immediately placed on dispense equipment for use. If the adhesive is transferred to a final dispensing reservoir, care must be exercised to avoid entrapment of contaminants and/or air into the adhesive.

Adhesive must be completely used within the product's recommended work life of 24 hours.

Apply enough adhesive to achieve a 25-50 μm (1-2 mil) wet bondline thickness, dispensed with approximately 25% - 50% filleting on all sides of the die. Alternate dispense amounts may be used depending on the application requirements. Star or crossed shaped dispense patterns will yield fewer bondline voids than the matrix style of dispense pattern.


Contact your Ablestik Technical Service Department for detailed recommendation on adhesive application, including dispensing.

CURE

This adhesive can be cured in box or in-line ovens. The recommended box oven cure temperature for this adhesive is 175°C .

AVAILABILITY

ABLEBOND® adhesives are packaged in syringes or jars per customer specification. Available package sizes range from 1cc to 30cc and 1 ounce to 1 pound. For details, refer to the Ablestik Standard Package Data Set or contact your Customer Service Representative.

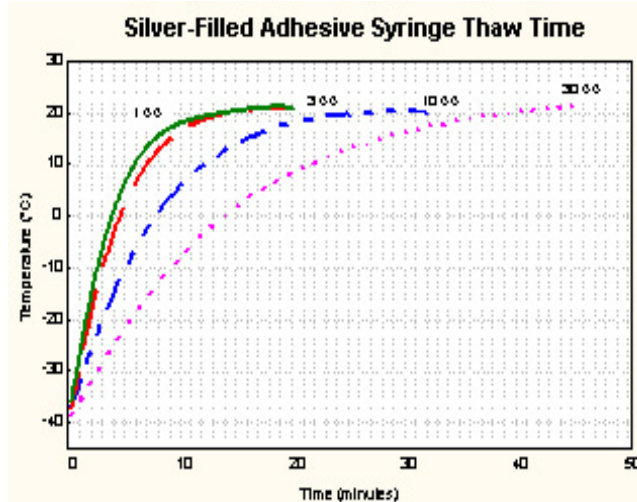

20021 Susana Road, Rancho Dominguez, CA 90221
(310) 764-4600 Fax (310) 764-2545 Customer Service Fax (310) 764-1783

For a technical contact nearest you, visit

www.ablestik.com

The information given and the recommendations made herein are believed to be accurate but no guarantee of their accuracy is made. In every case we recommend that purchasers before using any product conduct their own tests to determine whether the product is suitable for their particular purposes under their own operating conditions. No representative of ours has any authority to waive or change the foregoing provisions but, subject to such provisions, our engineers are available to assist purchasers in adapting our products to their needs. Nothing contained herein shall be construed to imply the nonexistence of any relevant patents or to constitute a permission, inducement or recommendation to practice any invention covered by any patent, without the authority from the owner of this patent. These materials are not designed or manufactured for implantation in the human body. Approval from FDA for such use as part of any product to be implanted in the human body has NOT been sought nor received. We also expect purchasers to use our products in accordance with the guiding principles of the American Chemistry Council's Responsible Care® program.

ABLEBOND® 3230

LOW STRESS CONDUCTIVE DIE ATTACH ADHESIVE

DESCRIPTION

ABLEBOND® 3230 low stress, electrically conductive die attach adhesive is designed for high reliability packaging applications. This electrically conductive adhesive offers

improved JEDEC performance, fast oven cure, and excellent adhesion to copper. It can be used in various package sizes.

FEATURES

- Low stress
- Improved JEDEC performance
- Fast oven cure
- Excellent adhesion to copper

TYPICAL UNCURED PROPERTIES		TEST DESCRIPTION	TEST METHOD
Filler Type	Silver	Brookfield CP-51 @ 5 rpm Viscosity @ 0.5/Viscosity @ 5 rpm 25% increase in viscosity @ RT	
Viscosity @ 25°C	9,000 cps		PT-42
Thixotropic Index	5.6		PT-61
Estimated Work Life @ 25°C	24 hours		PT-59
Estimated Storage Life @ -40°C	1 year		PT-13
CURE PROCESS DATA			
Weight Loss on cure	3.9%	10 x 10 mm Si die on glass slide	PT-80
Recommended Cure Condition		30 minute ramp to 175°C; hold at 175°C for 15 minutes	

Typical properties are not intended to be used as specification limits. If you need to write a specification, please request our Standard Release Specification.

PHYSIOCHEMICAL PROPERTIES - POST CURE			TEST DESCRIPTION	TEST METHOD
Ionics	Chloride	5 ppm	Teflon flask 5 gm sample/ 20-40 mesh 50 gm DI water 100°C for 24 hours	CT-13
	Sodium	5 ppm		
	Potassium	1 ppm		
Glass Transition Temperature (Tg)		37°C	TMA penetration mode	MT-14
Coefficient of Thermal Expansion			TMA expansion mode	MT-9
	Below Tg	80 ppm/°C	Dynamic mechanical thermal analysis using <0.5 mm thick sample	MT-12
	Above Tg	205 ppm/°C		
Dynamic Tensile Modulus				
	@ -65°C	3500 MPa (510 Kpsi)		
	@ 25°C	2900 MPa (430 Kpsi)		
	@ 150°C	69 MPa (10 Kpsi)	Dynamic vapor sorption after 85°C/85% RH exposure	PT-65
	@ 250°C	90 MPa (13 Kpsi)		
Moisture Absorption @ Saturation		0.29%		
THERMAL/ELECTRICAL PROPERTIES - POST CURE				
Thermal Conductivity		0.6 W/mK	Laser flash	PT-96
Volume Resistivity		0.05 ohm-cm	4-point probe	PT-46
MECHANICAL PROPERTIES - POST CURE				
Die Shear Strength @ 25°C		15 kg_f/die	2 x 2 mm Si die on Ag/Cu LF	MT-4

Typical properties are not intended to be used as specification limits. If you need to write a specification, please request our Standard Release Specification.

ABLEBOND® 3230

LOW STRESS CONDUCTIVE DIE ATTACH ADHESIVE

APPLICATION GUIDELINES

SHIPMENT

This Ablestik product is packed and shipped in dry ice at -80°C. Inside every dry ice shipment of Ablestik's products is a small packet containing the ABLECUBE. This is a small blue cube which retains its shape at -40°C. If the ABLECUBE is exposed to temperatures higher than -40°C, the cube will melt.

Please check the state of the ABLECUBE to ensure the integrity of the shipment. If the ABLECUBE has melted upon Receiving Inspection, place the entire shipment in a -40°C freezer and contact your Ablestik Customer Service or Sales Representative.

UNPACKING

Transfer the syringes from the dry ice to a -40°C freezer without ANY delays. Freeze-thaw voids will form in the syringes if the syringes are repeatedly thawed and refrozen.

STORAGE

This Ablestik product must be stored at -40°C. The shelf life of the material is only valid when the material has been stored at the specified storage condition. Incorrect storage conditions will degrade the performance of the material in both handling (e.g. dispensing or screen printing) and final cured properties.

THAWING

Allow the container to reach room temperature before use. After removing from the freezer, set the syringes to stand vertically while thawing. Refer to Syringe Thaw Time chart below for the thaw time recommendation.

DO NOT open the container before contents reach ambient temperature. Any moisture that collects on the thawed container should be removed prior to opening the container.

DO NOT re-freeze. Once thawed to room temperature, the adhesive should not be re-frozen.

ADHESIVE APPLICATION

Thawed adhesive should be immediately placed on dispense equipment for use. If the adhesive is transferred to a final dispensing reservoir, care must be exercised to avoid entrapment of contaminants and/or air into the adhesive. Adhesive must be completely used within the product's recommended work life of 24 hours.

Apply enough adhesive to achieve a 25-50 µm (1-2 mil) wet bondline thickness, dispensed with approximately 25% - 50% filleting on all sides of the die. Alternate dispense amounts may be used depending on the application requirements. Star or cross shaped dispense patterns will yield fewer bondline voids than the matrix style of dispense pattern.


Contact Ablestik Technical Service Department for detailed recommendation on adhesive application, including dispensing.

CURE

This adhesive may be cured in box ovens. Refer to the recommended cure profile on this technical data sheet.

AVAILABILITY

Ablebond® adhesives are packaged in syringes or jars per customer specification. Available package sizes range from 1cc to 30cc and 1 ounce to 1 pound. For details, refer to the Ablestik Standard Package Data Set, or contact your Customer Service Representative.

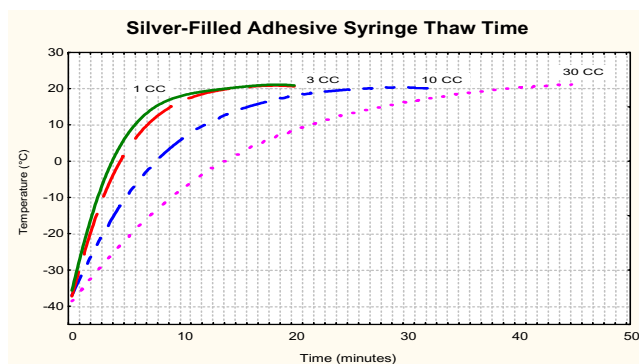

CAUTION This product may cause skin irritation in sensitive persons. Avoid skin contact. If contact does occur, wash area immediately with soap and water. Please refer to Material Safety Data Sheet (OSHA) for more details.

NATIONAL STARCH MAKES NO REPRESENTATIONS OR WARRANTIES, EXPRESSED OR IMPLIED, CONCERNING THE SUITABILITY OF THESE MATERIALS FOR USE IN IMPLANTATION IN THE HUMAN BODY OR FOR ANY OTHER USE. These materials are not designed or manufactured for use in implantation in the human body. National Starch has not performed clinical testing of these materials for implantation. National Starch has neither sought, nor received, approval from the FDA for the use of these materials in implantation in the human body.



20021 Susana Road, Rancho Dominguez, CA 90221
(310) 764-4600 Fax 310-764-2545 CUSTOMER SERVICE FAX 310-764-1783

DISCLAIMER: All statements, technical information and recommendations contained herein are based on tests we believe to be accurate, but the manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising from the use of the product. No statement or recommendation not based on tests we believe to be accurate, but the manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising from the use of the product. Before using, unless in an agreement signed by officers of express or implied. Seller and manufacturer's user shall determine the suitability of the product seller and manufacturer.