

RX62T Group

Renesas Starter Kit Tutorial Manual

RENESAS MCU
RX Family / RX600 Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corporation without notice. Please review the latest information published by Renesas Electronics Corporation through various means, including the Renesas Electronics Corporation website (<http://www.renesas.com>).

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: “Standard”, “High Quality”, and “Specific”. The recommended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as “Specific” without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as “Specific” or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is “Standard” unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.

“Standard”: Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.

“High Quality”: Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.

“Specific”: Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.

Disclaimer

By using this Renesas Starter Kit (RSK), the user accepts the following terms:

The RSK is not guaranteed to be error free, and the entire risk as to the results and performance of the RSK is assumed by the User. The RSK is provided by Renesas on an "as is" basis without warranty of any kind whether express or implied, including but not limited to the implied warranties of satisfactory quality, fitness for a particular purpose, title and non-infringement of intellectual property rights with regard to the RSK. Renesas expressly disclaims all such warranties. Renesas or its affiliates shall in no event be liable for any loss of profit, loss of data, loss of contract, loss of business, damage to reputation or goodwill, any economic loss, any reprogramming or recall costs (whether the foregoing losses are direct or indirect) nor shall Renesas or its affiliates be liable for any other direct or indirect special, incidental or consequential damages arising out of or in relation to the use of this RSK, even if Renesas or its affiliates have been advised of the possibility of such damages.

Precautions

The following precautions should be observed when operating any RSK product:

This Renesas Starter Kit is only intended for use in a laboratory environment under ambient temperature and humidity conditions. A safe separation distance should be used between this and any sensitive equipment. Its use outside the laboratory, classroom, study area or similar such area invalidates conformity with the protection requirements of the Electromagnetic Compatibility Directive and could lead to prosecution.

The product generates, uses, and can radiate radio frequency energy and may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off or on, you are encouraged to try to correct the interference by one or more of the following measures;

- ensure attached cables do not lie across the equipment
- reorient the receiving antenna
- increase the distance between the equipment and the receiver
- connect the equipment into an outlet on a circuit different from that which the receiver is connected
- power down the equipment when not in use
- consult the dealer or an experienced radio/TV technician for help NOTE: It is recommended that wherever possible shielded interface cables are used.

The product is potentially susceptible to certain EMC phenomena. To mitigate against them it is recommended that the following measures be undertaken;

- The user is advised that mobile phones should not be used within 10m of the product when in use.
- The user is advised to take ESD precautions when handling the equipment.

The Renesas Starter Kit does not represent an ideal reference design for an end product and does not fulfil the regulatory standards for an end product.

How to Use This Manual

1. Purpose and Target Readers

This manual is designed to provide the user with an understanding of the RSK hardware functionality, and electrical characteristics. It is intended for users designing sample code on the RSK platform, using the many different incorporated peripheral devices.

The manual comprises of an overview of the capabilities of the RSK product, but does not intend to be a guide to embedded programming or hardware design. Further details regarding setting up the RSK and development environment can found in the tutorial manual.

Particular attention should be paid to the precautionary notes when using the manual. These notes occur within the body of the text, at the end of each section, and in the Usage Notes section.

The revision history summarizes the locations of revisions and additions. It does not list all revisions. Refer to the text of the manual for details.

The following documents apply to the RX62T Group. Make sure to refer to the latest versions of these documents. The newest versions of the documents listed may be obtained from the Renesas Electronics Web site.

Document Type	Description	Document Title	Document No.
User's Manual	Describes the technical details of the RSK hardware.	RSKRX62T User's Manual	REJ10J2194
Software Manual	Describes the functionality of the sample code, and its interaction with the Renesas Peripheral Driver Library (RPDL)	RSKRX62T Software Manual	REJ10J2197
Tutorial	Provides a guide to setting up RSK environment, running sample code and debugging programs.	RSKRX62T Tutorial Manual	REJ10J2195
Quick Start Guide	Provides simple instructions to setup the RSK and run the first sample, on a single A4 sheet.	RSKRX62T Quick Start Guide	REJ10J2196
Schematics	Full detail circuit schematics of the RSK.	RSKRX62T Schematics	RJJ99J0072
Hardware Manual	Provides technical details of the RX62T micro-controller.	RSKRX62T Hardware Manual	R01UH0034EJ0110

2. List of Abbreviations and Acronyms

Abbreviation	Full Form
ADC	Analogue to Digital Converter
API	Application Programming Interface
CD	Compact Disk
CPU	Central Processing Unit
E1	E1 Emulator
E20	E20 Emulator
HEW	High-performance Embedded Workshop
LCD	Liquid Crystal Display
LED	Light Emitting Diode
ROM	Read-Only Memory
RPDL	Renesas Peripheral Driver Library
RSK	Renesas Starter Kit
USB	Universal Serial Bus

Table of Contents

1. Overview.....	7
1.1 Purpose.....	7
1.2 Features.....	7
2. Introduction.....	8
3. Tutorial Project Workspace.....	9
4. Project Workspace.....	10
4.1 Introduction.....	10
4.2 Starting HEW and Connecting the E1 Debugger.....	10
4.3 Build Configurations and Debug Sessions.....	11
4.3.1 Build Configuration.....	11
4.3.2 Debug Session.....	11
5. Building the Tutorial Program.....	12
5.1 Building Code.....	12
5.2 Connecting the Debugger.....	13
5.3 Connecting to the Target with the E1 Debugger.....	13
6. Downloading and Running the Tutorial.....	17
6.1 Downloading the Program Code.....	17
6.2 Running the Tutorial.....	17
7. Reviewing the Tutorial Program.....	18
7.1 Program Initialisation.....	18
7.2 Main Functions.....	21
8. Additional Information.....	24

1. Overview

1.1 Purpose

This RSK is an evaluation tool for Renesas microcontrollers. This manual describes how to get the RSK tutorial started, and basic debugging operations.

1.2 Features

This RSK provides an evaluation of the following features:

- Renesas microcontroller programming
- User code debugging
- User circuitry such as switches, LEDs and a potentiometer
- Sample application
- Sample peripheral device initialisation code

The RSK board contains all the circuitry required for microcontroller operation.

2. Introduction

This manual is designed to answer, in tutorial form, the most common questions asked about using a Renesas Starter Kit (RSK). The tutorials help explain the following:

- How do I compile, link, download and run a simple program on the RSK?
- How do I build an embedded application?
- How do I use Renesas' tools?

The project generator will create a tutorial project with two selectable build configurations.

- 'Debug' is a project built with the debugger support include.
- 'Release' is a project with optimised compile options, producing code suitable for release in a product.

Files referred to in this manual are installed using the project generator as you work through the tutorials. The tutorial examples in this manual assume that installation procedures described in the RSK Quick Start Guide have been completed. Please refer to the quick start guide for details of preparing the configuration.

These tutorials are designed to show you how to use the RSK and are not intended as a comprehensive introduction to the High-performance Embedded Workshop (HEW) debugger, compiler toolchains or the E1 emulator. Please the relevant user manuals for more in-depth information.

3. Tutorial Project Workspace

The workspace includes all of the files for two build configurations, 'Build' and 'Release'. The tutorial code is common to both build configurations; and is designed to show how code can be written, debugged and then downloaded without the debug monitor in a 'Release' situation.

The build configuration menu in High-performance Embedded Workshop (HEW) allows the project to be configured such that certain files may be excluded from each of the build configurations. This allows the inclusion of the debug monitor within the Debug build, and its exclusion in the Release build. Contents of common C files are controlled with defines set up in the build configuration options and `#ifdef` statements within the source files. Maintaining only one set of project files means that projects are more controllable.


4. Project Workspace

4.1 Introduction

High-performance Embedded Workshop is an integrated development tool that allows the user to write, compile, program and debug a software project on any of the Renesas Microcontrollers. High-performance Embedded Workshop will have been installed during the installation of the software support for the Renesas Starter Kit product. This manual will describe the stages required to create and debug the supplied tutorial code.

4.2 Starting HEW and Connecting the E1 Debugger

To look at the program, start High-performance Embedded Workshop from the Windows Start Menu. Open a new tutorial workspace from the [File > New Workspace...] menu or select 'Create a new project workspace' when presented with the 'Welcome!' dialog.

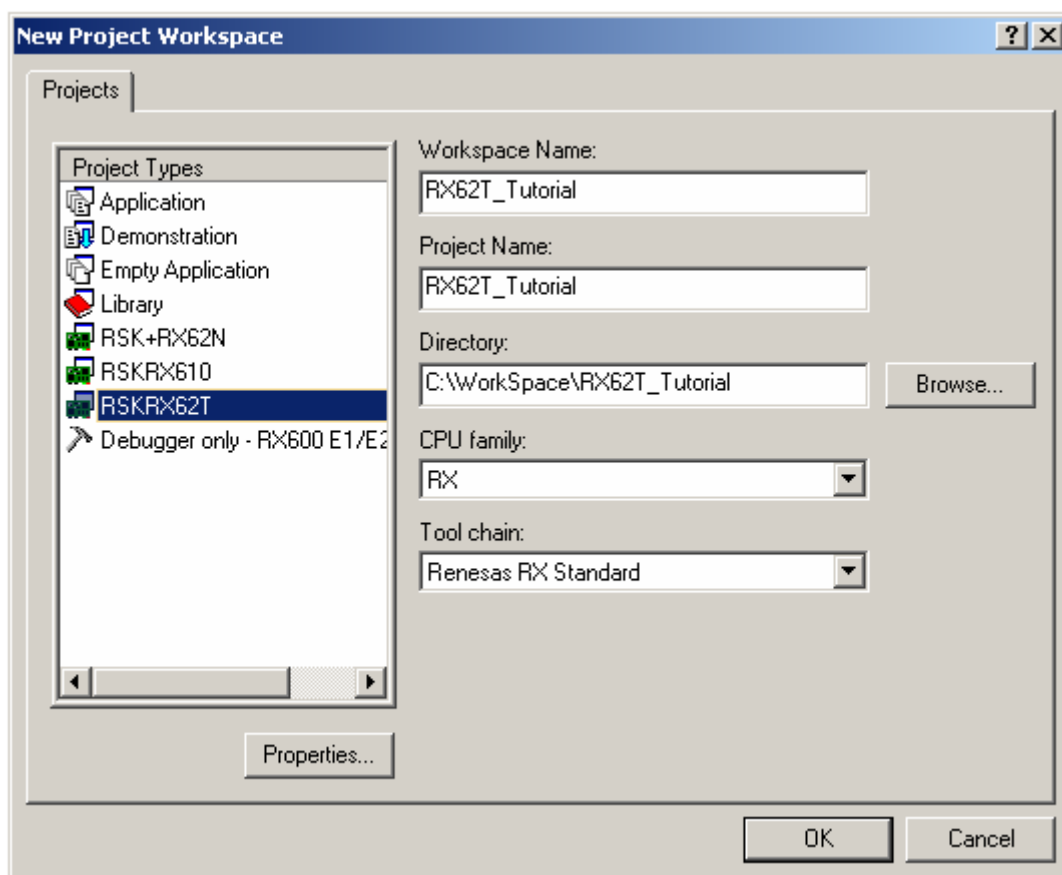

The example above shows the 'New Project Workspace' dialog with the RSKRX62T selected.

- Select the RX CPU family and 'Renesas RX Standard' toolchain.
- Select the 'RSKRX62T' project type from the left-hand projects list.
- Enter a name for the workspace – all your files will be stored under a directory with this name.
- The project name field will be pre-filled to match the workspace name above, but this name may be changed manually.
- Note: High-performance Embedded Workshop allows you to add multiple projects to a workspace. You may add the sample code projects later so you may wish to choose a suitable name for the tutorial project now.
- Click [OK] to start the Renesas Starter Kit Project Generator wizard.

The next dialog presents the three types of example project available:

- Tutorial: this is the one of interest at this time – the code is explained later in this manual.
- Sample Code: This provides examples for using various peripherals. If you select this and click <Next> it will open a new dialog, allowing the selection of many code examples for the peripheral modules of the device.
- Application: where the debugger is configured but there is no program code. This project is suitable for the user to add code without having to configure the debugger.

The project generator wizard will display a confirmation dialog. Press [OK] to create the project and insert the necessary files. A tree showing all the files in this project will appear in High-performance Embedded Workshop.

To view the file 'main.c', double click on the file in the Workspace window. A new window will open showing the code.

4.3 Build Configurations and Debug Sessions

The workspace that has been created contains two build configurations and two debug sessions. The Build Configuration allows the same project to be built but with different compiler options. The options available to the user are described fully in the High-performance Embedded Workshop Manual.

4.3.1 Build Configuration

The build configurations are selected from the left hand drop down list on the tool bar. The options available are Debug and Release. The debug build is configured for use with the debugger. The Release build is configured for final ROM-programmable code.

A common difference between the two builds may be the optimisation settings. With optimisation turned on, the Debugger may seem to execute code in an unexpected order. To assist in debugging it is often helpful to turn optimisation off on the code being debugged.


- Select the 'Debug' build configuration



4.3.2 Debug Session

The debug sessions are selected from the right hand drop down list on the tool bar. The options vary between Renesas Starter Kit types however one will always start Debug and include the type of debug interface. The alternate selection will be 'SessionRX600_E1_E20_SYSTEM'. The purpose of the debug sessions is to allow the use of different debugger tools or different debugger settings on the same project.

- Select the session:
"SessionRX600_E1_E20_SYSTEM"




5. Building the Tutorial Program

The tutorial project build settings have been pre-configured in the toolchain options. To view the toolchain options select the 'Build' menu item and the relevant toolchain. This should be the first option on the drop down menu. The dialog that is displayed will be specific to the toolchain selected.




The Configuration pane on the left hand side will exist on all the toolchain options. It is important when changing any setting to be aware of the current configuration that is being modified. If you wish to modify multiple or all build configurations this is possible by selecting 'All' or 'Multiple' from the 'Configuration' drop down list.

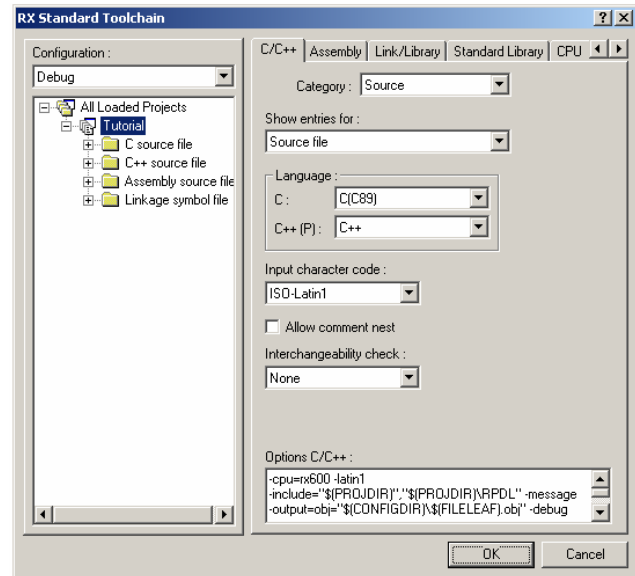- Review the options on each of the tabs and 'Category' drop down lists to be aware of the options available. For the purposes of the tutorial, leave all options at default.
- When complete close the dialog box by clicking [OK]



5.1 Building Code

There is a choice of three shortcuts available for building the project.

- Selecting the 'Build All' tool bar button. This will build everything in the project that has not been excluded from the build. The standard library is built only once. 
- Selecting the 'Build' tool bar button. This will build all files that have changed since the last build. The standard library will not be built unless an option has been changed. 
- Pressing [F7]. This is equivalent to pressing the 'Build' button described above. 

Build the project now by pressing [F7] or pressing one of the build icons as shown above. During the build each stage will be reported in the Output Window. The build will complete with an indication of any errors and warnings encountered during the build.

5.2 Connecting the Debugger

For this tutorial it is not necessary to provide an external power supply to the board. The power will be obtained from the USB port. Please be aware that if you have too many devices connected to your USB port it may be shut down by Windows. If this happens remove some devices and try again. Alternatively provide an external power source taking care to ensure the correct polarity and voltage.

Other sample code supplied with this RSK will require a variable power supply; in which case an external 5V variable power supply should be used. Refer to the RSKRX62T User Manual for further details.


The Quick Start Guide provided with the Renesas Starter Kit board gives detailed instructions on how to connect the E1 to the host computer. The following assumes that the steps in the Quick Start Guide have been followed and the E1 drivers have been installed.


- Fit the LCD module to LCD connector on the board, via the header marked 'LCD'. Ensure all the pins of the connector are correctly inserted in the socket.
- Connect the E1 Debugger to a free USB port on your computer.
- Connect the E1 Debugger to the target hardware ensuring that it is plugged into the connector marked 'E1'.
- If supplying external power to the board, it can be turned on now.

5.3 Connecting to the Target with the E1 Debugger


This section will take you through the process of connecting to the device, programming the Flash and executing the code.

Please note that the "Emulator Mode" wizard shown here will only appear the FIRST time you connect to the target within a project. On subsequent connections the "Emulator Setting" dialog will appear please choose the same options to connect.


- Select the 'SessionRX600_E1_E20_SYSTEM' debug session.
- Click the [Connect] button on the  debug toolbar.
- The 'Initial Settings' configuration dialog will appear. Ensure the follow configurations are set:
 - MCU group: RX62T Group
 - Device: R5F562TA
 - Mode: Debugging mode
- If the E1 is to provide power to the CPU board, select 'Power Target from Emulator' and choose the "5.0V" option. Otherwise connect a suitable power supply (refer to the RSKRX62T User Manual for details).

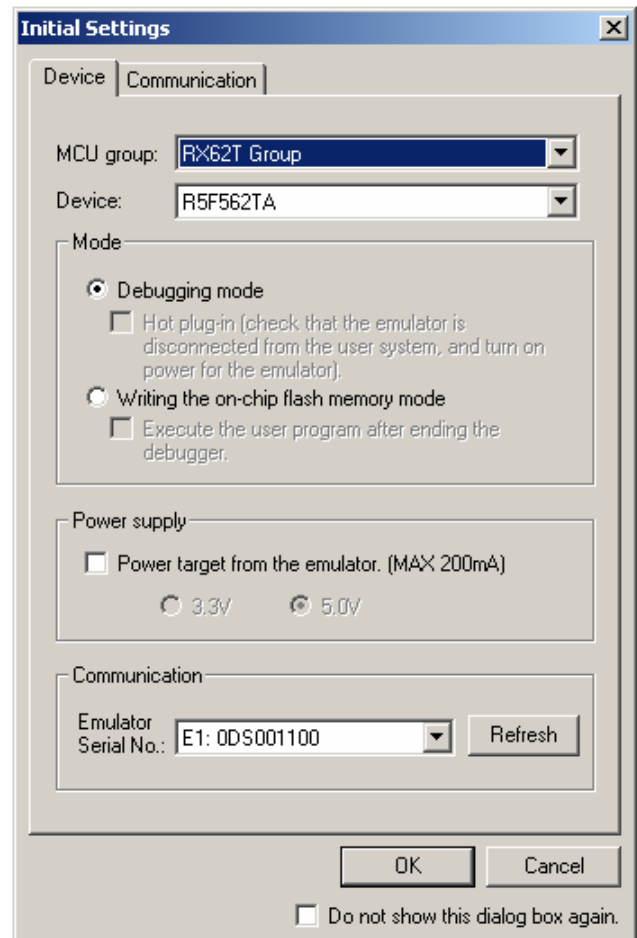


- Click the 'Communication' tab and ensure the JTAG Clock is set to 16.5MHz. Once these settings have been confirmed, click the [OK] button to continue.
- The Flash Memory write program will be downloaded to the target.

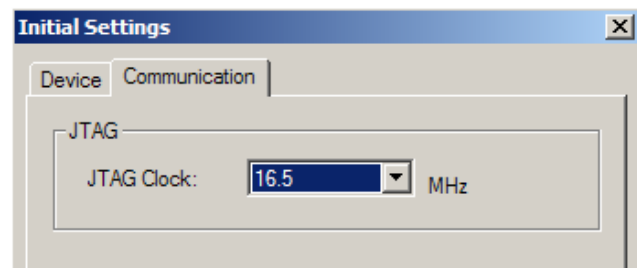

- A connecting dialog will appear, show the status of the connection process. Under default settings, this dialog box will disappear once the connection is complete.

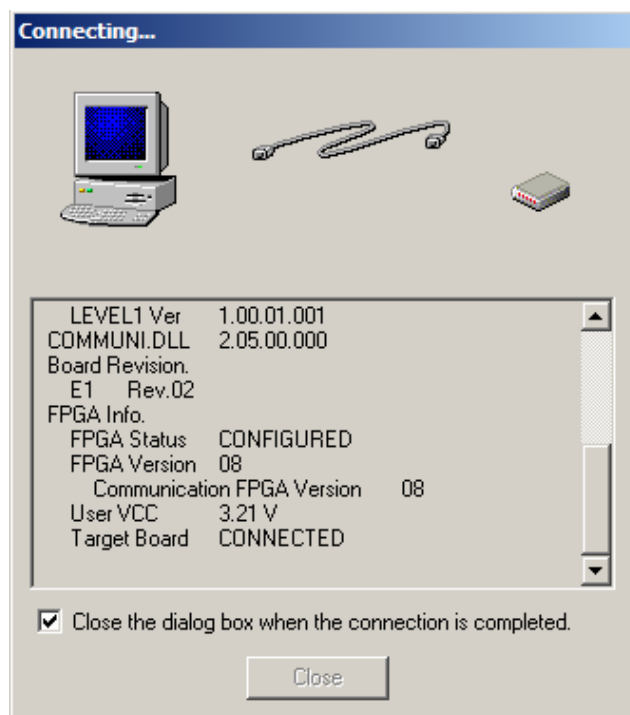


- Once the debugger has connected, the configuration properties dialog will appear.
- Ensure the following configurations are set:
 - Mode: Single-chip mode
 - Endian: Little Endian
 - Input Clock (EXTAL): 12.5 MHz
 - Work RAM Start Address: 3000
- Once the settings have been reviewed, click [OK] to proceed. The output window in High-performance Workshop will show 'Connected'.
- The connection to the target will activate the debugger buttons on the HEW toolbar. The function of these buttons will be explained in subsequent sections of this tutorial.

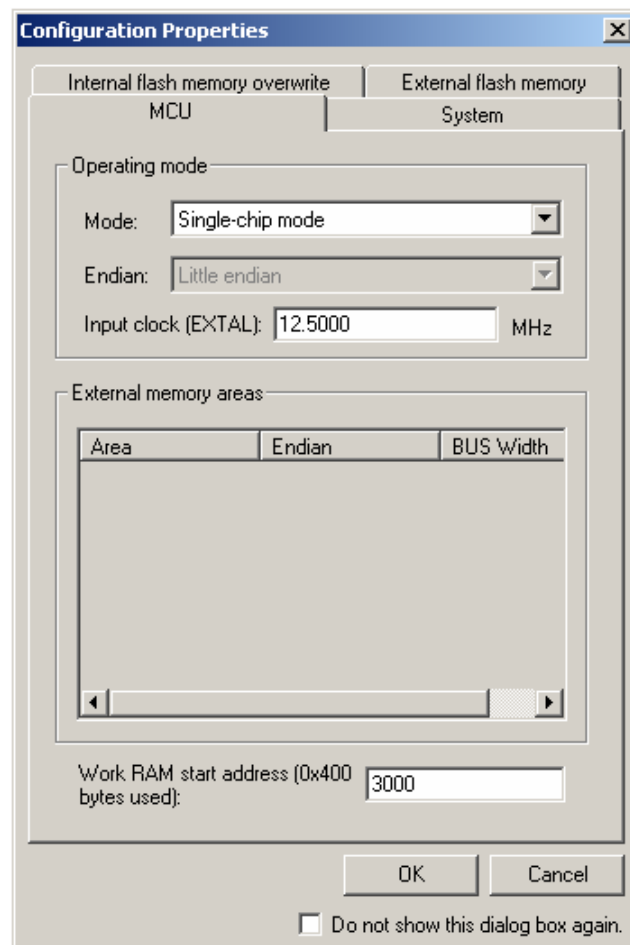


Now is a good time to save the High-performance Embedded Workshop session.

- Select 'File' | 'Save Session'.

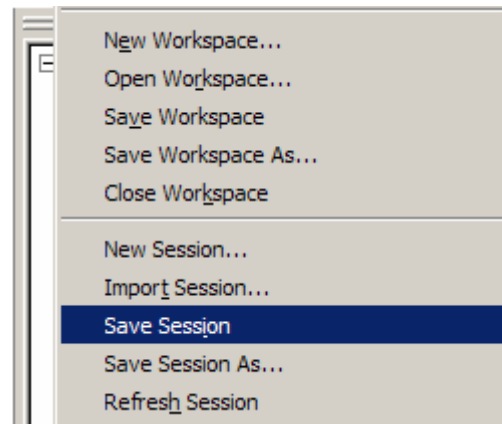


If you have changed any workspace settings now is a good time to save the workspace.

- Select 'File' | 'Save Workspace'.

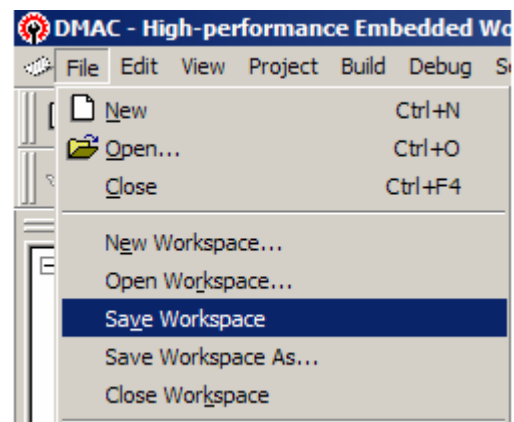

If you make any changes to files in HEW and want to preserve these change, you can save them by:


- Select 'File' | 'Save'.

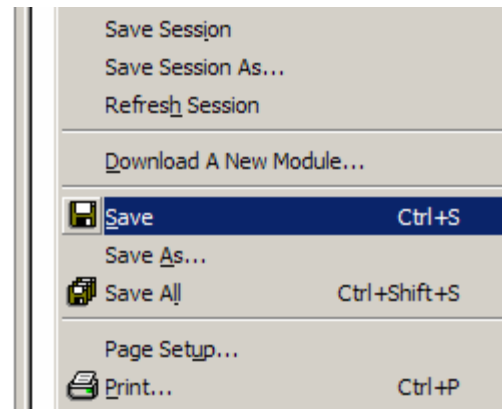

You can also save files by clicking the 'Save' or 'Save All' buttons from the HEW toolbar.



You can also save files using the following keyboard shortcut:




6. Downloading and Running the Tutorial

6.1 Downloading the Program Code

Now the code has been built in HEW it needs to be downloaded to the RSK.

Now that you are connected to the target you should see an additional category in the workspace view called 'Download Modules'

- Right click on the download module listed and select 'Download'
- On completion the debugger and code are ready to be executed

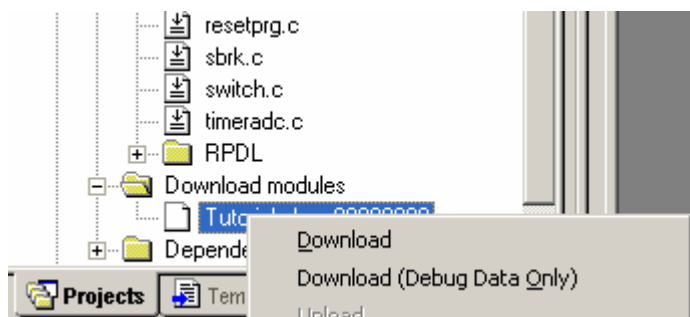

6.2 Running the Tutorial

Once the program has been downloaded onto the RSK device, the program can be executed. Click the 'Reset Go' button to begin the program. It is recommended that you run through the program once first, and then continue to the review section.



7. Reviewing the Tutorial Program

This section will look at each section of the tutorial code, how it works, and how it could be altered to be implemented into more complex code.

It is recommended that a copy of the RX62T API Manual is made available, as the tutorial program uses RPD and it is outside the scope of this manual to fully document the API system.

7.1 Program Initialisation

Before the main program can run, the microcontroller must be configured. The following parts of the tutorial program are used exclusively for initialising the RSK device so that the main function can execute correctly. The initialisation code is run every time the device is reset via the reset switch or from a power reboot.

Ensuring the tutorial program has been downloaded onto the RX62T, press the 'Reset CPU' button on the Debug Tool Bar.



- The File window will open the Tutorial code at the entry point. An arrow and a yellow highlight marks the current position of the program counter.
- Use these buttons to switch between 'source, disassembly and mixed modes'.



Ensure the view is switched to 'source' before continuing.

Line	Source Addr...	D.	S.	Source
67				/* Set this as the location of the 'ResetPRG' section */
68				#pragma section ResetPRG
69				/* Set this as the entry point from a power-on reset */
70				#pragma entry PowerON_Reset_PC
71				
72				/******
73				* Local Function Prototypes
74				*****
75				/* MCU usermode switcher function declaration */
76				static void Change_PSW_PM_to_UserMode(void);
77				/* Power-on reset function declaration */
78				void PowerON_Reset_PC(void);
79				/* Main program function declaration */
80				void main(void);
81				
82				/******
83				* Outline : PowerON_Reset_PC
84				* Description : This program is the MCU's entry point from a power-on reset.
85				* The function configures the MCU stack, then calls the
86				* HardwareSetup function and main function sequentially.
87				* Argument : none
88				* Return value : none
89				*****
90	FFFF8000			void PowerON_Reset_PC(void)
91				{
92				/* Initialise the MCU processor word */
93	FFFF800E			set_intb((unsigned long)__sectop("C\$VECT"));
94	FFFF8017			set_fpsw(FPSW_init);
95				
96				/* Initialise the MCU stack area */
97	FFFF801E			_INITSCT();
98				
99				/* Configure the MCU and RSK+ hardware */
100	FFFF8022			HardwareSetup();
101				
102				/* Change the MCU's usermode from supervisor to user */
103	FFFF8026			nop();
104	FFFF8027			set_psw(PSW_init);
105	FFFF802F			Change_PSW_PM_to_UserMode();
106				
107				/* Call the main program function */
108	FFFF8044			main();
109				
110				/* Invoke a break interrupt */
111	FFFF8048			brk();
112				}


- Highlight the 'HardwareSetup()' function call by left clicking to the right of the text, and holding the left mouse button and dragging over to the left of it and releasing the left mouse button.

```

81
82
83
84
85
86
87
88
89
90 FFFF8000 void PowerON_Reset_PC(void)
91
92
93 FFFF800E /* Initialise the MCU processor word */
94 FFFF8017 set_intb((unsigned long)__sectop("C$VECT"));
95
96
97 FFFF801E /* Initialise the MCU stack area */
98
99
100 FFFF8022 HardwareSetup();
101
102
103 FFFF8026 /* Change the MCU's usermode from supervisor to user */
104 FFFF8027 nop();
105 FFFF802F set_psw(PSW_init);
106
107
108 FFFF8044 Change_PSW_EM_to_UserMode();
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000

```

- Click the 'Go to Cursor' button to run the program up to this point.
- Click 'Step In' to enter the HardwareSetup function.



- The program counter should now move to the HardwareSetup function definition. This function groups together several key functions that are used to ensure the device is setup correctly before the main program is executed.

```

50
51
52
53
54
55
56
57 FFFF87A6 void HardwareSetup(void)
58
59 FFFF87A6 ConfigureOperatingFrequency();
60 FFFF87A9 ConfigureOutputPorts();
61 FFFF87AC ConfigureInterrupts();
62 FFFF87AF EnablePeripheralModules();
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000

```

- Click 'Step In' again to enter the ConfigureOperatingFrequency function.



- The `ConfigureOperatingFrequency` function is used to set the speed of the system clocks.
- We will now skip past the hardware setup functions to look at the tutorial's main program code.

```

/*****
 * Outline      : ConfigureOperatingFrequency
 * Description  : Configures the clock settings for each of the device clocks
 * Argument    : none
 * Return value : none
 *****/
void ConfigureOperatingFrequency(void)
{
    /* Declare error flag */
    bool err = true;

    /* Modify the MCU clocks */
    err &= R_CGC_Set
        (
            12E6,
            96E6,
            48E6,
            24E6,
            PDL_NO_DATA
        );

    /*
     Clock Description          Frequency
     -----
     Input Clock Frequency.....12MHz
     Internal Clock Frequency....96MHz
     Peripheral Clock Frequency...48MHz
     External Bus Clock Frequency.....24MHz */

    /* Halt in while loop when RPDL errors detected */
    while(!err);
}
/*****
 * End of function ConfigureOperatingFrequency
 *****/


```

For further details regarding hardware configuration, please refer to the RSKRX62T User's Manual and the RX62T Hardware Manual.

7.2 Main Functions

This section will look at the program code called from with the main() function, and how it works.

- Find the main.c file from the file tree on the left hand side, then right click it and select 'Open main.c'

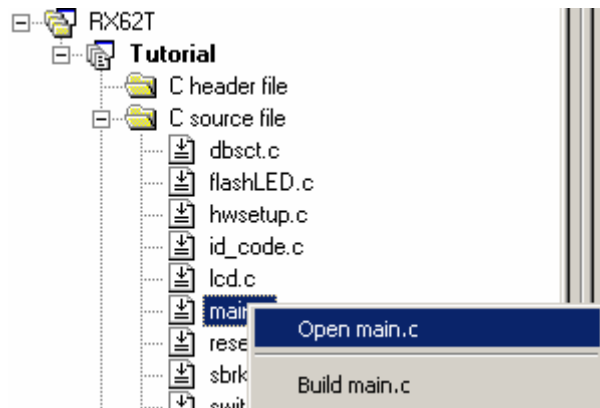


- Place an event at the call to main(); by double clicking in the On-Chip Breakpoint column next to the line to stop at.

Note that two event points will appear because they share the same source address.

102			<pre> * time.</pre>
103			<pre> * Argument : none</pre>
104			<pre> * Return value : none</pre>
105			<pre> *****</pre>
106	FFFFB6BB	●	<pre>void main(void)</pre>
107			<pre>{</pre>
108			<pre> /* Intialise the debug LCD display */</pre>
109	FFFFB6BB	●	<pre> InitialiseLCD();</pre>
110			<pre></pre>
111			<pre> /* Display instructions on the debug</pre>
112	FFFFB6BF		<pre> DisplayLCD(LCD_LINE1, "Renesas ");</pre>
113	FFFFB6CD		<pre> DisplayLCD(LCD_LINE2, NICKNAME);</pre>
114			<pre></pre>
115			<pre> /* Executes the intial LED flashing :</pre>
116	FFFFB6DC		<pre> FlashLED();</pre>
117			<pre></pre>
118			<pre> /* Executes the ADC-varying LED flas</pre>
119	FFFFB6E0		<pre> TimerADC();</pre>
120			

The E1 emulator features advanced logic-based event point trigger system, and full instruction on its use is outside the scope of this tutorial. For further details, please refer to the RX Family E1/E20 Emulator User's Manual

- Press ‘Reset Go’ on the Debug Tool Bar. 
- The code will execute to the event point. At this point all the device initialisation will have been completed. The code window will open ‘main.c’ and show the new position of the program counter.
- Support for the LCD display is included in the tutorial code. We do not need to be concerned about the details of the LCD interface – except that the interface is write-only and so is not affected if the LCD display is attached or not.

```


74 | | | | /*****
75 | | | | * Outline      : main
76 | | | | * Description  : The main program function. Displays the Renesas splash screen
77 | | | | *              : onto the LCD display, then calls the flashLED and TimerADC
78 | | | | *              : functions. The function then calls the statics test routine,
79 | | | | *              : before waiting in an infinite while loop.
80 | | | | * Argument    : none
81 | | | | * Return value : none
82 | | | | *****/
83 | FFFF1C0 | void main(void)
84 | | | | {
85 | | | |     /* Initialise the LCD Display */
86 | FFFF1C0 |     InitialiseLCD();
87 | | | |
88 | | | |     /* Displays the Renesas splash screen */
89 | FFFF1C0 |     DisplayLCD(LCD_LINE1, "Renesas");
90 | FFFF1C0 |     DisplayLCD(LCD_LINE2, NICKNAME);
91 | | | |
92 | | | |     /* Begins the initial LED flash sequence */
93 | FFFF1C0 |     FlashLED();
94 | | | |
95 | | | |     /* Begins the ADC-varying flash Sequence */
96 | FFFF1C0 |     TimerADC();
97 | | | |
98 | | | |     /* Begins the static variable test */
99 | FFFF1C0 |     Statics_Test();
100 | | | |
101 | | | |     /* Defines an infinite loop to keep the MCU running */
102 | FFFF1C0 |     while(1);
103 | | | | }
104 | | | | /*****
105 | | | | End of main
106 | | | | *****/
    
```

- Insert event points on the FlashLED, TimerADC and Statics_Test function calls.

```

117 | | | |     /* Executes the initial LED flashing sequence */
118 | FFFFC204 |     FlashLED();
119 | | | |
120 | | | |     /* Executes the ADC-varying LED flash sequence */
121 | | | |     TimerADC();
122 | FFFFC208 |
123 | | | |
124 | | | |     /* Executes the static variable test */
125 | FFFFC20C |     Statics_Test();
126 | | | |
    
```


- Press ‘Go’ to run the program up to the event, then press ‘Step In’, to move the program counter to the beginning of the FlashLED() function definition.



- The FlashLED function uses RPDL functions to create a periodic CMT callback, which toggles the LEDs at regular intervals.
- The ‘if’ statement checks the value of the gFlashCount variable, which counts down with every LED flash. Once this reaches zero the function destroys the CMT timer and exits the infinite ‘while(1)’ loop.



```

68 | | | | /*****
69 | | | | * Outline      : FlashLED
70 | | | | * Description  : The flash function used at the beginning of the program
71 | | | | * Argument    : none
72 | | | | * Return value : none
73 | | | | *****/
74 | FFFF1 | void FlashLED (void)
75 | | | | {
76 | | | |     /* Declare error flag */
77 | FFFF1 |     bool err = true;
78 | | | |
79 | | | |     /* Configure compare match timer */
80 | FFFF1 |     err &= R_CMT_Create
81 | | | |         {
82 | | | |         {
83 | | | |             0,
84 | | | |             PDL_CMT_PCLK_DIV_512,
85 | | | |             0xFF0,
86 | | | |             CMT_Callback,
87 | | | |             3
88 | | | |         };
89 | | | |
90 | FFFF1 |     /* While loop keeps the function waiting */
91 | | | |     while(1)
92 | | | |     {
93 | | | |         /* Checks if the flash count has been reached,
94 | FFFF1 |         or if a button has been pressed */
95 | | | |         if((gSwitchFlag) || (gFlashCount > 0xC8))
96 | | | |         {
97 | FFFF1 |             /* Reset the gSwitchFlag flag variable */
98 | | | |             gSwitchFlag = 0;
99 | | | |
100 | | | |             /* Exit from the while loop */
101 | | | |             break;
102 | | | |         }
103 | | | |     }
104 | | | |     /* Destroy Timer */
105 | FFFF1 |     err &= R_CMT_Destroy
106 | | | |         {
107 | | | |         {
108 | | | |             0
109 | | | |         };
110 | | | |
111 | | | |     /* Halt in while loop when RPDL errors detected */
112 | FFFF1 |     while('err');
    
```

- Click ‘Go’ to resume the program, then push any switch to proceed. The program should halt at the event point set on the TimerADC function call.
- Press ‘Step In’ to  single-step into the TimerADC function.
- The TimerADC function configures both the timer and the ADC peripheral, allowing the potentiometer RV1 to adjust the LED flash rate.

```

66      /*****
67      * Outline      : TimerADC
68      * Description  : Function initialises the Timer and ADC peripherals needed to
69      *                vary the LED flash rate based on the AD pot.
70      * Argument    : none
71      * Return value : none
72      *****/
73      FFFF2100 void TimerADC(void)
74      {
75          /* Declare error flag */
76          bool err = true;
77
78          /* Call the Timer start function */
79          StartTimer();
80
81          /* Call the ADC start function */
82          StartADC();
83
84          /* Disable switch SW1 interrupts */
85          err &= R_INTC_ControlExtInterrupt(
86              PDL_INTC_IRQ0,
87              PDL_INTC_DISABLE
88          );
89
90          /* Disable switch SW2 interrupts */
91          err &= R_INTC_ControlExtInterrupt(
92              PDL_INTC_IRQ1,
93              PDL_INTC_DISABLE
94          );
95
96          /* Disable switch SW3 interrupts */
97          err &= R_INTC_ControlExtInterrupt(
98              PDL_INTC_IRQ3,
99              PDL_INTC_DISABLE
100         );
101
102         /* Halt in while loop when RPD_L errors detected */
103         while(!err);
104     }
105     FFFF2100 *****/
106     End of TimerADC
107     *****/
    
```

- Press F5 to resume the code, where it will then halt at the break point on the Statics_Test function call. 
- Press F11 to step into the function. 
- The Statics_Test function initialises a character string with the contents of a static variable; then gradually replaces it, letter by letter, with another static string.
- Click ‘Go’ or press F5 to resume the program code. You should observe the word ‘STATIC’ appear on the second LCD line, to be gradually replaced with the string ‘TESTTEST’. The program then reverts the LCD back to the original message of ‘RX62T’.

```

114     FFFF1C00 void Statics_Test(void)
115     {
116         /* At this point please right click on the 'ucSTR' variable and select
117         * 'Instant Watch'. A dialog will be displayed showing the current value
118         * of the variable. Select 'Add' in the dialog and a new 'Watch Window'
119         * will open. Step through the following code to see that the initialised
120         * data is being overwritten with the different data. */
121
122         /* Initialise delay and count variables */
123         uint16_t uiCount, delayA, delayB;
124
125         /* Write ucStr variable, "STATIC" to LCD */
126         FFFF1C00 DisplayLCD(LCD_LINE2, ucStr);
127
128         /* Begin for loop which writes one letter of ucReplace to the LCD at a time
129         * The nested while loops generate the delay between each letter change */
130         for (uiCount=0; uiCount<8; uiCount++)
131         {
132
133             /* Replace letter number uiCount of ucStr from ucReplace */
134             FFFF1C00 ucStr[uiCount] = ucReplace[uiCount];
135             FFFF1C00 DisplayLCD(LCD_LINE2, ucStr);
136
137             /* Set delay variables */
138             FFFF1C00 delayA = 0xA5;
139             FFFF1C00 delayB = 0xFFFF;
140
141             /* Nested while delay loop */
142             FFFF1C00 while(delayA)
143             {
144                 FFFF1C00 while(delayB)
145                 {
146                     FFFF1C00 delayB--;
147                 }
148                 FFFF1D00 delayB = 0xFFFF;
149                 FFFF1D00 delayA--;
150             }
151
152             /* Clear LCD Display */
153             FFFF1D00 ucStr[uiCount] = '\0';
154
155             /* Write MCU nickname to LCD again */
156             FFFF1D00 DisplayLCD(LCD_LINE2, NICKNAME);
157
158         }
    
```

- This is the extent of the tutorial code. For further information on the RPD_L function calls used in the tutorial sample, please refer to *Renesas Peripheral Driver Library User's Manual*.

8. Additional Information

Technical Support

For details on how to use High-performance Embedded Workshop (HEW), refer to the HEW manual available on the CD or from the web site.

For information about the RX62T series microcontrollers refer to the RX62T Group hardware manual.

For information about the RX62T assembly language, refer to the RX600 Series Software Manual.

Online technical support and information is available at: <http://www.renesas.com/rskrx62t>

Technical Contact Details

America: techsupport.america@renesas.com

Europe: tools.support.eu@renesas.com

Japan: csc@renesas.com

General information on Renesas Microcontrollers can be found on the Renesas website at:

<http://www.renesas.com/>

Trademarks

All brand or product names used in this manual are trademarks or registered trademarks of their respective companies or organisations.

Copyright

This document may be, wholly or partially, subject to change without notice. All rights reserved. Duplication of this document, either in whole or part is prohibited without the written permission of Renesas Electronics Europe Limited.

© 2010 (2011) Renesas Electronics Europe Limited. All rights reserved.

© 2010 (2011) Renesas Electronics Corporation. All rights reserved.

© 2010 (2011) Renesas Solutions Corp. All rights reserved.

REVISION HISTORY	RSKRX62T Tutorial Manual
------------------	--------------------------

Rev.	Date	Description	
		Page	Summary
1.00	Oct 10, 2010	—	First Edition issued
2.00	May 21, 2011	24	Copyright information updated
2.01	Jul 01, 2011	—	Copyright information updated

Renesas Starter Kit Tutorial Manual

Publication Date: Rev.2.01 Jul 01, 2011

Published by: Renesas Electronics Corporation



Renesas Electronics Corporation

<http://www.renesas.com>

SALES OFFICES

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.

2880 Scott Boulevard Santa Clara, CA 95050-2554, U.S.A.
Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited

1101 Nicholson Road, Newmarket, Ontario L3Y 9C3, Canada
Tel: +1-905-898-5441, Fax: +1-905-898-3220

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-65030, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

7th Floor, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100083, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 204, 205, AZIA Center, No.1233 Lujiazui Ring Rd., Pudong District, Shanghai 200120, China
Tel: +86-21-5877-1818, Fax: +86-21-6887-7858 / -7898

Renesas Electronics Hong Kong Limited

Unit 1601-1613, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2886-9318, Fax: +852 2886-9022/9044

Renesas Electronics Taiwan Co., Ltd.

7F, No. 363 Fu Shing North Road Taipei, Taiwan
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

1 harbourFront Avenue, #06-10, Keppel Bay Tower, Singapore 098632
Tel: +65-6213-0200, Fax: +65-6278-8001

Renesas Electronics Malaysia Sdn.Bhd.

Unit 906, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics Korea Co., Ltd.

11F, Samik Laviel' or Bldg., 720-2 Yeoksam-Dong, Kangnam-Ku, Seoul 135-080, Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5141

RX62T Group

