

To our customers,

---

## Old Company Name in Catalogs and Other Documents

---

On April 1<sup>st</sup>, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1<sup>st</sup>, 2010  
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

## Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: “Standard”, “High Quality”, and “Specific”. The recommended applications for each Renesas Electronics product depends on the product’s quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as “Specific” without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as “Specific” or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is “Standard” unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
  - “Standard”: Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
  - “High Quality”: Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
  - “Specific”: Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) “Renesas Electronics” as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) “Renesas Electronics product(s)” means any product developed or manufactured by or for Renesas Electronics.



## **Preliminary Application Note**

# **V850E/IF3, V850E/IG3**

**32-bit Single-Chip Microcontrollers**

**Sample Programs for Port Function**

---

**V850E/IF3:**

**$\mu$ PD70F3451**

**$\mu$ PD70F3452**

**V850E/IG3:**

**$\mu$ PD70F3453**

**$\mu$ PD70F3454**

[MEMO]

① **VOLTAGE APPLICATION WAVEFORM AT INPUT PIN**

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (MAX) and  $V_{IH}$  (MIN) due to noise, etc., the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (MAX) and  $V_{IH}$  (MIN).

② **HANDLING OF UNUSED INPUT PINS**

Unconnected CMOS device inputs can be cause of malfunction. If an input pin is unconnected, it is possible that an internal input level may be generated due to noise, etc., causing malfunction. CMOS devices behave differently than Bipolar or NMOS devices. Input levels of CMOS devices must be fixed high or low by using pull-up or pull-down circuitry. Each unused pin should be connected to  $V_{DD}$  or GND via a resistor if there is a possibility that it will be an output pin. All handling related to unused pins must be judged separately for each device and according to related specifications governing the device.

③ **PRECAUTION AGAINST ESD**

A strong electric field, when exposed to a MOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop generation of static electricity as much as possible, and quickly dissipate it when it has occurred. Environmental control must be adequate. When it is dry, a humidifier should be used. It is recommended to avoid using insulators that easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors should be grounded. The operator should be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions need to be taken for PW boards with mounted semiconductor devices.

④ **STATUS BEFORE INITIALIZATION**

Power-on does not necessarily define the initial status of a MOS device. Immediately after the power source is turned ON, devices with reset functions have not yet been initialized. Hence, power-on does not guarantee output pin levels, I/O settings or contents of registers. A device is not initialized until the reset signal is received. A reset operation must be executed immediately after power-on for devices with reset functions.

⑤ **POWER ON/OFF SEQUENCE**

In the case of a device that uses different power supplies for the internal operation and external interface, as a rule, switch on the external power supply after switching on the internal power supply. When switching the power supply off, as a rule, switch off the external power supply and then the internal power supply. Use of the reverse power on/off sequences may result in the application of an overvoltage to the internal elements of the device, causing malfunction and degradation of internal elements due to the passage of an abnormal current.

The correct power on/off sequence must be judged separately for each device and according to related specifications governing the device.

⑥ **INPUT OF SIGNAL DURING POWER OFF STATE**

Do not input signals or an I/O pull-up power supply while the device is not powered. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Input of signals during the power off state must be judged separately for each device and according to related specifications governing the device.

Caution: This product uses SuperFlash® technology licensed from Silicon Storage Technology, Inc.

**SuperFlash is a registered trademark of Silicon Storage Technology, Inc. in several countries including the United States and Japan.**

- **The information contained in this document is being issued in advance of the production cycle for the product. The parameters for the product may change before final production or NEC Electronics Corporation, at its own discretion, may withdraw the product prior to its production.**
- No part of this document may be copied or reproduced in any form or by any means without the prior written consent of NEC Electronics. NEC Electronics assumes no responsibility for any errors that may appear in this document.
- NEC Electronics does not assume any liability for infringement of patents, copyrights or other intellectual property rights of third parties by or arising from the use of NEC Electronics products listed in this document or any other liability arising from the use of such products. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of NEC Electronics or others.
- Descriptions of circuits, software and other related information in this document are provided for illustrative purposes in semiconductor product operation and application examples. The incorporation of these circuits, software and information in the design of a customer's equipment shall be done under the full responsibility of the customer. NEC Electronics assumes no responsibility for any losses incurred by customers or third parties arising from the use of these circuits, software and information.
- While NEC Electronics endeavors to enhance the quality, reliability and safety of NEC Electronics products, customers agree and acknowledge that the possibility of defects thereof cannot be eliminated entirely. To minimize risks of damage to property or injury (including death) to persons arising from defects in NEC Electronics products, customers must incorporate sufficient safety measures in their design, such as redundancy, fire-containment and anti-failure features.
- NEC Electronics products are classified into the following three quality grades: "Standard", "Special", and "Specific". The "Specific" quality grade applies only to NEC Electronics products developed based on a customer-designated "quality assurance program" for a specific application. The recommended applications of an NEC Electronics product depend on its quality grade, as indicated below. Customers must check the quality grade of each NEC Electronics products before using it in a particular application.
  - "Standard": Computers, office equipment, communications equipment, test and measurement equipment, audio and visual equipment, home electronic appliances, machine tools, personal electronic equipment and industrial robots.
  - "Special": Transportation equipment (automobiles, trains, ships, etc.), traffic control systems, anti-disaster systems, anti-crime systems, safety equipment and medical equipment (not specifically designed for life support).
  - "Specific": Aircraft, aerospace equipment, submersible repeaters, nuclear reactor control systems, life support systems and medical equipment for life support, etc.

The quality grade of NEC Electronics products is "Standard" unless otherwise expressly specified in NEC Electronics data sheets or data books, etc. If customers wish to use NEC Electronics products in applications not intended by NEC Electronics, they must contact an NEC Electronics sales representative in advance to determine NEC Electronics' willingness to support a given application.

(Note)

- (1) "NEC Electronics" as used in this statement means NEC Electronics Corporation and also includes its majority-owned subsidiaries.
- (2) "NEC Electronics products" means any product developed or manufactured by or for NEC Electronics (as defined above).

M5 02. 11-1

## INTRODUCTION

- Cautions**
1. This Application Note explains a case where the V850E/IG3 is used as a representative microcontroller. Use this Application Note for your reference when using the V850E/IF3.
  2. Download the program used in this manual from the page of Programming Examples (<http://www.necel.com/micro/en/designsupports/sampleprogram/index.html>) in the NEC Electronics Website (<http://www.necel.com/>).
  3. The sample programs are provided for reference purposes only and operations are therefore not subject to guarantee by NEC Electronics Corporation. When using sample programs, customers are advised to sufficiently evaluate this product based on their systems, before use.
  4. When using sample programs, reference the following startup routine and link directive file and adjust them if necessary.
    - Startup routine: `ig3_start.s`
    - Link directive file: `ig3_link.dir`

**Target Readers** This Application Note is intended for users who understand the functions of the V850E/IF3 ( $\mu$ PD70F3451, 70F3452), and V850E/IG3 ( $\mu$ PD70F3453, 70F3454), and who design application systems that use these microcontrollers.

**Purpose** This manual is intended to give users an understanding of the basic functions of the V850E/IF3 and V850E/IG3, using the application programs.

**How to Use This Manual** It is assumed that the reader of this Application Note has general knowledge in the fields of electrical engineering, logic circuits, and microcontrollers.

For details of hardware functions (especially register functions, setting methods, etc.) and electrical specifications

→ See the **V850E/IF3, V850E/IG3 Hardware User's Manual**.

For details of instruction functions

→ See the **V850E1 Architecture User's Manual**.

**Conventions**

Data significance:	Higher digits on the left and lower digits on the right
Active low representation:	$\overline{\text{xxx}}$ (overscore over pin or signal name)
Memory map address:	Higher addresses on the top and lower addresses on the bottom
<b>Note:</b>	Footnote for item marked with <b>Note</b> in the text
<b>Caution:</b>	Information requiring particular attention
<b>Remark:</b>	Supplementary information
Numeric representation:	Binary ... xxxx or xxxxB Decimal ... xxxx Hexadecimal ... xxxxH
Prefix indicating the power of 2 (address space, memory capacity):	K (kilo): $2^{10} = 1,024$ M (mega): $2^{20} = 1,024^2$ G (giga): $2^{30} = 1,024^3$

The function lists are structured as follows.

## Theme

[Function]	Function description
[Function name]	Name of sample function
[Argument(s)]	Type and overview of argument(s)
[Processing content]	Processing content of sample function
[SFR(s) used]	Register name and setting content
[call function(s)]	Name and function of call function(s)
[Variable(s)]	Type, name, and overview of variable(s) used in sample function
[Interrupt(s)]	Name of function
[Interrupt source(s)]	Name
[File name]	Name of corresponding sample program file
[Caution(s)]	Caution(s) upon function usage

**Product Differences**      The differences between the V850E/IG3 and the V850E/IF3 related to the port functions are shown below.

Item	V850E/IG3	V850E/IF3
Port 0	P00 to P07	P00, P01
Port 1	P10 to P17	P10 to P17
Port 7	P70 to P77	P70 to P73
Port DL	PDL0 to PDL15	PDL0 to PDL9



## Related Documents

The related documents indicated in this publication may include preliminary versions. However, preliminary versions are not marked as such.

### Documents related to V850E/IF3 and V850E/IG3

Document Name	Document No.
V850E1 Architecture User's Manual	U14559E
V850E/IF3, V850E/IG3 Hardware User's Manual	U18279E
V850E/IF3, V850E/IG3 Sample Programs for Serial Communication (UARTA) Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Serial Communication (UARTB) Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Serial Communication (CSIB) Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Serial Communication (I <sup>2</sup> C) Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for DMA Function Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Timer M Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Watchdog Timer Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Timer AA Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Timer AB Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Timer T Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Port Function Application Note	This manual
V850E/IF3, V850E/IG3 Sample Programs for Clock Generator Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Standby Function Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Interrupt Function Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for A/D Converters 0 and 1 Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for A/D Converter 2 Application Note	To be prepared
V850E/IF3, V850E/IG3 Sample Programs for Low-Voltage Detector (LVI) Function Application Note	To be prepared
V850E/IF3, V850E/IG3 6-Phase PWM Output Control by Timer AB, Timer Q Option, Timer AA, A/D Converters 0 and 1 Application Note	U18717E

## CONTENTS

CHAPTER 1 PORT INPUT .....	9
CHAPTER 2 PORT OUTPUT .....	16
CHAPTER 3 ALTERNATE FUNCTIONS .....	22

## CHAPTER 1 PORT INPUT

[Function]	Sets all ports as input pins of port mode.
[Function name]	port_input_main
[Argument]	None
[Processing content]	Calls setting function of each port and sets to input pin.
[SFR used]	None
[call function]	port0_input, port1_input, port2_input, port3_input, port4_input, port7_input, portDL_input
[Variable]	None
[Interrupt]	None
[Interrupt source]	None
[File name]	port_input.c
[Caution]	None

[Function name]	port0_input
[Processing content]	Sets Port 0 to input mode of I/O port.
[SFRs used]	PU0:           0x00 (Sets on-chip pull-up resistor as unused.) PMC0:        0x00 (Sets to I/O port.) PM0:        0xFF (Sets to input mode.)
[call function]	None
[Variable]	None
[File name]	port_input.c
[Caution]	<ul style="list-style-type: none"> <li>• The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode, when the pins function as input pins in alternate-function mode, or when the TOA21 and TOA31 pins which are output pins during alternate-function mode go into a high impedance state due to TOA2OFF and TOA3OFF pins or software processing.</li> <li>• The on-chip pull-up resistor is set as “Not connected” in this sample program.</li> </ul>

[Function name]	port1_input
[Processing content]	Sets Port 1 to input mode of I/O port.
[SFRs used]	PU1: 0x00 (Sets on-chip pull-up resistor as unused.) PMC1: 0x00 (Sets to I/O port.) PM1: 0xFF (Sets to input mode.)
[call function]	None
[Variable]	None
[File name]	port_input.c
[Caution]	<ul style="list-style-type: none"> <li>The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode, when the pins function as input pins in alternate-function mode, or when the TOB0T1 to TOB0T3, and TOB0B1 to TOB0B3 pins which are output pins during alternate-function mode go into a high impedance state due to TOB0OFF pin or software processing.</li> <li>The on-chip pull-up resistor is set as "Not connected" in this sample program.</li> </ul>

[Function name]	port2_input
[Processing content]	Sets Port 2 to input mode of I/O port.
[SFRs used]	PU2: 0x00 (Sets on-chip pull-up resistor as unused.) PMC2: 0x00 (Sets to I/O port.) PM2: 0xFF (Sets to input mode.)
[call function]	None
[Variable]	None
[File name]	port_input.c
[Caution]	<ul style="list-style-type: none"> <li>The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode, when the pins function as input pins in alternate-function mode, or when the TOB1T1 to TOB1T3, and TOB1B1 to TOB1B3 pins which are output pins during alternate-function mode go into a high impedance state due to TOB1OFF pin or software processing.</li> <li>The on-chip pull-up resistor is set as "Not connected" in this sample program.</li> </ul>

[Function name]	port3_input
[Processing content]	Sets Port 3 to input mode of I/O port.
[SFRs used]	PU3: 0x00 (Sets on-chip pull-up resistor as unused.) PMC3: 0x00 (Sets to I/O port.) PM3: 0xFF (Sets to input mode.)
[call function]	None
[Variable]	None
[File name]	port_input.c
[Caution]	<ul style="list-style-type: none"> <li>The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode or when the pins function as input pins in the alternate-function mode (including when the <math>\overline{\text{SCKB1}}</math> and <math>\overline{\text{SCKB2}}</math> pins are in slave mode).</li> <li>The on-chip pull-up resistor is set as “Not connected” in this sample program.</li> </ul>

[Function name]	port4_input
[Processing content]	Sets Port 4 to input mode of I/O port.
[SFRs used]	PU4: 0x00 (Sets on-chip pull-up resistor as unused.) PMC4: 0x00 (Sets to I/O port.) PM4: 0xFF (Sets to input mode.)
[call function]	None
[Variable]	None
[File name]	port_input.c
[Caution]	<ul style="list-style-type: none"> <li>The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode or when the pins function as input pins in the alternate-function mode (including when the <math>\overline{\text{SCKB0}}</math> pin is in slave mode).</li> <li>The on-chip pull-up resistor is set as “Not connected” in this sample program.</li> </ul>

[Function name]	port7_input
[Processing content]	Sets Port 7 to input port.
[SFR used]	PMC7: 0x00 (Sets to input port.)
[call function]	None
[Variable]	None
[File name]	port_input.c
[Caution]	None

[Function name]	portDL_input
[Processing content]	Sets Port DL to input mode of I/O port.
[SFRs used]	PUDL: 0x0000 (Sets on-chip pull-up resistor as unused.) PMCDL: 0x0000 (Sets to I/O port.) PMDL: 0xFFFF (Sets to input mode.)
[call function]	None
[Variable]	None
[File name]	port_input.c
[Caution]	<ul style="list-style-type: none"><li>• The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode.</li><li>• The on-chip pull-up resistor is set as “Not connected” in this sample program.</li></ul>

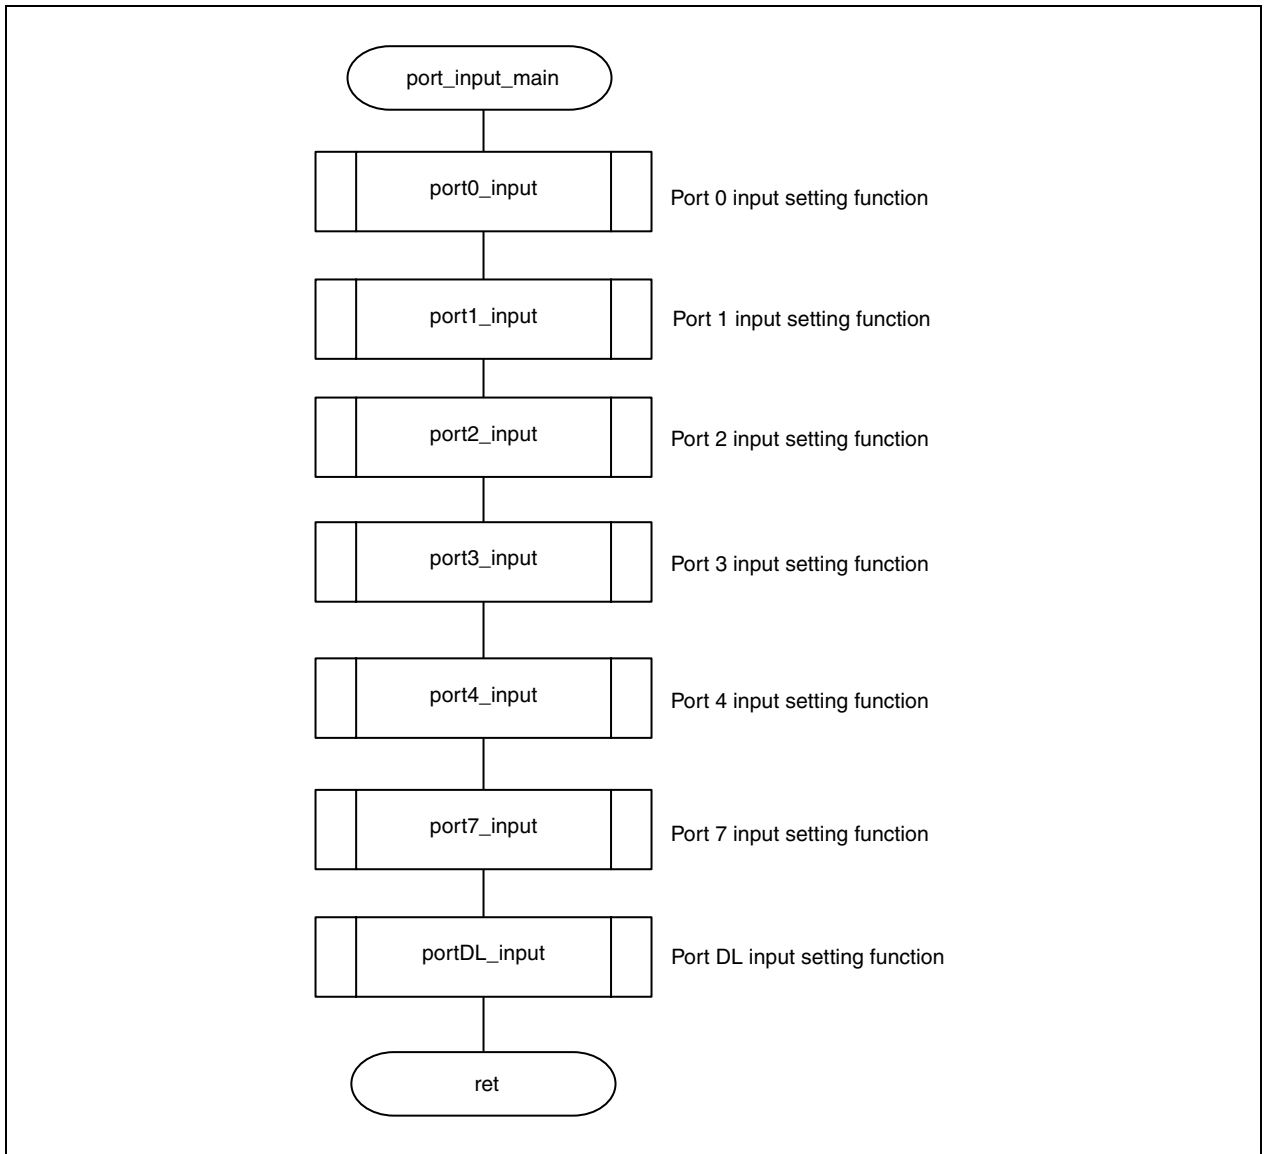
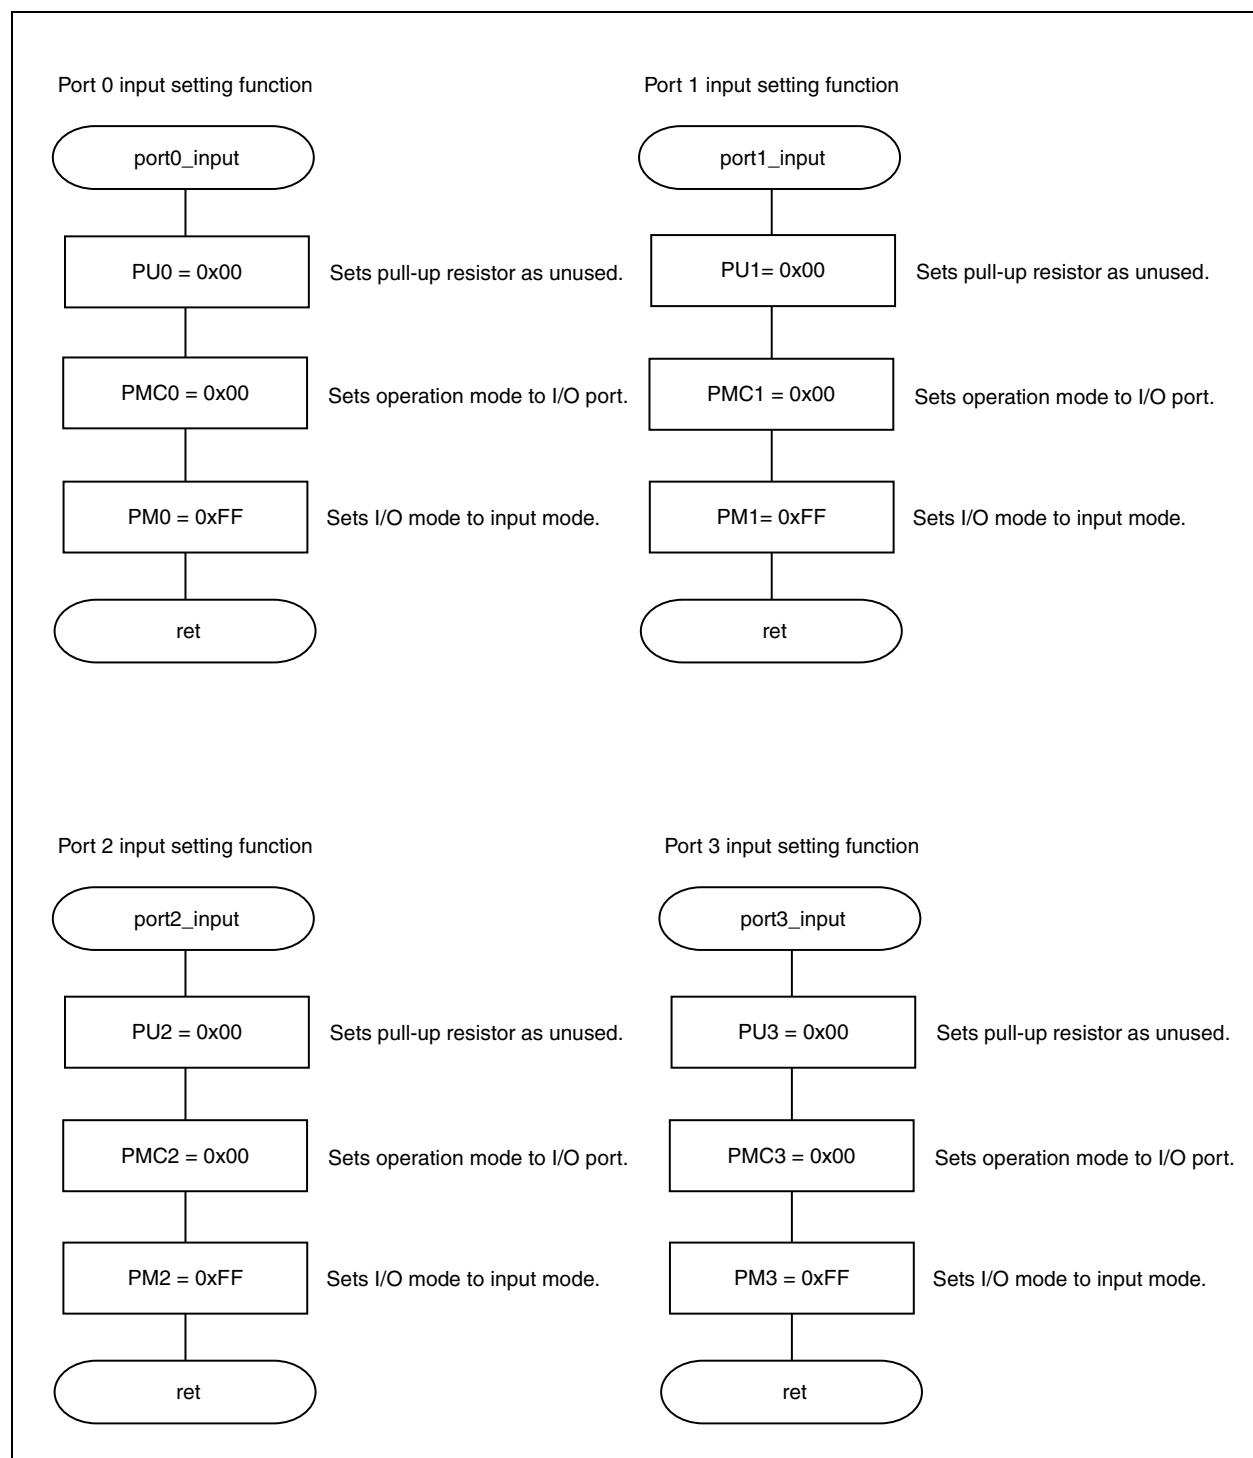
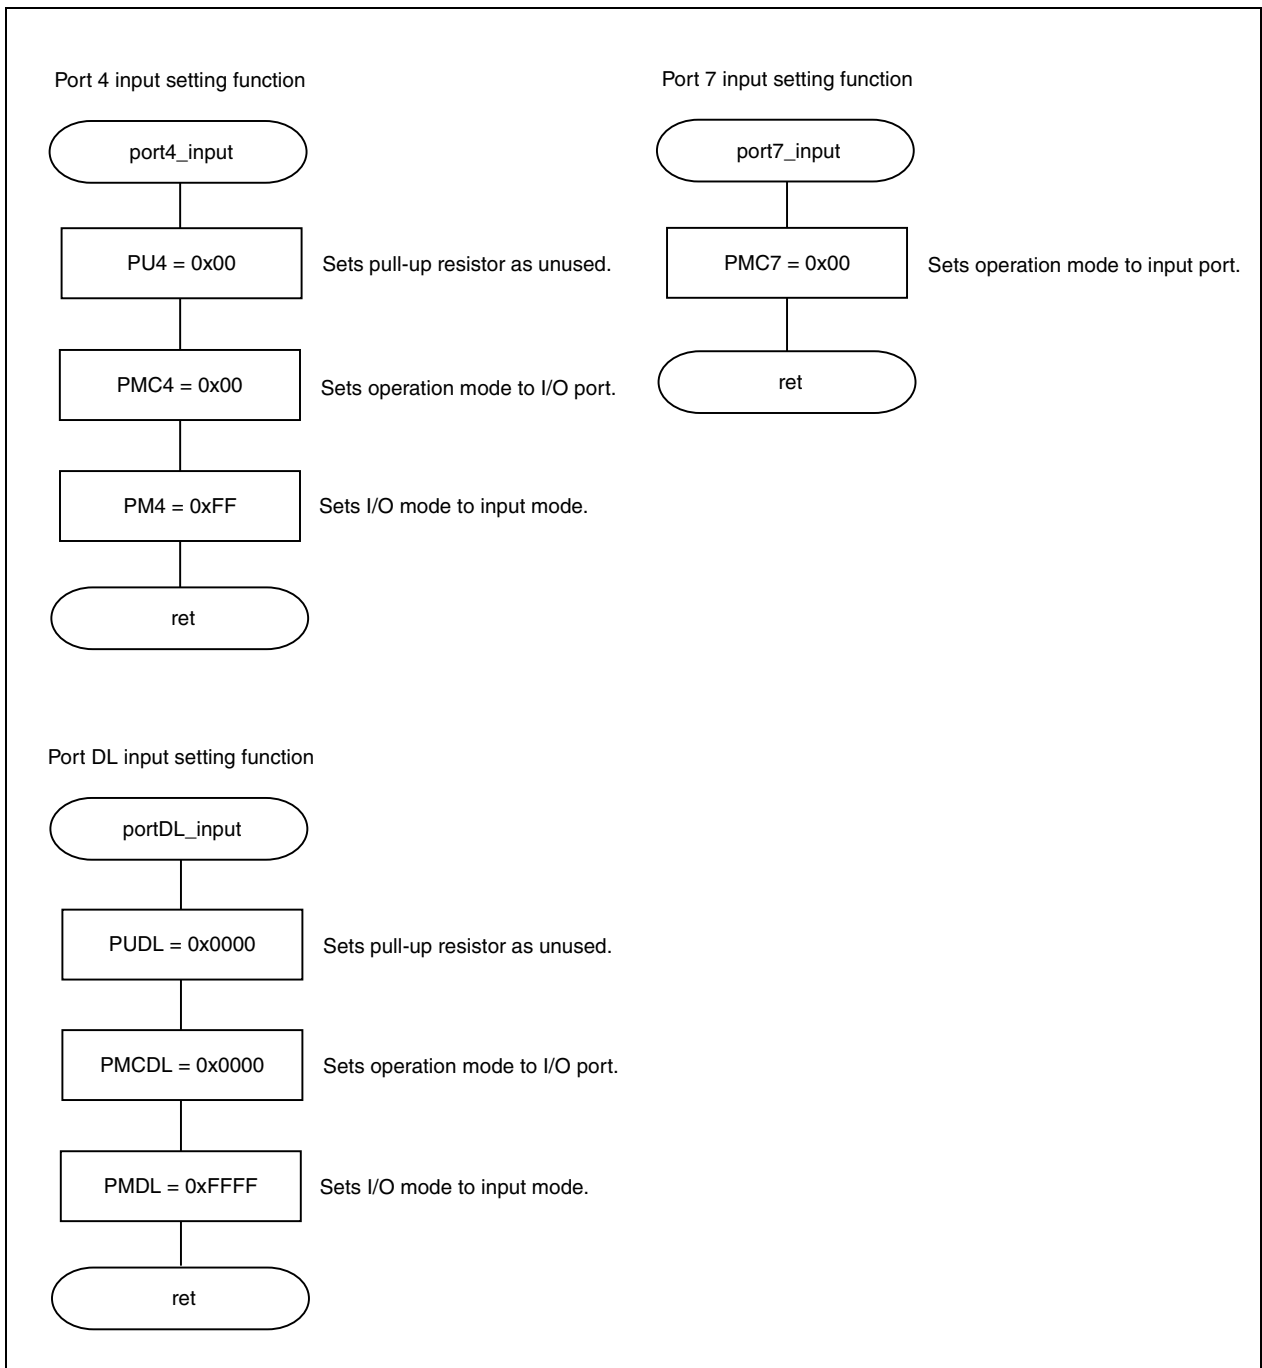
**Figure 1-1. Port Input (1/3)**

Figure 1-1. Port Input (2/3)





**Figure 1-1. Port Input (3/3)**

## CHAPTER 2 PORT OUTPUT

[Function]	Sets all ports as output pins of port mode.
[Function name]	port_output_main
[Argument]	None
[Processing content]	Calls setting function of each port and sets to output pin.
[SFR used]	None
[call function]	port0_output, port1_output, port2_output, port3_output, port4_output, portDL_output
[Variable]	None
[Interrupt]	None
[Interrupt source]	None
[File name]	port_output.c
[Caution]	None

[Function name]	port0_output
[Processing content]	Sets Port 0 to output mode of I/O port.
[SFRs used]	PMC0: 0x00 (Sets to I/O port.) P0: 0x00 (Sets initial value to output data.) PM0: 0x00 (Sets to output mode.)
[call function]	None
[Variable]	None
[File name]	port_output.c
[Caution]	Set the initial value of the output data as desired according to specifications.

[Function name]	port1_output
[Processing content]	Sets Port 1 to output mode of I/O port.
[SFRs used]	PMC1: 0x00 (Sets to I/O port.) P1: 0x00 (Sets initial value to output data.) PM1: 0x00 (Sets to output mode.)
[call function]	None
[Variable]	None
[File name]	port_output.c
[Caution]	Set the initial value of the output data as desired according to specifications.

[Function name]	port2_output
[Processing content]	Sets Port 2 to output mode of I/O port.
[SFRs used]	PMC2: 0x00 (Sets to I/O port.) P2: 0x00 (Sets initial value to output data.) PM2: 0x00 (Sets to output mode.)
[call function]	None
[Variable]	None
[File name]	port_output.c
[Caution]	Set the initial value of the output data as desired according to specifications.

[Function name]	port3_output
[Processing content]	Sets Port 3 to output mode of I/O port.
[SFRs used]	PMC3: 0x00 (Sets to I/O port.) P3: 0x00 (Sets initial value to output data.) PM3: 0x00 (Sets to output mode.)
[call function]	None
[Variable]	None
[File name]	port_output.c
[Caution]	Set the initial value of the output data as desired according to specifications.

[Function name]	port4_output
[Processing content]	Sets Port 4 to output mode of I/O port.
[SFRs used]	PMC4: 0x00 (Sets to I/O port.) P4: 0x00 (Sets initial value to output data.) PM4: 0x00 (Sets to output mode.)
[call function]	None
[Variable]	None
[File name]	port_output.c
[Caution]	Set the initial value of the output data as desired according to specifications.

[Function name]	portDL_output
[Processing content]	Sets Port DL to output mode of I/O port.
[SFRs used]	PMCDL: 0x0000 (Sets to I/O port.) PDL: 0x0000 (Sets initial value to output data.) PMDL: 0x0000 (Sets to output mode.)
[call function]	None
[Variable]	None
[File name]	port_output.c
[Caution]	Set the initial value of the output data as desired according to specifications.

Figure 2-1. Port Output (1/3)

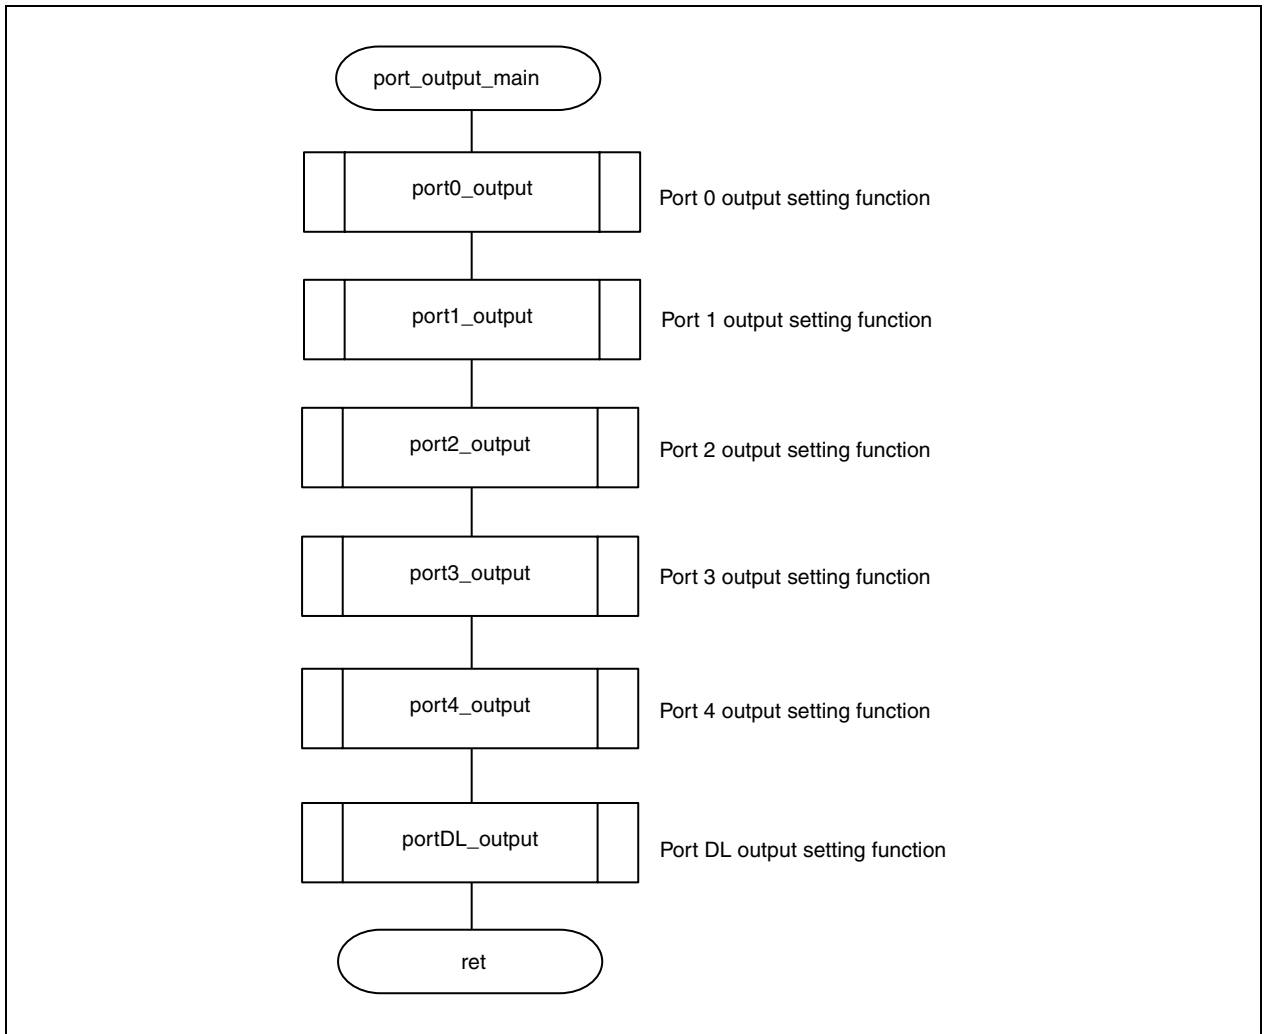


Figure 2-1. Port Output (2/3)


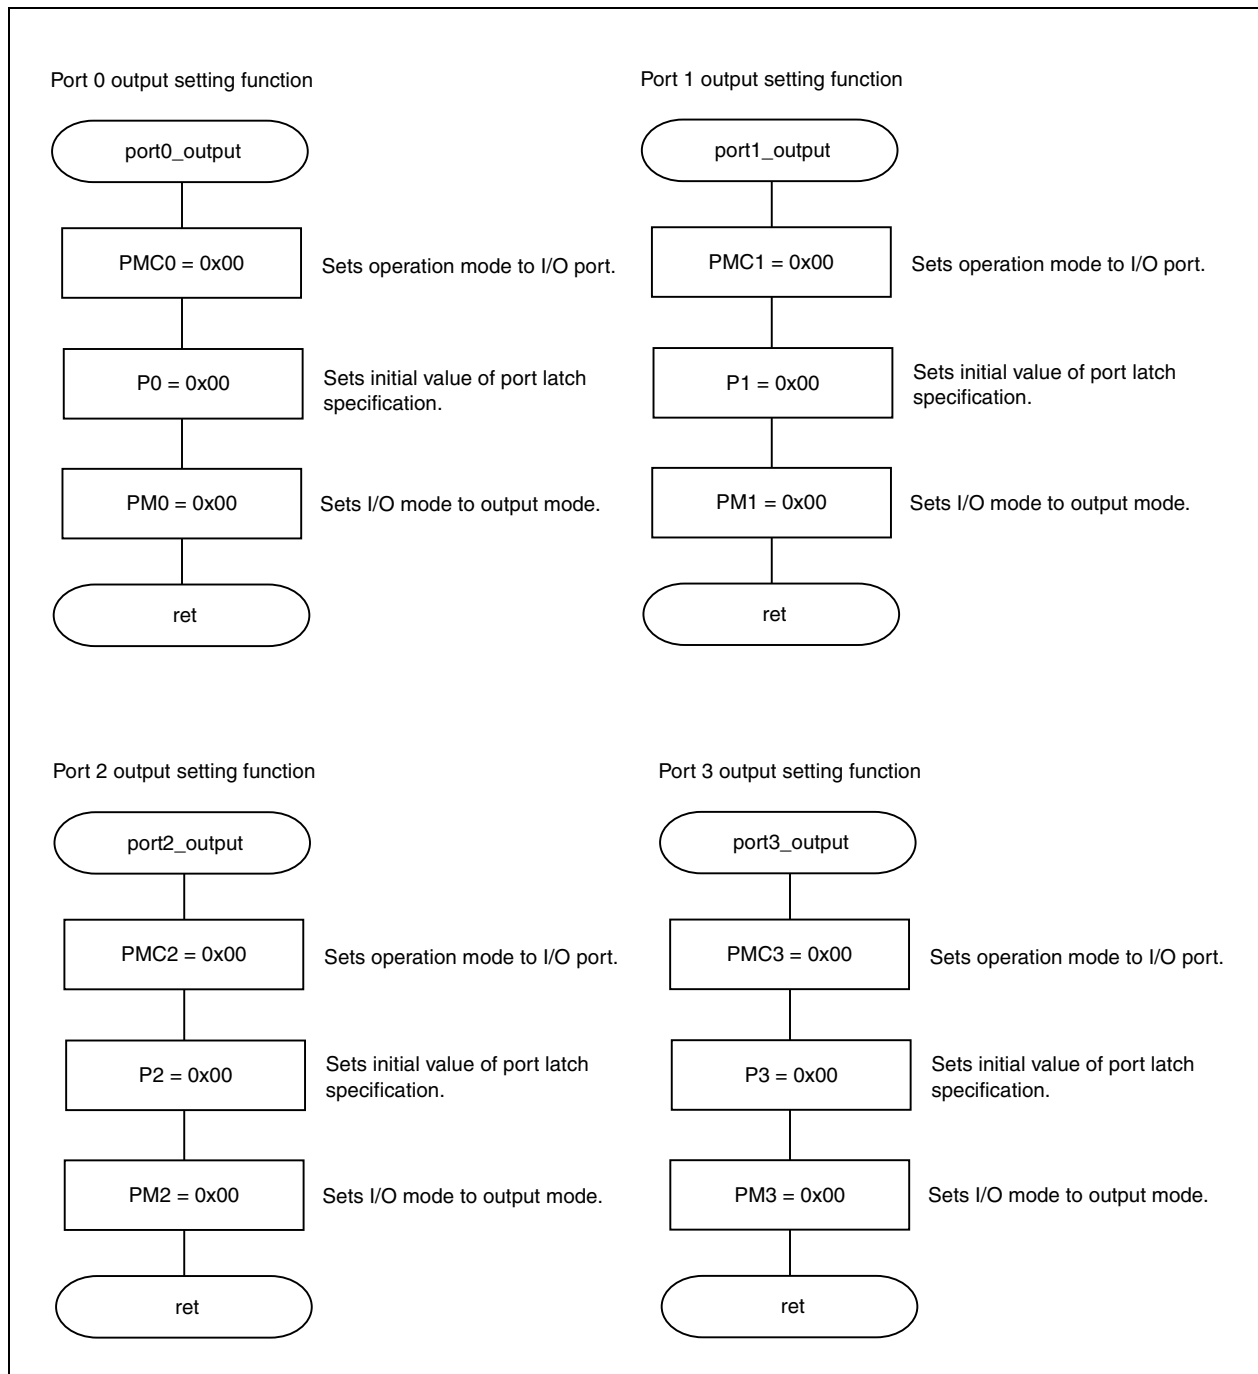


Figure 2-1. Port Output (3/3)

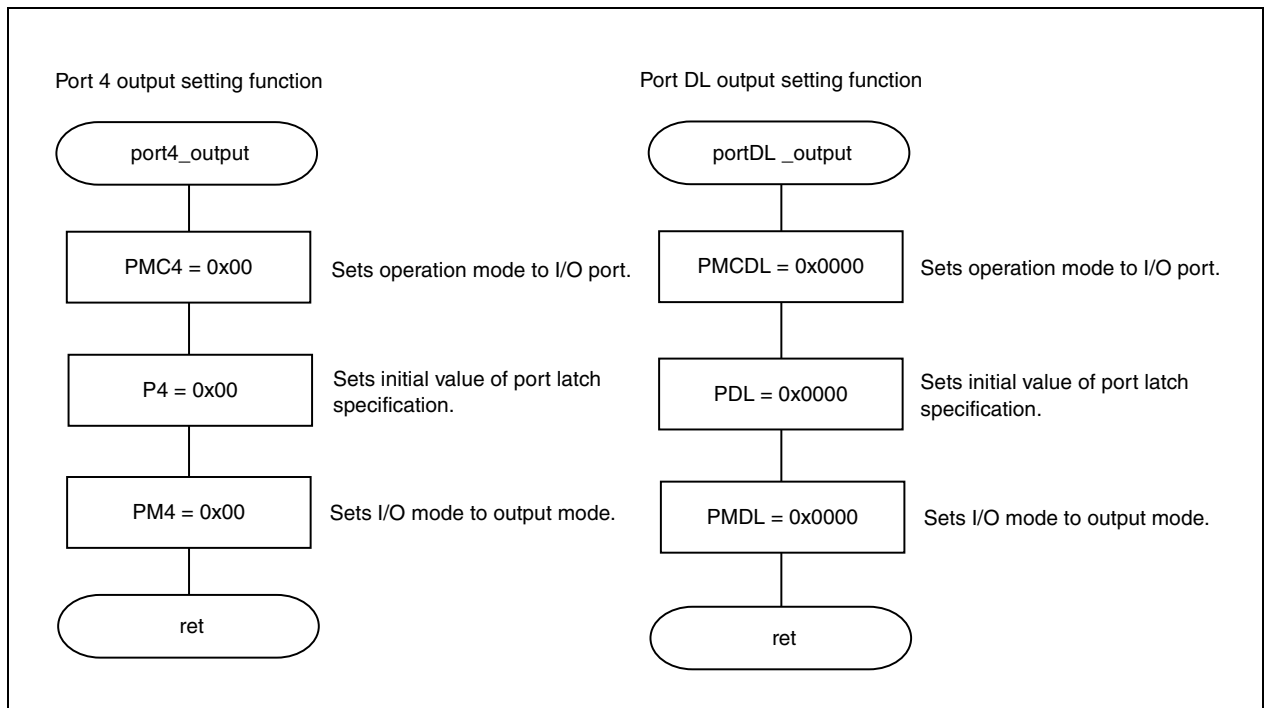

## CHAPTER 3 ALTERNATE FUNCTIONS

[Function]	Sets all ports as alternate functions.
[Function name]	port_use_main
[Argument]	None
[Processing content]	Calls setting function of each port and sets to alternate function.
[SFR used]	None
[call function]	port0_use, port1_ use, port2_ use, port3_ use, port4_ use, port7_ use
[Variable]	None
[Interrupt]	None
[Interrupt source]	None
[File name]	port_use.c
[Caution]	None

[Function name]	port0_use
[Processing content]	Sets Port 0 as alternate function.
[SFRs used]	PFC0: 0x00 (Sets to alternate function.) PFCE0: 0x7F (Sets to alternate function.) PU0: 0x00 (Sets on-chip pull-up resistor as unused.) PMC0: 0xFF (Sets to alternate function.) INTR0: 0x00 (Sets to falling edge.) INTF0: 0xFF (Sets to falling edge.)
[call function]	None
[Variable]	None
[File name]	port_use.c
[Caution]	<ul style="list-style-type: none"><li>• The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode, when the pins function as input pins in alternate-function mode, or when the TOA21 and TOA31 pins which are output pins during alternate-function mode go into a high impedance state due to TOA2OFF and TOA3OFF pins or software processing.</li><li>• The on-chip pull-up resistor is set as “Not connected” in this sample program.</li></ul>



[Function name]	port1_use
[Processing content]	Sets Port 1 as alternate function.
[SFRs used]	PFC1: 0x3F (Sets to alternate function.) PFCE1: 0x00 (Sets to alternate function.) PU1: 0x00 (Sets on-chip pull-up resistor as unused.) PMC1: 0xFF (Sets to alternate function.)
[call function]	None
[Variable]	None
[File name]	port_use.c
[Caution]	<ul style="list-style-type: none"> <li>The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode, when the pins function as input pins in alternate-function mode, or when the TOB0T1 to TOB0T3, and TOB0B1 to TOB0B3 pins which are output pins during alternate-function mode go into a high impedance state due to TOB0OFF pin or software processing.</li> <li>The on-chip pull-up resistor is set as “Not connected” in this sample program.</li> </ul>

[Function name]	port2_use
[Processing content]	Sets Port 2 as alternate function.
[SFRs used]	PFC2: 0x00 (Sets to alternate function.) PFCE2: 0x00 (Sets to alternate function.) PU2: 0x00 (Sets on-chip pull-up resistor as unused.) PMC2: 0x7F (Sets to alternate function.)
[call function]	None
[Variable]	None
[File name]	port_use.c
[Caution]	<ul style="list-style-type: none"> <li>The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode, when the pins function as input pins in alternate-function mode, or when the TOB1T1 to TOB1T3, and TOB1B1 to TOB1B3 pins which are output pins during alternate-function mode go into a high impedance state due to TOB1OFF pin or software processing.</li> <li>The on-chip pull-up resistor is set as “Not connected” in this sample program.</li> </ul>

[Function name]	port3_use
[Processing content]	Sets Port 3 as alternate function.
[SFRs used]	PFC3: 0x6C (Sets to alternate function.) PFCE3: 0x00 (Sets to alternate function.) PU3: 0x00 (Sets on-chip pull-up resistor as unused.) PMC3: 0xFF (Sets to alternate function.)
[call function]	None
[Variable]	None
[File name]	port_use.c
[Caution]	<ul style="list-style-type: none"> <li>The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode or when the pins function as input pins in the alternate-function mode (including when the <math>\overline{\text{SCKB1}}</math> and <math>\overline{\text{SCKB2}}</math> pins are in slave mode).</li> <li>The on-chip pull-up resistor is set as “Not connected” in this sample program.</li> </ul>

[Function name]	port4_use
[Processing content]	Sets Port 4 as alternate function.
[SFRs used]	PFC4: 0x03 (Sets to alternate function.) PFCE4: 0x00 (Sets to alternate function.) PU4: 0x00 (Sets on-chip pull-up resistor as unused.) PMC4: 0xFF (Sets to alternate function.)
[call function]	None
[Variable]	None
[File name]	port_use.c
[Caution]	<ul style="list-style-type: none"> <li>The connection of the on-chip pull-up resistor becomes valid only when in input mode during port mode or when the pins function as input pins in the alternate-function mode (including when the <math>\overline{\text{SCKB0}}</math> pin is in slave mode).</li> <li>The on-chip pull-up resistor is set as “Not connected” in this sample program.</li> </ul>

[Function name]	port7_use
[Processing content]	Sets Port 7 as alternate function.
[SFR used]	PMC7: 0xFF (Sets to alternate function.)
[call function]	None
[Variable]	None
[File name]	port_use.c
[Caution]	None

Figure 3-1. Alternate Functions (1/3)

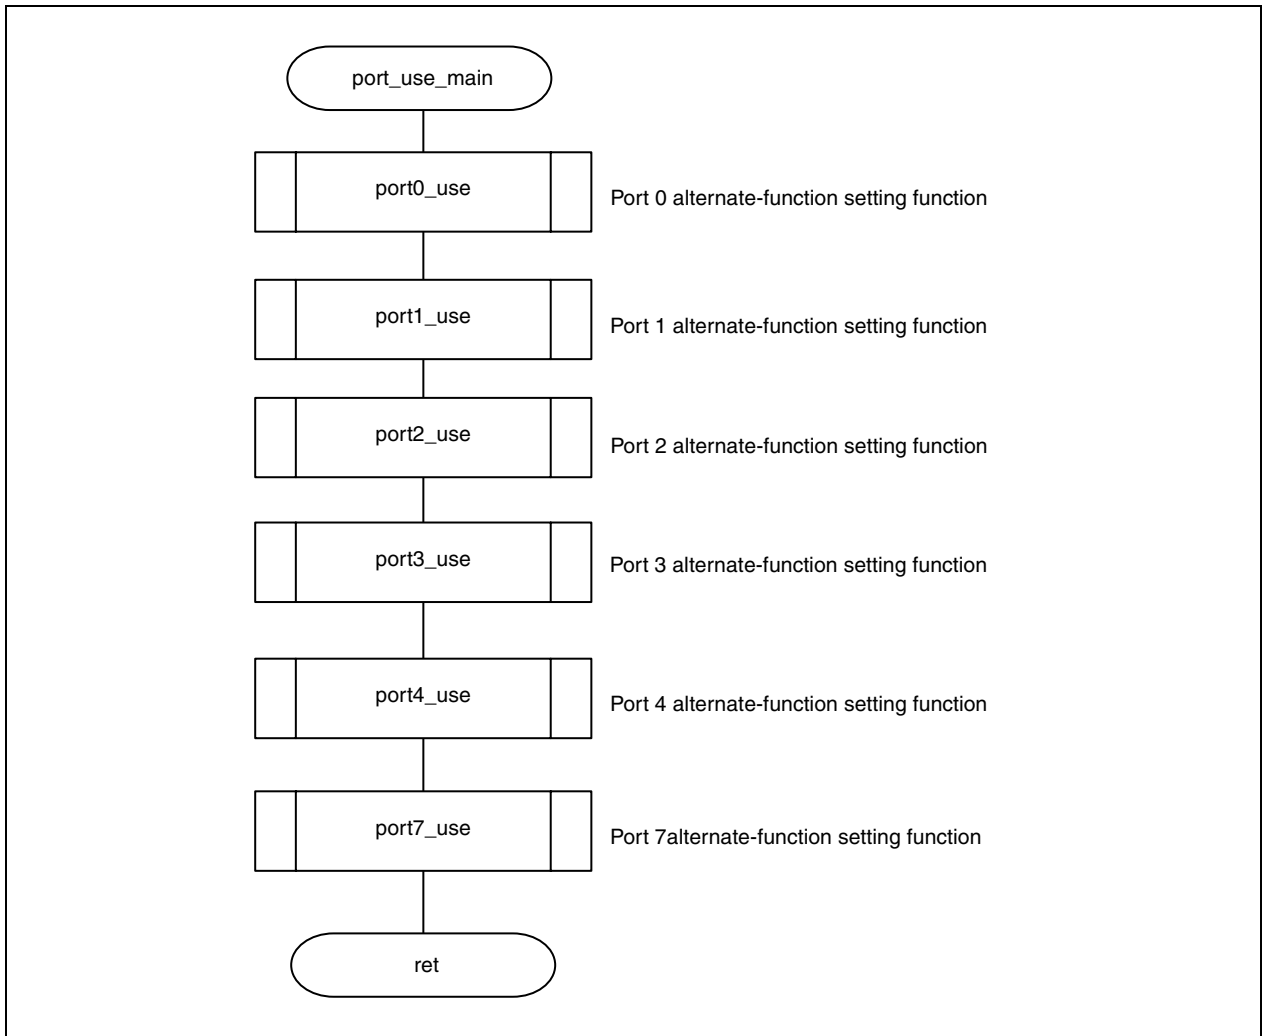


Figure 3-1. Alternate Functions (2/3)


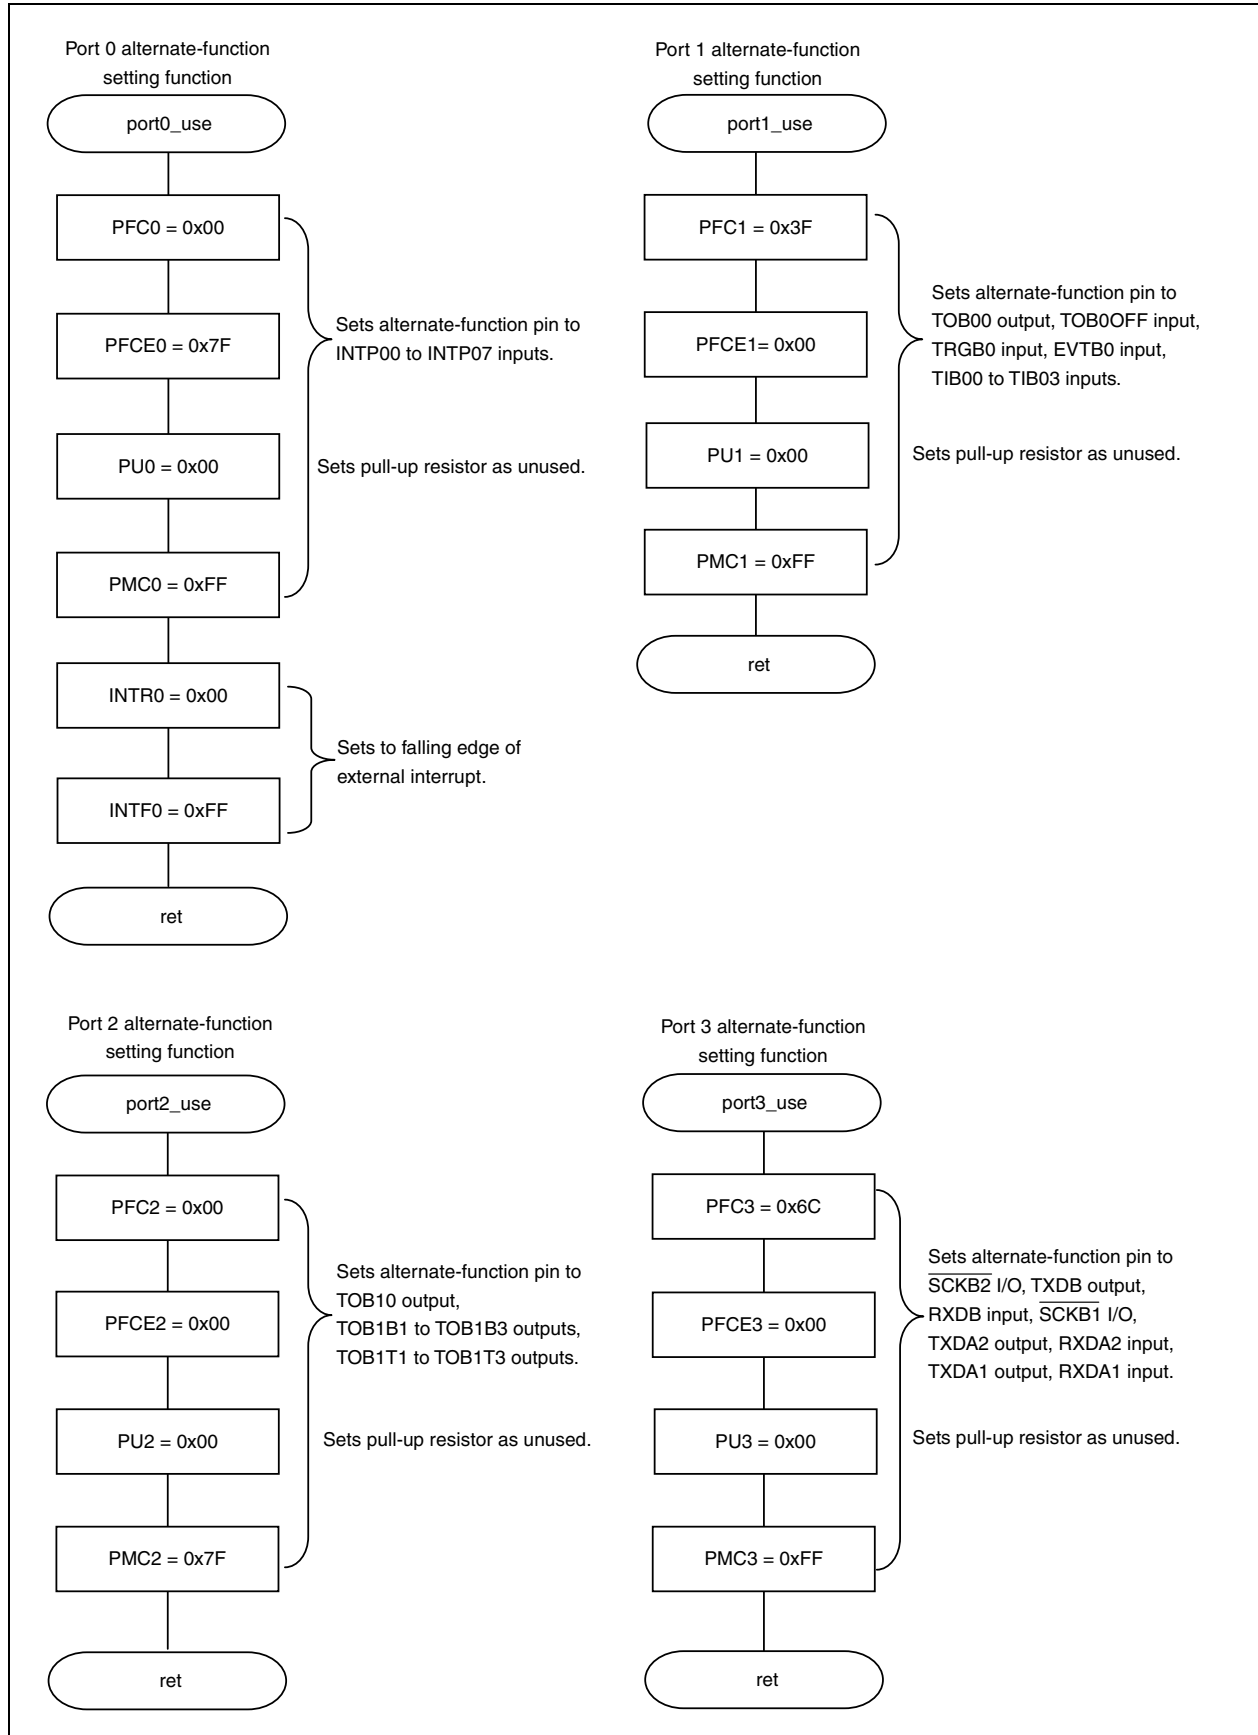


Figure 3-1. Alternate Functions (3/3)

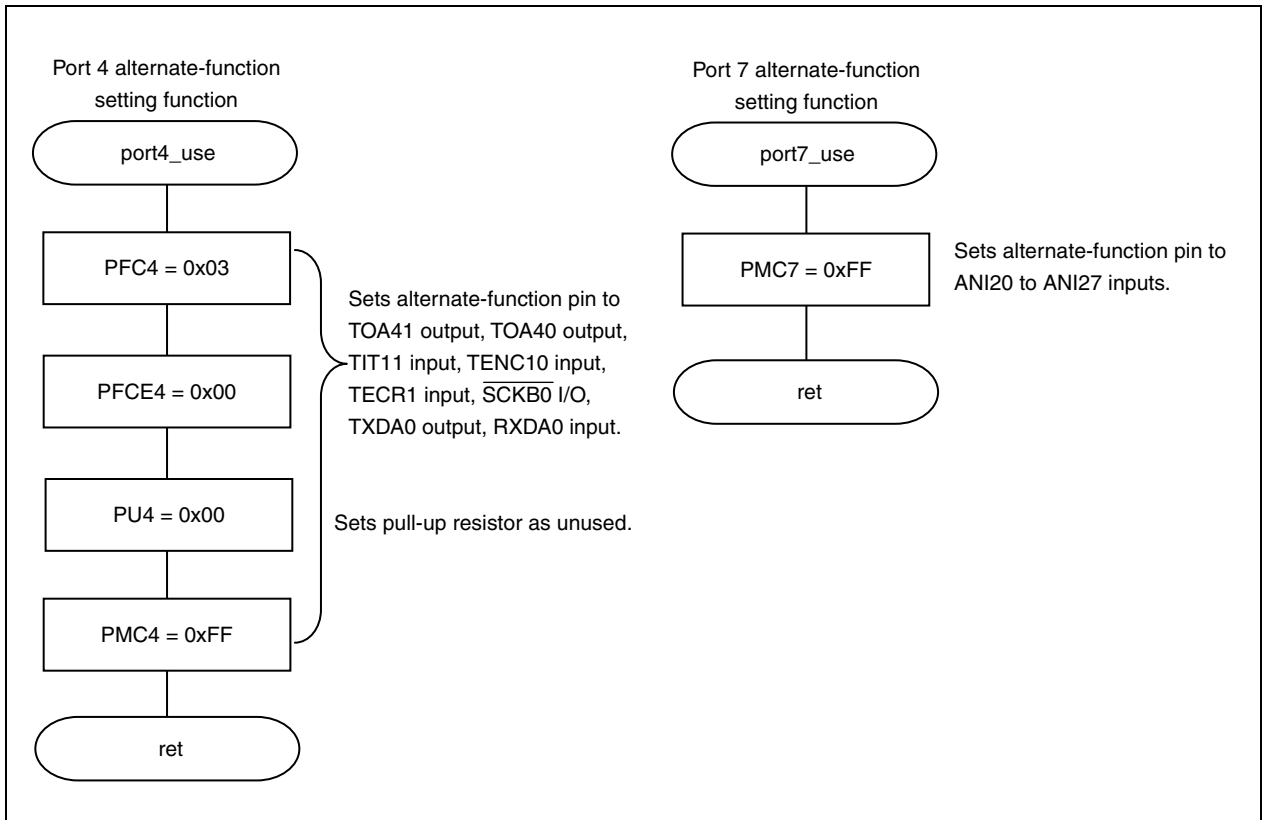

*For further information,  
please contact:*

**NEC Electronics Corporation**  
1753, Shimonumabe, Nakahara-ku,  
Kawasaki, Kanagawa 211-8668,  
Japan  
Tel: 044-435-5111  
<http://www.necel.com/>

**[America]**

**NEC Electronics America, Inc.**  
2880 Scott Blvd.  
Santa Clara, CA 95050-2554, U.S.A.  
Tel: 408-588-6000  
800-366-9782  
<http://www.am.necel.com/>

**[Europe]**

**NEC Electronics (Europe) GmbH**  
Arcadiastrasse 10  
40472 Düsseldorf, Germany  
Tel: 0211-65030  
<http://www.eu.necel.com/>

**Hanover Office**  
Podbielskistrasse 166 B  
30177 Hannover  
Tel: 0 511 33 40 2-0

**Munich Office**  
Werner-Eckert-Strasse 9  
81829 München  
Tel: 0 89 92 10 03-0

**Stuttgart Office**  
Industriestrasse 3  
70565 Stuttgart  
Tel: 0 711 99 01 0-0

**United Kingdom Branch**  
Cygnus House, Sunrise Parkway  
Linford Wood, Milton Keynes  
MK14 6NP, U.K.  
Tel: 01908-691-133

**Succursale Française**  
9, rue Paul Dautier, B.P. 52  
78142 Velizy-Villacoublay Cédex  
France  
Tel: 01-3067-5800

**Sucursal en España**  
Juan Esplandiú, 15  
28007 Madrid, Spain  
Tel: 091-504-2787

**Tyskland Filial**  
Täby Centrum  
Entrance S (7th floor)  
18322 Täby, Sweden  
Tel: 08 638 72 00

**Filiale Italiana**  
Via Fabio Filzi, 25/A  
20124 Milano, Italy  
Tel: 02-667541

**Branch The Netherlands**  
Steijgerweg 6  
5616 HS Eindhoven  
The Netherlands  
Tel: 040 265 40 10

**[Asia & Oceania]**

**NEC Electronics (China) Co., Ltd**  
7th Floor, Quantum Plaza, No. 27 ZhiChunLu Haidian  
District, Beijing 100083, P.R.China  
Tel: 010-8235-1155  
<http://www.cn.necel.com/>

**Shanghai Branch**  
Room 2509-2510, Bank of China Tower,  
200 Yincheng Road Central,  
Pudong New Area, Shanghai, P.R.China P.C:200120  
Tel:021-5888-5400  
<http://www.cn.necel.com/>

**Shenzhen Branch**  
Unit 01, 39/F, Excellence Times Square Building,  
No. 4068 Yi Tian Road, Futian District, Shenzhen,  
P.R.China P.C:518048  
Tel:0755-8282-9800  
<http://www.cn.necel.com/>

**NEC Electronics Hong Kong Ltd.**  
Unit 1601-1613, 16/F., Tower 2, Grand Century Place,  
193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: 2886-9318  
<http://www.hk.necel.com/>

**NEC Electronics Taiwan Ltd.**  
7F, No. 363 Fu Shing North Road  
Taipei, Taiwan, R. O. C.  
Tel: 02-8175-9600  
<http://www.tw.necel.com/>

**NEC Electronics Singapore Pte. Ltd.**  
238A Thomson Road,  
#12-08 Novena Square,  
Singapore 307684  
Tel: 6253-8311  
<http://www.sg.necel.com/>

**NEC Electronics Korea Ltd.**  
11F., Samik Lavied'or Bldg., 720-2,  
Yeoksam-Dong, Kangnam-Ku,  
Seoul, 135-080, Korea  
Tel: 02-558-3737  
<http://www.kr.necel.com/>