

To our customers,

Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1st, 2010
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.

"Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.

8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

To all our customers

Regarding the change of names mentioned in the document, such as Hitachi Electric and Hitachi XX, to Renesas Technology Corp.

The semiconductor operations of Mitsubishi Electric and Hitachi were transferred to Renesas Technology Corporation on April 1st 2003. These operations include microcomputer, logic, analog and discrete devices, and memory chips other than DRAMs (flash memory, SRAMs etc.)

Accordingly, although Hitachi, Hitachi, Ltd., Hitachi Semiconductors, and other Hitachi brand names are mentioned in the document, these names have in fact all been changed to Renesas Technology Corp. Thank you for your understanding. Except for our corporate trademark, logo and corporate statement, no changes whatsoever have been made to the contents of the document, and these changes do not constitute any alteration to the contents of the document itself.

Renesas Technology Home Page: <http://www.renesas.com>

Renesas Technology Corp.
Customer Support Dept.
April 1, 2003

Cautions

Keep safety first in your circuit designs!

1. Renesas Technology Corporation puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage.
Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

1. These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corporation product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation or a third party.
2. Renesas Technology Corporation assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor for the latest product information before purchasing a product listed herein.
The information described here may contain technical inaccuracies or typographical errors.
Renesas Technology Corporation assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors.
Please also pay attention to information published by Renesas Technology Corporation by various means, including the Renesas Technology Corporation Semiconductor home page (<http://www.renesas.com>).
4. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
5. Renesas Technology Corporation semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
6. The prior written approval of Renesas Technology Corporation is necessary to reprint or reproduce in whole or in part these materials.
7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination.
Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
8. Please contact Renesas Technology Corporation for further details on these materials or the products contained therein.

SuperH RISC engine
High-performance Embedded
Workshop 2
Tutorial
(Renesas Toolchain)

Cautions

1. Hitachi neither warrants nor grants licenses of any rights of Hitachi's or any third party's patent, copyright, trademark, or other intellectual property rights for information contained in this document. Hitachi bears no responsibility for problems that may arise with third party's rights, including intellectual property rights, in connection with use of the information contained in this document.
2. Products and product specifications may be subject to change without notice. Confirm that you have received the latest product standards or specifications before final design, purchase or use.
3. Hitachi makes every attempt to ensure that its products are of high quality and reliability. However, contact Hitachi's sales office before using the product in an application that demands especially high quality and reliability or where its failure or malfunction may directly threaten human life or cause risk of bodily injury, such as aerospace, aeronautics, nuclear power, combustion control, transportation, traffic, safety equipment or medical equipment for life support.
4. Design your application so that the product is used within the ranges guaranteed by Hitachi particularly for maximum rating, operating supply voltage range, heat radiation characteristics, installation conditions and other characteristics. Hitachi bears no responsibility for failure or damage when used beyond the guaranteed ranges. Even within the guaranteed ranges, consider normally foreseeable failure rates or failure modes in semiconductor devices and employ systemic measures such as fail-safes, so that the equipment incorporating Hitachi product does not cause bodily injury, fire or other consequential damage due to operation of the Hitachi product.
5. This product is not designed to be radiation resistant.
6. No one is permitted to reproduce or duplicate, in any form, the whole or part of this document without written approval from Hitachi.
7. Contact Hitachi's sales office for any questions regarding this document or Hitachi semiconductor products.

Preface

This tutorial will introduce you to the basic usage of the Hitachi Embedded Workshop 2 (hereafter referred to as *HEW*). The tutorial describes a series of usage such as how to invoke the HEW, how to create and modify a project, how to build a program, and how to invoke a simulator/debugger from the HEW. For details on the HEW, the C/C++ compiler, assembler, optimizing linkage editor, and simulator/debugger, refer to the following manuals.

- SuperH™ RISC engine Hitachi Embedded Workshop 2 User's Manual
- SuperH™ RISC engine C/C++ Compiler, Cross Assembler, Optimizing Linkage Editor User's Manual

For details on the SuperH™ RISC engine CPU, refer to a programming manual or a hardware manual of the corresponding CPU.

Microsoft®, Windows®, Windows® 98, Windows Me®, Windows NT®, Windows 2000® and Windows® XP are registered trademarks of Microsoft Corporation in the United States and/or in other countries.

All other brand or product names used in this manual are trademarks or registered trademarks of their respective companies or organizations.

This tutorial is written assuming that all the tools included in the SuperH™ RISC engine C/C++ compiler Package are installed.

If “->” is written inside [and], the left hand side of “->” means the menu title and the right hand side of “->” means a menu option of the menu. For example, in figure 1, the menu option [Exit] in the [File] menu is described as [File->Exit].

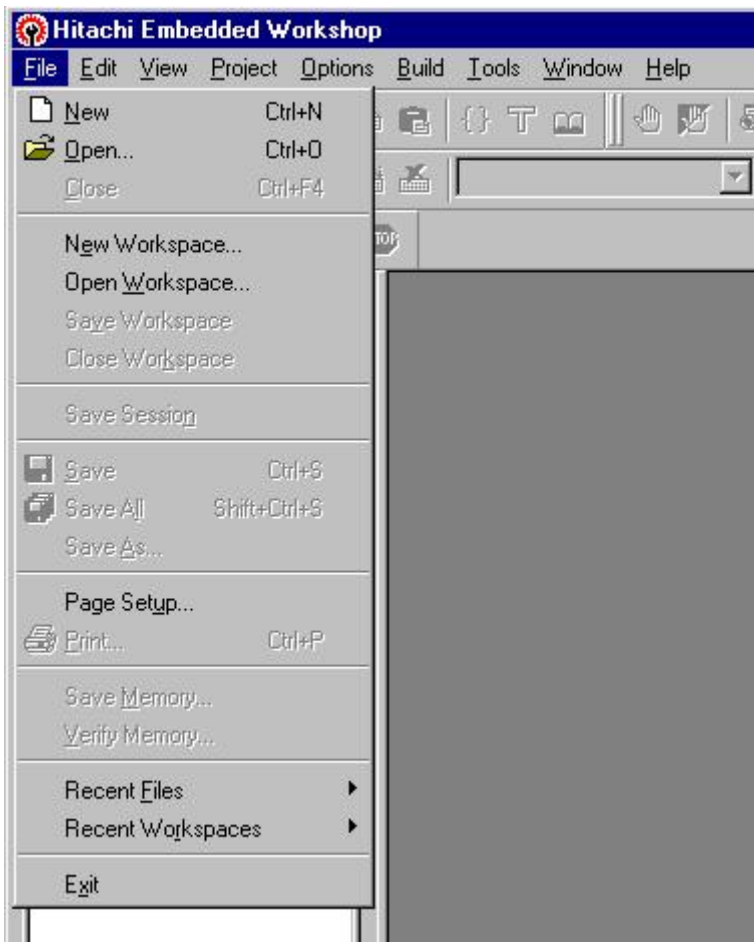


Figure 1 A Menu of the HEW

Contents

Section 1	Invoking the HEW	9
Section 2	Creating a Project.....	11
2.1	Creating a New Workspace.....	11
2.2	Selecting the Target CPU	13
2.3	Option Setting	14
2.4	Setting the Contents of Files to be Generated	15
2.5	Setting the Standard Library	17
2.6	Setting the Stack Area.....	18
2.7	Setting the Vector	19
2.8	Setting the Target System for Debugging.....	20
2.9	Setting the Debugger Options	21
2.10	Changing the File Names to be Created.....	22
2.11	Confirming Settings (Summary Dialog Box).....	23
Section 3	Modifying the Project	27
3.1	Editing and Creating a Source Program File.....	27
3.2	Adding/Removing a File To/From a Project.....	29
3.3	File Groups Used in a Project	32
3.4	Customizing the Workspace Window	34
Section 4	Building a Project	37
4.1	Build Overview.....	37
4.2	Setting Options.....	37
4.3	Customizing the Configuration.....	39
4.4	Excluding a Project File from Build	40
4.5	Correcting Errors in a Build.....	41
4.6	Customizing the Session	42
Section 5	Debugging.....	43
5.1	Preparation	43
5.1.1	Sample Program.....	43
5.1.2	Creating the Sample Program	43
5.2	Settings for Debugging	44
5.2.1	Allocating the Memory Resource	44
5.2.2	Downloading the Sample Program	45
5.2.3	Displaying the Source Program	46
5.2.4	Setting a PC Breakpoint.....	47
5.2.5	Setting the Profiler	48

5.2.6	Setting the Simulated I/O	49
5.2.7	Setting the Trace Information Acquisition Conditions.....	50
5.2.8	Setting the Stack Pointer and Program Counter	51
5.3	Start Debugging.....	52
5.3.1	Executing a Program	52
5.3.2	Using the Trace Buffer	54
5.3.3	Performing Trace Search.....	55
5.3.4	Checking Simulated I/O	56
5.3.5	Checking the Breakpoints.....	57
5.3.6	Watching Variables	57
5.3.7	Executing the Program in Single Steps	58
5.3.8	Checking Profile Information.....	62
Section 6	Exiting from the HEW.....	65

Figures

Figure 1	A Menu of the HEW	2
Figure 1.1	Invoking the HEW from the [Start] Menu.....	9
Figure 1.2	Welcome! Dialog Box.....	10
Figure 2.1	New Project Workspace Dialog Box.....	12
Figure 2.2	Selecting the Target CPU (Step 1)	13
Figure 2.3	Option Setting (Step 2).....	14
Figure 2.4	Setting the Contents of Files to be Generated (Step 3).....	16
Figure 2.5	Setting the Standard Library (Step 4).....	17
Figure 2.6	Setting the Stack Area (Step 5)	18
Figure 2.7	Setting the Vector (Step 6)	19
Figure 2.8	Setting the Target System for Debugging (Step 7).....	20
Figure 2.9	Setting the Debugger Options (Step 8).....	21
Figure 2.10	Changing the File Names to be Created (Step 9)	22
Figure 2.11	Summary Dialog Box	23
Figure 2.12	Sub-windows of the HEW	24
Figure 2.13	The HEW after Building a Project	25
Figure 3.1	Opening a Project File.....	27
Figure 3.2	Editing a Project File	28
Figure 3.3	Adding a File To a Project.....	29
Figure 3.4	Project With a File Added	30
Figure 3.5	Remove Project Files Dialog Box	31
Figure 3.6	File Extensions Dialog Box (Initial Screen).....	32
Figure 3.7	Add File Extension Dialog Box	33

Figure 3.8 File Extension Dialog Box (After Adding an File Extension)	34
Figure 3.9 Configure View Dialog Box	34
Figure 3.10 Configuration of the Workspace Window	35
Figure 4.1 Option Dialog Box of C/C++ Compiler	38
Figure 4.2 Build Configurations Dialog Box	39
Figure 4.3 Excluding a Project File from Build	40
Figure 4.4 Correcting the Line which Caused an Error	41
Figure 4.5 Debug Sessions Dialog Box	42
Figure 5.1 Simulator Memory Resource Dialog Box	44
Figure 5.2 Debug Settings Dialog Box	45
Figure 5.3 Source Window (Displaying the Source Program)	46
Figure 5.4 Source Window (Setting the Breakpoint)	47
Figure 5.5 Profile Window	48
Figure 5.6 Simulator System Dialog Box	49
Figure 5.7 Simulated I/O Window	50
Figure 5.8 Trace Acquisition Dialog Box	50
Figure 5.9 Reset CPU Button	51
Figure 5.10 Go Button	52
Figure 5.11 Source Window (Break Status)	52
Figure 5.12 Status Window	53
Figure 5.13 Register Window	54
Figure 5.14 Trace Window (Trace Information Display)	54
Figure 5.15 Trace Search Dialog Box	55
Figure 5.16 Trace Window (Searched Result)	55

Figure 5.17	Simulated I/O Window	56
Figure 5.18	Break Window	57
Figure 5.19	Add Watch Dialog Box	57
Figure 5.20	Watch Window	58
Figure 5.21	Step In Button.....	59
Figure 5.22	Source Window (Step In)	59
Figure 5.23	Step Out Button	60
Figure 5.24	Source Window (Step Out)	60
Figure 5.25	Step Over Button	61
Figure 5.26	Source Window (Step Over)	61
Figure 5.27	Profile Window (List Sheet).....	62
Figure 5.28	Profile Window (Tree Sheet).....	63
Figure 5.29	Profile-Chart Window	64
Figure 6.1	Confirmation Dialog Box for Saving Session on Exiting from the HEW	65

Tables

Table 2.1 Items of [Project type:]..... 12

Section 1 Invoking the HEW

After the installation of the HEW, the installer creates a folder whose name is [Hitachi Embedded Workshop 2] in the [Program] folder of the [Start] menu of the Windows®. In the [Hitachi Embedded Workshop 2] folder, short cuts of the HEW support files will be registered. The contents of the [Start] menu and its submenus differ depending on your installation.

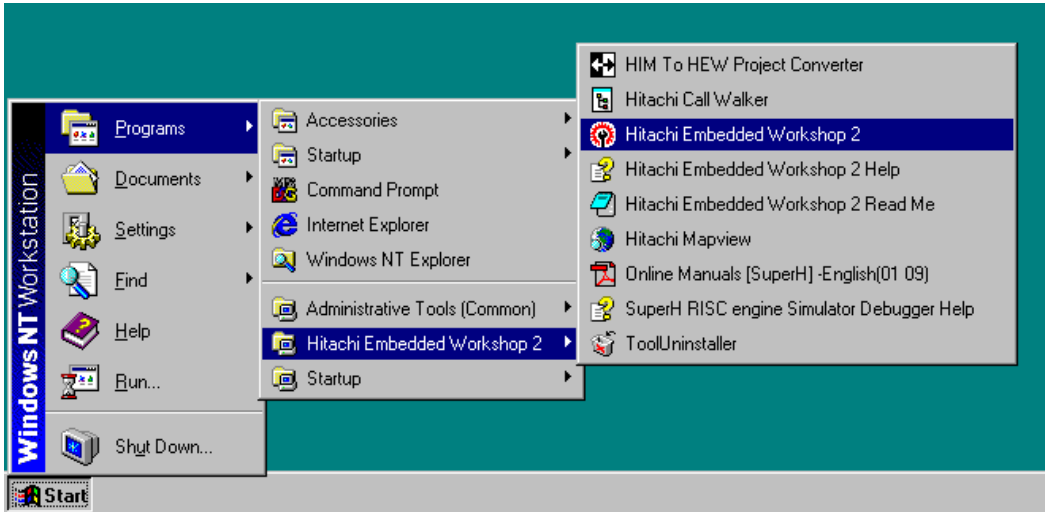


Figure 1.1 Invoking the HEW from the [Start] Menu

If you click [Hitachi Embedded Workshop 2] from the menu, the HEW will be invoked and the [Welcome!] dialog box (figure 1.2) will be displayed. You can open the project promptly without the [Welcome!] dialog box if you change the setting via [Tools->Options]. For details of this setting, refer to chapter 6, “Customizing the Environment”, of the Hitachi Embedded Workshop 2 User’s Manual.

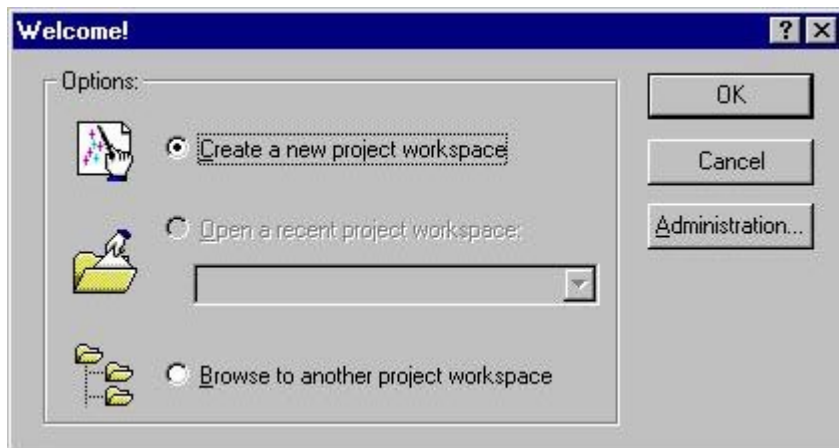


Figure 1.2 Welcome! Dialog Box

If you use the HEW for the first time or if you want to work on a new project, select the [Create a new project workspace] radio button and click [OK]. If you want to work on an existing project, select the [Open a recent project workspace] or [Browse to another project workspace] radio button and click [OK].

In this tutorial, select the [Create a new project workspace] radio button and click [OK].

Section 2 Creating a Project

2.1 Creating a New Workspace

When you have selected the [Create a new project workspace] radio button and clicked [OK] on the [Welcome!] dialog box, the [New Project Workspace] dialog box (figure 2.1), which is used to create a new workspace and project, will be launched. You will specify a workspace name (When a new workspace is created, the project name is the same as the default), a CPU family, a project type, and so on, on this dialog box.

Enter “tutorial”, for example, in the [Workspace Name] field, then the [Project Name] field will show “tutorial” and the [Directory] field will show “c:\hew2\tutorial”. If you want to change the project name, enter a new project name manually in the [Project Name] field. If you want to change the directory used for the new workspace, click the [Browse...] button and specify a directory, or enter a directory path manually in the [Directory] field.

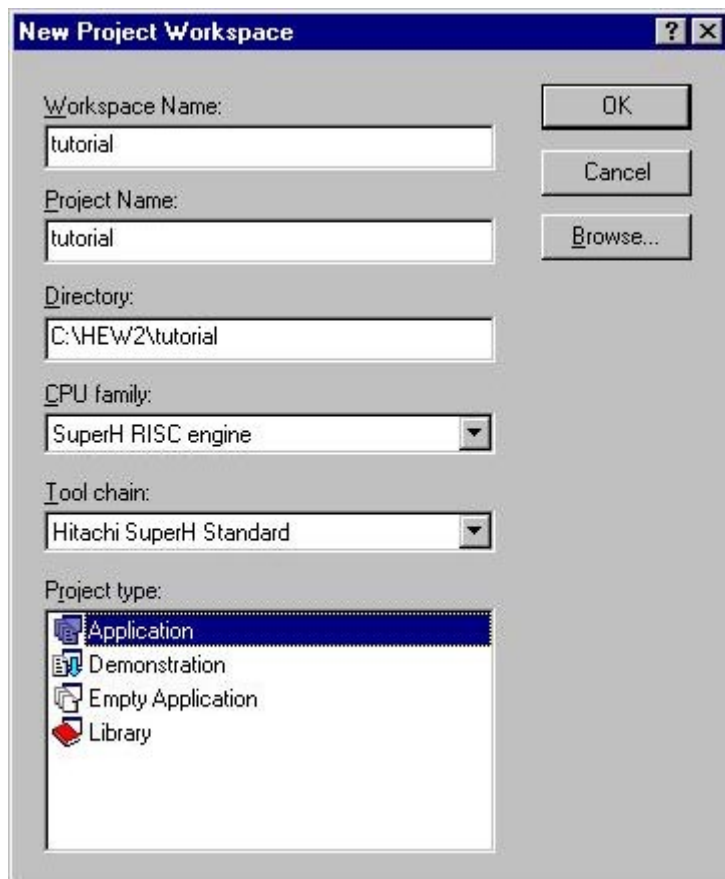


Figure 2.1 New Project Workspace Dialog Box

Table 2.1 Items of [Project type:]

Items of [Project type:]	Description
Application	This project is used to create a program that includes the initial routine files written in C/C++ or assembly language.
Demonstration	This project is used to create the program for demonstration written in C/C++ or assembly language.
Empty Application	This project is used to set up the toolchain (no file is to be generated).
Library	This project is used to create a library file (no file is to be generated).

2.2 Selecting the Target CPU

When you click [OK] on the [New Project Workspace] dialog box, the project generator will be invoked. Start by selecting the CPU that you will be using. CPU types shown in the [CPU Type:] list are classified into the CPU series shown in the [CPU Series:] list.

The selected items in the [CPU Series:] list box and the [CPU Type:] list box specify the files to be generated. Select the CPU type of the program to be developed. If the CPU type which you want to select is not displayed in the [CPU Type:] list, select a CPU type with similar hardware specifications or select [Other].

Clicking [Next>] moves to the next display. Clicking [<Back] moves to the previous display or the previous dialog box. Clicking [Finish] opens the [Summary] dialog box. Clicking [Cancel] returns the display to the [New Project Workspace] dialog box. [<Back], [Next>], [Finish], and [Cancel] are common buttons of all the wizard dialog boxes.

In this tutorial, select [SH-1] in the [CPU Series:] list and select [SH7020] in the [CPU Type:] list (figure 2.2). Then click [Next >].

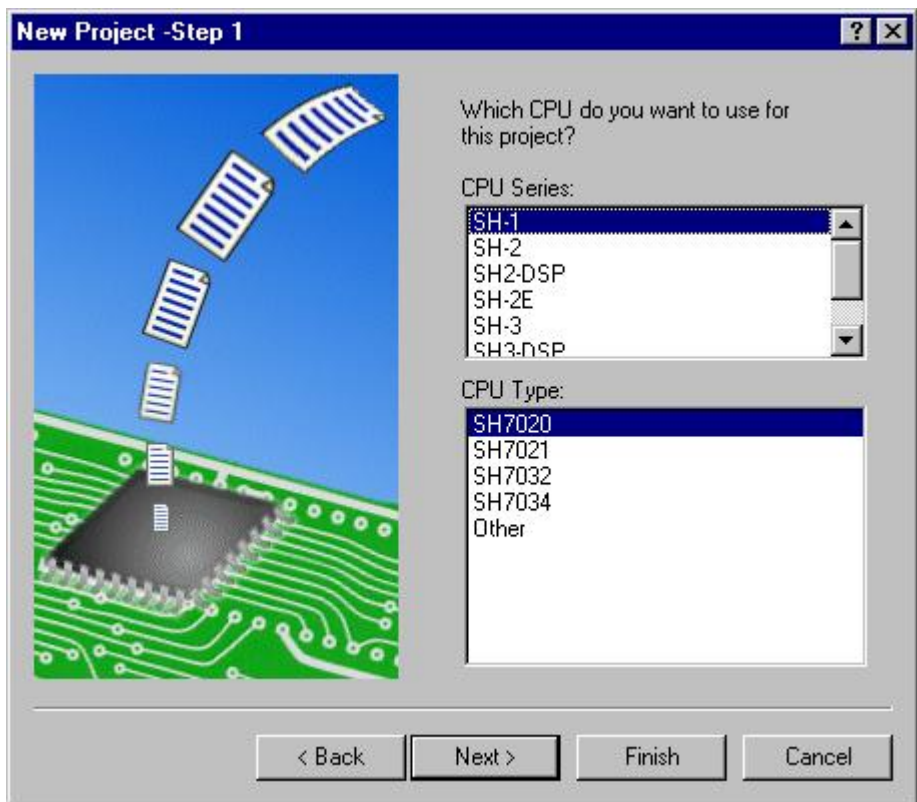


Figure 2.2 Selecting the Target CPU (Step 1)

2.3 Option Setting

Clicking the [Next>] button on the Step-1 screen opens the dialog box shown in figure 2.3.

On this screen, you can specify options common to all project files.

Settings for these options can be modified in correspondence with the CPU series selected in step 1 screen. To change the option settings after a project has been created, select the CPU page from the [Options -> Hitachi SuperH RISC engine Standard Toolchain] menu item of the HEW window.

Click the [Next>] button without changing the setting. The Step-3 screen will be displayed.

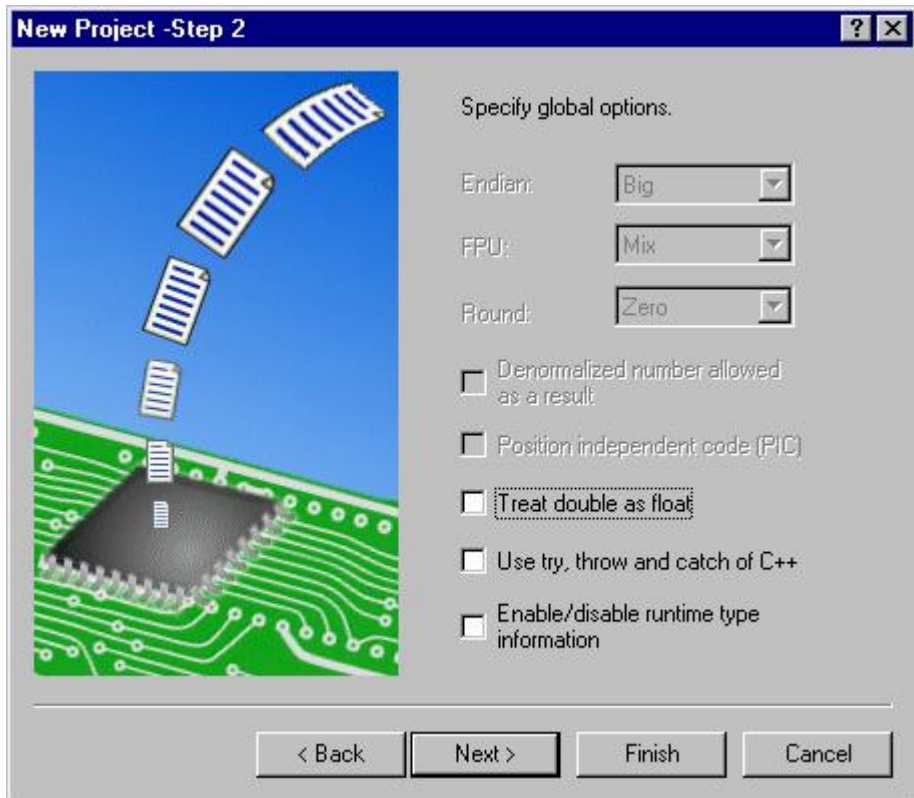


Figure 2.3 Option Setting (Step 2)

2.4 Setting the Contents of Files to be Generated

Click the [Next>] button on the Step-2 screen to display the screen shown in figure 2.4.

On this screen, specify information that is necessary to generate files.

If [Use I/O Library] is checked, the standard I/O library can be used.

If [Use Heap Memory] is checked, the function `sbrk()` for heap area management will be generated. Specify the number of bytes of the heap area in the [Heap Size:] edit box.

Select whether or not to generate a sample code for the main function from the [Generate main() Function] drop-down list.

If [I/O Register Definition Files] is checked, an I/O register definition file, which is written in C language, can be created. Then select whether or not to generate a sample code for the program that makes initial settings of the I/O registers from the [Generate Hardware Setup Function] drop-down list.

In this tutorial, check [Use I/O Library] and click [Next >].

NOTE

If you want to use an existing main function, uncheck [Generate main() Function], add the file of the function after generating the project. If the name of the function differs from main, change the caller of the function in `resetprg.c`. For the contents of such sample files as a vector table definition file or I/O register definition file that will be generated by the project generator, check the description in the hardware manual for the target CPU.

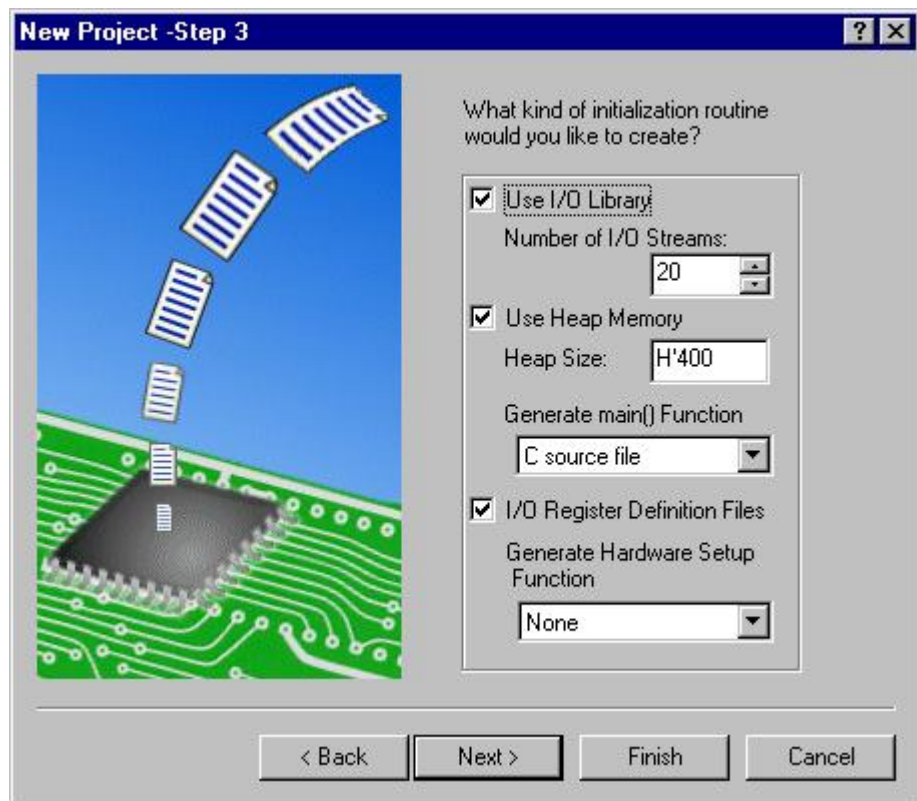


Figure 2.4 Setting the Contents of Files to be Generated (Step 3)

2.5 Setting the Standard Library

The screen shown in figure 2.5 is displayed when the [Next>] button is clicked in the Step-3 screen. This screen is used to set details of compilation by the C/C++ compiler. To change the standard library configuration after a project has been created, select the CPU page in [Options - > Hitachi SuperH RISC engine Standard Toolchain] of the HEW. In this tutorial, click the [Next>] button without changing the settings.

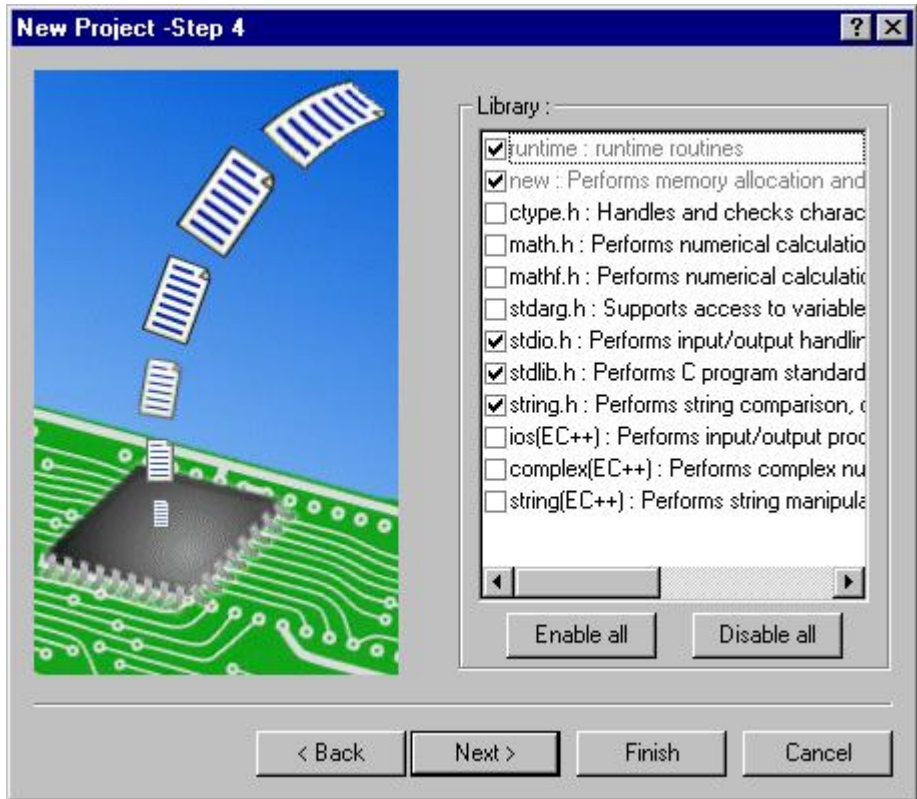


Figure 2.5 Setting the Standard Library (Step 4)

2.6 Setting the Stack Area

The screen shown in figure 2.6 is displayed when the [Next>] button is clicked in the Step-4 screen.

This screen is used to specify the stack area.

The initial value of the stack area differs depending on [CPU Type:] selected in the Step-1 screen. To change the stack size after a project has been created, select the [Project -> Edit Project Configuration] menu item of the HEW window. In this tutorial, since SH7020 has been selected for [CPU Type:] in the Step-1 screen, [Stack Pointer Address:] is set to H'7FFFFFF0 and [Stack Size:] is set to H'100. In this tutorial, click the [Next>] button without changing the settings.

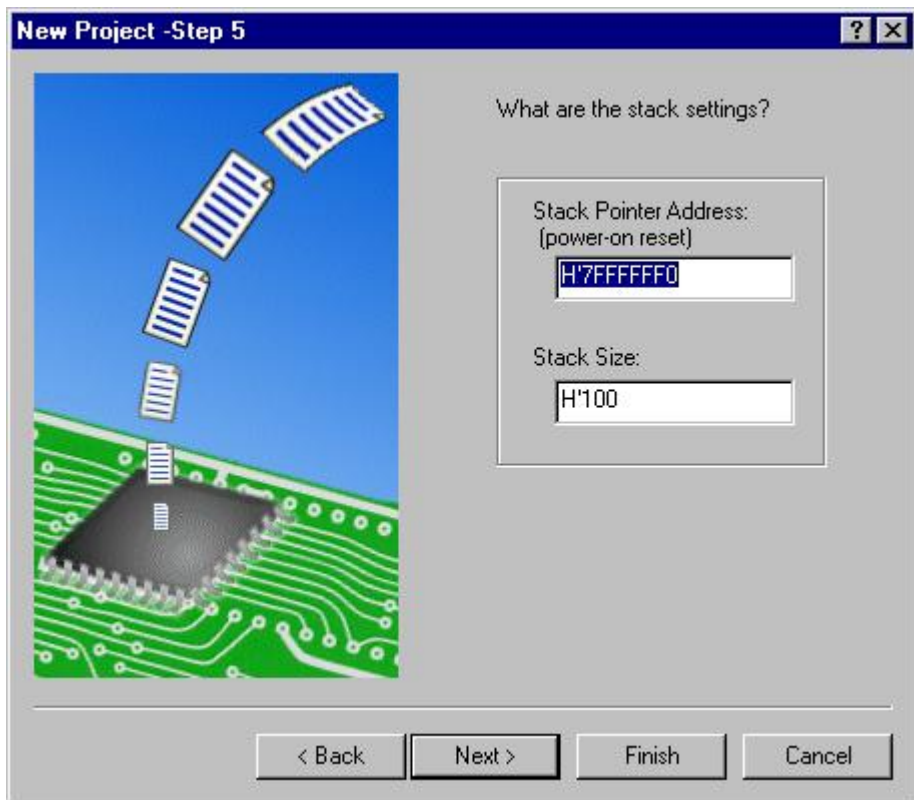


Figure 2.6 Setting the Stack Area (Step 5)

The stack area is defined in `stacksct.h` that is generated by the HEW. If `stacksct.h` has been edited in an editor, its modification after you have selected the [Project -> Edit Project Configuration] menu item of the HEW will not be available.

2.7 Setting the Vector

Clicking the [Next>] button in the Step-5 screen displays the screen shown in figure 2.7.

In this screen, a vector is specified.

If [Vector Table Definition Files] is checked, the HEW creates a vector table definition file.

The [Handler] column of [Vector Handlers:] displays the handler program name, and the [Vector] column displays the vector description. To change the handler program, click the name of the handler program to be changed, and enter a new name.

If the handler name in the [Vector Handlers:] list is changed, the HEW does not create the reset program (resetprg.c).

In this tutorial, click the [Next>] button without changing the settings.

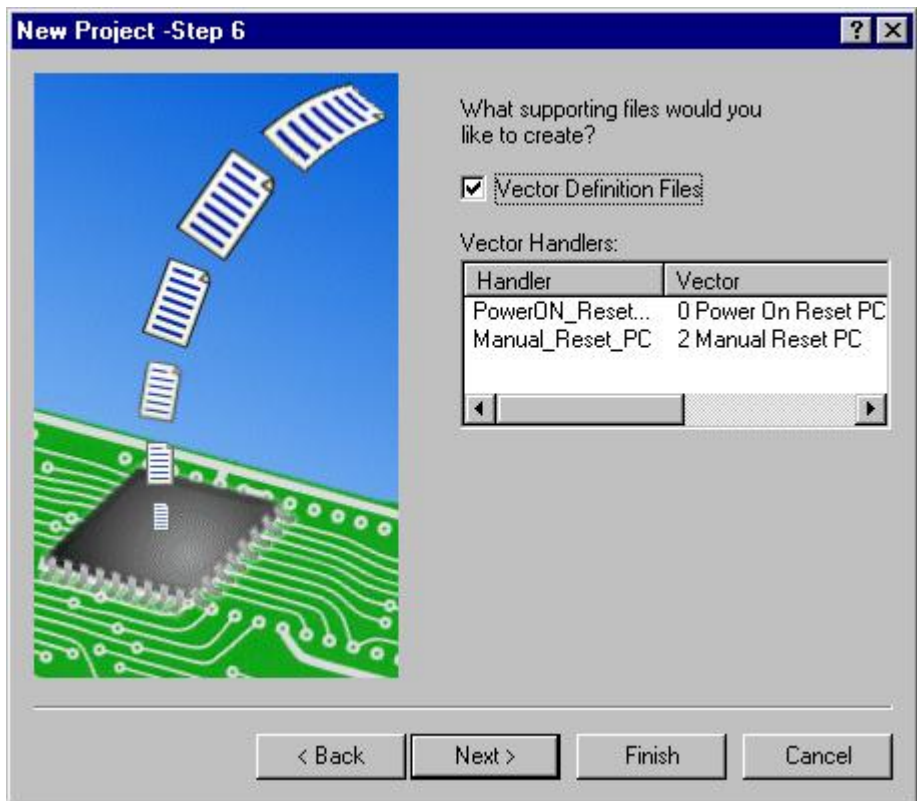


Figure 2.7 Setting the Vector (Step 6)

2.8 Setting the Target System for Debugging

When the [Next>] button is clicked in the Step-6 screen, the screen shown in figure 2.8 is displayed. This screen is used to specify the target system for debugging. Select (check) the target for debugging from the list under [Targets:]. Selection of no target or of multiple targets is allowed.

In this tutorial, select [SH-1 Simulator] and then click the [Next>] button.

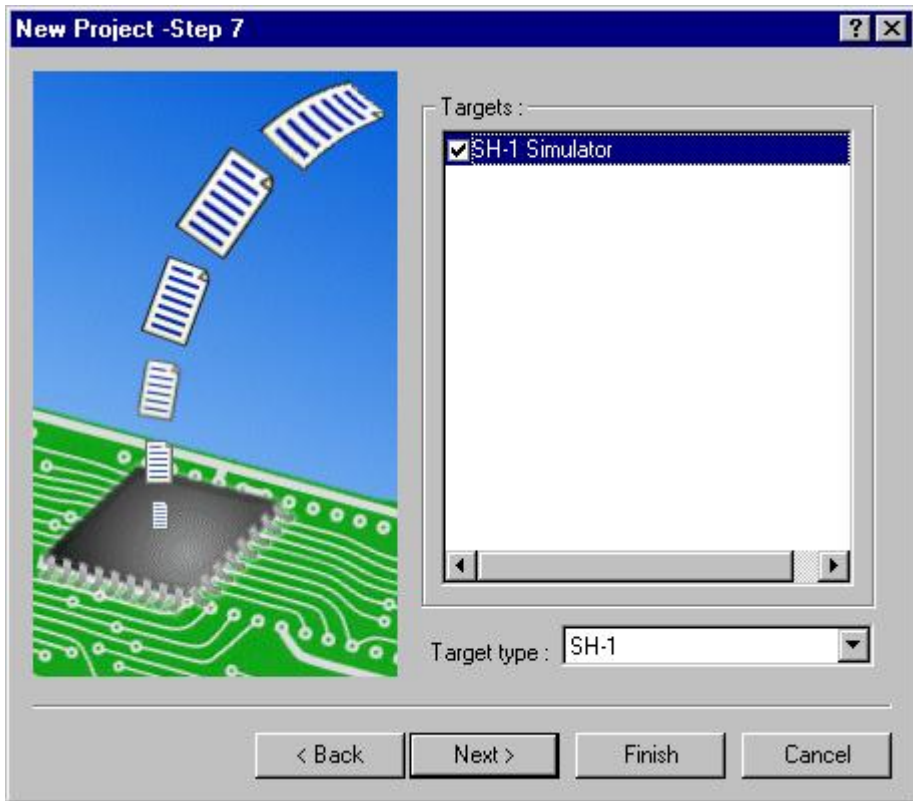


Figure 2.8 Setting the Target System for Debugging (Step 7)

If you change [Target type:], you can specify the other target system for debugging.

2.9 Setting the Debugger Options

When the [Next>] button is clicked in the Step-7 screen, the screen shown in figure 2.9 is displayed. This screen is used to specify the optional settings for the selected target for debugging.

By default, the HEW creates two configurations, [Release] and [Debug]. When a target for debugging is selected, the HEW creates another configuration (The name of the target is included). The name of the configuration can be modified in [Configuration name:]. Options to do with the target for debugging are displayed under [Detail options:]. To change the settings, select [Item] and then click [Modify]. When items for which modification is not possible are selected, [Modify] remains grayed even if [Item] is selected.

In this tutorial, click the [Next>] button without changing the settings.

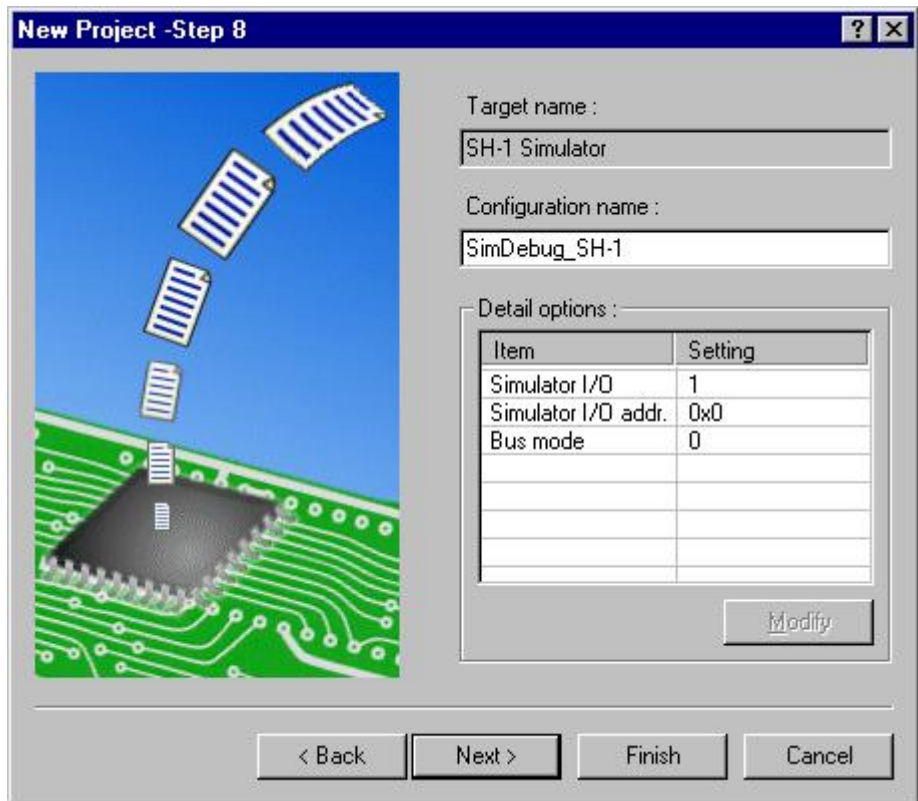


Figure 2.9 Setting the Debugger Options (Step 8)

2.10 Changing the File Names to be Created

When the [Next>] button is clicked in the Step-8 screen, the screen shown in figure 2.10 is displayed.

The screen displays a list of files created by HEW according to the previous settings. The [File Name] column in the list shows a file name, [Extension] shows an extension, and [Description] shows the description of a file. The file name can be changed. To change a file name, select it by clicking it and change it to a new file name.

In this tutorial, click the [Finish] button without changing the settings. When the button is clicked, the [Summary] dialog box will be displayed.

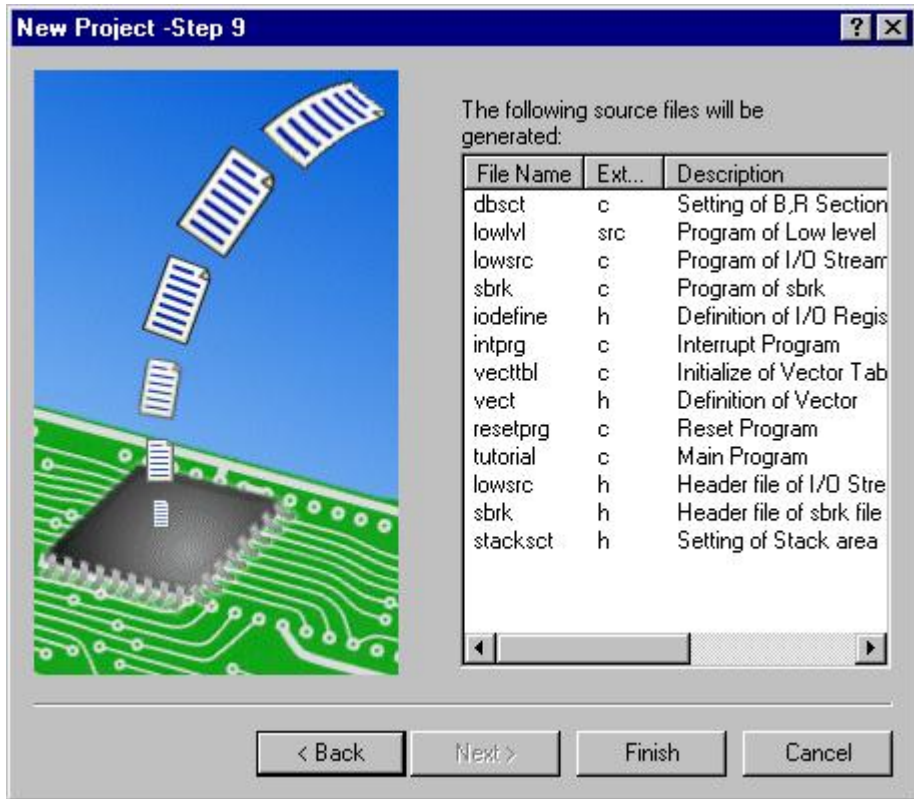


Figure 2.10 Changing the File Names to be Created (Step 9)

NOTE

A file with an extension “h” or “inc” (shown in the [Extension] column) is an include file. If you change the file name of an include file, the file name at the include directive have to be modified.

2.11 Confirming Settings (Summary Dialog Box)

The project generator shows a list of generated files on the [Summary] dialog box (figure 2.11). Confirm the contents of the dialog box and click [OK].

When [Generate Readme.txt as a summary file in the project directory] checkbox is checked, the project information displayed on the [Summary] dialog box will be stored in the project directory under the text file name "Readme.txt".

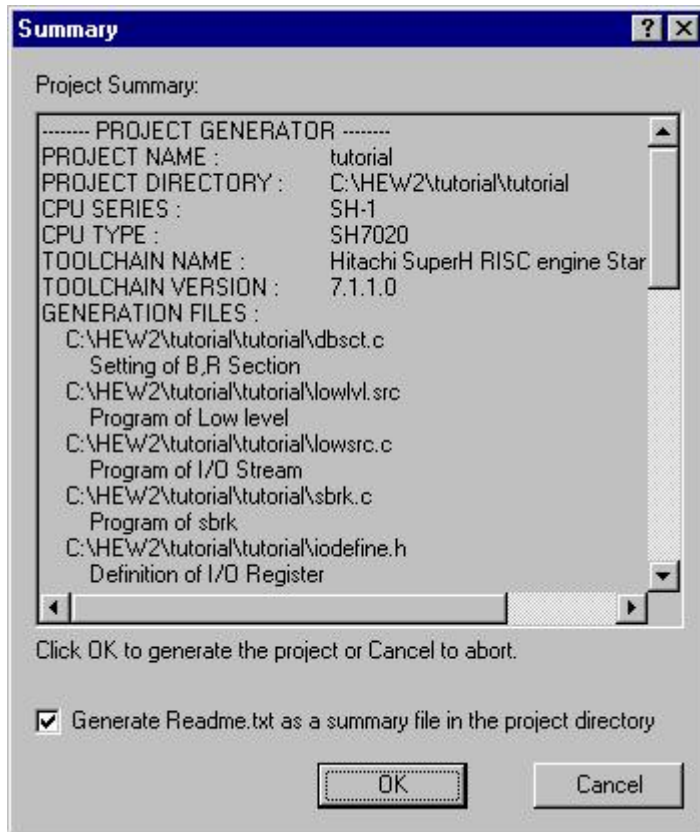


Figure 2.11 Summary Dialog Box

Then the HEW will open a project generated by the project generator.

By default, the HEW has:

The [Workspace] window (on the left hand side of the HEW), which shows the contents of the project, the [Output] window (on the lower side of the HEW), which shows outputs from a build or a string search, and the editor window (on the right hand side of the window), which is used to

edit text files. Refer to the Hitachi Embedded Workshop 2 User's Manual for how to change the state of the HEW and how to use each window such as the editor window.

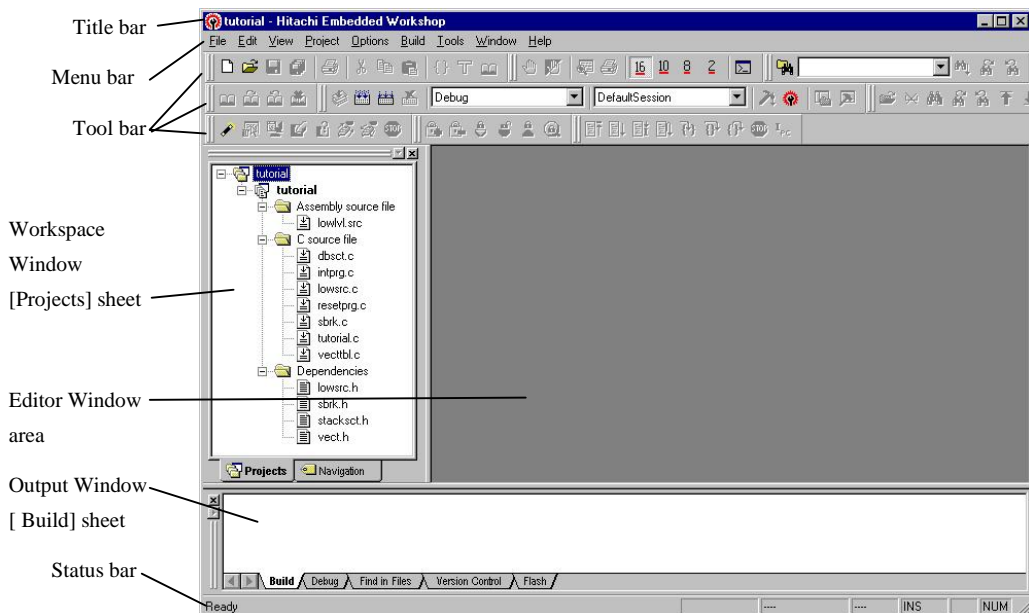


Figure 2.12 Sub-windows of the HEW

The project generated by the project generator includes minimum options for the C/C++ compiler, the assembler, the inter-module optimizer and the object converter. Thus you can build the project (figure 2.13) by selecting [Build->Build]. Selecting the button (shown below) on the toolbar works in the same way as selecting [Build->Build].



Those minimum options are set by default for each tool. When you add a new file to the project, the minimum options will automatically be added to the file. You do not have to specify options other than those that are specific to each such file.

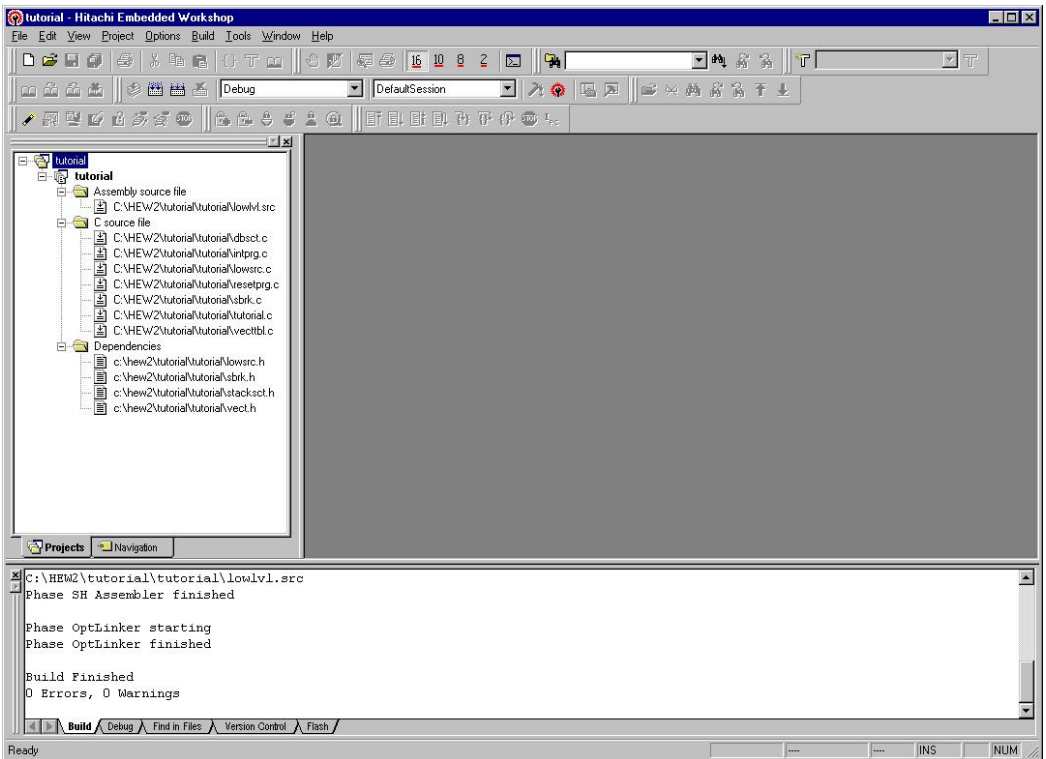


Figure 2.13 The HEW after Building a Project

Section 3 Modifying the Project

When you create a project using the project generator, basic program such as reset routine and initialization of RAM area will already be given in the project. This tutorial describes how to modify a file and how to add a file to the project.

3.1 Editing and Creating a Source Program File

To open and edit a file in the project, double click the file in the [Projects] sheet of the [Workspace] window. In this tutorial, double click “tutorial.c”. (figure 3.1)

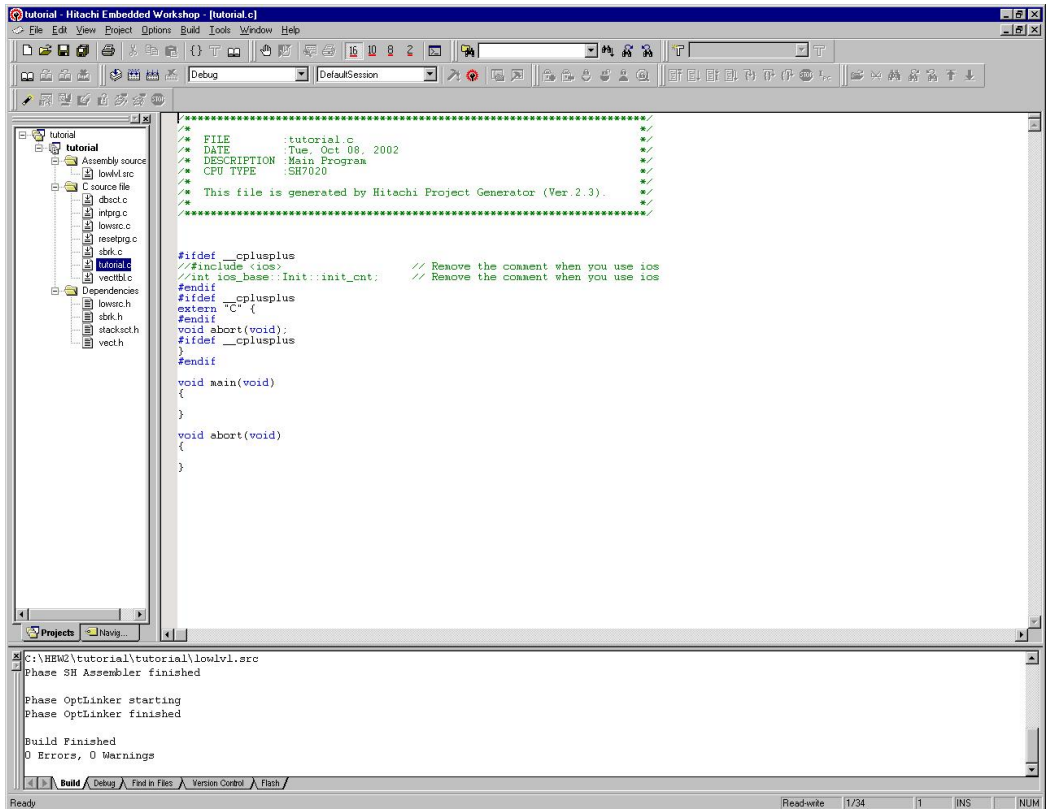


Figure 3.1 Opening a Project File

Then you can edit the file opened. If you edit the file, an asterisk (*) will be added to the file path shown on the title bar of the HEW (figure 3.2). If you save the file, the asterisk will disappear.

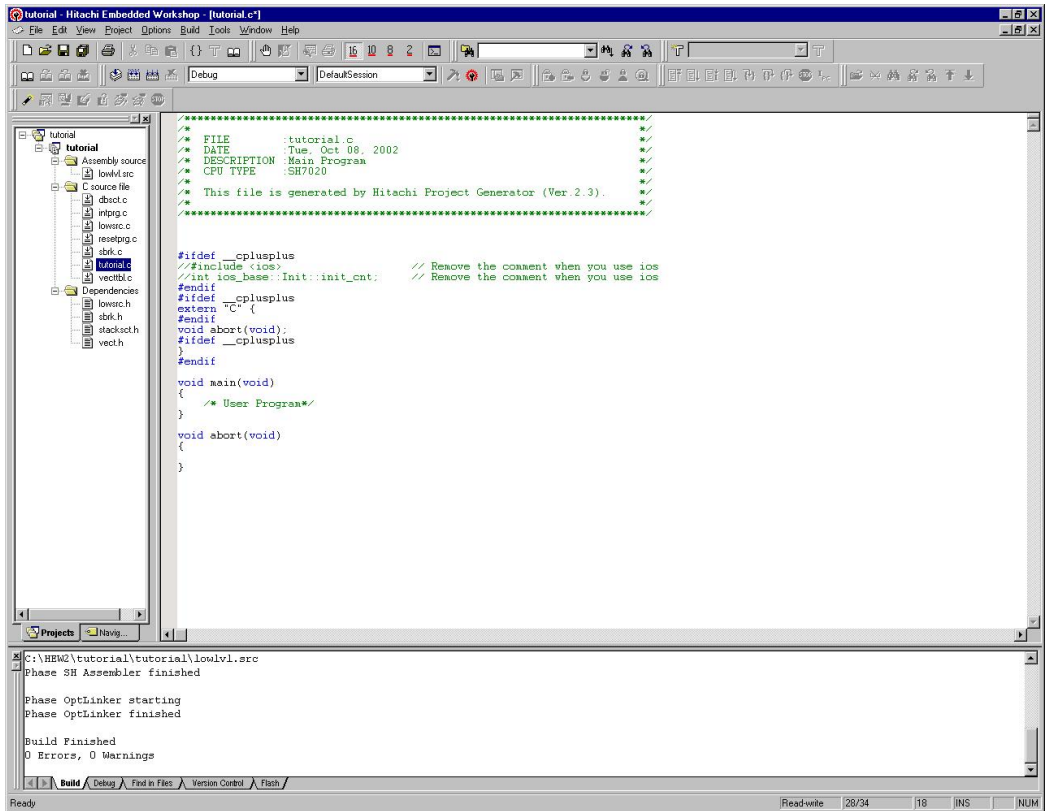


Figure 3.2 Editing a Project File

If you want to open an existing text file with the editor of the HEW, select [File->Open]. If you want to edit a new text file with the editor, select [File->New]. In this tutorial, select [File->New], input the three lines shown below, select [File->Save As...] and save the file as “newprog.c”.

```
void NewProgram(void)
{
}
```

3.2 Adding/Removing a File To/From a Project

This section describes how to add a file to a project and how to delete a file from a project. In this tutorial, add the file, “newprog.c” created in the previous section to the project as follows. Select [Project->Add Files...], then the [Add File(s)] dialog box (figure 3.3) will be launched. Select a file, “newprog.c” in this example, to be added and click the [Add] button. Thus “newprog.c” will be added to the project.

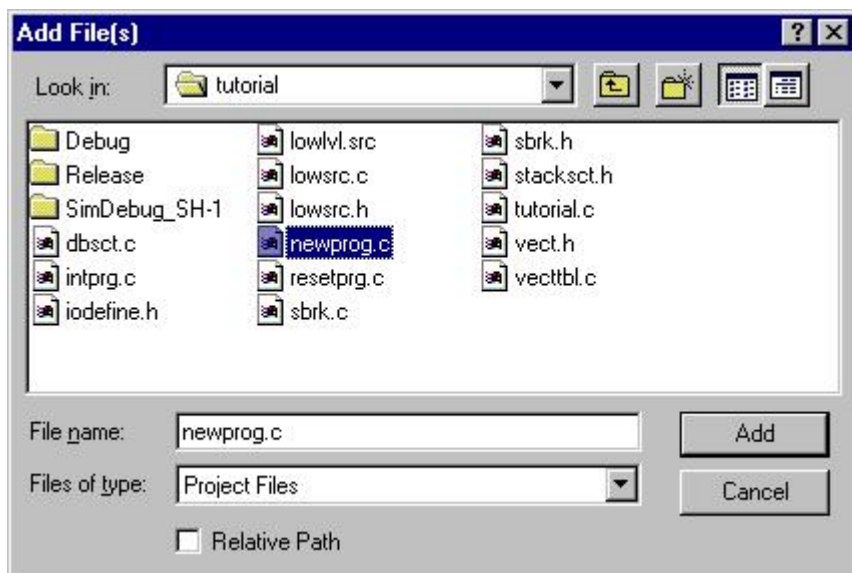


Figure 3.3 Adding a File To a Project

The added file will be displayed on the [Projects] sheet of the [Workspace] window as shown in figure 3.4.

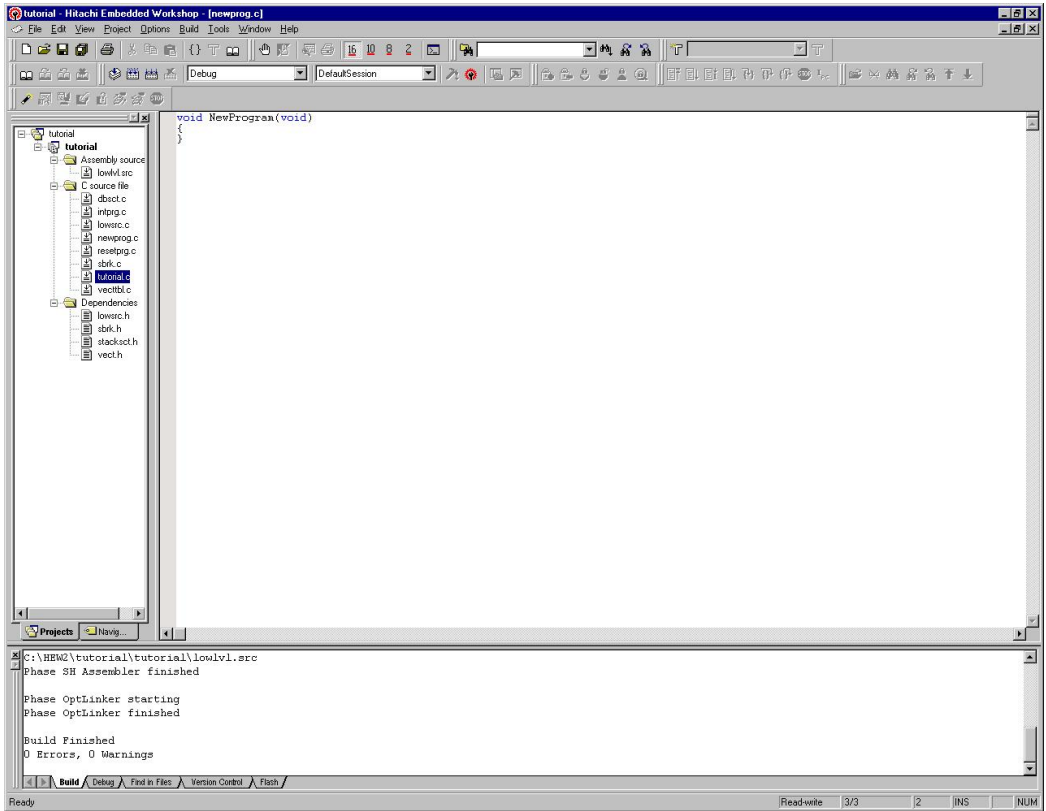


Figure 3.4 Project With a File Added

Next, how to delete a file from a project will be shown. Select [Project->Remove File...], then the [Remove Project Files] dialog box (figure 3.5) will be displayed. Select one or more project files on this dialog box and click the [Remove] button. Then the selected file(s) will disappear from the list of the dialog box. Clicking [OK] actually removes the file(s) from the project. Clicking [Cancel] instead will nullify the removal.

You have another way to delete a file from a project. Select the file in the [Projects] sheet of the [Workspace] window and press the [Delete] key. Then the file will be deleted from the project.

If you want to exclude a file from a build temporarily instead of removing the file from the project, refer to section 4.4, “Excluding a Project File from Build”.

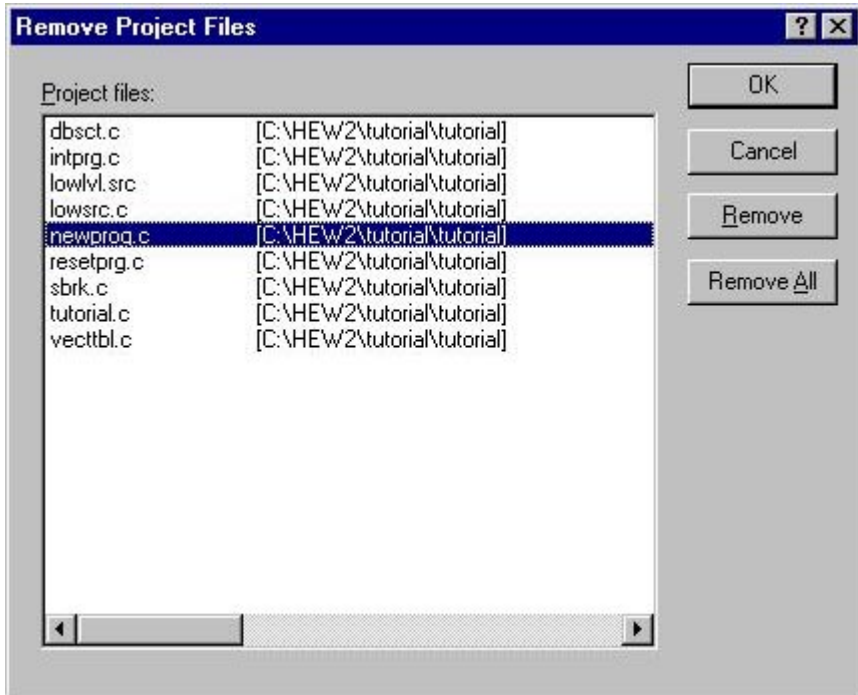


Figure 3.5 Remove Project Files Dialog Box

3.3 File Groups Used in a Project

In this section, a *file group* to which a file added to a project belongs is described. For example, the project generator adds a file described in C language or assembly language to the project. A file with a file extension “.c” belongs to the [C source file] group, and a file with a file extension “.src” belongs to the [Assembly source file] group.

The HEW identifies a group to which a file belongs by checking the file extension. Select [Project->File Extensions...], then the [File Extensions] dialog box (figure 3.6) will be displayed. File extensions used in the project are shown on this dialog box. Every file extension belongs to a file group. A file group can be associated to a tool in a build process.

If you want to use your own file extension in the project, define a new file extension by clicking the [Add...] button.

The icon displayed in the [Extension] column of the [File Extensions] dialog box can show a tool which opens the file. If the icon of a file extension is the same as the icon shown below, a file with that file extension can be opened by the editor of the HEW.

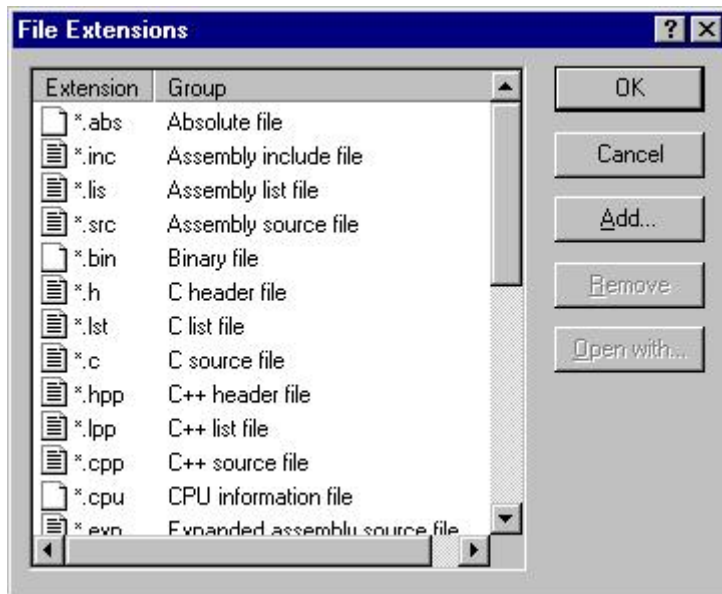


Figure 3.6 File Extensions Dialog Box (Initial Screen)

Click the [Add...] button on the [File Extensions] dialog box, then the [Add File Extension] dialog box (figure 3.7) will be launched. Enter a new file extension in the [File extension] field and specify the [File group] group box. If you want to add an extension to an existing file group, select the [Extension belongs to an existing group] radio button and select a file group from the drop-down list. If you want to create a new file group, select the [Extension belongs to a new group] radio button and enter the name of the file group in the edit field.

In this tutorial, enter “asm” in the [File extension] field, select “Assembly source file” from the drop-down list and click [OK]. Then a file with the extension, “*.asm”, will be treated as a file in the [Assembly source file] group (figure 3.8).

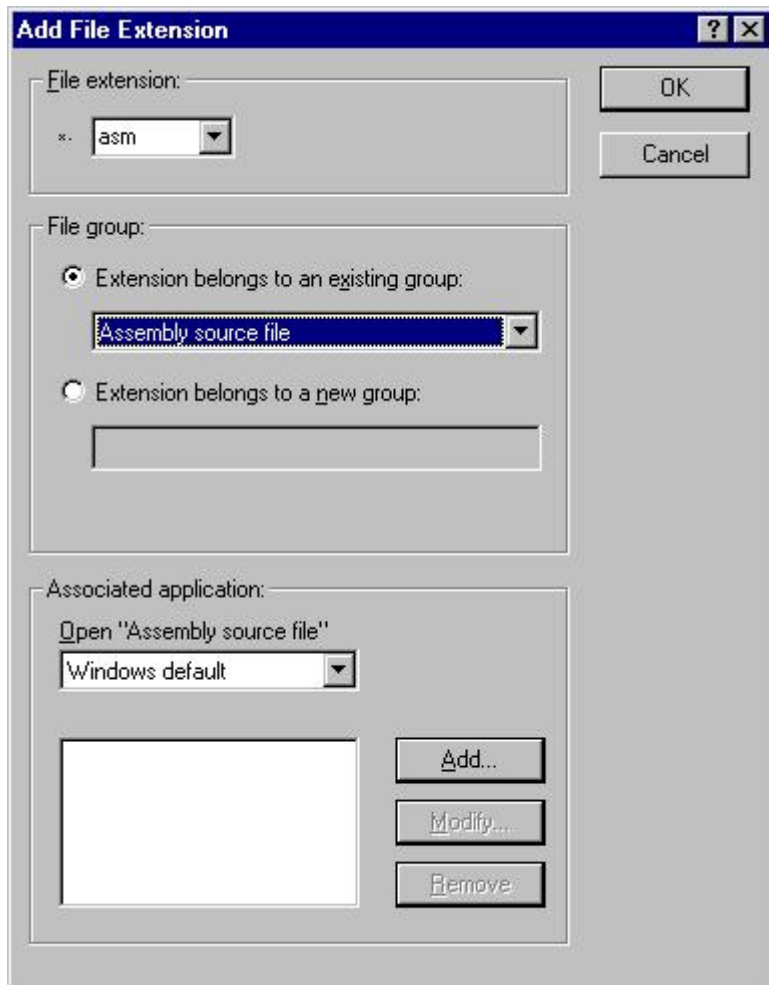


Figure 3.7 Add File Extension Dialog Box

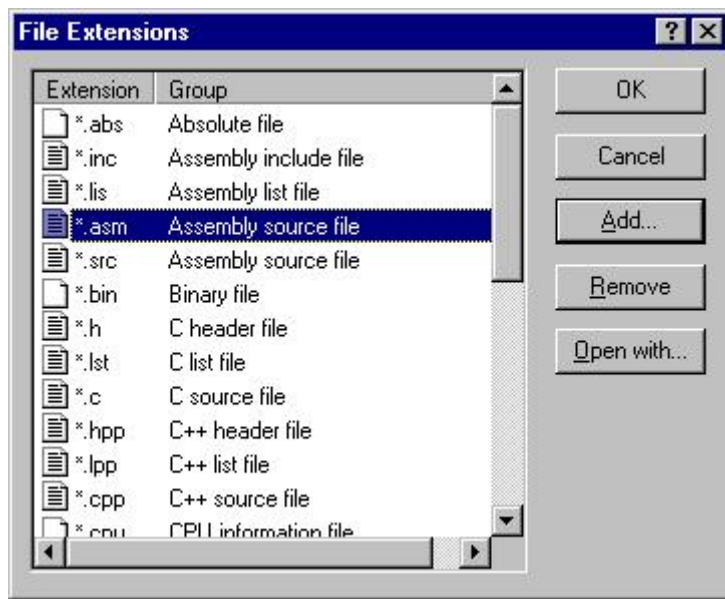


Figure 3.8 File Extension Dialog Box (After Adding an File Extension)

3.4 Customizing the Workspace Window

Click the right mouse button on the [Projects] sheet of the [Workspace] window, then a pop-up menu will be displayed. Select [Configure View...] on this menu, then [Configure View] dialog box (figure 3.9) will be launched. On this dialog box, you can specify whether the file dependencies are shown for each file or not, whether a file is shown in a file group folder (figure 3.10) or not, and so on.

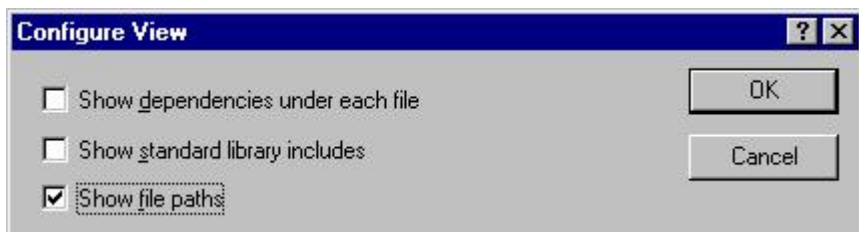


Figure 3.9 Configure View Dialog Box

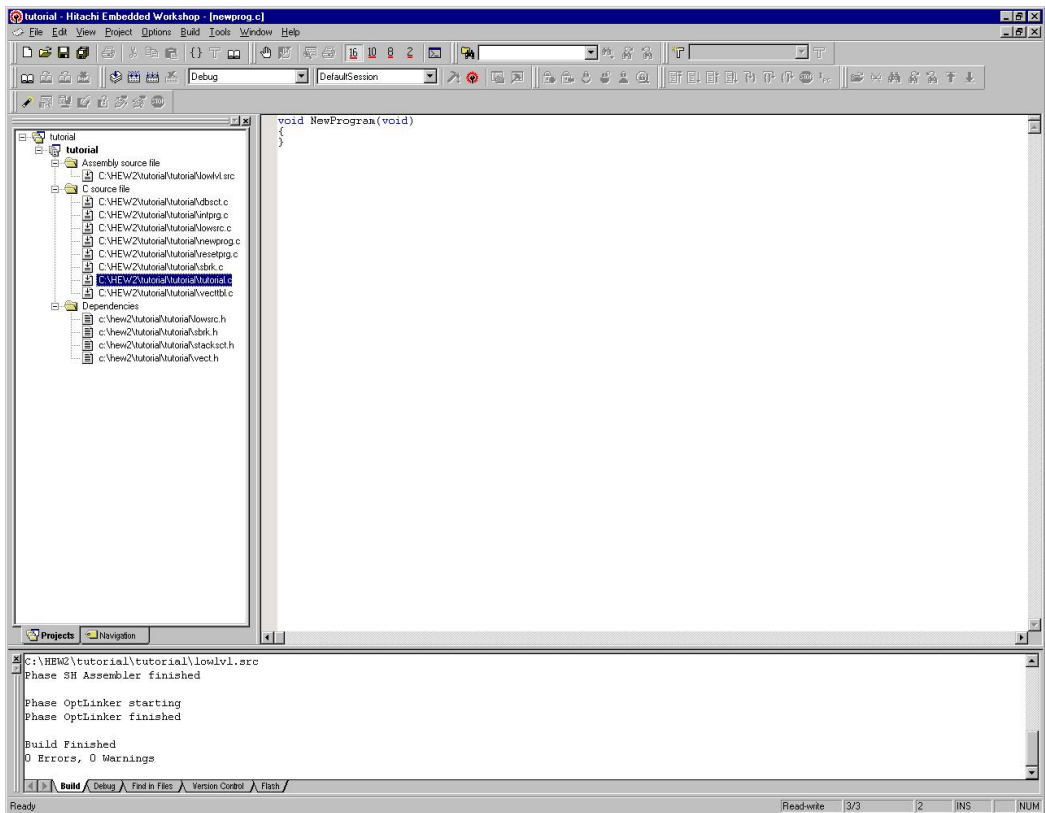


Figure 3.10 Configuration of the Workspace Window

Section 4 Building a Project

4.1 Build Overview

The HEW provides two ways of building a project.

1. “Build All” ([Build->Build All])

The series of tools including the compiler, assembler, and linkage editor are applied to all of the source program files.

2. “Build” [Build->Build]

The series of tools are applied to a source program file updated after the last build. (The update means not only the update of a source program file, but also an update of a file included by the source program file and an update of an option applied to the source program file.)

If you want to compile or assemble a single source program file, select the file on the [Projects] sheet of the [Workspace] window and select [Build->Build File].

If you want to execute “Build” or “Build All” for multiple programs or configurations, specify the target by selecting the [Build -> Build Multiple] menu item.

CAUTION ON BUILD

1. Depending of the setting of the editor window, a file being edited might be saved on executing a build. So close a file which you do NOT want to be saved beforehand. For details of customizing the editor, refer to the Hitachi Embedded Workshop 2 User’s Manual.
2. Do not save a file used in a project during the build because doing so might disturb the build process.

4.2 Setting Options

In this section, overview of the option setting is described.

When the project generator generates a project, the minimum options required for a build are already specified. If you want to modify the options, however, select [Options-> Hitachi SuperH RISC engine Standard Toolchain] and set options on the option dialog box.

Figure 4.1 shows the option dialog box of a C/C++ compiler. On the left hand side of the dialog box is a file list, and on the right hand side are optional setting controls for each tool divided into some pages. If you select a file in the file list, you can specify options only to the selected file. If you select a file group folder in the file list, you can specify the same option to all the files in the file group. To specify the same options to specific files, select the files while pressing the [Ctrl] key or the [Shift] key.

If you select [Default Options] in a file group folder, you can specify initial options for the file group. The HEW automatically adds the options specified to the [Default Options] to a file of the corresponding file group of the corresponding file extension of the file. For example, if you add a file with an extension “C” (“*.C”) to the project, the settings of the [Default Options] of the [C source file] group will be added to the file automatically.

For the details of the options refer to the SuperH RISC engine C/C++ Compiler, Cross Assembler, or Optimizing Linkage Editor User’s Manual.

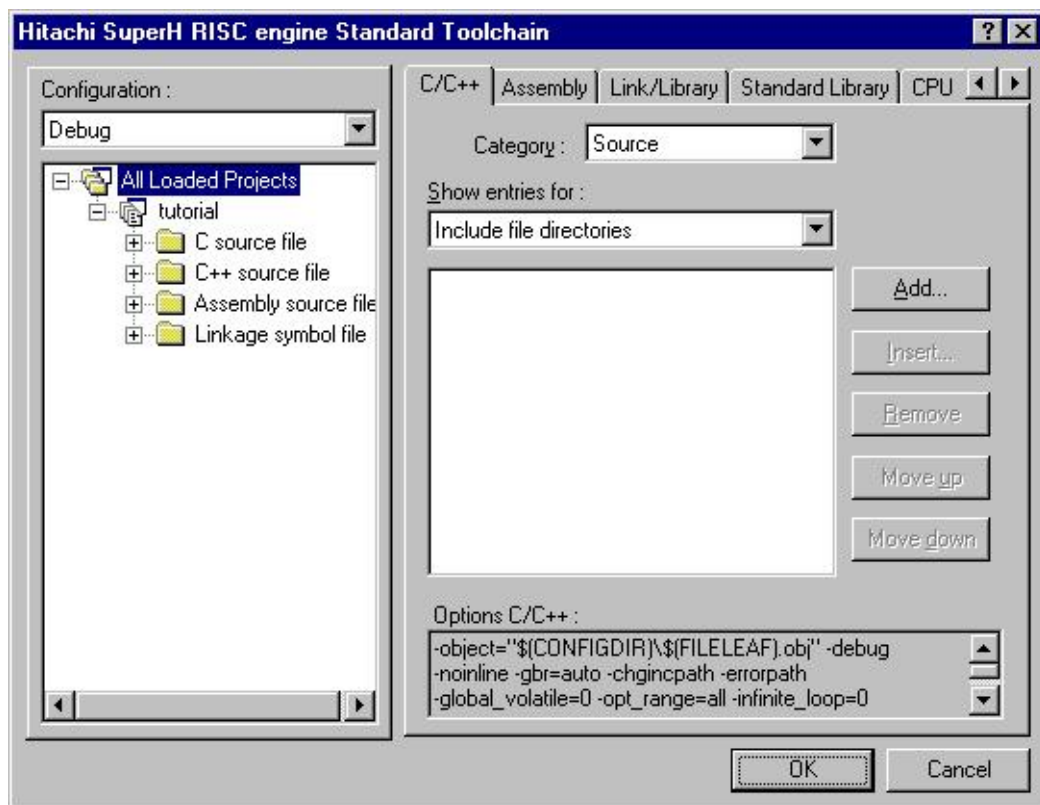


Figure 4.1 Option Dialog Box of C/C++ Compiler

4.3 Customizing the Configuration

In the previous section, how to set options to a project file is described. In this section, how to create more than one suite of option settings for a build will be described. A suite of option settings for a build is called a *configuration*.

The project generator creates two configurations, [Debug] and [Release]. Difference between them is only the setting of the debugging option. When a target for debugging is selected, the configuration for the target is also created. To switch the current configuration to another, launch the [Build Configurations] dialog box (figure 4.2) by selecting [Options->Build Configurations...], select a configuration from the [Current configuration] drop-down list, and click [OK]. You can also change the current configuration by selecting one from the drop-down list on the toolbar.

On the [Build Configurations] dialog box, you can create a new configuration or delete a configuration. For details, refer to chapter 2, “Build Basics”, of the Hitachi Embedded Workshop 2 User’s Manual.

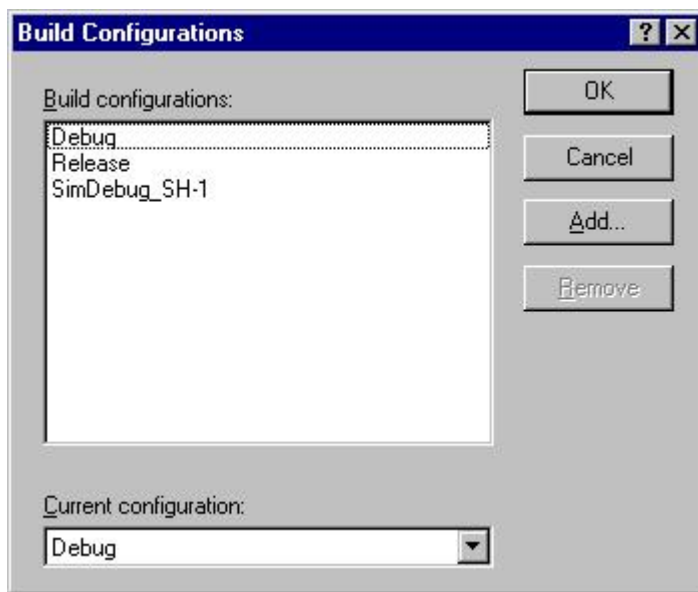


Figure 4.2 Build Configurations Dialog Box

4.4 Excluding a Project File from Build

In this section, how to exclude a project file from build will be described. Excluding a project file from build does not delete the file from a project, but exclude a project file from build in configuration by configuration basis.

Select a file on the [Projects] sheet of the [Workspace] window, click the right mouse button, and select [Exclude Build <file>] on the pop-up menu. Then a red cross will be added to the icon of this file as shown in figure 4.3. This file will be excluded from a build.

To include an excluded file into build, select the file on the [Projects] sheet of the [Workspace] window, click the right mouse button, and select [Include Build <file>] on the pop-up menu.

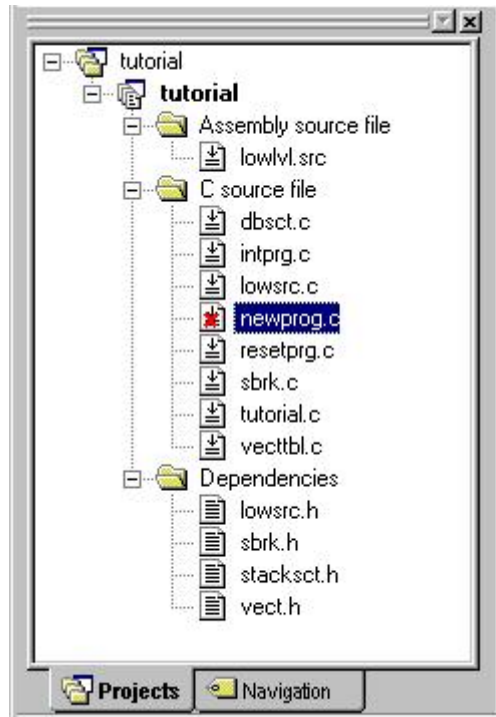


Figure 4.3 Excluding a Project File from Build

4.5 Correcting Errors in a Build

In this section, how to jump to a line of a file which caused an error in compiling or assembling will be described.

Figure 4.4 shows an example in which a compiler detected a syntax error in a source program file. When you build a project, messages, including error messages, from a tool in a build will be displayed on the [Output] window. If you double click the line of the error message on the [Build] sheet of the [Output] window, the file which caused the error will be opened and the cursor will be placed on the line which caused the error. (The cursor might not be placed on the line which caused the error if you have already edited the file.) Placing the cursor on the error line of the output window and pressing the [F1] key displays help of that error.

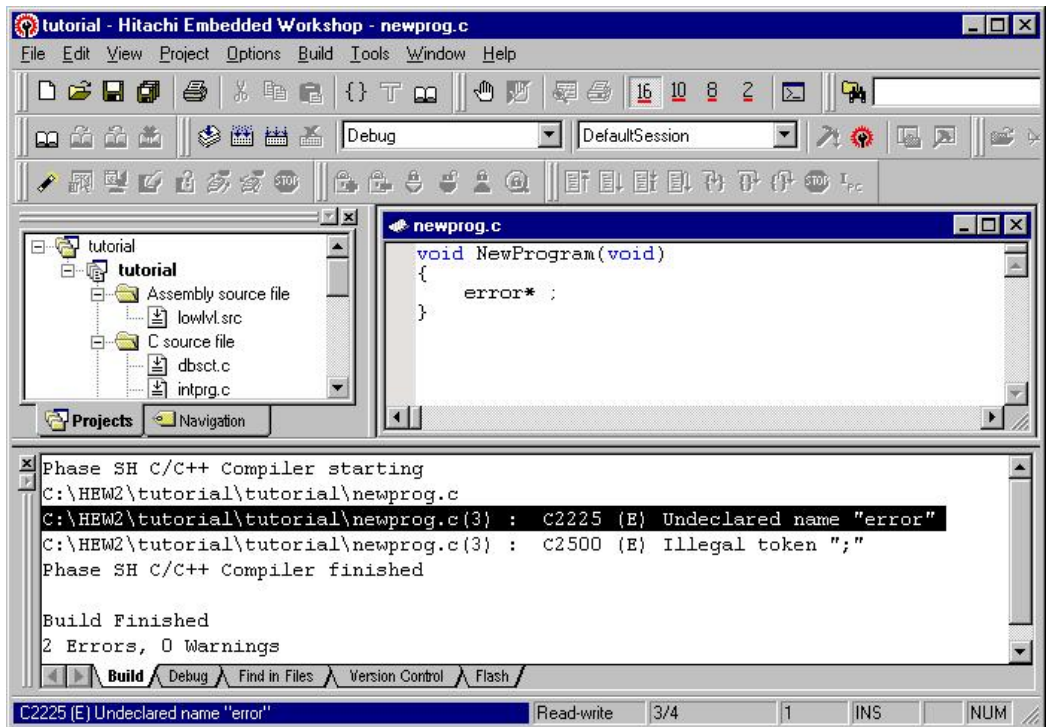


Figure 4.4 Correcting the Line which Caused an Error

4.6 Customizing the Session

You can save the options for debugger to the session file.

The project generator creates the session, [Default Session]. When a target for debugging is selected, the session for the target is also created. To use the a target, launch the [Debug Sessions] dialog box (figure 4.5) by selecting [Options->Debug Settings...], select a session [SimSessionSH-1] from the [Current session] drop-down list, and click [OK]. You can also change the current session by selecting one from the drop-down list on the toolbar.

On the [Debug Sessions] dialog box, you can create a new session or delete a session. For details, refer to chapter 1.9, “Debugger Sessions”, of the Hitachi Embedded Workshop 2 User’s Manual Simulator/Debugger Part.

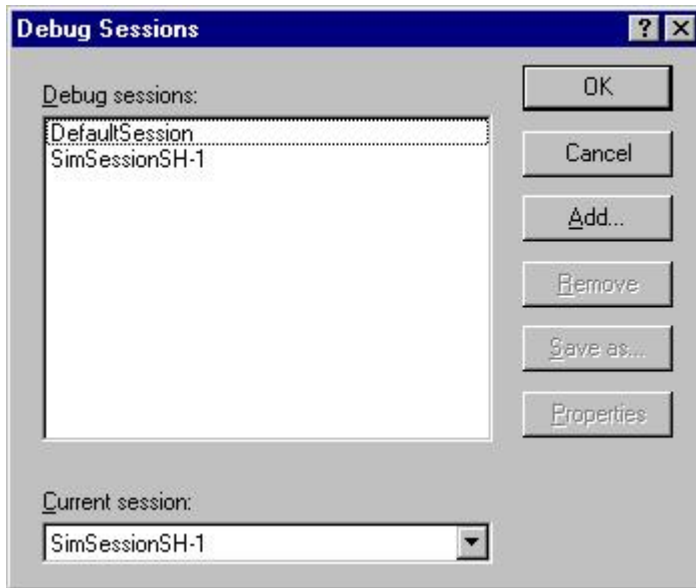


Figure 4.5 Debug Sessions Dialog Box

Section 5 Debugging

5.1 Preparation

The basic functions of the simulator/debugger will be described in this section using a sample program.

NOTE

Note that the contents of usage examples (figures) in this section will differ depending on the compiler version.



5.1.1 Sample Program

The HEW demonstration program is used for the sample program and is written in C language. It first sorts ten random data in the ascending order, and then in the descending order. The sample program:

- (1) Generates random data for sorting using the main function.
- (2) Inputs the array which stores the random data that is generated by the main function, then sorts the data in the ascending order using the sort function.
- (3) Inputs the array generated by the sort function, and sorts the data in the descending order using the change function.
- (4) Displays the random data and the sorted data using the printf function.

5.1.2 Creating the Sample Program

Create the HEW demonstration program by referring to sections 1 to 4, and note the following.

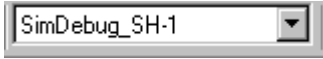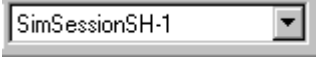- Specify [Demonstration] for the [Project Type] in section 2.1, Creating a New Workspace.
- Specify [SH-1] for the [CPU Series:].
- Specify [SH-1 Simulator] for the [Target:].
- Specify [SimDebug_SH-1] for the configuration  on the toolbar before building the project.
- Specify [SimSession_SH-1] for the session  on the toolbar.

Since section 5 explains the debugging function, [Demonstration] has not been optimized. Do not change this setting.

5.2 Settings for Debugging

5.2.1 Allocating the Memory Resource

The allocation of the memory resource is necessary to run the application being developed. When using the demonstration project, the memory resource is allocated automatically, so check the setting.

- Select [Simulator->Memory Resource...] from the [Option] menu, and display the allocation of the current memory resource.

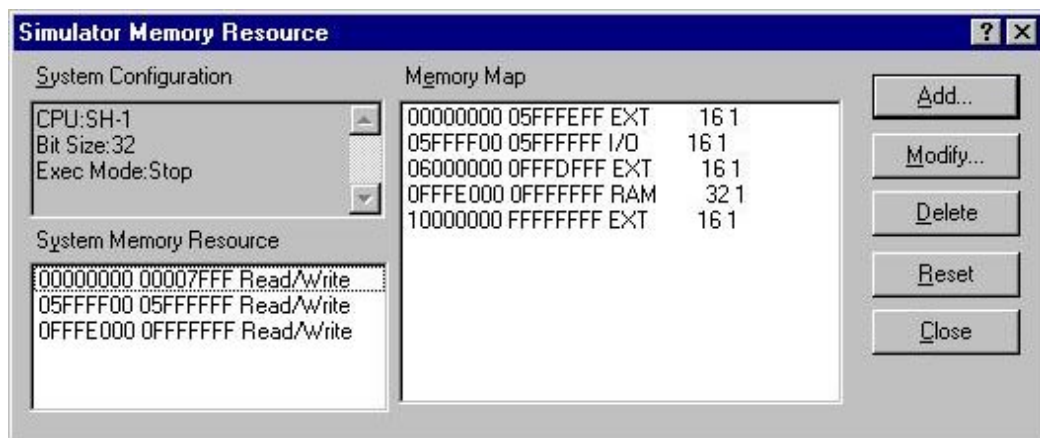


Figure 5.1 Simulator Memory Resource Dialog Box

The program area is allocated to the addresses H'00000000 to H'00007FFF. The stack area is allocated to the addresses H'0FFFE000 to H'0FFFFFFF, which can be read from or written to.

- Close the dialog box by clicking [Close].

The memory resource can also be referred to or modified by using the [Simulator] page on the [Hitachi SuperH RISC engine Standard Toolchain] dialog box. Changes made in either of the dialog boxes are reflected.

5.2.2 Downloading the Sample Program

When using the demonstration project, the sample program to be downloaded is automatically set, so check the settings.

- Open the [Debug Setting] dialog box by selecting [Debug Settings...] on the [Option] menu.

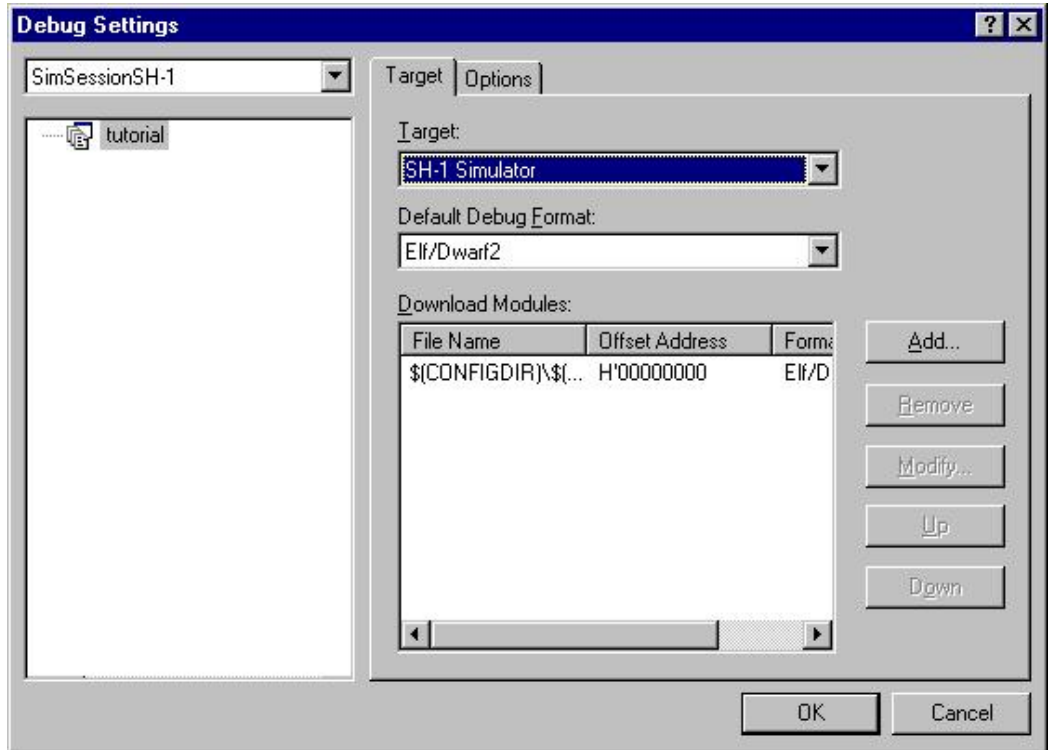



Figure 5.2 Debug Settings Dialog Box

- Files to be downloaded is set in [Download Modules].
- Close the [Debug Settings] dialog box by clicking the [OK] button.
- Download the sample program by selecting [Download Modules->All Download Modules] from the [Debug] menu.

5.2.3 Displaying the Source Program

The source-level debugging is supported by the HEW. Refer to section 3.1, Editing and Creating a Source Program File, and display the source file ("tutorial.c") in the [Source] window.

- Open the [Source] window by double-clicking tutorial.c on the [Workspace] window.

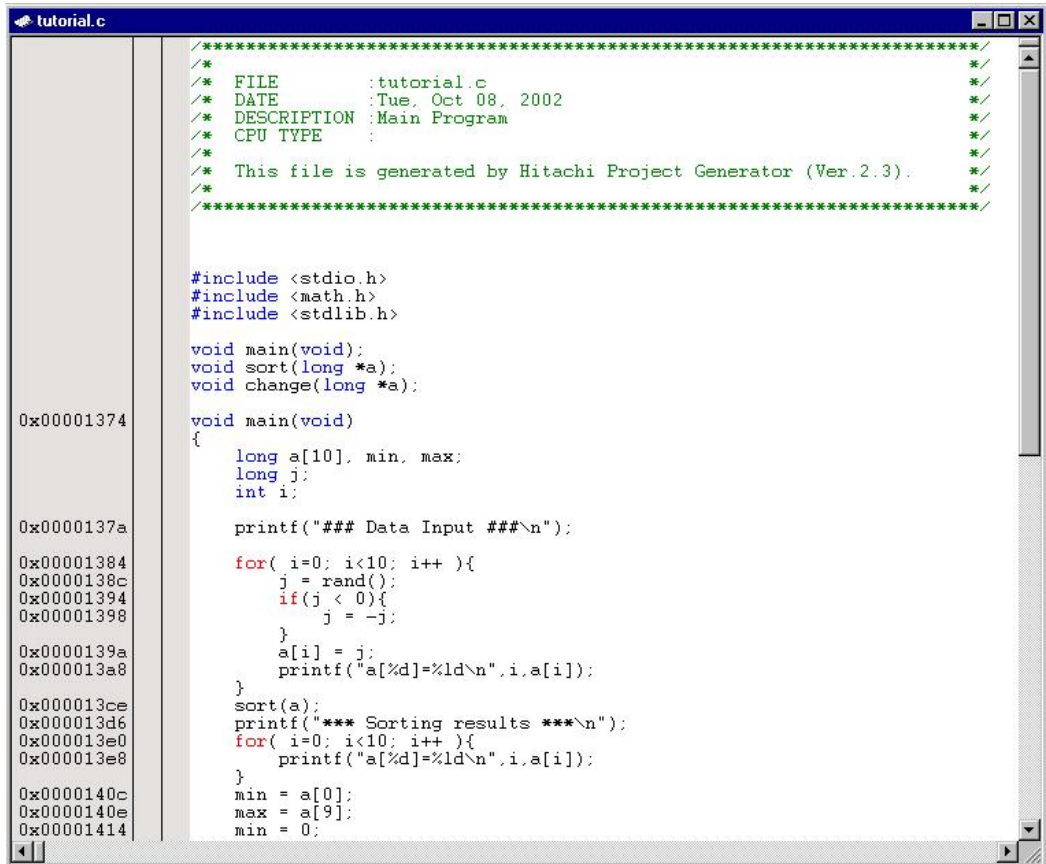

```
0x00001374 0x0000137a 0x00001384 0x0000138c 0x00001394 0x00001398 0x0000139a 0x000013a8 0x000013ce 0x000013d6 0x000013e0 0x000013e8 0x0000140c 0x0000140e 0x00001414

/******
/*
/* FILE      :tutorial.c
/* DATE      :Tue, Oct 08, 2002
/* DESCRIPTION:Main Program
/* CPU TYPE  :
/*
/* This file is generated by Hitachi Project Generator (Ver.2.3):
/*
/******

#include <stdio.h>
#include <math.h>
#include <stdlib.h>

void main(void);
void sort(long *a);
void change(long *a);

void main(void)
{
    long a[10], min, max;
    long j;
    int i;

    printf("### Data Input ###\n");

    for( i=0; i<10; i++ ){
        j = rand();
        if(j < 0){
            j = -j;
        }
        a[i] = j;
        printf("a[%d]=%ld\n",i,a[i]);
    }
    sort(a);
    printf("*** Sorting results ***\n");
    for( i=0; i<10; i++ ){
        printf("a[%d]=%ld\n",i,a[i]);
    }
    min = a[0];
    max = a[9];
    min = 0;
```

Figure 5.3 Source Window (Displaying the Source Program)

5.2.4 Setting a PC Breakpoint

Breakpoints can be set easily by the [Source] window. To set a breakpoint on a line that includes the sort function call:

- Place the cursor in the line that includes the sort function call and click the right mouse button to launch the pop-up menu, and select [Toggle Breakpoint] from the pop-up menu.

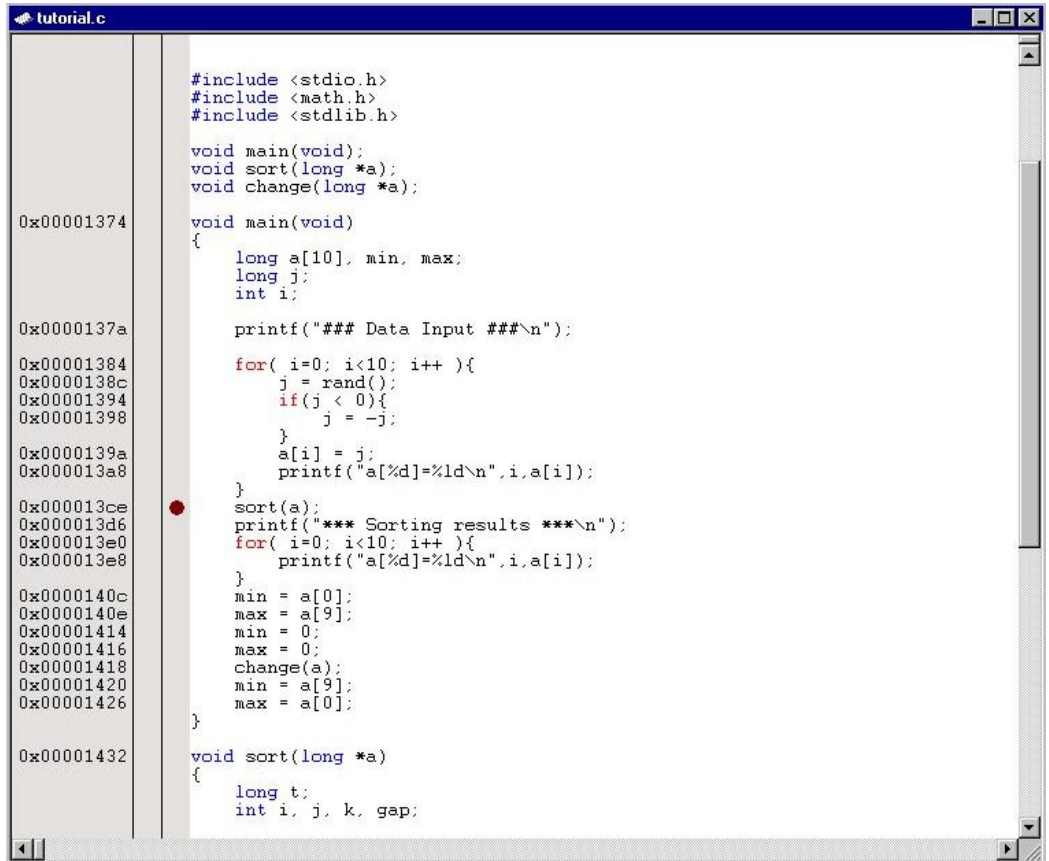


Figure 5.4 Source Window (Setting the Breakpoint)

A • is displayed at the line that includes the sort function call, indicating that the PC breakpoint is set at the address.

5.2.5 Setting the Profiler

- Open the [Profile] window by selecting [Profile] from the [View->Performance] menu.

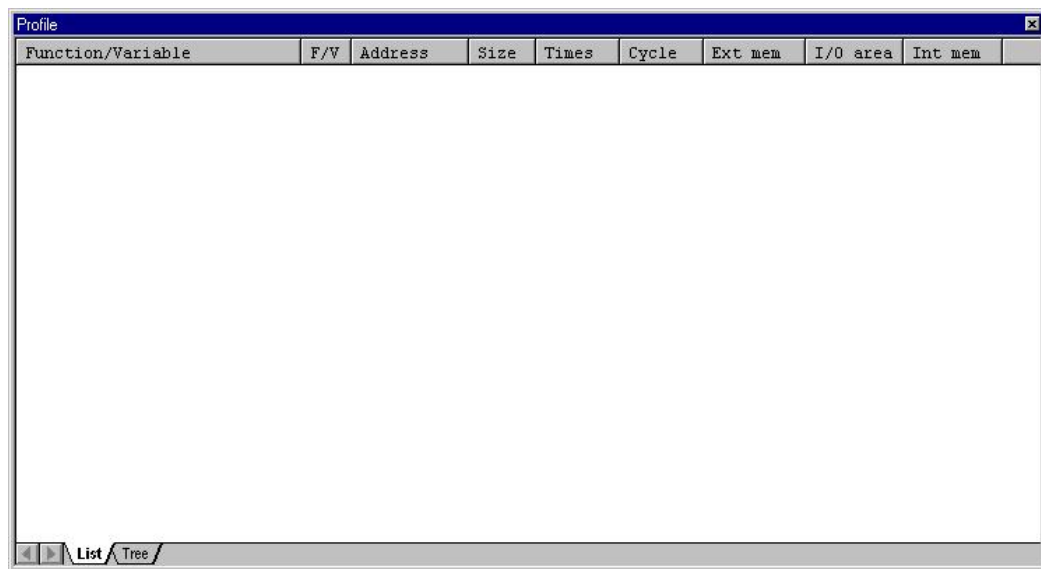


Figure 5.5 Profile Window

- Open the pop-up menu by right clicking the mouse on the [Profile] window, and select [Enable Profiler] to enable acquisition of the profile information.

5.2.6 Setting the Simulated I/O

When the demonstration project is used, the simulated I/O is automatically set, so check the setting.

- Open the [Simulator System] dialog box by selecting [Simulator->System] from the [Option] menu.

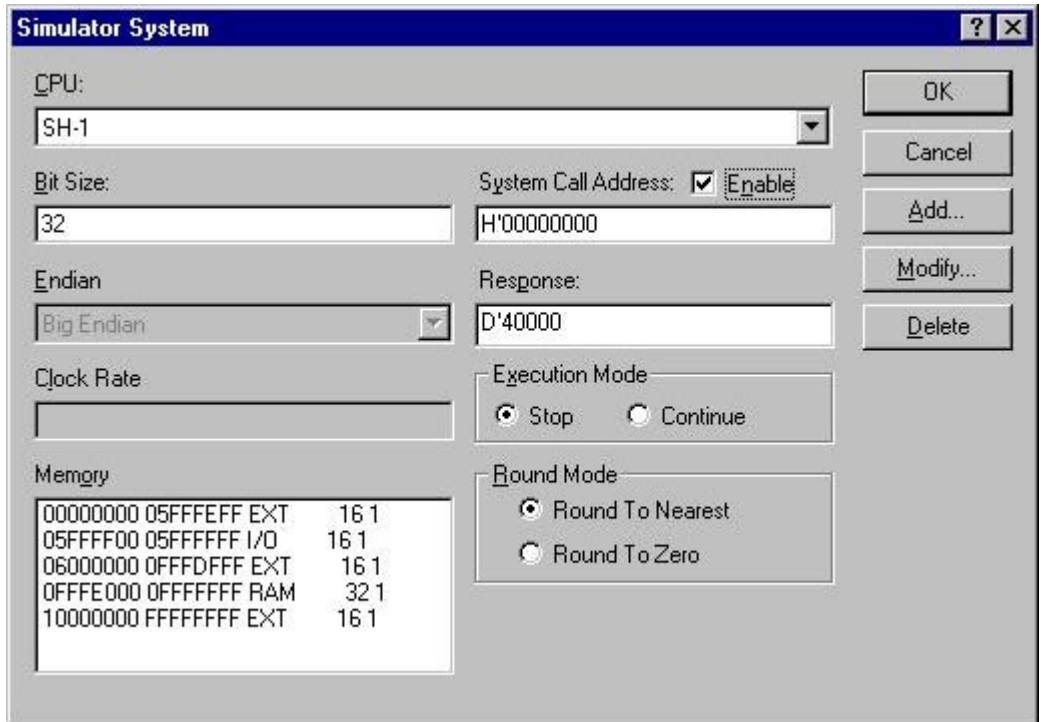


Figure 5.6 Simulator System Dialog Box

- Confirm that [Enable] in [System Call Address] is checked.
- Click the [OK] button to enable the Simulated I/O
- Select [Simulated I/O] from the [View->CPU] menu and open the [Simulated I/O] window. The Simulated I/O will not be enabled if the [Simulated I/O] window is not open.

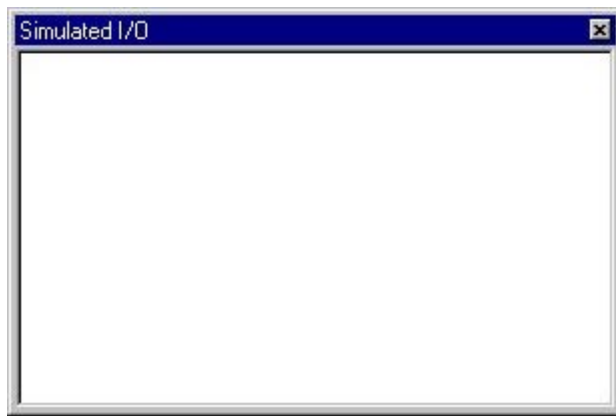


Figure 5.7 Simulated I/O Window

5.2.7 Setting the Trace Information Acquisition Conditions

- Select [Trace] from the [View->Code] menu and open the [Trace] window. Open the pop-up menu by right clicking the mouse on the [Trace] window, and select [Acquisition...] from the pop-up menu.

The [Trace Acquisition] dialog box below will be displayed.

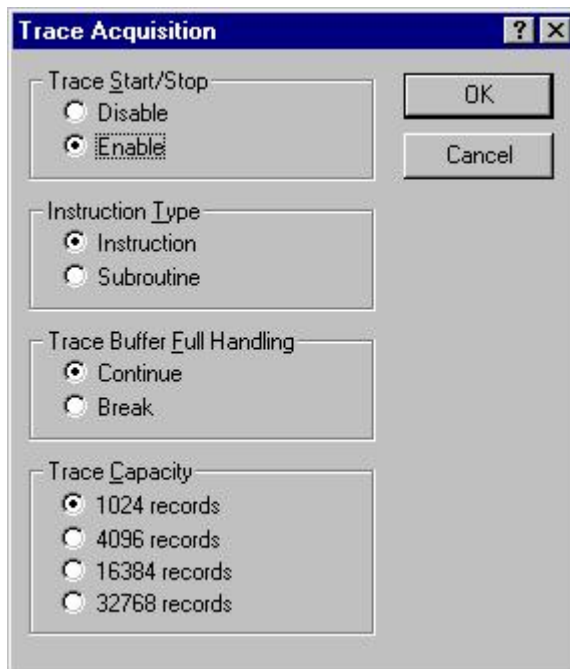


Figure 5.8 Trace Acquisition Dialog Box

- Set [Trace start/Stop] to [Enable] in the [Trace Acquisition] dialog box, and click the [OK] button to enable the acquisition of the trace information.

5.2.8 Setting the Stack Pointer and Program Counter

To execute the program, the program counter must be set from the location of the reset vector. In the reset vector of the sample program, the PC value H'800 is written, and the SP value H'0FFFFFF0 is written.

- Select [Reset CPU] from the [Debug] menu, or click the [Reset CPU] button on the toolbar.

Set the program counter to H'800, and the stack pointer to H'0FFFFFF0 from the reset vector.



Figure 5.9 Reset CPU Button

5.3 Start Debugging

5.3.1 Executing a Program

- Select [Go] from the [Debug] menu, or click the [Go] button on the toolbar.



Figure 5.10 Go Button

The program halts where a breakpoint is set. An arrow is displayed in the [Source] window, indicating the location the execution has stopped. As the termination cause, [PC Breakpoint] is displayed in the [Output] window.


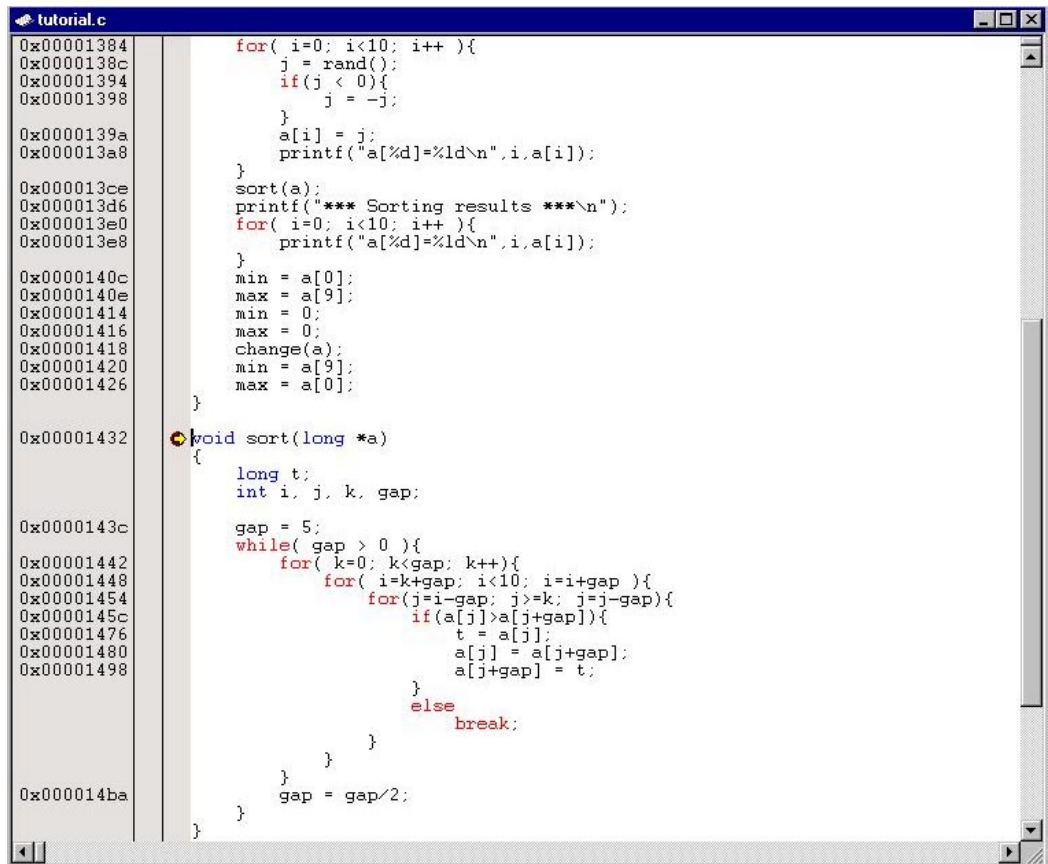


Figure 5.11 Source Window (Break Status)

The termination cause can be displayed in the [Status] window.

- Select [Status] from the [View->CPU] menu to open the [Status] window, and select the [Platform] sheet in the [Status] window.

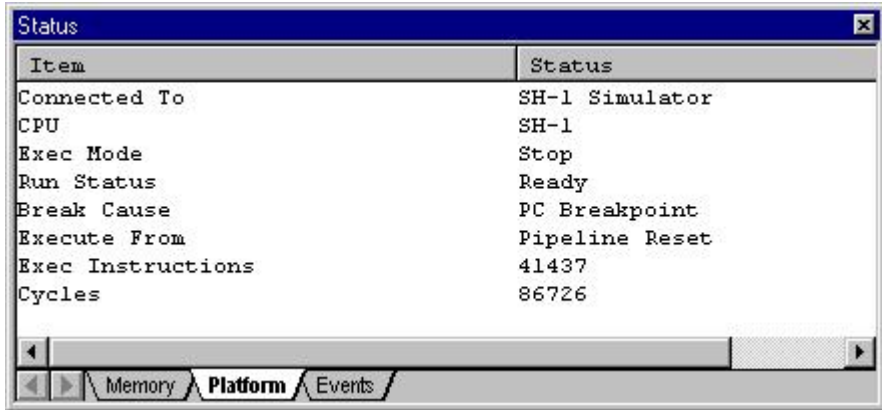

The screenshot shows a window titled "Status" with a table of system information. The table has two columns: "Item" and "Status". The data is as follows:

Item	Status
Connected To	SH-1 Simulator
CPU	SH-1
Exec Mode	Stop
Run Status	Ready
Break Cause	PC Breakpoint
Execute From	Pipeline Reset
Exec Instructions	41437
Cycles	86726

At the bottom of the window, there are three tabs: "Memory", "Platform" (which is selected), and "Events".


Figure 5.12 Status Window

The above status window indicates that:

- (1) The cause of break is a PC breakpoint
- (2) Execution is performed from the pipeline reset
- (3) The number of executed instructions by the GO command is 41,437
- (4) The executed number of cycles from the pipeline reset is 86,726

Register values can be checked in the [Register] window.

- Select [Registers] from the [View->CPU] menu.

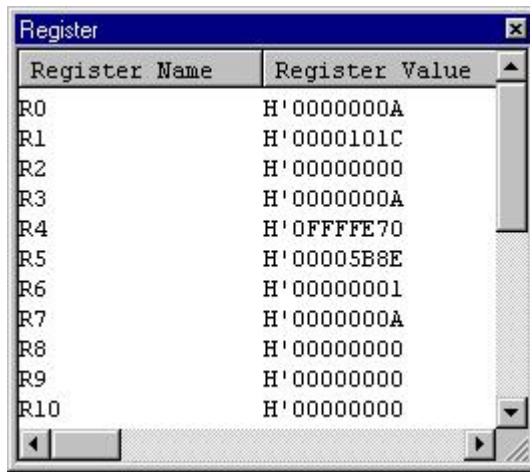

Register Name	Register Value
R0	H'0000000A
R1	H'0000101C
R2	H'00000000
R3	H'0000000A
R4	H'0FFFFFF0
R5	H'00005B8E
R6	H'00000001
R7	H'0000000A
R8	H'00000000
R9	H'00000000
R10	H'00000000


Figure 5.13 Register Window

Register values when the program is terminated can be checked.

5.3.2 Using the Trace Buffer

The trace buffer can be used to clarify the history of instruction execution.

- Select [Trace] from the [View->Code] menu and open the [Trace] window. Scroll up to the very top of the window.

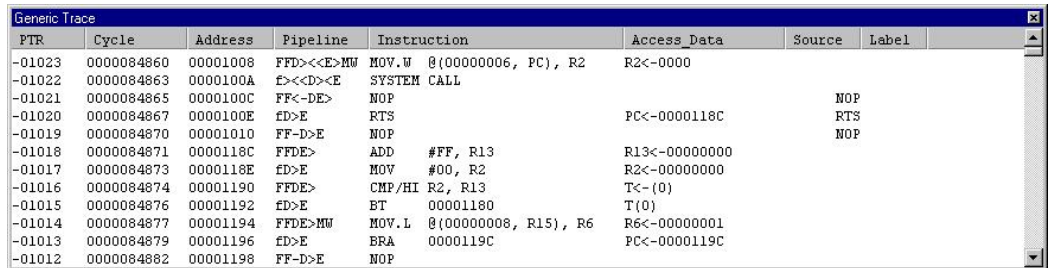

PTR	Cycle	Address	Pipeline	Instruction	Access Data	Source	Label
-01023	0000084860	00001008	FFD><<E>MW	MOV.W @00000006, PC), R2	R2<-0000		
-01022	0000084863	0000100A	fD><<D><E	SYSTEM CALL			
-01021	0000084865	0000100C	FF<-DE>	NOP			NOP
-01020	0000084867	0000100E	fD>E	RTS	PC<-0000118C		RTS
-01019	0000084870	00001010	FF-D>E	NOP			NOP
-01018	0000084871	0000118C	FFDE>	ADD #FF, R13	R13<-00000000		
-01017	0000084873	0000118E	fD>E	MOV #00, R2	R2<-00000000		
-01016	0000084874	00001190	FFDE>	CMP/Hi R2, R13	T<-(0)		
-01015	0000084876	00001192	fD>E	BT 00001180	T(0)		
-01014	0000084877	00001194	FFDE>MW	MOV.L @00000008, R15), R6	R6<-00000001		
-01013	0000084879	00001196	fD>E	BRA 0000119C	PC<-0000119C		
-01012	0000084882	00001198	FF-D>E	NOP			

Figure 5.14 Trace Window (Trace Information Display)

5.3.3 Performing Trace Search

Click the right mouse button on the [Trace] window to launch the pop-up menu, and select [Find...] to open the [Trace Search] dialog box.

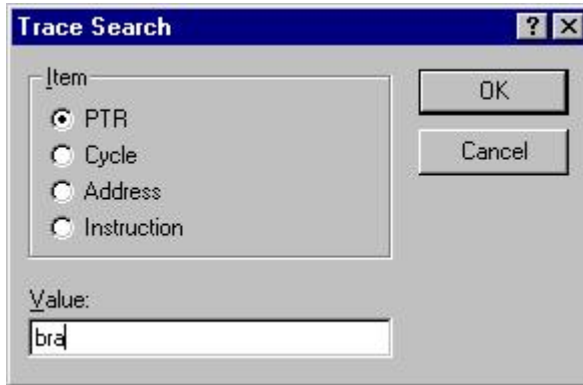


Figure 5.15 Trace Search Dialog Box


Setting the item to be searched to [Item] and the contents to be searched to [Value] and clicking the [OK] button begins the trace search. When the searched item is found, the first line is highlighted. To continue searching the same contents [Value], click the right mouse button in the [Trace] window to display the pop-up menu, and select [Find Next] from the pop-up menu. The next searched line is highlighted.

Generic Trace									
PTR	Cycle	Address	Pipeline	Instruction	Access Data	Source	Label		
-00822	0000085222	00001006	f<D>E>MMW	MOV.L @00000010, R0	R0<-01220000				
-00821	0000085226	00001008	FFD><<E>MW	MOV.W @00000006, R2	R2<-0000				
-00820	0000085229	0000100A	E><<D><E	SYSTEM CALL					
-00819	0000085231	0000100C	FF<-D>E	NOP			NOP		
-00818	0000085233	0000100E	ED>E	RTS	PC<-0000118C		RTS		
-00817	0000085236	00001010	FF-D>E	NOP			NOP		
-00816	0000085237	0000118C	FFDE>	ADD #FF, R13	R13<-00000000				
-00815	0000085239	0000118E	ED>E	MOV #00, R2	R2<-00000000				
-00814	0000085240	00001190	FFDE>	CMP/HI R2, R13	T<-(0)				
-00813	0000085242	00001192	ED>E	BT 00001180	T(0)				
-00812	0000085243	00001194	FFDE>MW	MOV.L @00000008, R15, R6	R6<-00000001				
-00811	0000085245	00001196	ED>E	BRA 0000119C	PC<-0000119C				

Figure 5.16 Trace Window (Searched Result)

5.3.4 Checking Simulated I/O

Random data that is displayed by the printf function can be checked in the [Simulated I/O] window.

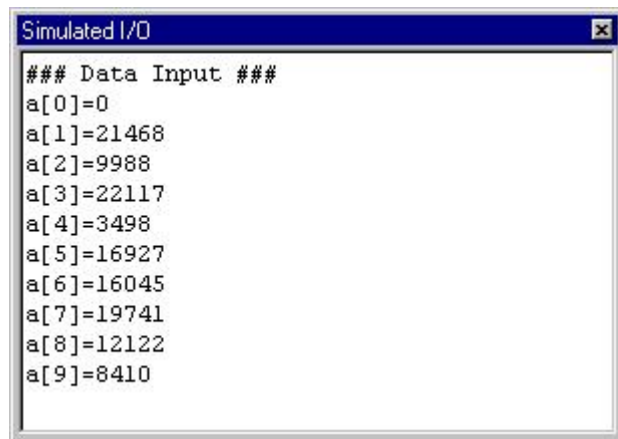

```
### Data Input ###
a[0]=0
a[1]=21468
a[2]=9988
a[3]=22117
a[4]=3498
a[5]=16927
a[6]=16045
a[7]=19741
a[8]=12122
a[9]=8410
```

Figure 5.17 Simulated I/O Window

- Do not close the [Simulated I/O] window.

5.3.5 Checking the Breakpoints

A list of all the breakpoints that are set in the program can be checked in the [Break] window.

- Select [Breakpoints] from the [View -> Code] menu.



Figure 5.18 Break Window

A breakpoint can be set, a new breakpoint can be defined, and a breakpoint can be deleted using the [Break] window.

- Close the [Break] window.

5.3.6 Watching Variables

It is possible to watch the values of variables used in your program and to verify that they change in the way that you expected. For example, set a watch on the long-type array “a” declared at the beginning of the program, by using the following procedure:

- Select [Watch] from the [View -> Symbol] menu and open the [Watch] window. And click the right mouse button on the [Watch] window and choose [Add Watch...] from the pop-up menu.

The following dialog box will be displayed.

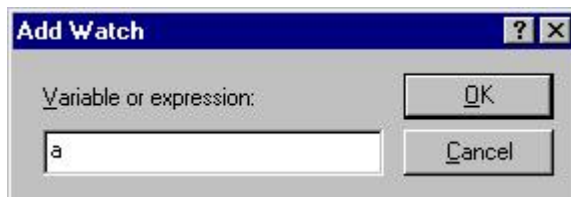


Figure 5.19 Add Watch Dialog Box

- Type array a and click the [OK] button.

The [Watch] window will show the long-type array a.

You can double-click the + symbol to the left of array “a” in the [Watch] window to expand the variable and show the individual elements in the array.

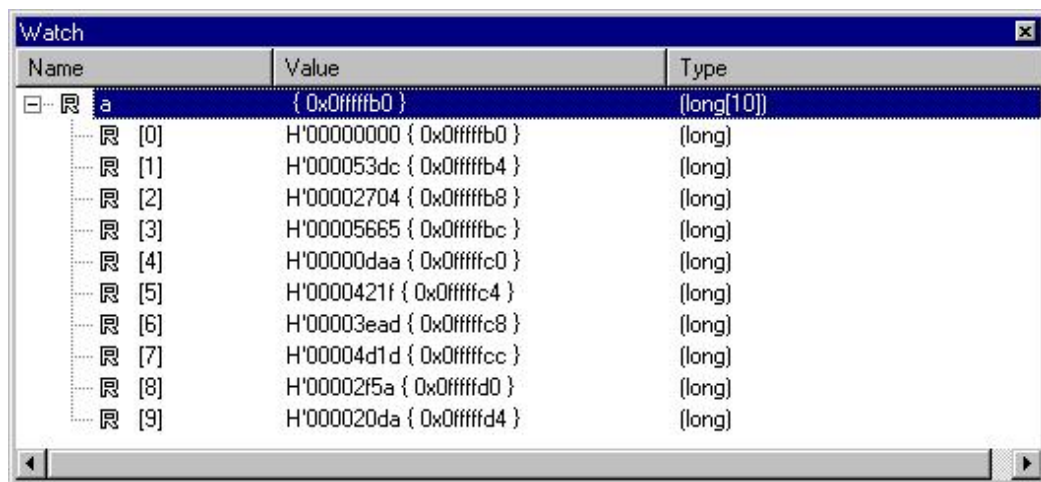


Figure 5.20 Watch Window

- Close the [Watch] window.

5.3.7 Executing the Program in Single Steps

The simulator/debugger has various stepping menus that are useful in debugging the program.

Menu	Description
Step In	Executes each statement (includes statements within the function)
Step Over	Executes a function call in a single step
Step Out	Steps out of a function, and stops at the next statement of the program that called the function
Step...	Executes the specified number of steps at the specified speed

[Step In]: Enters the called function and stops at the statement at the start of the called function.

- To step in the sort function, select [Step In] from the [Debug] menu, or click the [Step In] button on the toolbar.



Figure 5.21 Step In Button

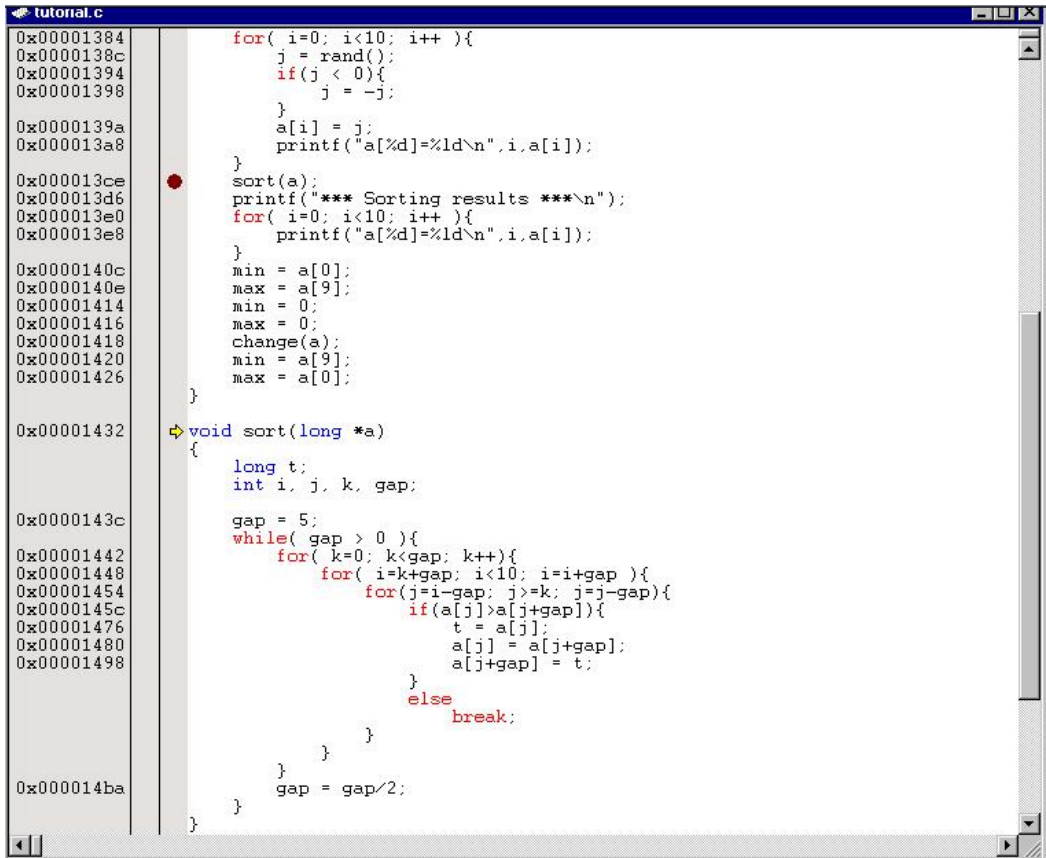


Figure 5.22 Source Window (Step In)

- The PC location display (=>) in the [Source] window moves to the statement at the start of the sort function.

[Step Out]: Steps out of the called function and stops at the next statement in the called program.

- Select [Step Out] from the [Debug] menu to exit the sort function, or click the [Step Out] button on the toolbar.



Figure 5.23 Step Out Button

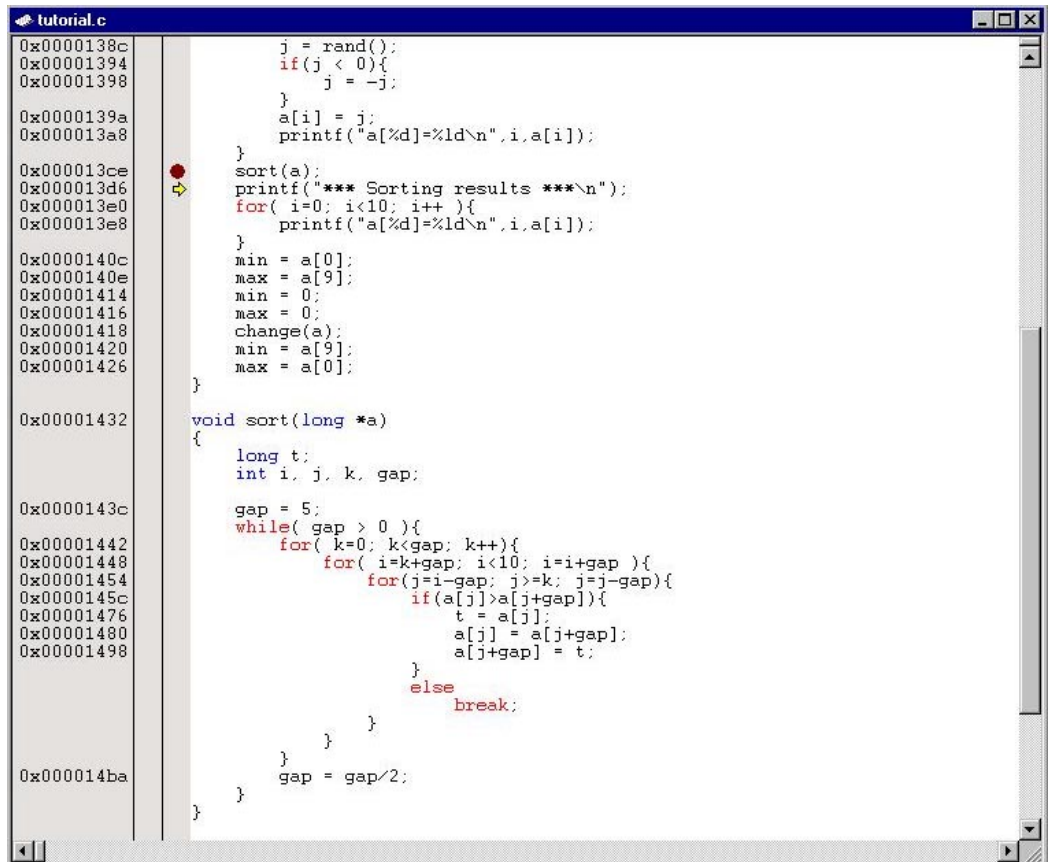


Figure 5.24 Source Window (Step Out)

[Step Over]: Executes a function call in a single step, and stops at the next statement in the main program.

Select [Step Over] from the [Debug] menu or click the [Step Over] button on the toolbar to step over the statements in the printf function.



Figure 5.25 Step Over Button

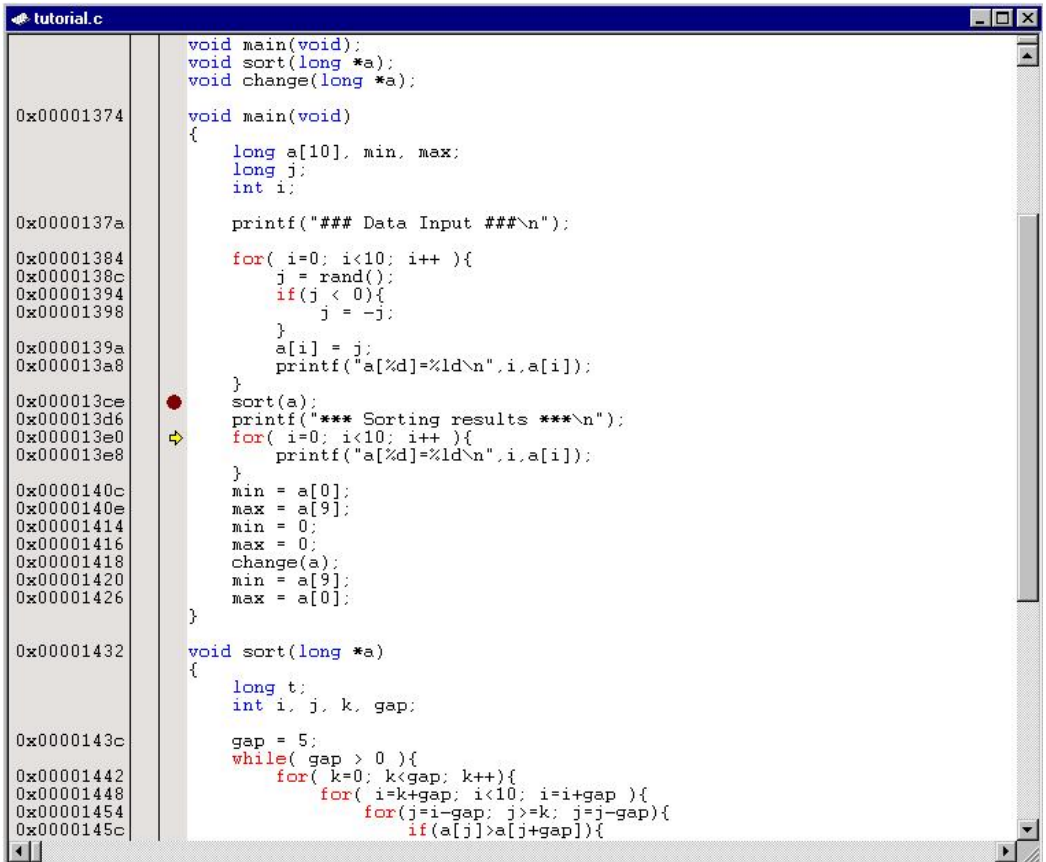


Figure 5.26 Source Window (Step Over)

When the printf function has been executed, *** Sorting results *** will be displayed in the [Simulated I/O] window.


5.3.8 Checking Profile Information

The profile information can be checked in the [Profile] window.

- Clicking the [Go] button and continuing execution from the current PC executes the SLEEP instruction and stops.

[List] Sheet: Displays the profile information as a list.

- Open the [Profile] window by selecting [Profile] from the [View->Performance] menu. The [List] sheet will be displayed.

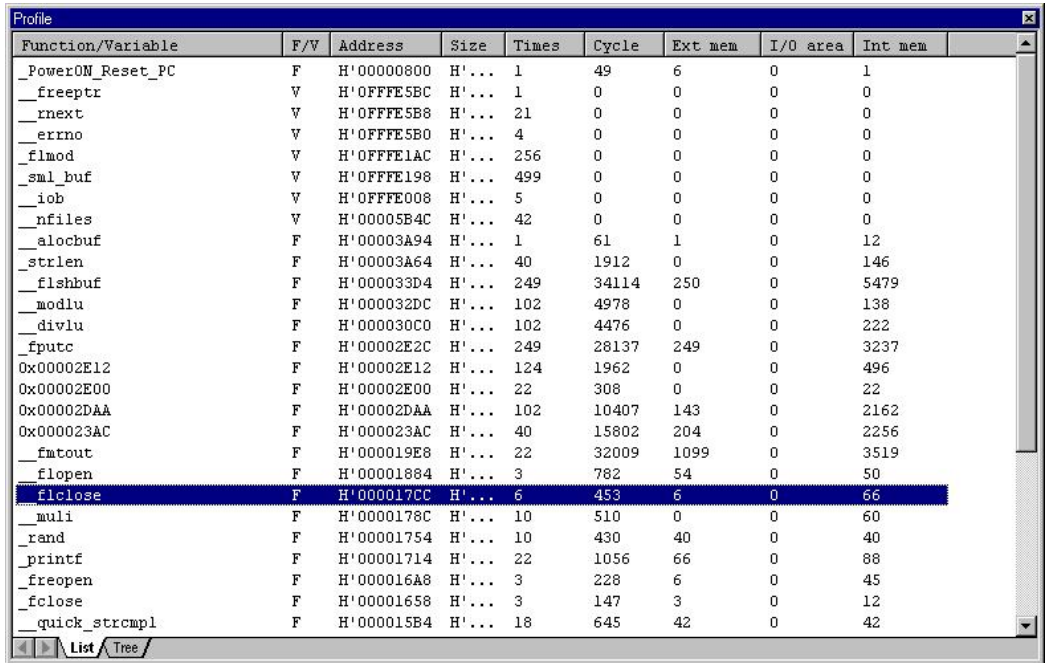

Function/Variable	F/V	Address	Size	Times	Cycle	Ext mem	I/O area	Int mem
_PowerON_Reset_PC	F	H'00000800	H'...	1	49	6	0	1
_freeptr	V	H'0FFFE5BC	H'...	1	0	0	0	0
_rnext	V	H'0FFFE5B8	H'...	21	0	0	0	0
_errno	V	H'0FFFE5B0	H'...	4	0	0	0	0
_flmod	V	H'0FFFE1AC	H'...	256	0	0	0	0
_sml_buf	V	H'0FFFE198	H'...	499	0	0	0	0
_iob	V	H'0FFFE008	H'...	5	0	0	0	0
_nfiles	V	H'00005B4C	H'...	42	0	0	0	0
_alocbuf	F	H'00003A94	H'...	1	61	1	0	12
_strlen	F	H'00003A64	H'...	40	1912	0	0	146
_flushbuf	F	H'000033D4	H'...	249	34114	250	0	5479
_modlu	F	H'000032DC	H'...	102	4978	0	0	138
_divlu	F	H'000030C0	H'...	102	4476	0	0	222
_fputc	F	H'00002E2C	H'...	249	28137	249	0	3237
0x00002E12	F	H'00002E12	H'...	124	1962	0	0	496
0x00002E00	F	H'00002E00	H'...	22	308	0	0	22
0x00002DAA	F	H'00002DAA	H'...	102	10407	143	0	2162
0x000023AC	F	H'000023AC	H'...	40	15802	204	0	2256
_fmtout	F	H'000019E8	H'...	22	32009	1099	0	3519
_flopen	F	H'00001884	H'...	3	782	54	0	50
__fclose	F	H'000017CC	H'...	6	453	6	0	66
_multi	F	H'0000178C	H'...	10	510	0	0	60
_rand	F	H'00001754	H'...	10	430	40	0	40
_printf	F	H'00001714	H'...	22	1056	66	0	88
_freopen	F	H'000016A8	H'...	3	228	6	0	45
_fclose	F	H'00001658	H'...	3	147	3	0	12
_quick_strerror	F	H'000015B4	H'...	18	645	42	0	42


Figure 5.27 Profile Window (List Sheet)

In above figure, it can be found that the __fclose function was called six times, the execution cycle was 453, the external memory was accessed six times, and the internal memory was accessed 66 times.

It is possible to search for the critical path, such as a function that is called or accesses the memory many times, for the program performance.

[Tree] Sheet: Displays the profile information as a tree diagram.

- Select the [Tree] sheet. Double-clicking the function name in the [Profile] window expands or minimizes the tree structure.

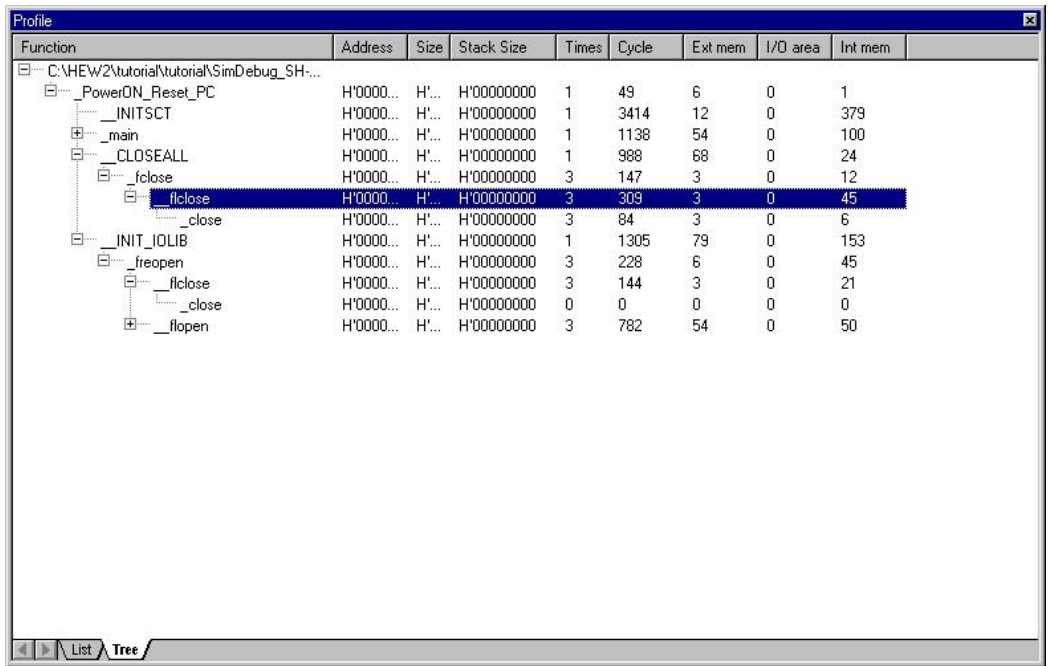

The screenshot shows a window titled "Profile" with a tree view on the left and a table of execution statistics on the right. The tree view shows a hierarchy of functions: C:\HEW\2\Tutorial\Tutorial\SimDebug_SH... > PowerON_Reset_PC > _INITSET > _main > _CLOSEALL > _fclose > _fclose > _fclose. The table lists the following data for each function:

Function	Address	Size	Stack Size	Times	Cycle	Ext mem	I/O area	Int mem
C:\HEW\2\Tutorial\Tutorial\SimDebug_SH...								
PowerON_Reset_PC	H'0000...	H'...	H'00000000	1	49	6	0	1
_INITSET	H'0000...	H'...	H'00000000	1	3414	12	0	379
_main	H'0000...	H'...	H'00000000	1	1138	54	0	100
_CLOSEALL	H'0000...	H'...	H'00000000	1	988	68	0	24
_fclose	H'0000...	H'...	H'00000000	3	147	3	0	12
_fclose	H'0000...	H'...	H'00000000	3	309	3	0	45
_fclose	H'0000...	H'...	H'00000000	3	84	3	0	6
_INIT_IOLIB	H'0000...	H'...	H'00000000	1	1305	79	0	153
_freopen	H'0000...	H'...	H'00000000	3	228	6	0	45
_fclose	H'0000...	H'...	H'00000000	3	144	3	0	21
_close	H'0000...	H'...	H'00000000	0	0	0	0	0
_fopen	H'0000...	H'...	H'00000000	3	782	54	0	50

Figure 5.28 Profile Window (Tree Sheet)

In above figure, it can be found that the `__fclose` function was called three times from the `_fclose` function, the execution cycle was 309, the external memory was accessed three times, and the internal memory was accessed 45 times.

[Profile-Chart] Window: Displays the relation of calls for a specific function.

- Select the `__fclose` function on the [Profile] window. Open the pop-up menu by right clicking the mouse on the [Profile] window, and select [View Profile-Chart] to display the [Profile-Chart] window.

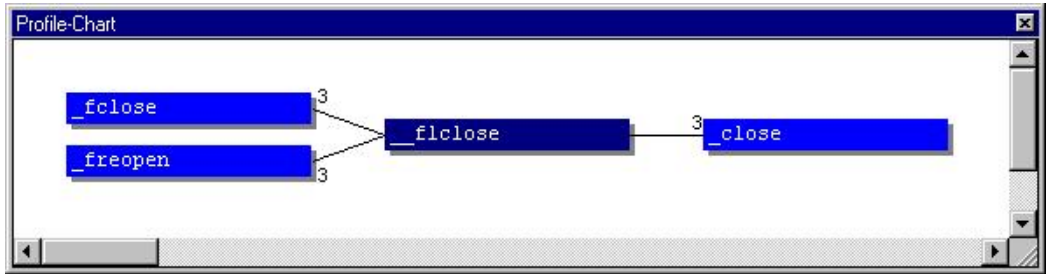


Figure 5.29 Profile-Chart Window

In above figure, it can be found that the `__fclose` function was called three times from the `_fclose` and `_freopen` functions, and the `_close` function was called three times.

This is the end of the tutorial using the simulator/debugger.

Section 6 Exiting from the HEW

Selecting [File->Exit] will close the HEW. Depending on the setting, the message box (figure 6.1) which asks you whether to save the session or not will be launched. Not only the setting like this regarding exiting from the HEW but also setting regarding initiation of the HEW can be specified via [Tools->Options...]. For details, refer to the Hitachi Embedded Workshop 2 User's Manual.

The other tools launched from the HEW will not be closed when the HEW is closed. Close the tools by yourself.

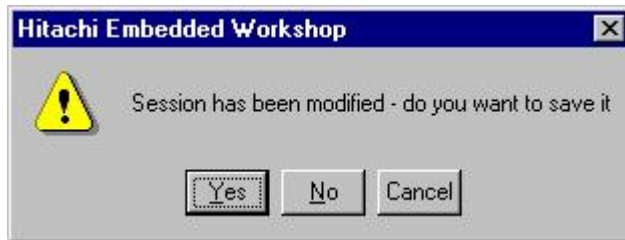


Figure 6.1 Confirmation Dialog Box for Saving Session on Exiting from the HEW