

# Floating License Server V2.00.00

User's Manual

Target Device

RL78 Family

RX Family

RH850 Family

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.  

Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

# How to Use This Manual

This manual describes the role of the floating license for developing applications and systems for RH850 family, RX family, and RL78 family, and provides an outline of its features.

Readers	This manual is intended for users who wish to using the IDE (CS+ or e <sup>2</sup> studio) and design software and hardware application systems.
Purpose	This manual is intended to give users an understanding of the floating license to use for reference in developing the hardware or software of systems using these devices.
Organization	This manual can be broadly divided into the following units.  <a href="#">1.GENERAL</a> <a href="#">2.FUNCTIONS</a> <a href="#">3.MESSAGE</a>
How to Read This Manual	It is assumed that the readers of this manual have general knowledge of electricity, logic circuits, and microcontrollers.
Conventions	Data significance: <u>H</u> igher digits on the left and lower digits on the right Active low representation:    XXX (overscore over pin or signal name) Note:                            Footnote for item marked with Note in the text Caution:                        Information requiring particular attention Remarks:                        Supplementary information Numeric representation:        Decimal ... XXXX Hexadecimal ... 0xXXXX

# TABLE OF CONTENTS

<b>1.</b>	<b>GENERAL</b>	<b>5</b>
1.1	Introduction	5
1.2	Operating Environment	7
<b>2.</b>	<b>FUNCTIONS.</b>	<b>8</b>
2.1	Installing Floating License Server	8
2.2	Uninstalling Floating License Server	10
2.3	Using a Floating License	11
2.3.1	Setting up the server.	11
2.3.2	Setting up the firewall	14
2.3.3	Adding a license	21
2.3.4	Assigning a floating license to the client.	24
2.3.5	Confirming the license usage status.	24
2.3.6	Deleting a license	28
2.3.7	Forcibly leaving offline mode	30
2.3.8	Saving the states of floating license usage.	32
2.3.9	Change options.	35
2.4	Resetting When the Server Is Changed	36
<b>3.</b>	<b>MESSAGE</b>	<b>37</b>
3.1	Message Types	37
3.2	Internal Errors	38
3.3	Fatal Errors	38
3.4	Information	42
3.5	Choices	44
3.6	Warning	45
	Revision Record	C - 1


# 1. GENERAL

This chapter describes the outline of the license in the form of a floating license for managing the license of development environment for developing applications and systems for the microcontrollers (RH850, RX and RL78).

## 1.1 Introduction

A floating license is a form of license where a limited number of licenses for software are managed through a server and any computer connected to the server can use the software within a set number of licenses.

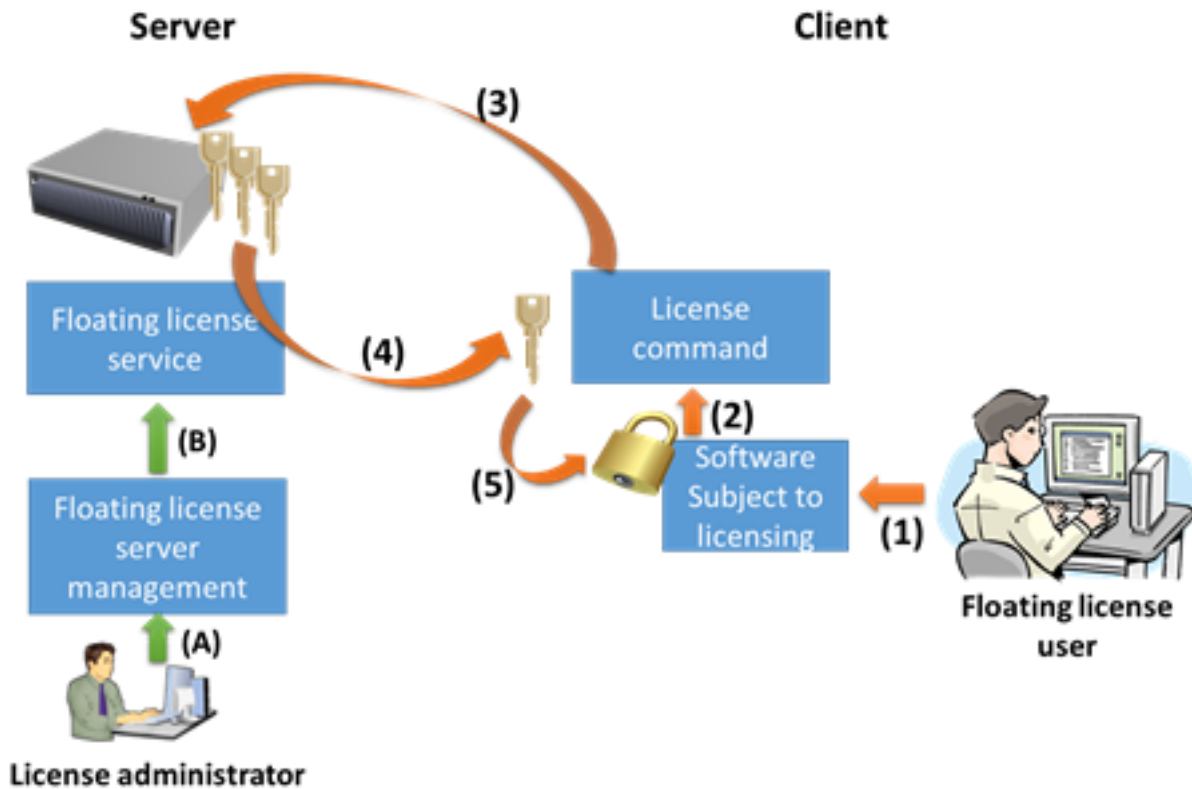
Figure 1.1 System Structure of Floating License



- (1)Launch
- (2)Request for license
- (3)Request for floating license
- (4)Floating license is granted
- (5)License is confirmed
- (A)License key is added
- (B)License is registered

A floating license cannot be used unless the computer is connected to the server. Offline mode is a mechanism that occupies the license for a certain period in order to use the license in a state disconnected from the network environment.

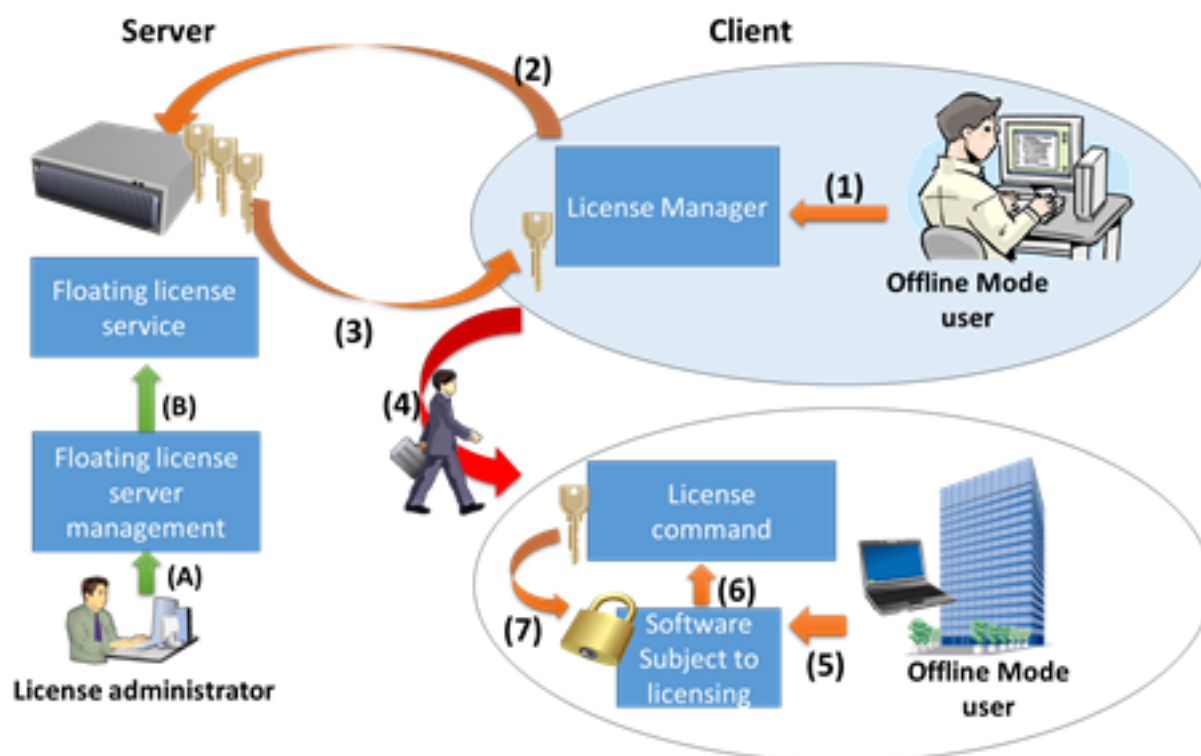Figure 1.2 System Structure of Floating License (Offline Mode)



- (1) Request for floating license (offline mode)
- (2) Request for floating license (offline mode)
- (3) Floating license (offline mode) is granted
- (4) Take out
- (5) Launch
- (6) Request for license
- (7) License is confirmed
- (A) License key is added
- (B) License is registered

For both node locked and floating licenses, some licenses have no limit on the period of validity, while for others, the period is one year. Once the period of a time-limited license has expired, the development tool covered by the license cannot be used. To distinguish between the periods of validity, we denote the licenses with and without time limits as annual and permanent, respectively.

- Floating License (permanent)
- Floating License (annual)

## 1.2 Operating Environment

A floating license operates in the following environment.

- Hardware
  - Processor of 1 GHz or higher
  - Main memory: Min. 1 Gbyte (Min. 2 Gbytes for 64-bit Windows), at least 2 Gbytes are recommended
  - Display: Resolution of 1024 x 768 or higher, at least 65536 colors
- OS
  - Windows Vista (32 bits and 64 bits): Business and Enterprise
  - Windows 7 (32 bits and 64 bits): Professional and Enterprise
  - Windows 8.1 (32 bits and 64 bits): Pro and Enterprise
  - Windows 10 (32 bits and 64 bits): Pro and Enterprise
  - Windows Server 2008: Standard and Web Server (Server Core environment is unsupported)
  - Windows Server 2008 R2: Standard and Web Server (Server Core environment is unsupported)
  - Windows Server 2012: Standard (Server Core environment is unsupported)
  - Windows Server 2012 R2: Standard (Server Core environment is unsupported)
  - Windows Server 2016: Standard (Server Core environment is unsupported)
- Runtime library
  - .NET Framework 4  
“.NET Framework 4” is required. Cannot operate correctly in “.NET Framework 4 Client Profile”.
- License
  - RL78 License Pack 1 (CC-RL) or later
    - Standard edition Floating License (permanent)
    - Standard edition Floating License (annual)
    - Professional edition Floating License (permanent)
    - Professional edition Floating License (annual)
  - RX License Pack 2 (CC-RX) or later
    - Standard edition Floating License (permanent)
    - Standard edition Floating License (annual)
    - Professional edition Floating License (permanent)
    - Professional edition Floating License (annual)
  - RH850 License Pack 1 (CC-RH) or later
    - Standard edition Floating License (permanent)
    - Standard edition Floating License (annual)
    - Professional edition Floating License (permanent)
    - Professional edition Floating License (annual)

## 2. FUNCTIONS

This chapter describes functions of a floating license server.

### 2.1 Installing Floating License Server

Insert the CD in the drive of floating license server's PC. The preparing to Install page appears automatically. If the page does not appear automatically, double-click "Setup.exe" in the route directory of the CD.

Click the [Begin Server Setup] button, the floating license server setup begins.


**Caution** The floating license server setup must be conducted with administrator privileges.

The floating license service is registered to the Windows services and it will be automatically started when the PC is booted up. After the service has been enabled with an option, the server continues to operate even after logging off or before logging on.

You can confirm the status of the Windows services by the following process.

- (1) Open the Services snap-in  
Select Control Panel >> [System and Security] >> [Administrative Tools], and double-click [Services].

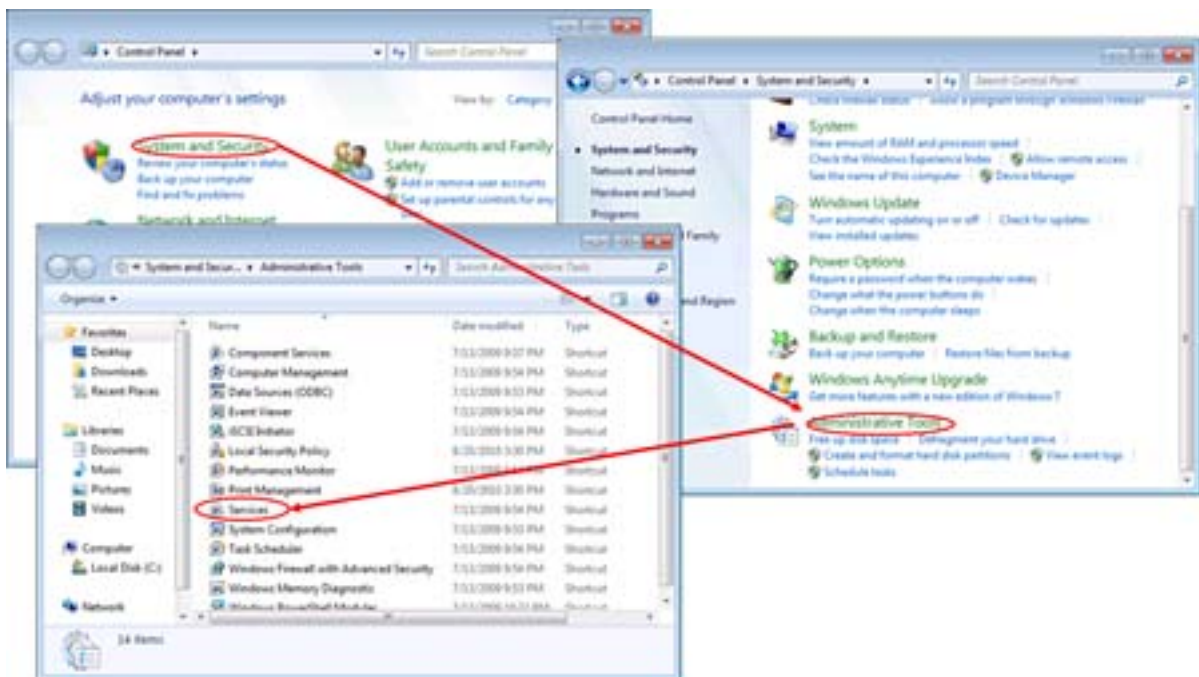Figure 2.1 Open Services Snap-in




The Services snap-in will open.



- (2) Confirming the Windows services  
 "Renesas MCU Tools Floating License Service" is displayed in the Windows services list.

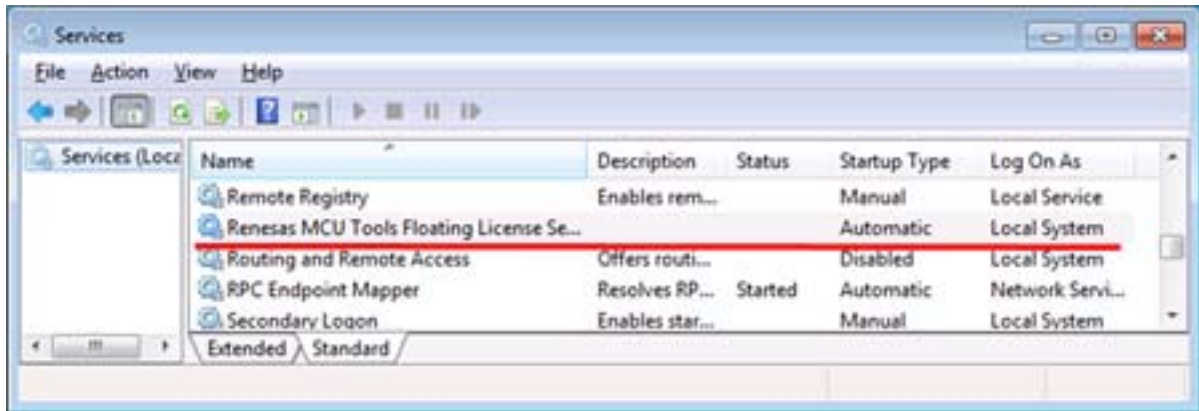Figure 2.2 Services Snap-in



## 2.2 Uninstalling Floating License Server

You can uninstall the floating license using [Programs and Features] in the control panel. Select “Renesas MCU Tools Floating License Server” and click the [Uninstall] button.

**Caution** Uninstalling the floating license client must be conducted with administrator privileges.

## 2.3 Using a Floating License

This section describes how to use a floating license.

### 2.3.1 Setting up the server

Start up the server administrator from the start menu and make initial settings.

- (1) Launch the server administrator GUI  
 Select the Windows [Start] menu >> [All Programs] >> [Renesas Electronics Utilities] >> [Renesas Floating License].

Figure 2.3 Launch the Server Administrator GUI




**Caution** Launching the server administrator GUI must be conducted with administrator privileges.

**Remark** In Windows 8.1, select [Renesas Floating License] on the start screen.

The Floating License Server Administrator window will open.

- (2) Open the server option dialog box  
 Click the [Option] button.

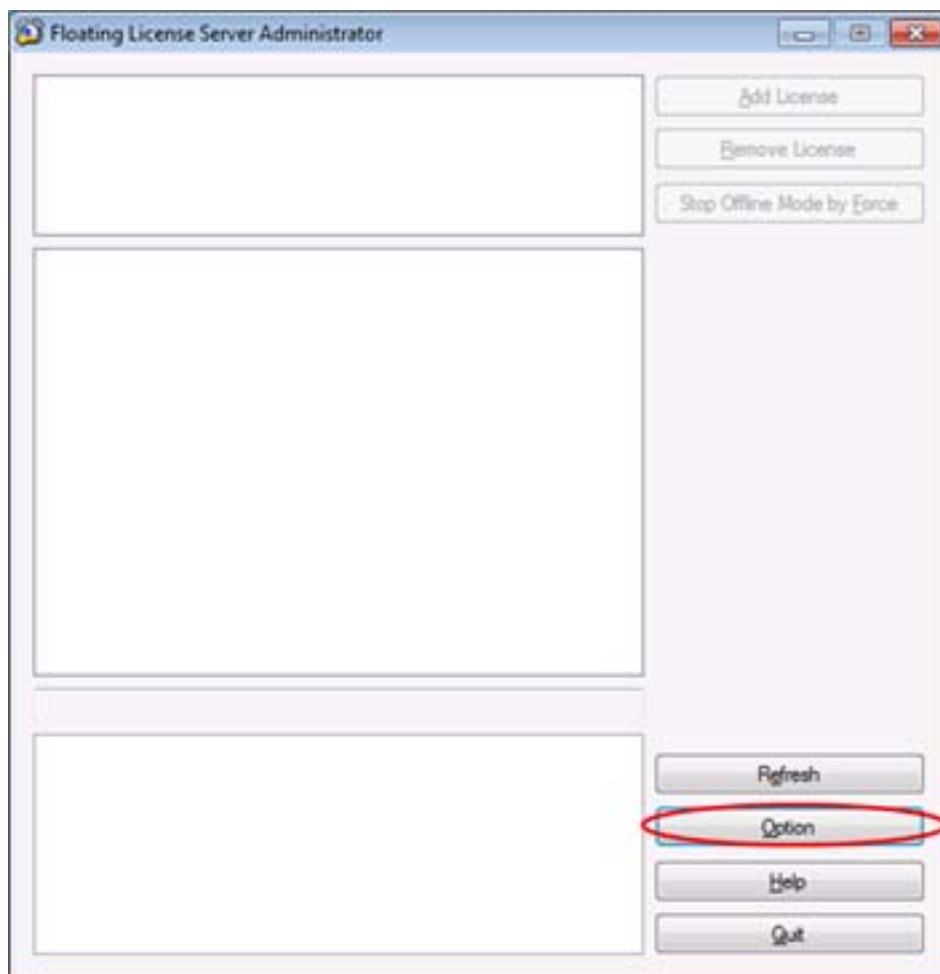
Figure 2.4 Open the Floating License Server Option Dialog Box



The Floating License Server Option dialog box will open.


Specify the port number to be used by the license server in [Server Port]. If there is a problem in the initial value (6723), change the port number.  
 Clicking the [Enable] button starts the floating license server.

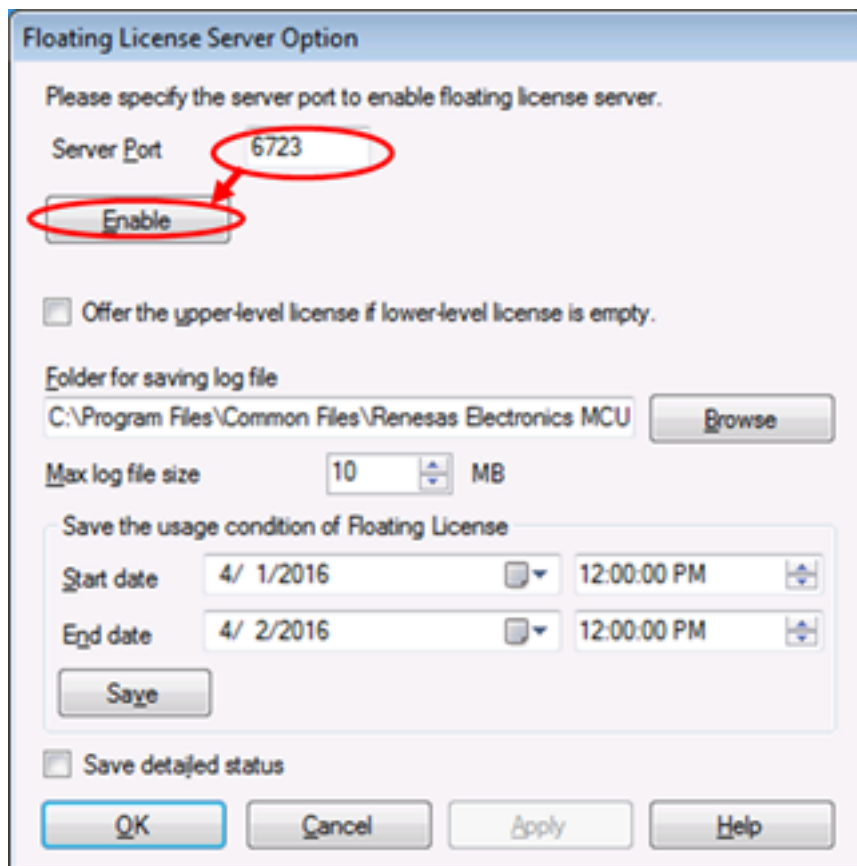Figure 2.5 Floating License Server Option Dialog Box (Disabled)



When the server has started, the display changes to that shown on the below.

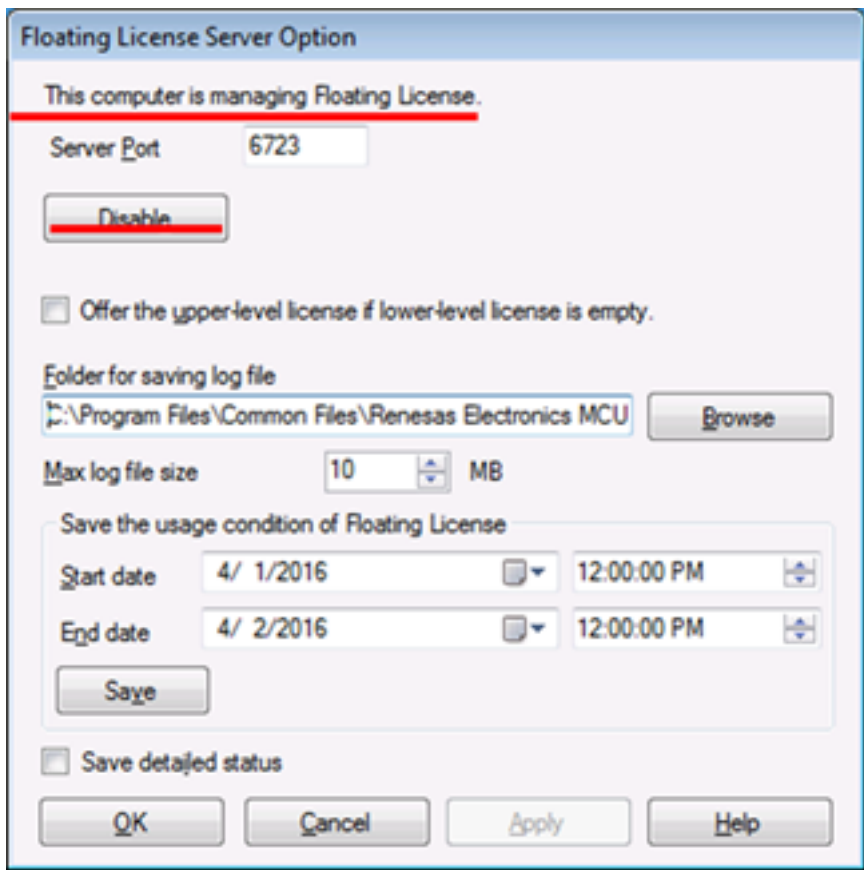Figure 2.6 Floating License Server Option Dialog Box (Enabled)




Click the [OK] button to close the dialog box.

### 2.3.2 Setting up the firewall

A firewall needs to be set up in order to receive license requests from clients.  
 Enable reception by the port number set in [Server Port] through the firewall setting.  
 If the Windows firewall is used, set up as follows.

- (1) Open the Windows firewall option  
 Select Control Panel >> [System and Security] >> [Windows firewall] >> [Advanced settings].

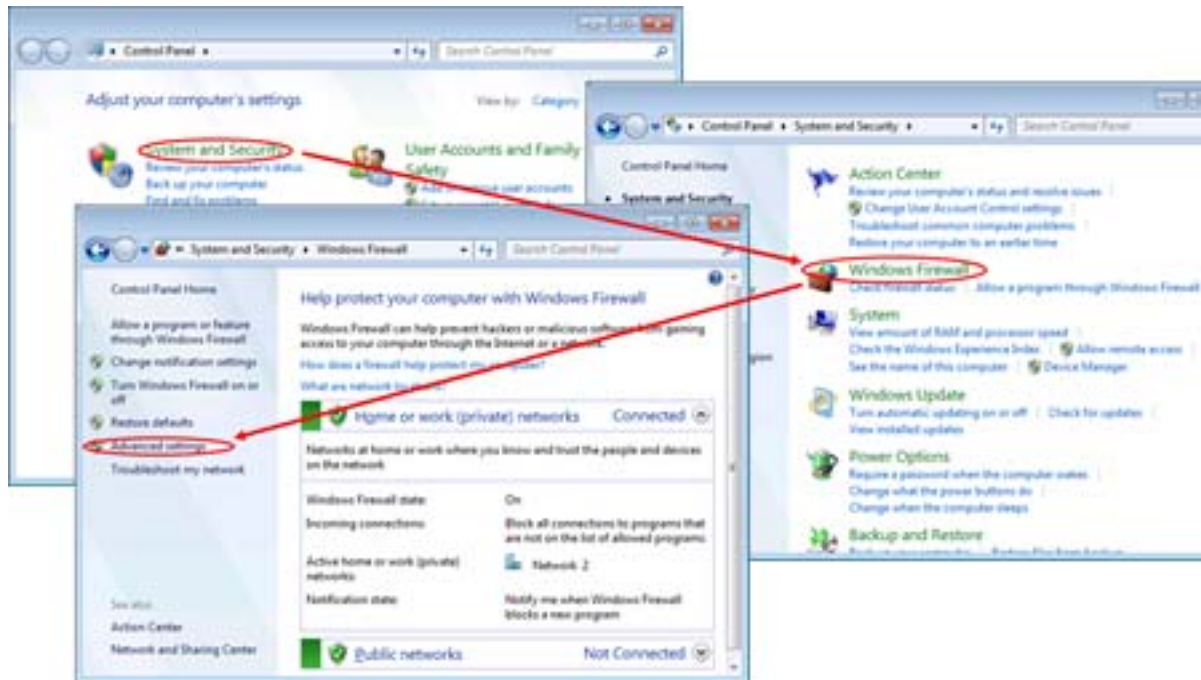Figure 2.7 Open the Windows Firewall Window




The Windows firewall window will open.

**Caution**      Setting up a windows firewall must be conducted with administrator privileges.

- (2) Add a firewall rule  
Select the [Inbound rules]>>[New Rule].

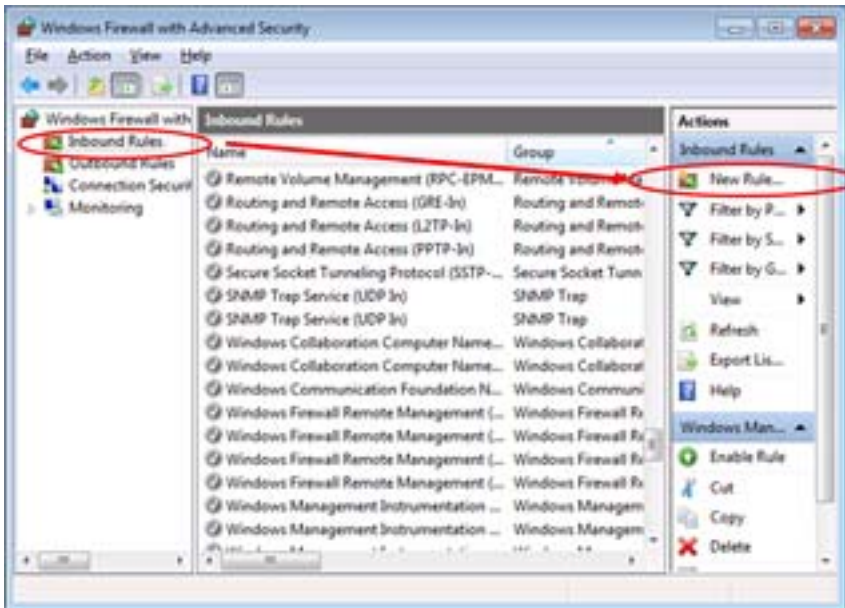
Figure 2.8 Add a Firewall Rule



The New Inbound Rule Wizard dialog box will open.

- (3) Set up a firewall rule
  - (a) Specify the rule type  
Select [Port] and click the [Next] button.

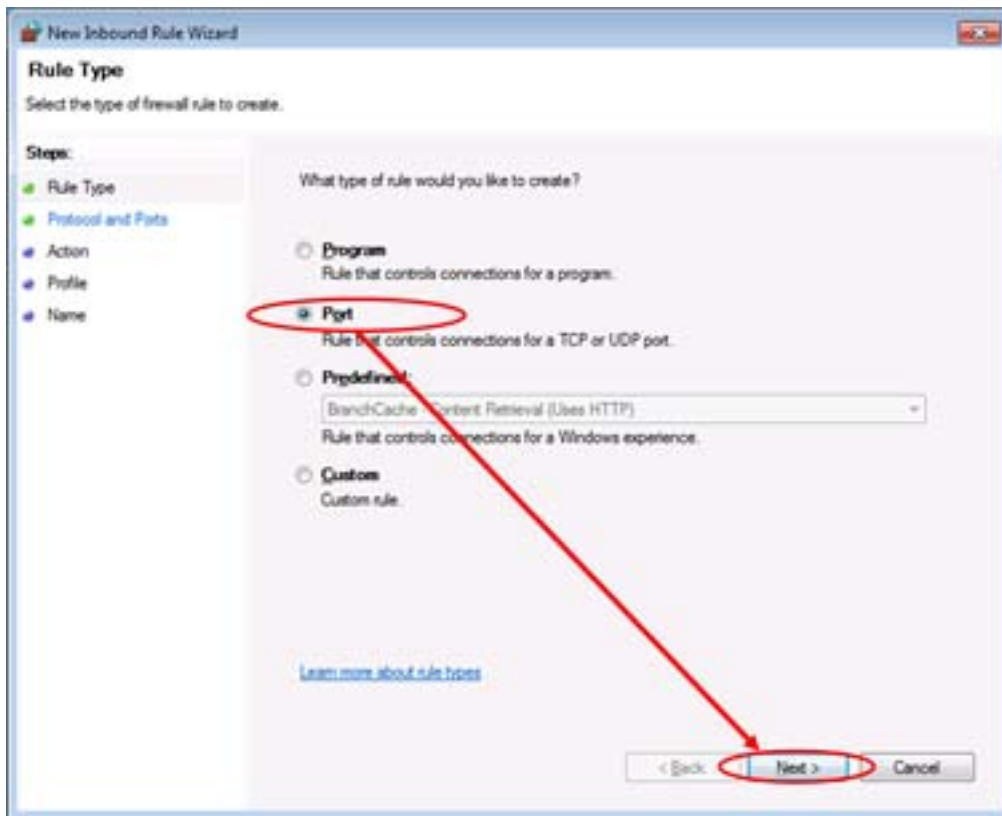Figure 2.9 New Inbound Rule Wizard (Rule Type)




[Protocol and Ports] will open.



- (b) Specify the protocol and ports  
Select [TCP] and [Specific local ports], and specify the port number specified in “2.3.1 Setting up the server” (initial value of 6723).  
Click the [Next] button.

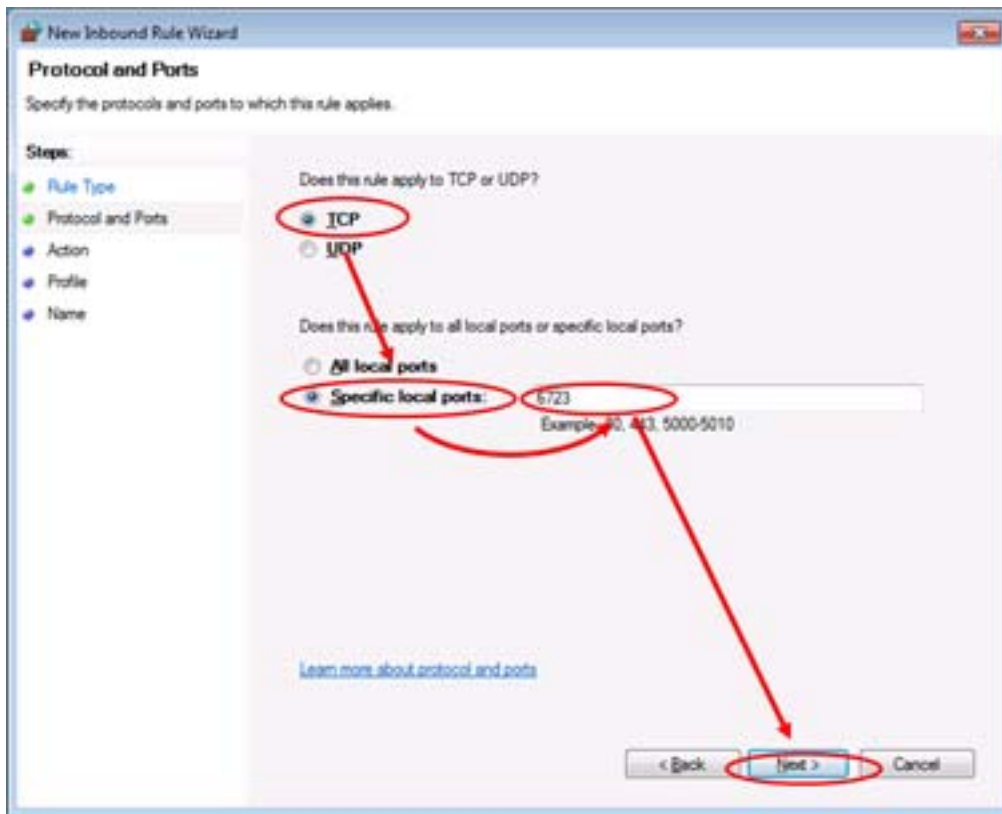
Figure 2.10 New Inbound Rule Wizard (Protocol and Ports)



[Action] will open.

- (c) Specify the action  
 Select [Allow the connection] and click the [Next] button.

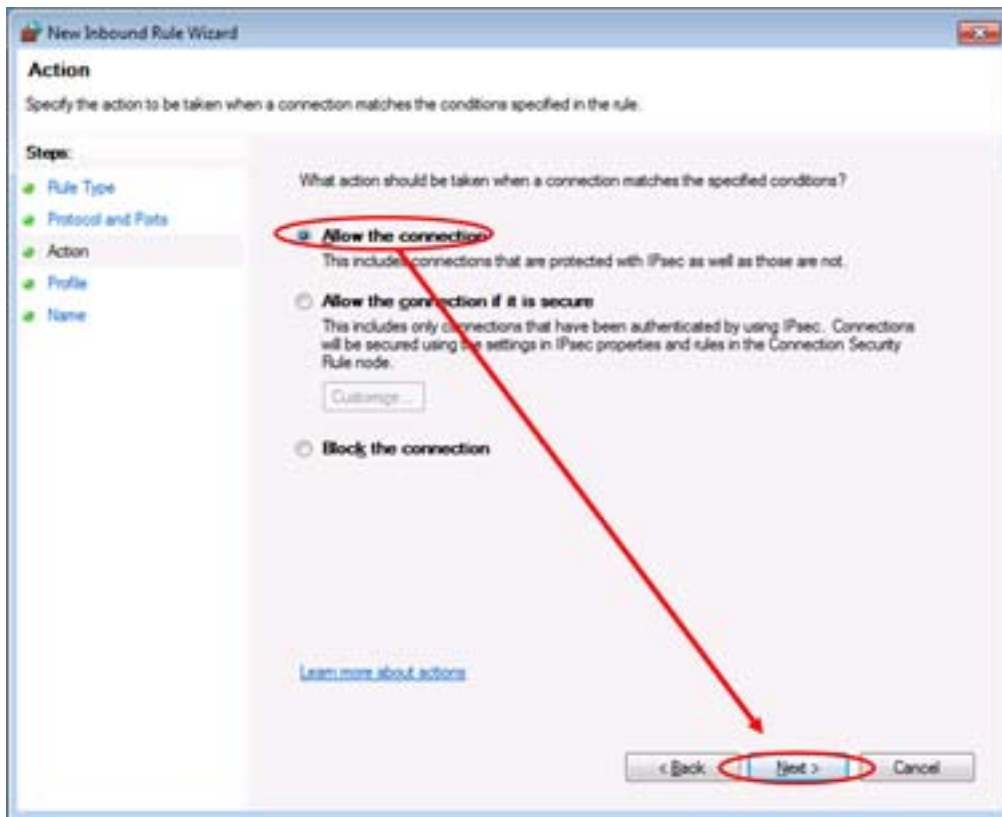
Figure 2.11 New Inbound Rule Wizard (Action)



[Profile] will open.

- (d) Specify the profile  
 Hold the initial state (all check boxes are selected) or uncheck unnecessary boxes according to the network environment, and click the [Next] button.

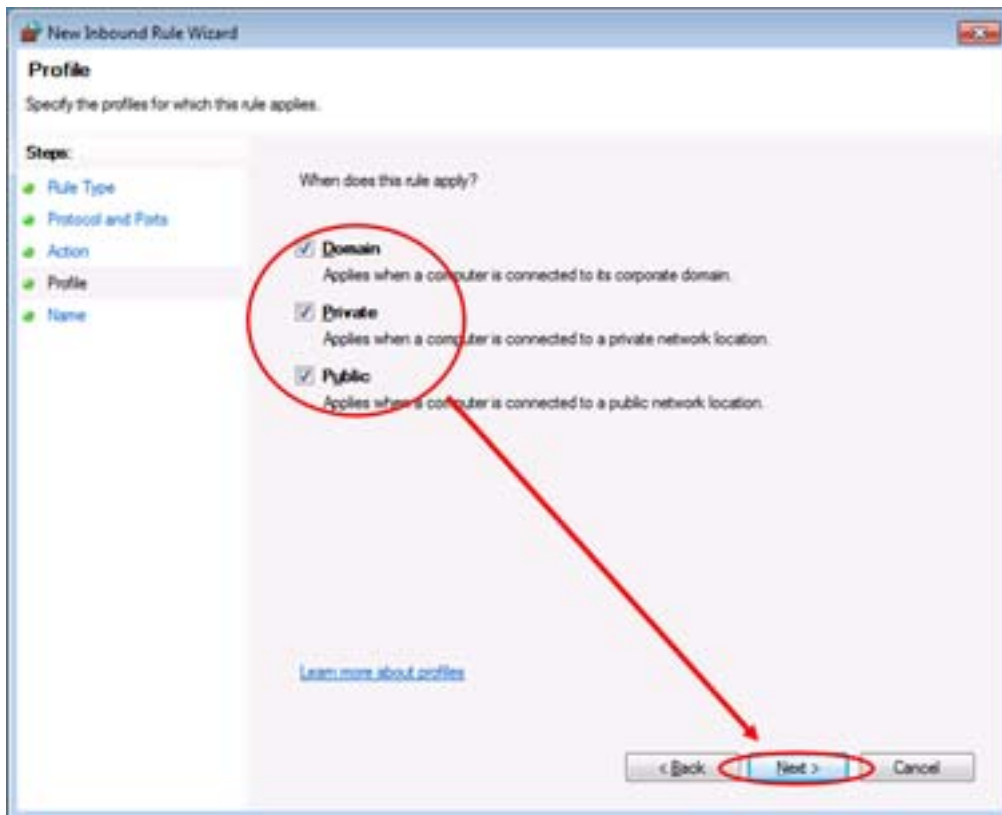
Figure 2.12 New Inbound Rule Wizard (Profile)



[Name] will open.


- (e) Specify the name  
Specify a name that is recognizable when to be changed later (example: Renesas Floating License Server), and click the [Finish] button.

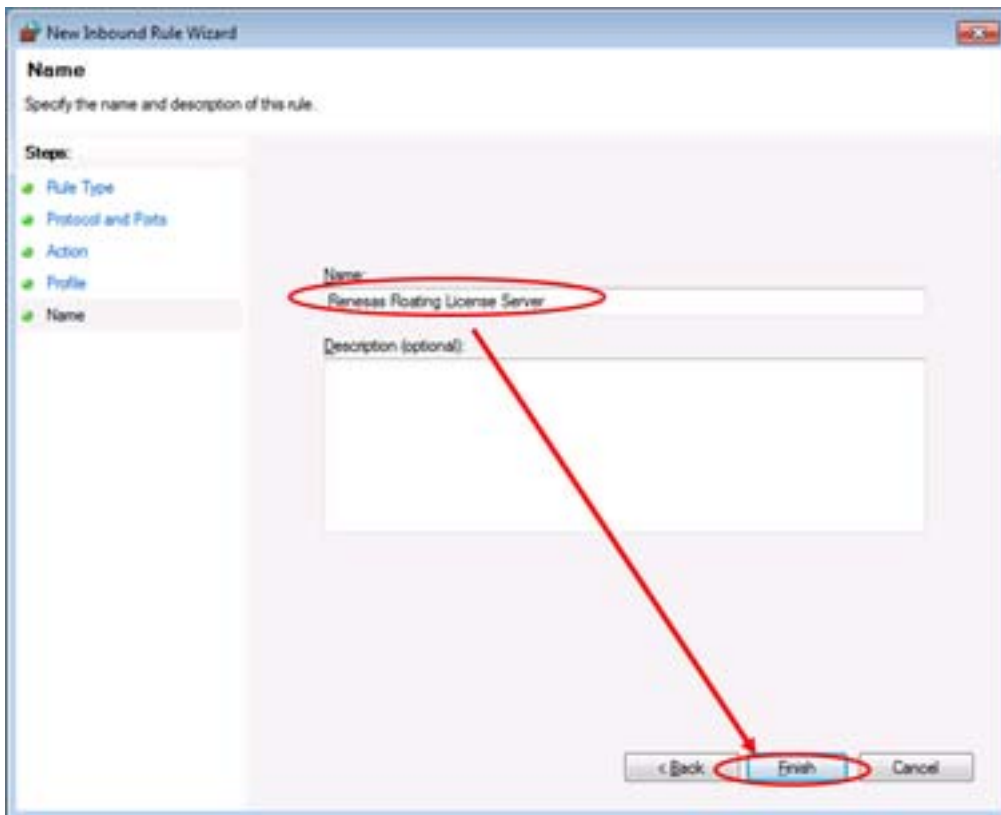Figure 2.13 New Inbound Rule Wizard (Name)



The New Inbound Rule Wizard dialog box will close, and the set rule is added to the list of [Inbound Rules].

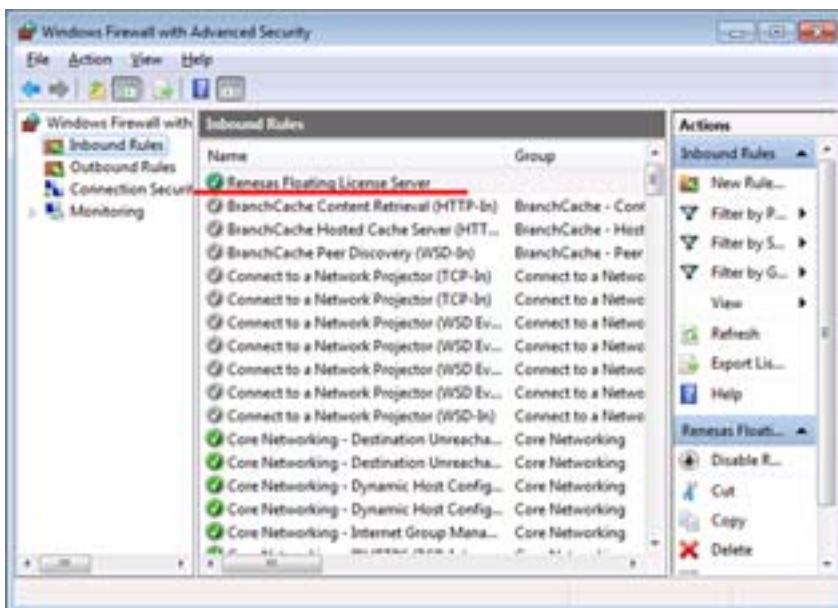
Figure 2.14 Windows Firewall window (Inbound Rules)



### 2.3.3 Adding a license

- (1) Open the Add License dialog box  
Click the [Add License] button of the Floating License Server Administrator window.

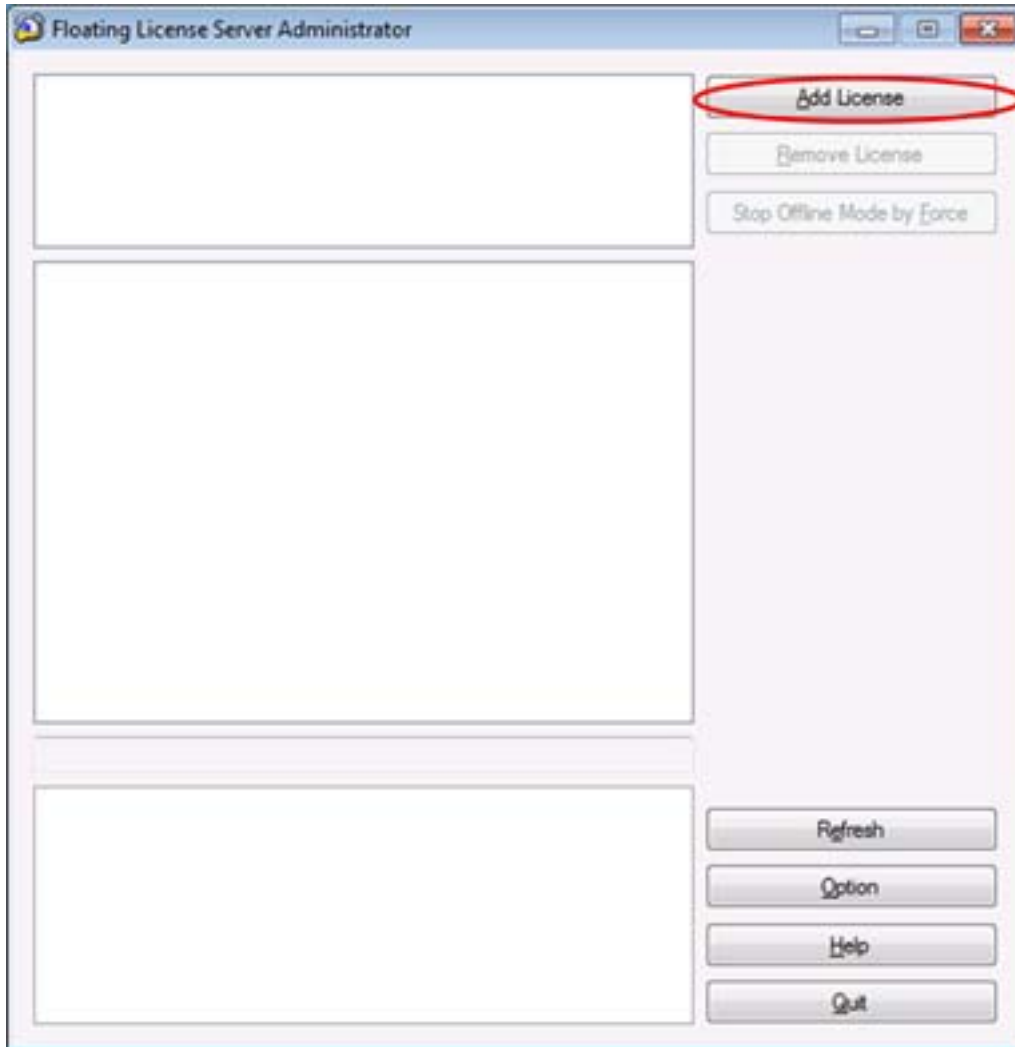Figure 2.15 Open the Add License Dialog Box



The Add License dialog box will open.

- (2) Enter the license key  
 Enter the license key in [Add following License keys] text box of the Add License dialog box, and click the [Add] button.  
 More than one license can be entered in the text box at a time.

Figure 2.16 Add License Dialog Box


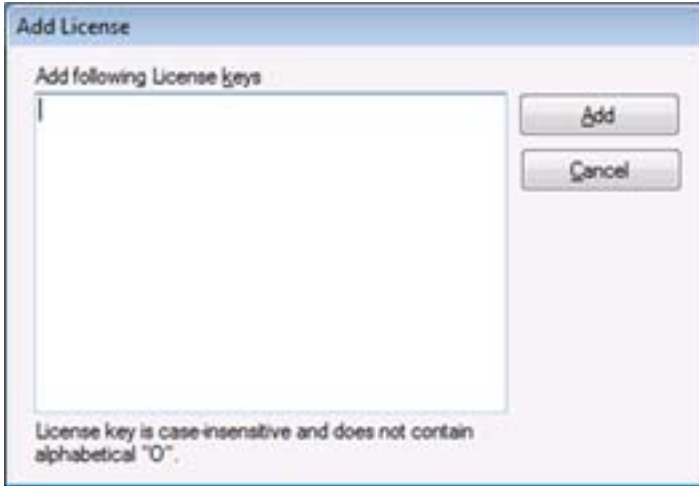



Figure 2.17 Enter the License Keys

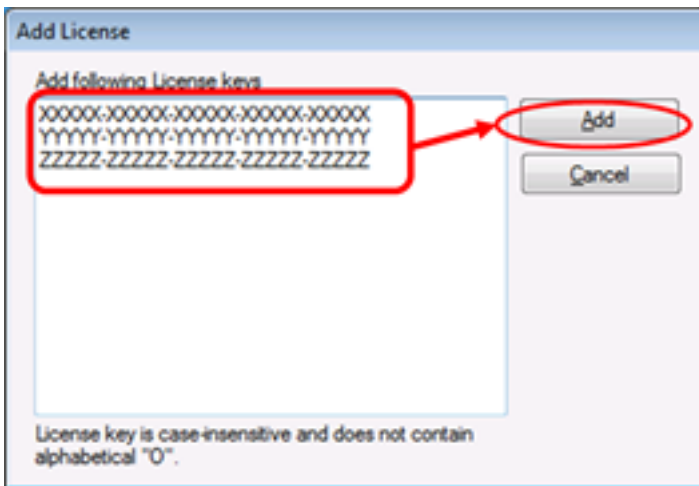

**Caution** Enter the license key compliant with the floating license. The Add License dialog box show the invalid key error if the non-compliant license key is entered.

The Add License dialog box will close, and the entered license key is added to the list in the Floating License Server Administrator window.

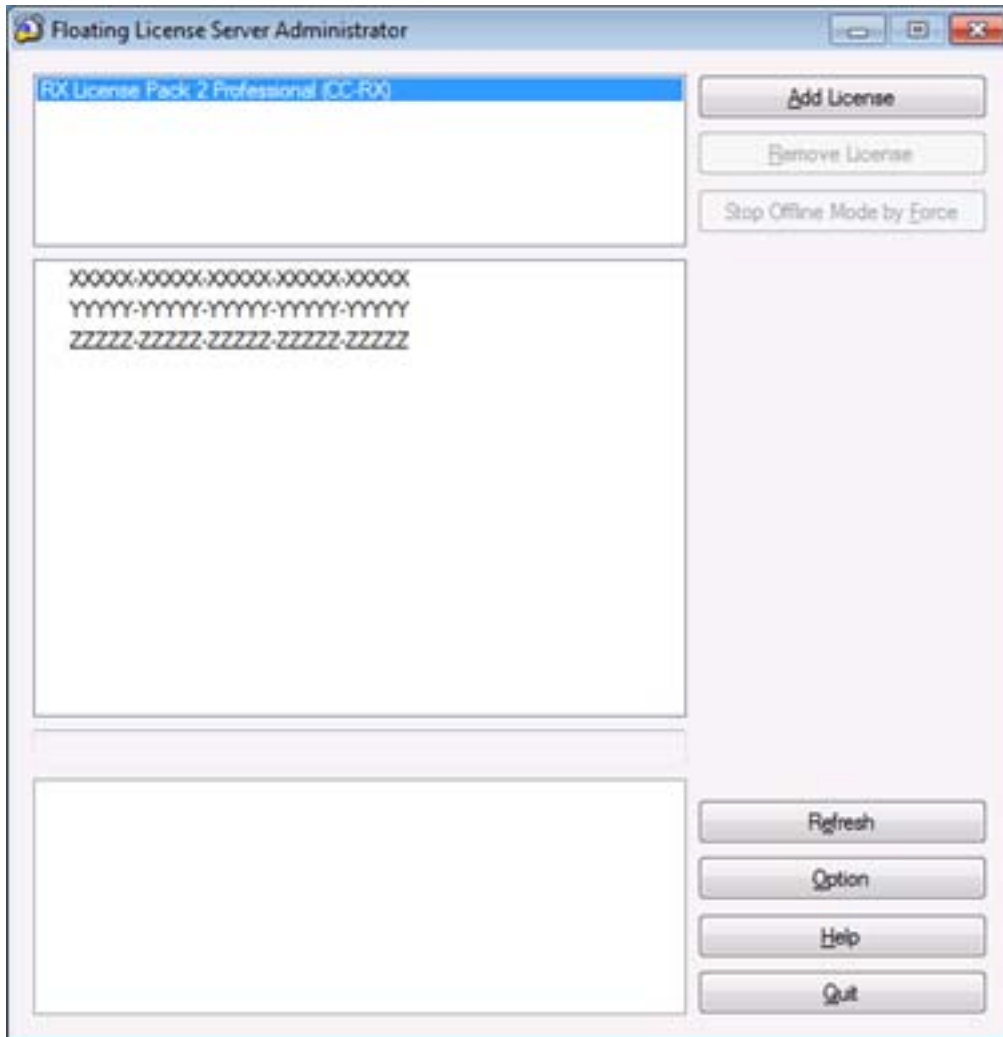Figure 2.18 Floating License Server Administrator Window After Adding the License Keys



### 2.3.4 Assigning a floating license to the client

When the floating license server receive a license request from a client, the server assigns an unused license to the client.

The term of validity of a floating license is 30 minutes from the time that the license is acquired. The term of validity of a floating license (offline mode) is the days designated by the client (max. 99 days).

### 2.3.5 Confirming the license usage status

If a license name is selected, license keys are indicated in below.

A license in use is displayed in boldface, and the license status is indicated by an icon.





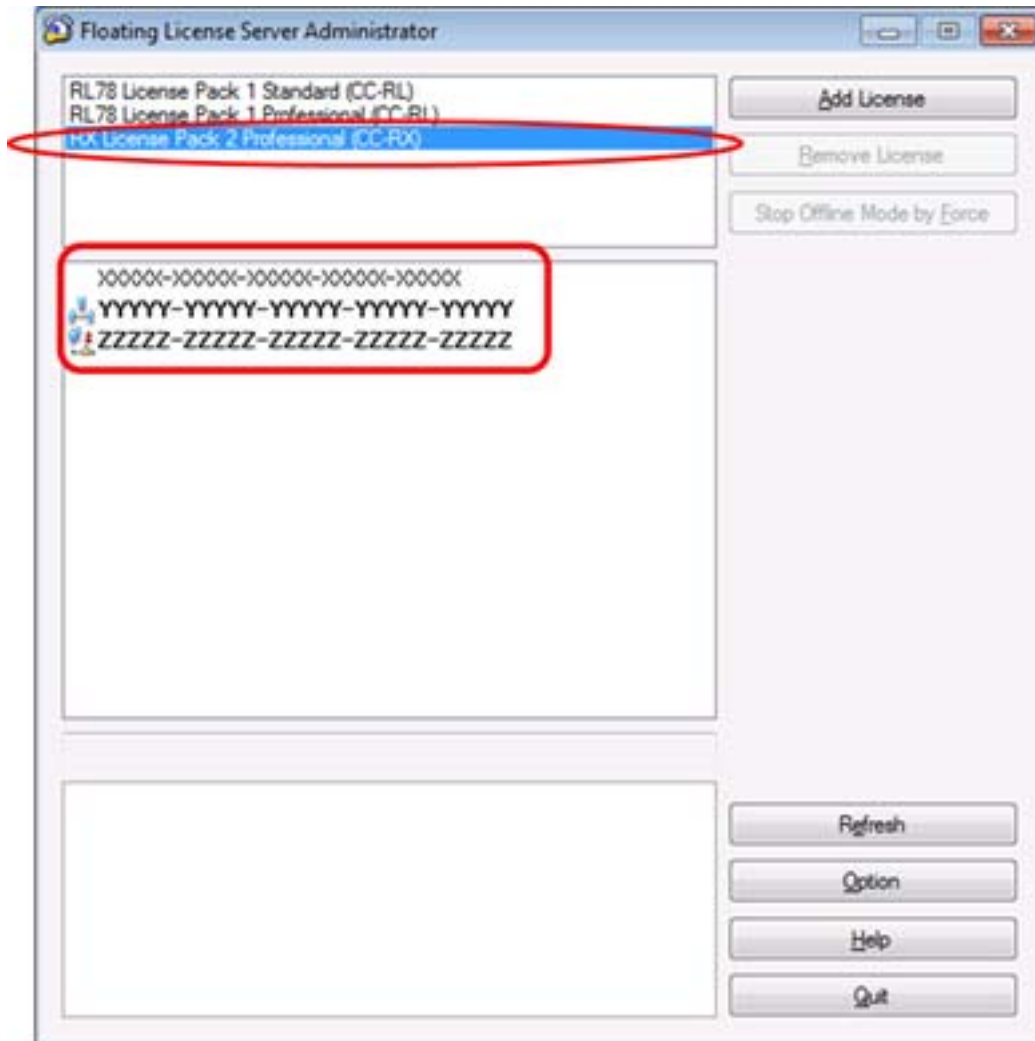
	Using as the floating license.
	Using as the offline license.
	The expiration date of an annual floating license is approaching.
	This annual floating license is no longer available because it is out of date.

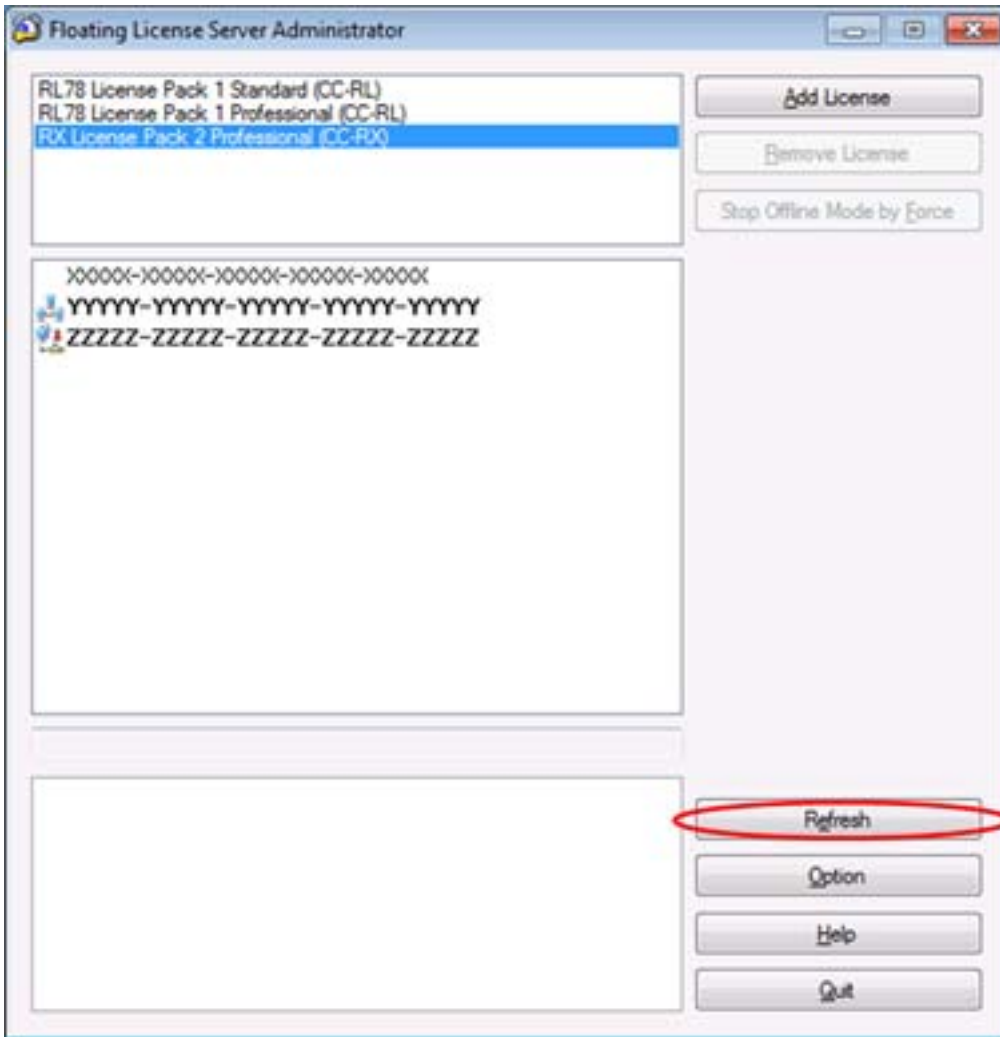


Figure 2.19 License Usage Status




If the displayed contents of the GUI are old, click the [Refresh] button to update the displayed information.

Figure 2.20 Refresh the Displayed Information



And click the license key. The license status is displayed in the bottom part of the window.

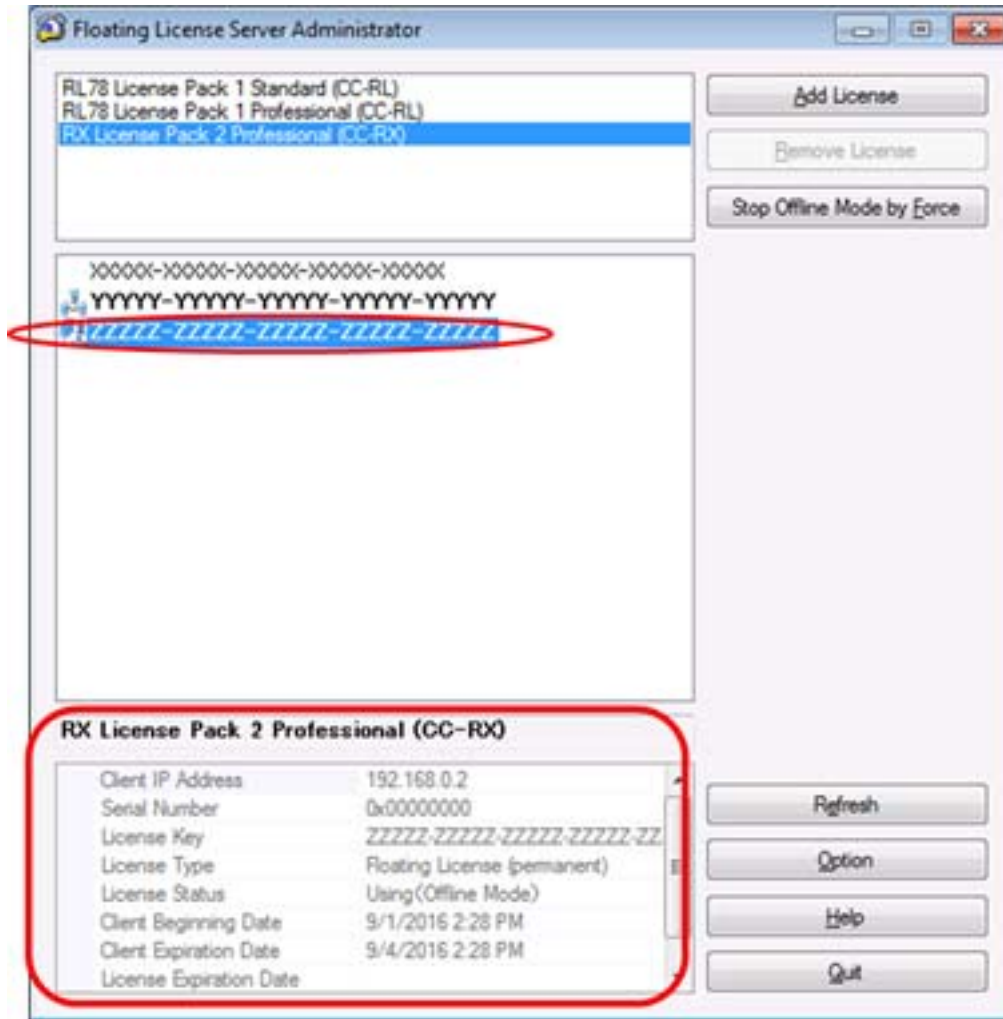
Figure 2.21 Detailed Information for the License Status



### 2.3.6 Deleting a license


Select a license key on the Floating License Server Administrator window, and click the [Remove License] button.

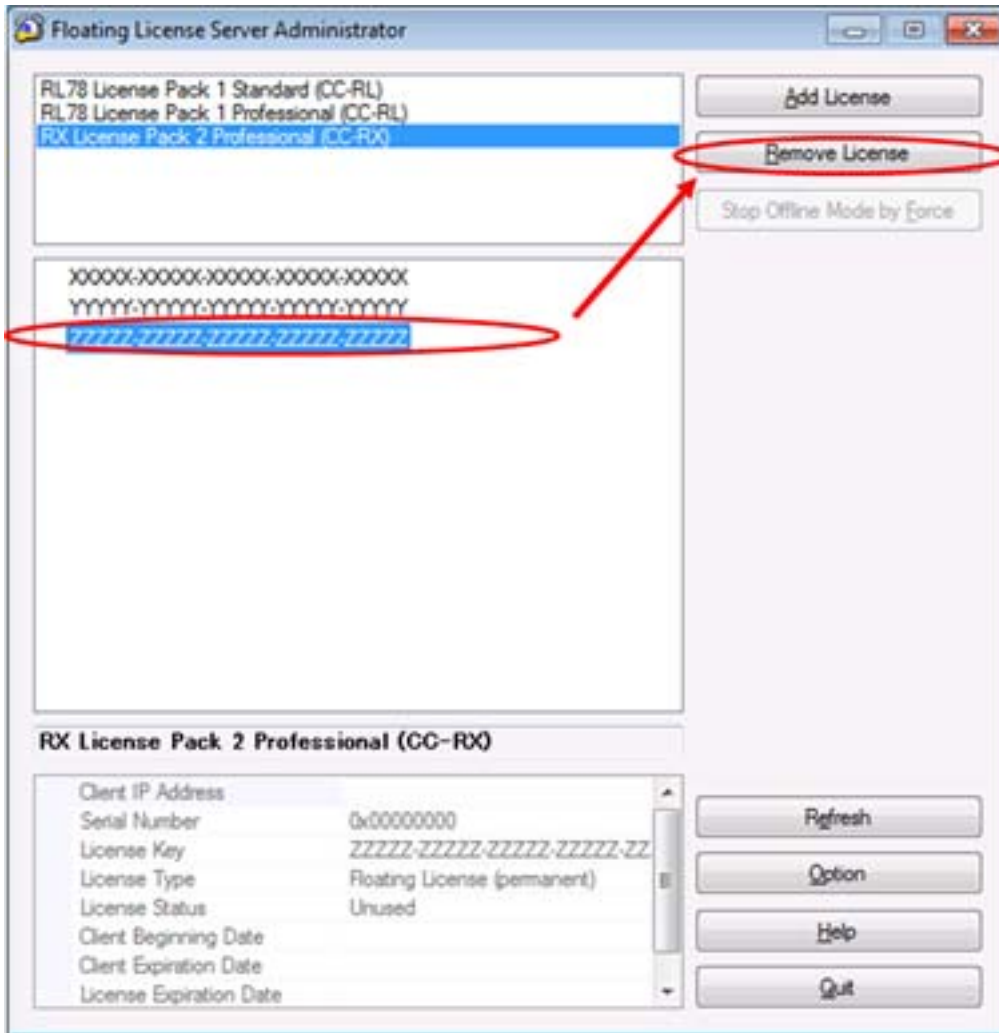Figure 2.22 Floating License Server Administrator Window Before Deleting a License



The selected license key will be removed in the Floating License Server Administrator window, and the license is no longer subject to management by the license service.

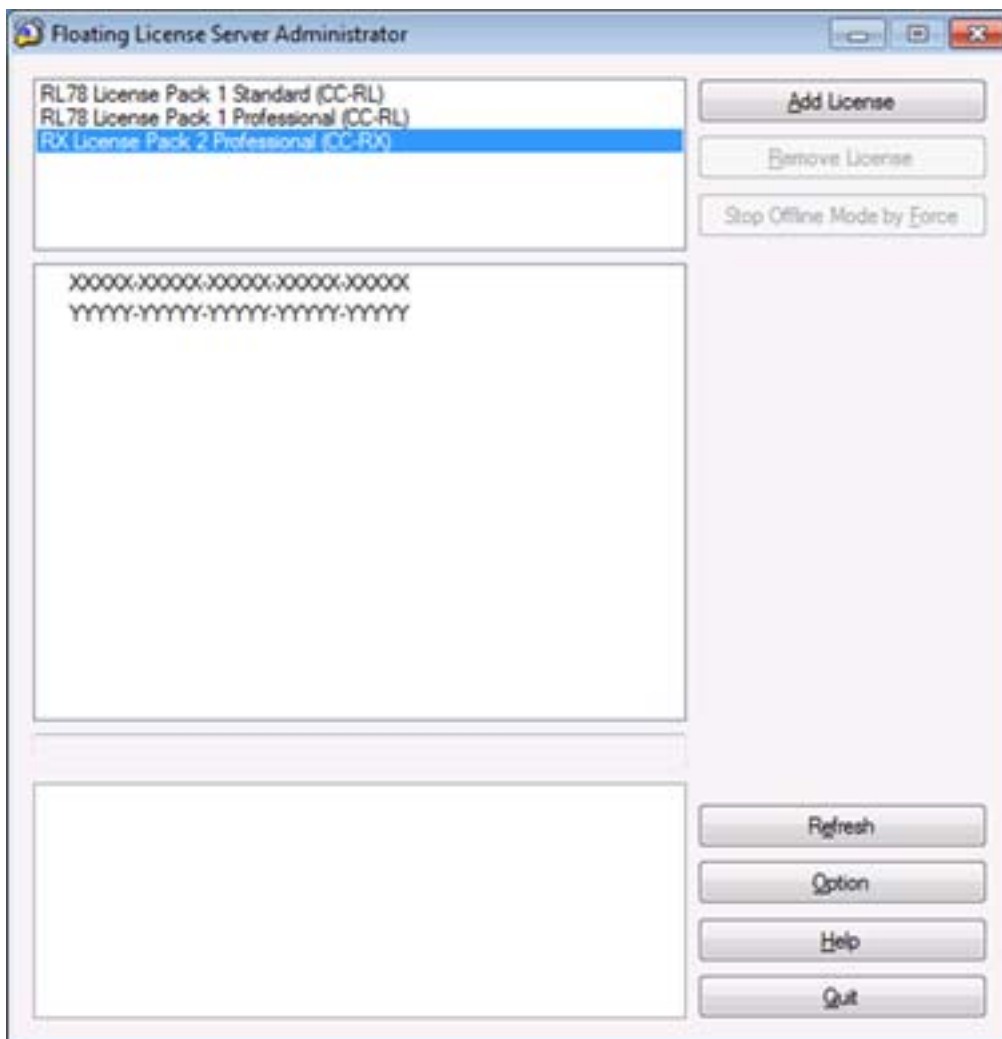Figure 2.23 Floating License Server Administrator Window After Deleting a License




### 2.3.7 Forcibly leaving offline mode

Select a license key of the license in use as a floating license (offline mode) on the Floating License Server Administrator window, and click the [Stop Offline Mode by Force] button.


A license in use as a floating license can not be released.

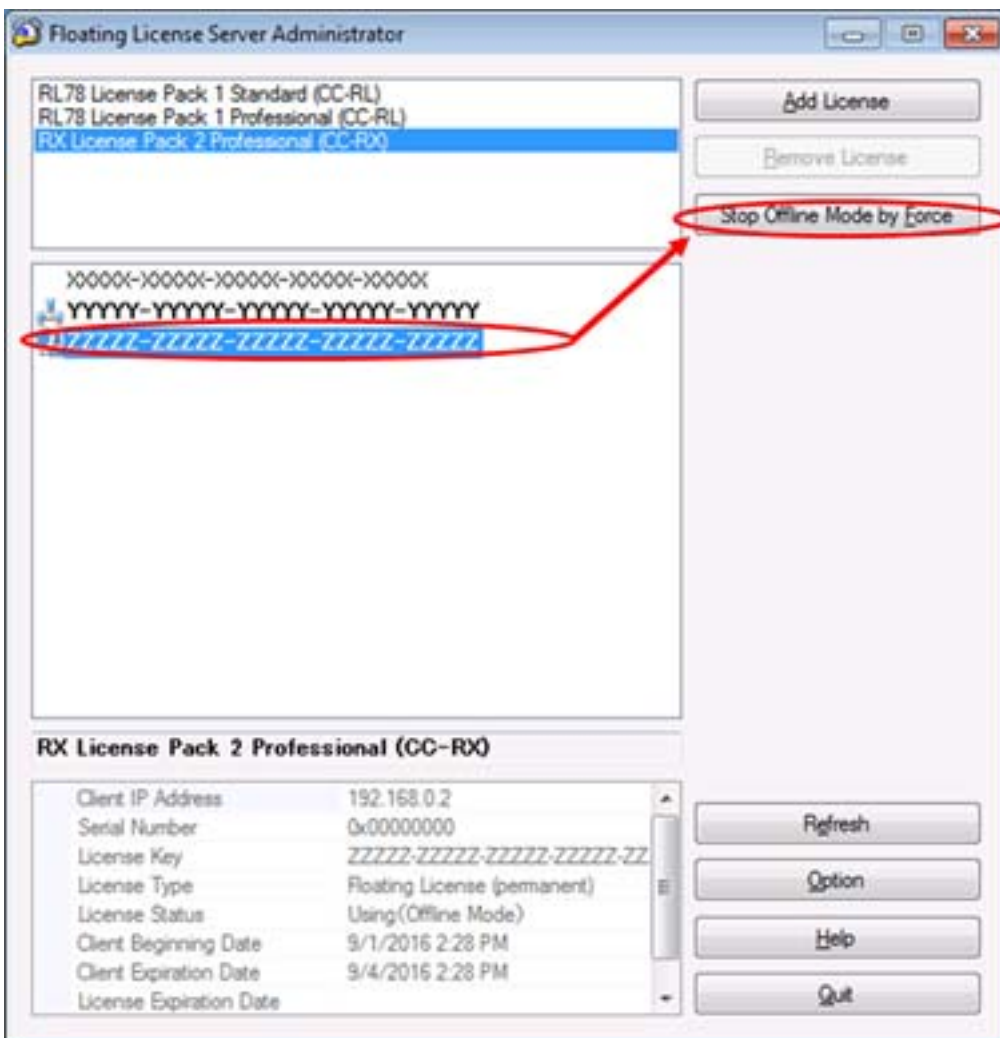Figure 2.24 Floating License Server Administrator Window Before Forcibly Leaving a License



The selected license key will be unused.

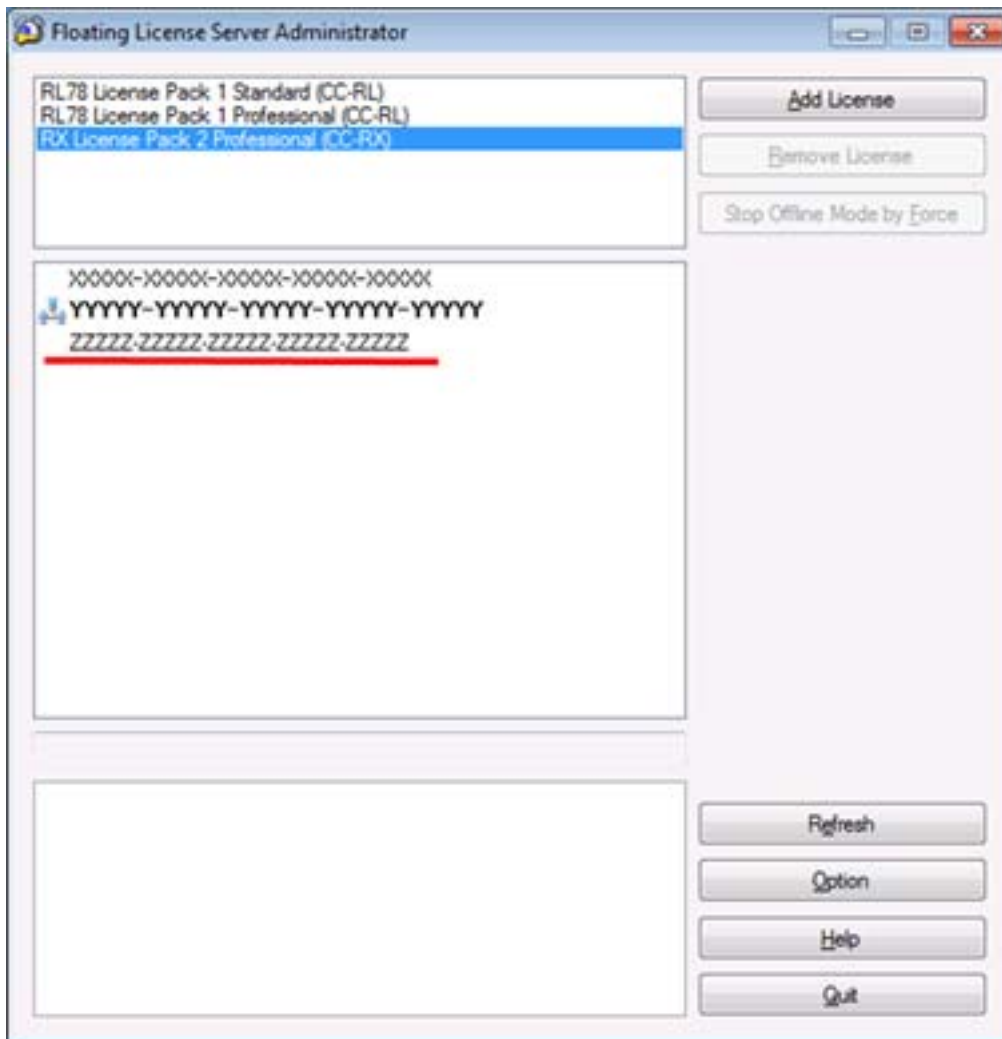Figure 2.25 Floating License Server Administrator windows After Forcibly Reaving a License




**Caution** This function should be used when a client cannot release a license because there was trouble in the client's PC. Normally, a license should be released from the client.

### 2.3.8 Saving the states of floating license usage

Log files which have been saved are read and transitions in the states of usage of floating licenses are extracted and output to the CSV files. Using a spreadsheet program such as Microsoft Excel to display the contents of the CSV files as graphs enables checking of transitions in the states of usage under each of the licenses.

Enter the dates and times to start and end logging in [Start date] and [End date] and click on the [Save] button in the Floating License Server Option dialog box.

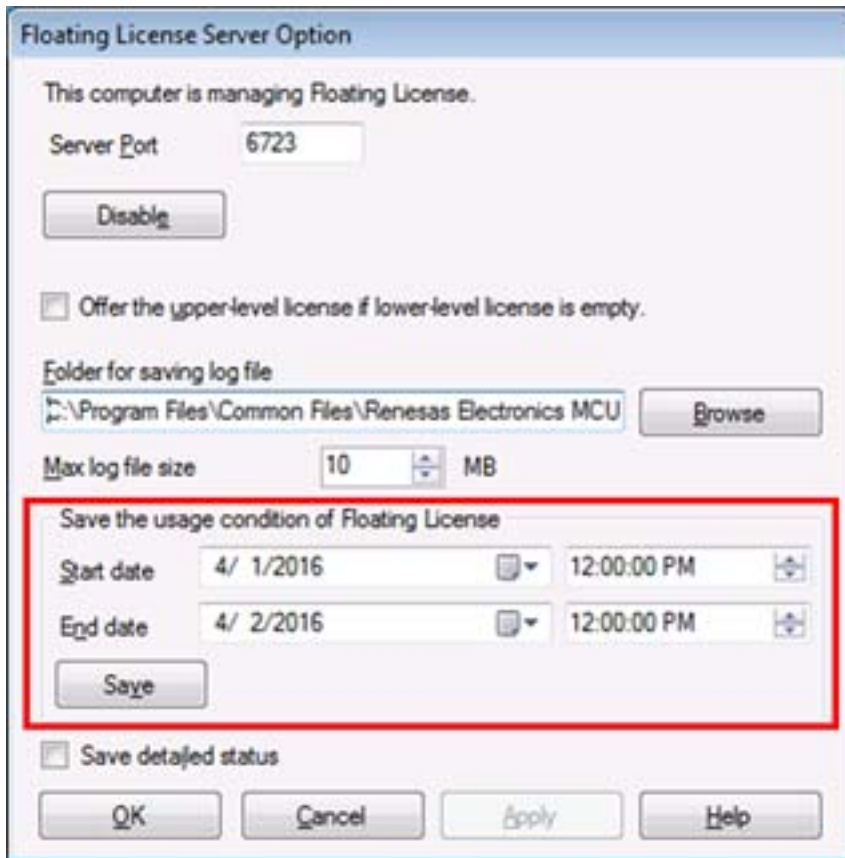
Figure 2.26 Floating License Server Option Dialog Box



Specify the name of the CSV file and the directory for saving the file in the Save As dialog box and click on the [Save] button. Transitions in the number of licenses in use are then saved in the CSV file over the specified period.



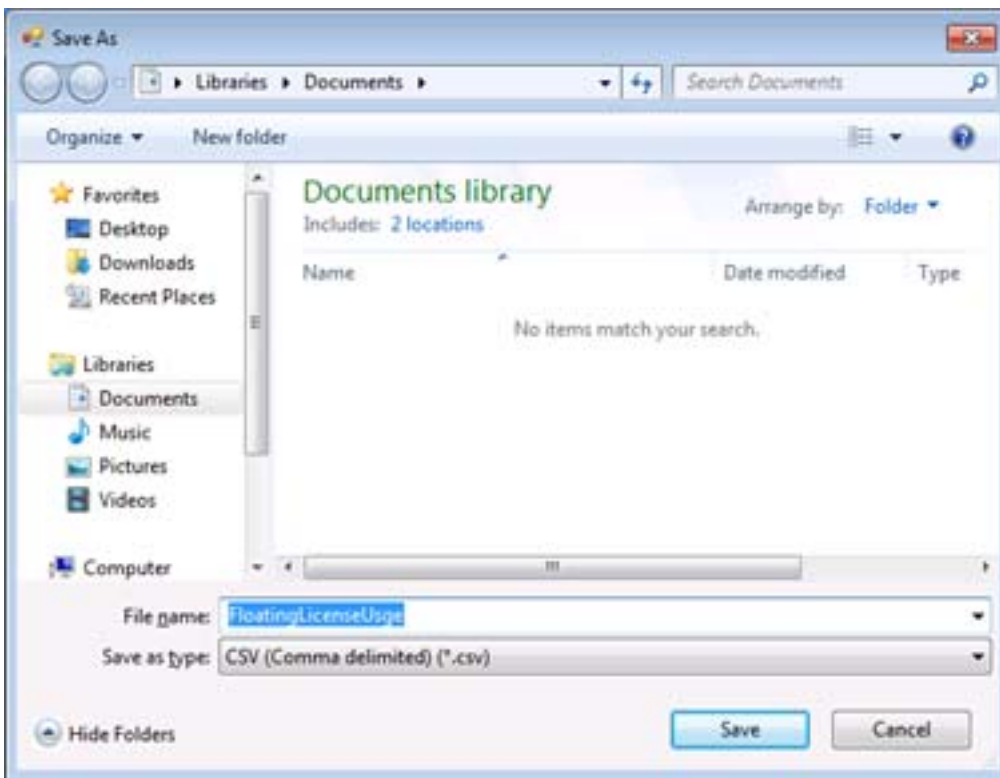Figure 2.27 Save As Dialog Box



The format of the CSV file is as follows.

```

, name of license 1, name of license 2, ...
date and time specified in [Start date],the number of machines holding licenses under license 1 at the start of logging,
the number of machines holding licenses under license 2 at the start of logging, ...
...
date and time when the number of licenses held changed, the number of machines holding licenses under license 1
before the change, the number of machines holding licenses under license 2 before the change, ...
date and time when the number of licenses held changed, the number of machines holding licenses under license 1
after the change, the number of machines holding licenses under license 2 after the change, ...
...
date and time specified in [End date],the number of machines holding licenses under license 1 at the end of logging,
the number of machines holding licenses under license 2 at the end of logging,...
    
```

Two lines indicating date and time are output when the number of instances of usage of a license changes; the first line indicates the numbers of licenses in use before the change, and the second line indicates the numbers after the change.

Example of output

,RX License Pack 2 Professional,RL78 License Pack 1 Standard	2016/9/12 11:33:09,4,1
2016/9/12 10:50:00,0,0	2016/9/12 11:33:09,5,1
2016/9/12 10:55:11,0,0	2016/9/12 11:41:24,5,1
2016/9/12 10:55:11,1,0	2016/9/12 11:41:24,4,1
2016/9/12 10:57:23,1,0	2016/9/12 11:41:51,4,1
2016/9/12 10:57:23,2,0	2016/9/12 11:41:51,3,1
2016/9/12 11:00:34,2,0	2016/9/12 11:44:02,3,1
2016/9/12 11:00:34,2,1	2016/9/12 11:44:02,4,1
2016/9/12 11:01:13,2,1	2016/9/12 11:52:29,4,1
2016/9/12 11:01:13,3,1	2016/9/12 11:52:29,5,1
2016/9/12 11:11:23,3,1	2016/9/12 11:55:53,5,1
2016/9/12 11:11:23,4,1	2016/9/12 11:55:53,4,1
2016/9/12 11:11:50,4,1	2016/9/12 12:01:00,4,1
2016/9/12 11:11:50,5,1	2016/9/12 12:01:00,3,1
2016/9/12 11:25:12,5,1	2016/9/12 12:03:09,3,1
2016/9/12 11:25:12,4,1	2016/9/12 12:03:09,2,1
2016/9/12 11:25:53,4,1	2016/9/12 12:14:02,2,1
2016/9/12 11:25:53,5,1	2016/9/12 12:14:02,1,1
2016/9/12 11:27:25,5,1	2016/9/12 12:22:29,1,1
2016/9/12 11:27:25,4,1	2016/9/12 12:22:29,0,1
2016/9/12 11:31:00,4,1	2016/9/12 12:30:00,0,1
2016/9/12 11:31:00,5,1	
2016/9/12 11:31:13,5,1	
2016/9/12 11:31:13,4,1	

By using a spreadsheet program to convert this CSV file into a scatter diagram, a graph of usage can be created as shown below.


Figure 2.28 Scatter with Straight Lines Created by Microsoft Excel



### 2.3.9 Change options

Below is the description of other options of the floating license server.  
In the Floating License Server Administrator window, click the [Option] button.  
The Floating License Server Option dialog box will open.

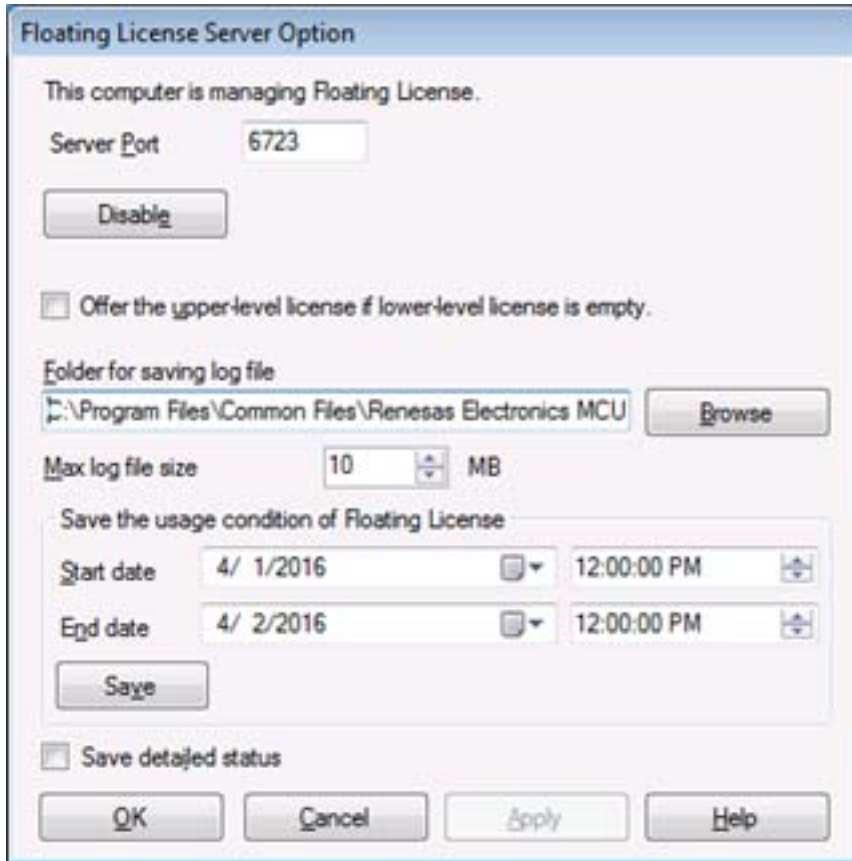Figure 2.29 Floating License Option Dialog Box



In this dialog box, the following options can be changed.

- [Offer the upper-level license if lower-level license is empty.] checkbox  
Specifies that the server allows the client to use an upper-level license (ex. Professional) when the client requests a lower-level license (ex. Standard) and the server has no available lower-level license, but has an available upper-level license.  
If this is checked, the server responds to the client to request an upper-level license.  
If this is unchecked, the server responds to the client by an error.
- [Folder for saving log file] text box  
Specifies the path for the folder in which the log files are to be saved. If the [Browse] button is clicked, the folder can be specified in the Browse for folder dialog box.  
Logs are recorded with the numerical part of the file name changed for every 3 Mbytes with a file name of "FloatingLicense.xxx.log" (xxx is a 3-digit numerical value).
- [Max log file size] spin box  
Specifies the maximum size of log files. When recording a log immediately after the maximum size has been reached, the oldest log file is deleted to keep the file size within the size of this setting.
- [Save detailed status] checkbox  
If this is checked, the internal operations of programs are also recorded. If this is unchecked, only acquiring and releasing of licenses and their results are recorded.

## 2.4 Resetting When the Server Is Changed

When the server is to be changed due to a failure or replacement, follow the procedure shown in this document again to start up the server and register license keys.

All of the licenses acquired in the old server become invalid the moment the client connects to the new server.

## 3. MESSAGE

This chapter describes internal error messages, fatal error messages, abort error messages, information messages, choice messages and warning messages that Floating License outputs.

The message is output to the Message dialog box or log file, etc...

### 3.1 Message Types

The message types (1 alphabetic character) when Floating License is operated are as follows.

Table 3.1 Message Type

Message Type		Description
C	Internal error	Processing terminated (suspended) due to internal error.
E	Fatal error	Processing terminated (suspended) due to fatal error.
M	Information	Informational message. Check the message and continue the process.
Q	Choice	This type of message is displayed when a choice is necessary in order to carry on with the next operation. It performs the selected action.
W	Warning	Warning message. Check the message and continue the process.

### 3.2 Internal Errors

Table 3.2 Internal Errors

C0171000	[Message]	An internal error occurred. Failed to get a license. XXX
C0171001	[Message]	An internal error occurred. Failed to send license request. XXX
C0171002	[Message]	An internal error occurred. Failed to send license request.
C0171003	[Message]	An internal error occurred. Failed to respond to a license request. XXX
C0190000	[Message]	Specified device is invalid.
C0190001	[Message]	XXX is empty.
C0190002	[Message]	XXX is too large.
C0190003	[Message]	XXX is too small.

### 3.3 Fatal Errors

Table 3.3 Fatal Errors

E0172000	[Message]	Getting a license is timed out.
E0172001	[Message]	Command-line option is invalid.
E0172002	[Message]	Failed to load license file.
E0172003	[Message]	Failed to load option file. XXX
E0172004	[Message]	Failed to load option file. XXX
E0172005	[Message]	Failed to save option file. XXX
E0172006	[Message]	Failed to save option file. XXX
E0172007	[Message]	Failed to load license information. XXX
E0172008	[Message]	Server address or port settings is invalid. XXX
E0172009	[Message]	Failed to save license information. XXX
E0172010	[Message]	Server address or port settings is invalid. XXX
	[Action by User]	Check [Server Address] and [Port] in the option dialog box.

E0172011	[Message]	Failed to receive response from license server. XXX
	[Action by User]	Check [Server Address] and [Port] in the option dialog box.
E0172012	[Message]	Failed to save CSV file. XXX
E0172013	[Message]	No log file in log folder.
E0172020	[Message]	Response from license server is invalid.
	[Action by User]	Check [Server Address] and [Port] in the option dialog box.
E0172021	[Message]	Response from license server is invalid.
	[Action by User]	Check [Server Address] and [Port] in the option dialog box.
E0172022	[Message]	No available license in license server.
E0172023	[Message]	No available license in license server. But upper level license is available.
E0172024	[Message]	License server respond invalid server.
	[Action by User]	Disable the floating license in the option dialog box and enable it again.
E0172025	[Message]	License server respond invalid client.
	[Action by User]	Disable the floating license in the option dialog box and enable it again.
E0172026	[Message]	Clock gap between server and client is too large.
	[Action by User]	Check the client PC's clock. If the clock is correct, ask the floating license server administrator to check the server PC's clock.
E0172027	[Message]	License server respond unknown license.
	[Action by User]	The licence server version may be old. Ask the floating license server administrator to check the version of the floating license.
E0172028	[Message]	License is out of date.
E0172040	[Message]	Failed to connect license server. License server respond XXX.
	[Action by User]	Check [Server Address] and [Port] in the option dialog box.
E0172041	[Message]	A connection with the server has timed out.
	[Action by User]	<ul style="list-style-type: none"> <li>- Check [Server Address] and [Port] in the option dialog box. Ask the floating license server administrator to check that the service is running.</li> <li>- A request may be blocked by the server PC's firewall. Ask the floating license server administrator to check that the client request is allowed.</li> <li>- A request may be blocked by the client PC's personal firewall or other security software. Allow to conduct http and https communication.</li> </ul>

E0172042	[Message]	A connection with the server could not be established. Cannot find server or DNS error.
	[Action by User]	Check [Server Address] in the option dialog box. If this does not resolve the problem, please specify [Server Address] by the IP address.
E0172043	[Message]	Failed to connect license server.
	[Action by User]	Check [Server Address] and [Port] in the option dialog box. If this does not resolve the problem, ask the floating license server administrator to check that the service is running.
E0172044	[Message]	A connection with the server was denied.
	[Action by User]	Check [Server Address] and [Port] in the option dialog box.
E0172045	[Message]	The server returned an error (XXX).
	[Action by User]	Check [Server Address] and [Port] in the option dialog box.
E0172046	[Message]	A connection with the proxy server could not be established. Cannot find server or DNS error.
	[Action by User]	Check [Internet Option] in the control panel to bypass a proxy server. Ask your network administrator about proxy settings.
E0172047	[Message]	A connection with the proxy server could not be established.
	[Action by User]	Check [Internet Option] in the control panel to bypass a proxy server. Ask your network administrator about proxy settings.
E0174010	[Message]	Failed to load option file. XXX
E0174011	[Message]	Failed to save option file. XXX
E0174012	[Message]	Failed to load license information. XXX
E0174013	[Message]	Failed to save license information. XXX
E0174014	[Message]	Failed to start license service. XXX
E0174015	[Message]	Failed to receive request from client. XXX
E0174016	[Message]	Client request is invalid.
E0174017	[Message]	No available license.
E0174018	[Message]	No available license. But upper level license is available.
E0174019	[Message]	A request is send to invalid server.
E0174020	[Message]	A request is send from unknown client.
E0174021	[Message]	Clock gap between server and client is too large.
E0174022	[Message]	A request is required unknown license.
E0174023	[Message]	License is out of date.



E0174100	[Message]	This license key is invalid. XXX
E0174101	[Message]	This license key is already registered. XXX
E0174102	[Message]	Can not delete the license in use. XXX
E0180000	[Message]	This license key is invalid.
E0180001	[Message]	XXX This license key is already registered.
E0182000	[Message]	Could not write the license information to XXX.
E0190000	[Message]	Failed to start License Manager.
E0190001	[Message]	Failed to start License Manager. Can not find the folder to store the license information.

### 3.4 Information

Table 3.4 Information

M0190000	[Message]	Failed to read license information. The file is broken. Please re-enter license keys.
M0191000	[Message]	Critical Error : XXX
M0191100	[Message]	Critical Error : XXX
M0191200	[Message]	Error : XXX
M0191300	[Message]	Error : XXX
M0191400	[Message]	Warning : XXX
M0191500	[Message]	Warning : XXX
M0191600	[Message]	Required license : XXX
M0191601	[Message]	Local license found.
M0191602	[Message]	Needs renewal.
M0191603	[Message]	Expired.
M0191604	[Message]	Invalid.
M0191605	[Message]	Released.
M0191606	[Message]	Upper level licesne : XXX
M0191607	[Message]	Get new licesne : XXX
M0191608	[Message]	Supported : XXX licenses
M0191700	[Message]	Request : XXX
M0191701	[Message]	Add client : XXX
M0191702	[Message]	Delete client : XXX
M0191703	[Message]	Client unknown.
M0191704	[Message]	Server id is invalid.
M0191705	[Message]	Target license is empty.
M0191706	[Message]	Upper level license is available
M0191707	[Message]	Assigned license (XXX/XXX) : XXX
M0191708	[Message]	Expired license : (XXX/XXX) : XXX
M0191709	[Message]	Released license : (XXX/XXX) : XXX
M0191800	[Message]	Command : XXX
M0191801	[Message]	Getting license : XXX
M0191802	[Message]	Connecting : XXX
M0191803	[Message]	Getting upper level license : XXX
M0191804	[Message]	Getting supported licenses : XXX
M0191805	[Message]	Getting license as offline mode : XXX
M0191806	[Message]	Releasing license : XXX
M0191900	[Message]	Starting service.

---

M0191901	[Message]	Starting HTTP listener.
M0191902	[Message]	Received HTTP request.
M0191903	[Message]	Received next request.
M0191904	[Message]	Getting license list.
M0191950	[Message]	Stop service.
M0191951	[Message]	Stop HTTP listener.
M0191952	[Message]	Bad HTTP request.
M0191953	[Message]	Unknown request.
M0191954	[Message]	Unkown client.
M0191955	[Message]	Invalid server ID.
M0191956	[Message]	Invalid : XXX
M0191957	[Message]	Released : XXX

### 3.5 Choices

Table 3.5 Choices

Q0174110	[Message]	This function should be used when a client cannot release a license because there was trouble in the client's PC. Normally, a license should be released from the client. Do you still want to continue?
----------	-----------	--

### 3.6 Warning

Table 3.6 Warning

W0190002	[Message]	Failed to read license information from XXX. The file is broken.
----------	-----------	--

## Revision Record

Rev.	Date	Description	
		Page	Summary
1.00	Dec 01, 2016	-	First Edition issued

---

Floating License Server V2.00.00 User's Manual

Publication Date: Rev.1.00 Dec 01, 2016  
Published by: Renesas Electronics Corporation

---



## SALES OFFICES

## Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

### **Renesas Electronics America Inc.**

2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.  
Tel: +1-408-588-6000, Fax: +1-408-588-6130

### **Renesas Electronics Canada Limited**

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

### **Renesas Electronics Europe Limited**

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.  
Tel: +44-1628-585-100, Fax: +44-1628-585-900

### **Renesas Electronics Europe GmbH**

Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

### **Renesas Electronics (China) Co., Ltd.**

Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

### **Renesas Electronics (Shanghai) Co., Ltd.**

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

### **Renesas Electronics Hong Kong Limited**

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852 2886-9022

### **Renesas Electronics Taiwan Co., Ltd.**

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

### **Renesas Electronics Singapore Pte. Ltd.**

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

### **Renesas Electronics Malaysia Sdn.Bhd.**

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

### **Renesas Electronics India Pvt. Ltd.**

No.77C, 100 Feet Road, HALII Stage, Indiranagar, Bangalore, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

### **Renesas Electronics Korea Co., Ltd.**

12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5141



# Floating License Server V2.00.00