

# Firmware Updates for Renesas MCU

Introduction for “FW UP Module”

~ RX Family, RL78 Family ~

2025 JUL

EMBEDDED PROCESSOR & CONTROLLER SOLUTION  
MARKETING DEPT  
EMBEDDED PROCESSING MARKETING DIVISION  
EMBEDDED PROCESSING PRODUCT GROUP  
(EP/EPMD/EPMSM)

RENESAS ELECTRONICS CORPORATION

Rev2.00

# CONTENTS

---

	Page #
◆ Introduction (Market Needs)	3 - 4
◆ Renesas MCUs Firmware Update Solution Introduction as “FW UP Module”	5 - 17
- Features of Renesas FW UP Module	6
- Sample system configuration using the FW UP Module	7
- System structure for Secondary Device Updates using the FW UP Module	8
- What is Boot loader and its role	9
- Selectable Update Method according to your MCU Flash ROM product	10 - 17
1. Dual Mode : Dual Bank Method (Normal operation/ Operation with error occurs)	11 - 12
2. Linear Mode : Partial Update Method (Normal operation/ Operation with error occurs)	13 - 14
3. Linear Mode : Full Update Method (Normal operation/ Operation with error occurs)	15 - 16
- Generate Signed Initial FW and Updated FW Image using with Renesas Image Generator	17
◆ Appendix: Firmware Update Solutions	18 – 21
- For optimal Firmware Updates on IoT products by Renesas MCU Family	20
- Firmware Update Solutions List in IoT Products	21
- QE for OTA: Development Assistance Tool for Firmware Update	22 - 23

# Market Needs

Firmware Update feature be necessary for a rapidly growing various IoT applications

## IoT x Segments



Common Technology  
for various application  
(IA, FA, HA, BA, HC, Power  
Equipment, Social Infra...etc.)

## Continuous Service



Maintain latest firmware  
by OTA (Over-the-Air)  
via Cloud

## Vulnerability Threats




Security Integration and  
Legislation such as CRA,  
U.S. Cyber Trust Mark,  
Other IoT Guideline



# Applications that require Firmware Updates

As shown the previous page, MCU (  ) Firmware Update function must be implemented in all system blocks of IoT products.

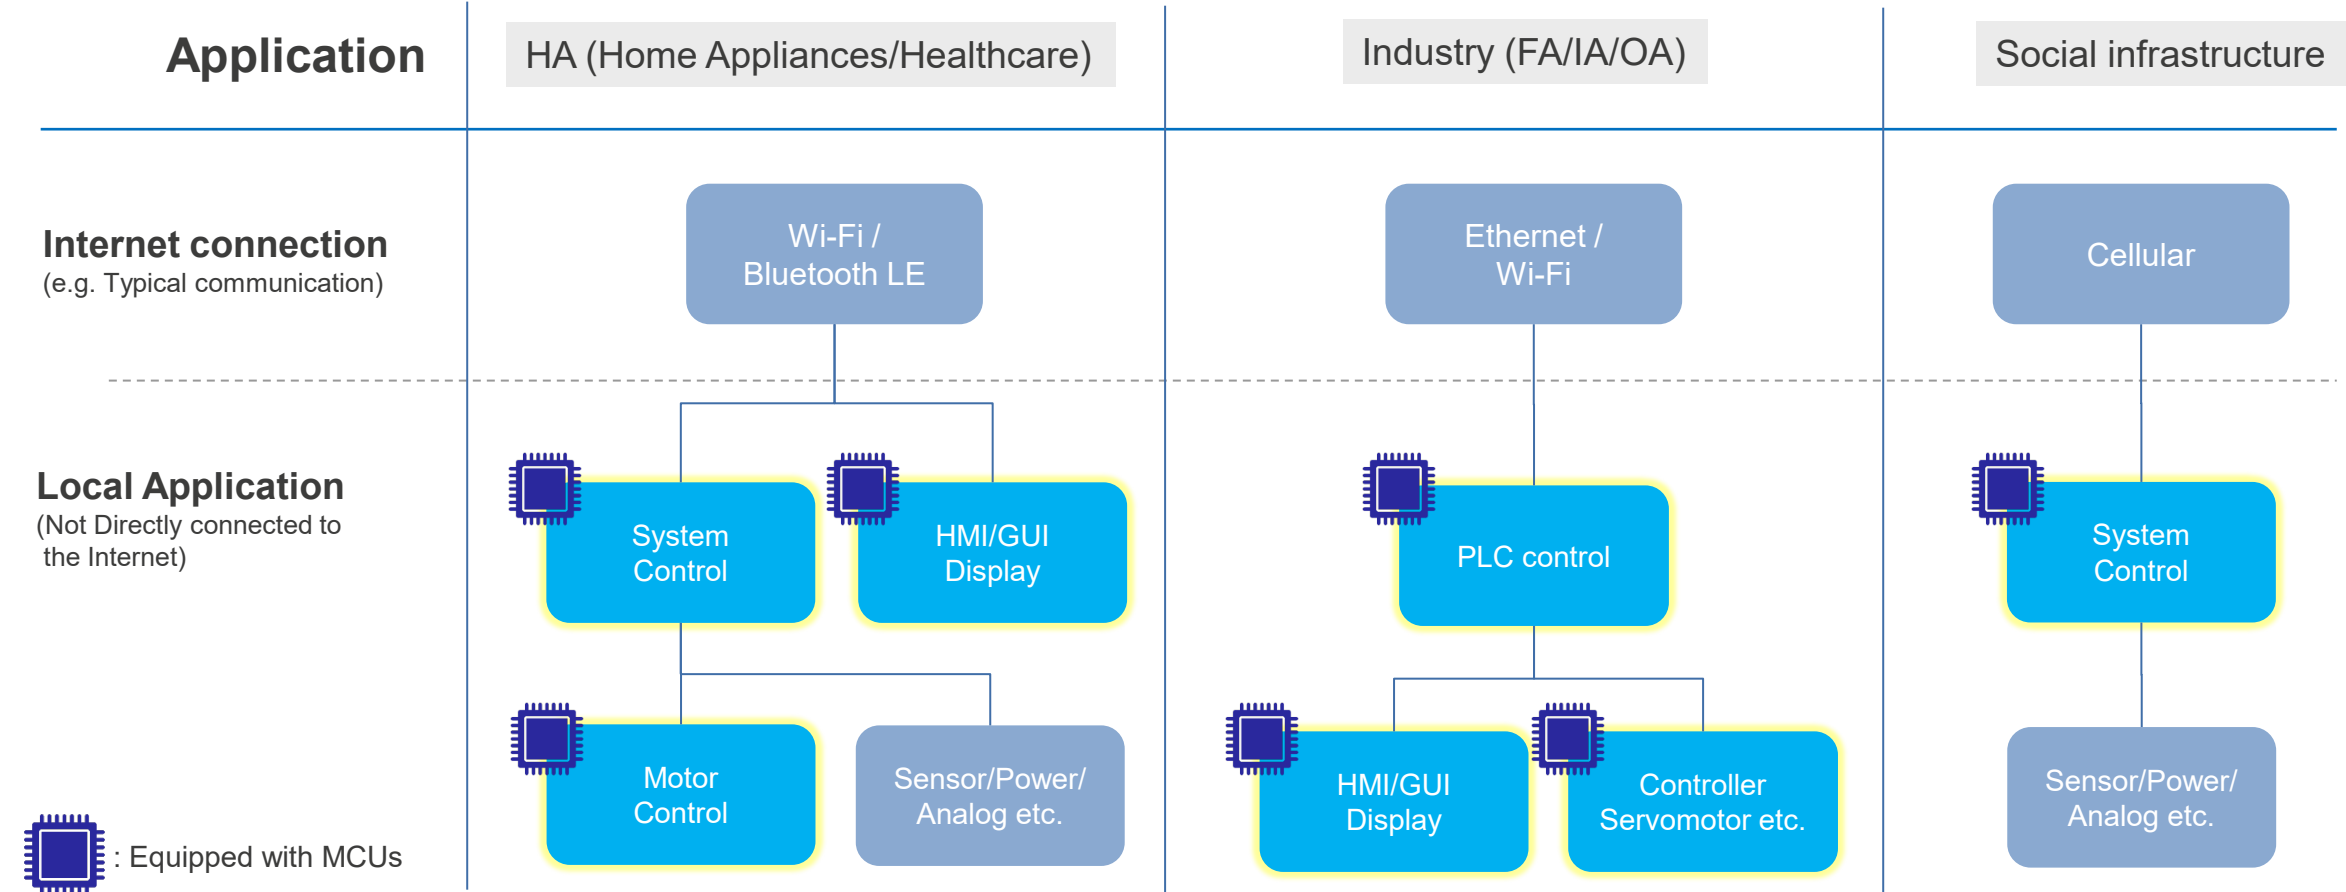

The background of the slide features a city skyline at sunset or sunrise, with a blue and orange color palette. Overlaid on the city is a complex network of glowing blue lines and dots, representing a global or digital network.


# Renesas MCUs

## Firmware Update Solution Introduction as “FW UP Module”

# Features of Renesas “FW UP Module”

 [Firmware Update module](#) 


Your firmware update function can be easily incorporated using the FW UP Module!

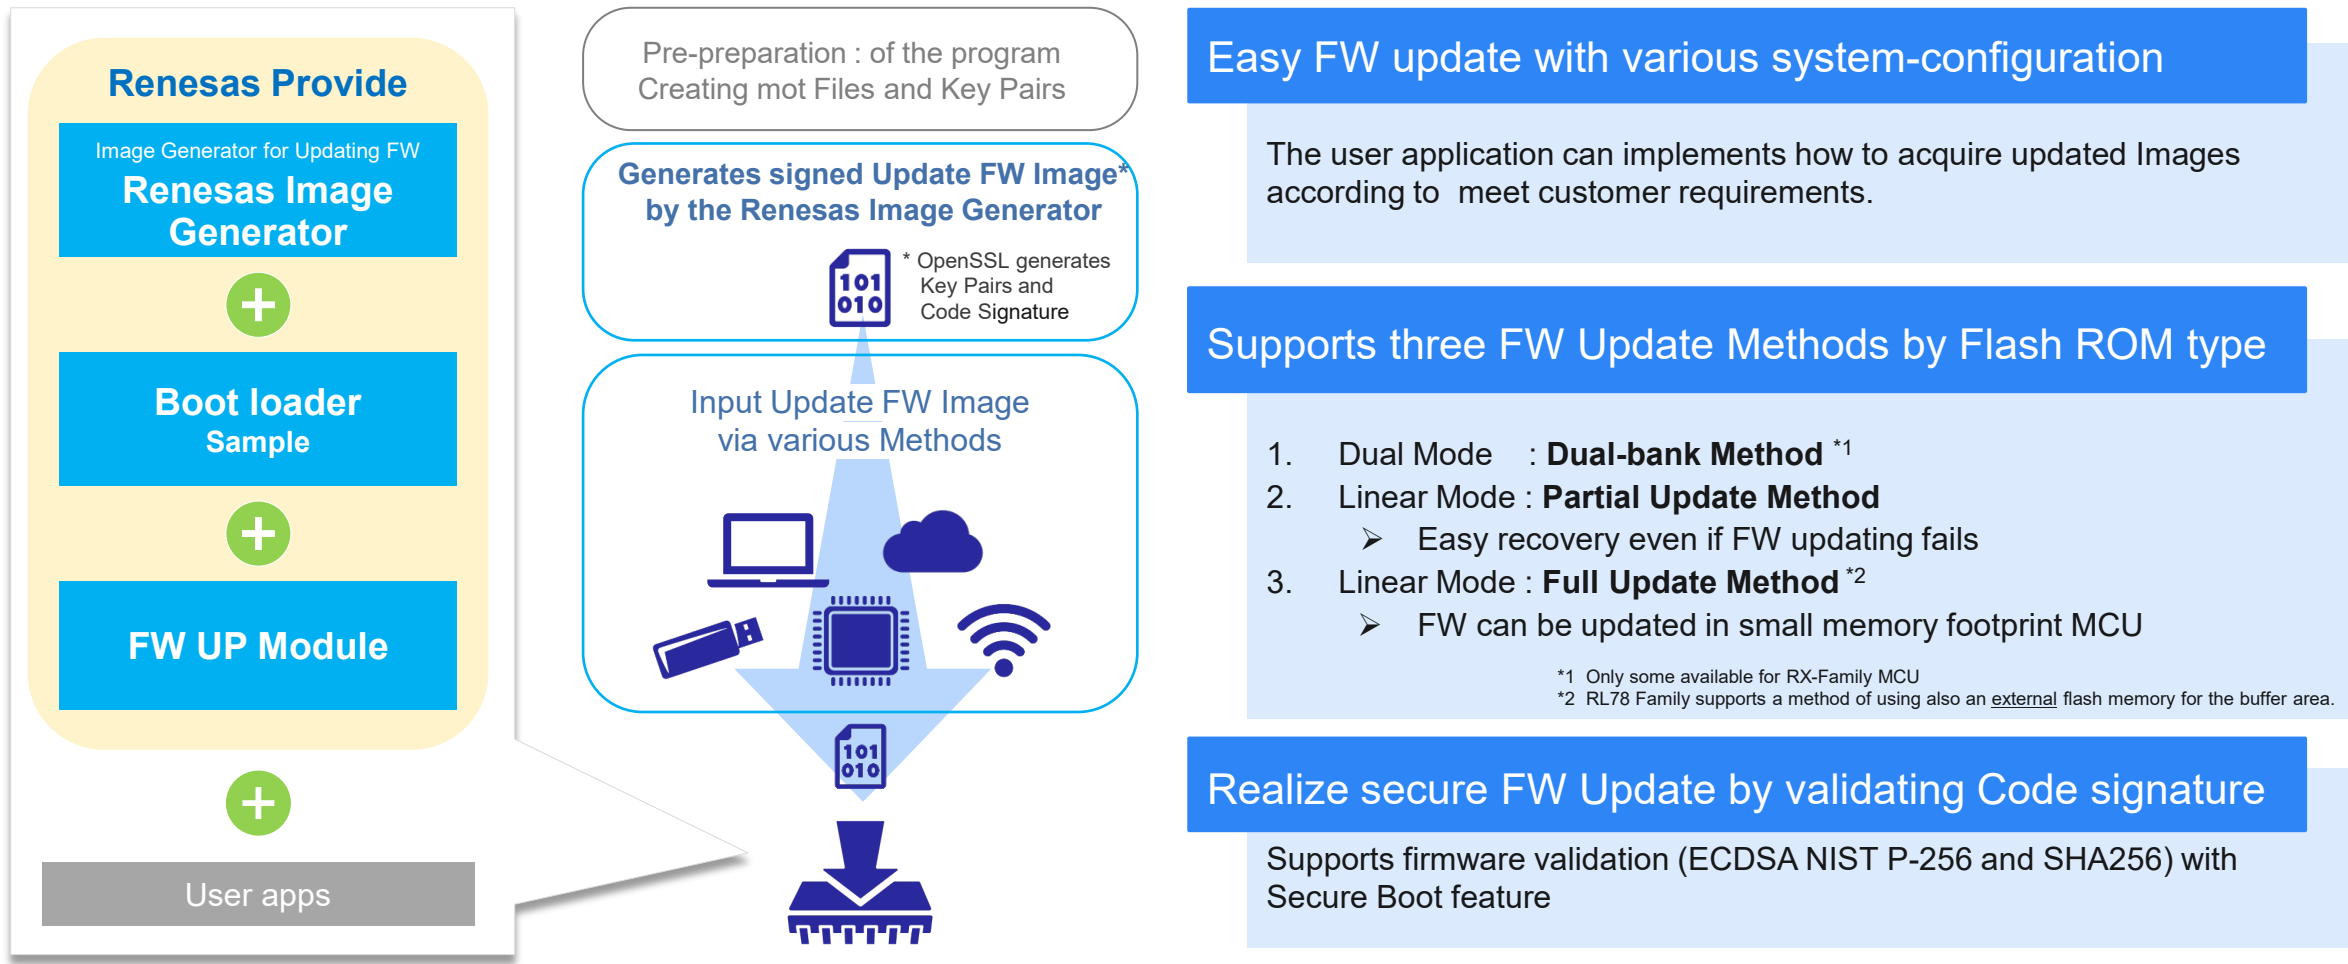

# Sample system configuration using the FW UP Module

The FW UP Module is ideal for FW update over various Primary Devices

Get an Update FW via serial communication

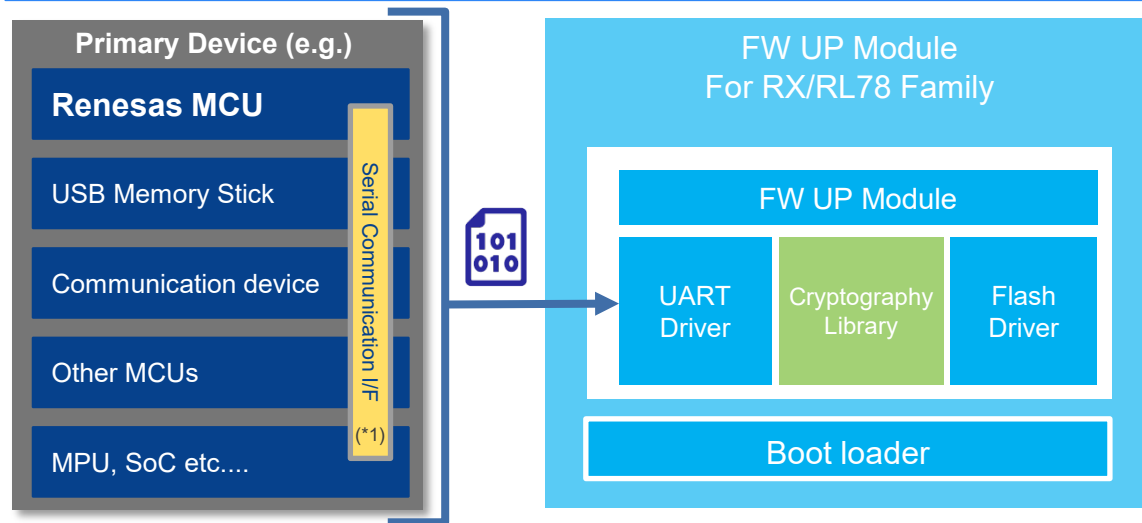

\*1 : Firmware Updating Communications Module : ([RX](#), [RL78](#))

Application Notes



FW UP Module APN ([Link](#)) for RX Family



FW UP Module APN ([Link](#)) for RL78 Family

Compatible with various use cases

Stand-alone

(Products that run on a single device)




Air conditioners, etc.  
such as Paired systems

Outdoor unit

Indoor unit

Industrial system


( System consisting of control devices and connected various secondary devices )

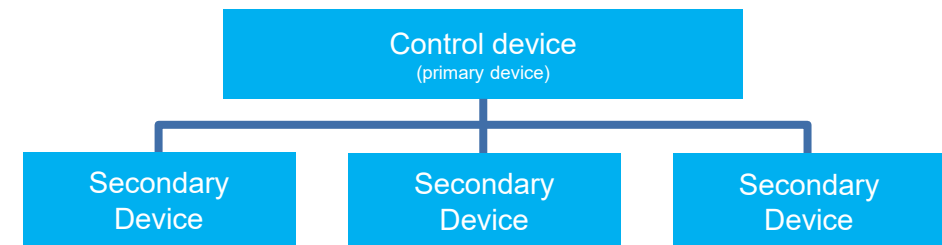

FW UP Module supports all RX Family, and RL78/G22, RL78/G23, RL78/G24 of RL78 Family.

# System Configuration for Secondary Device Update with FW UP Module

## ➤ Secondary device firmware update

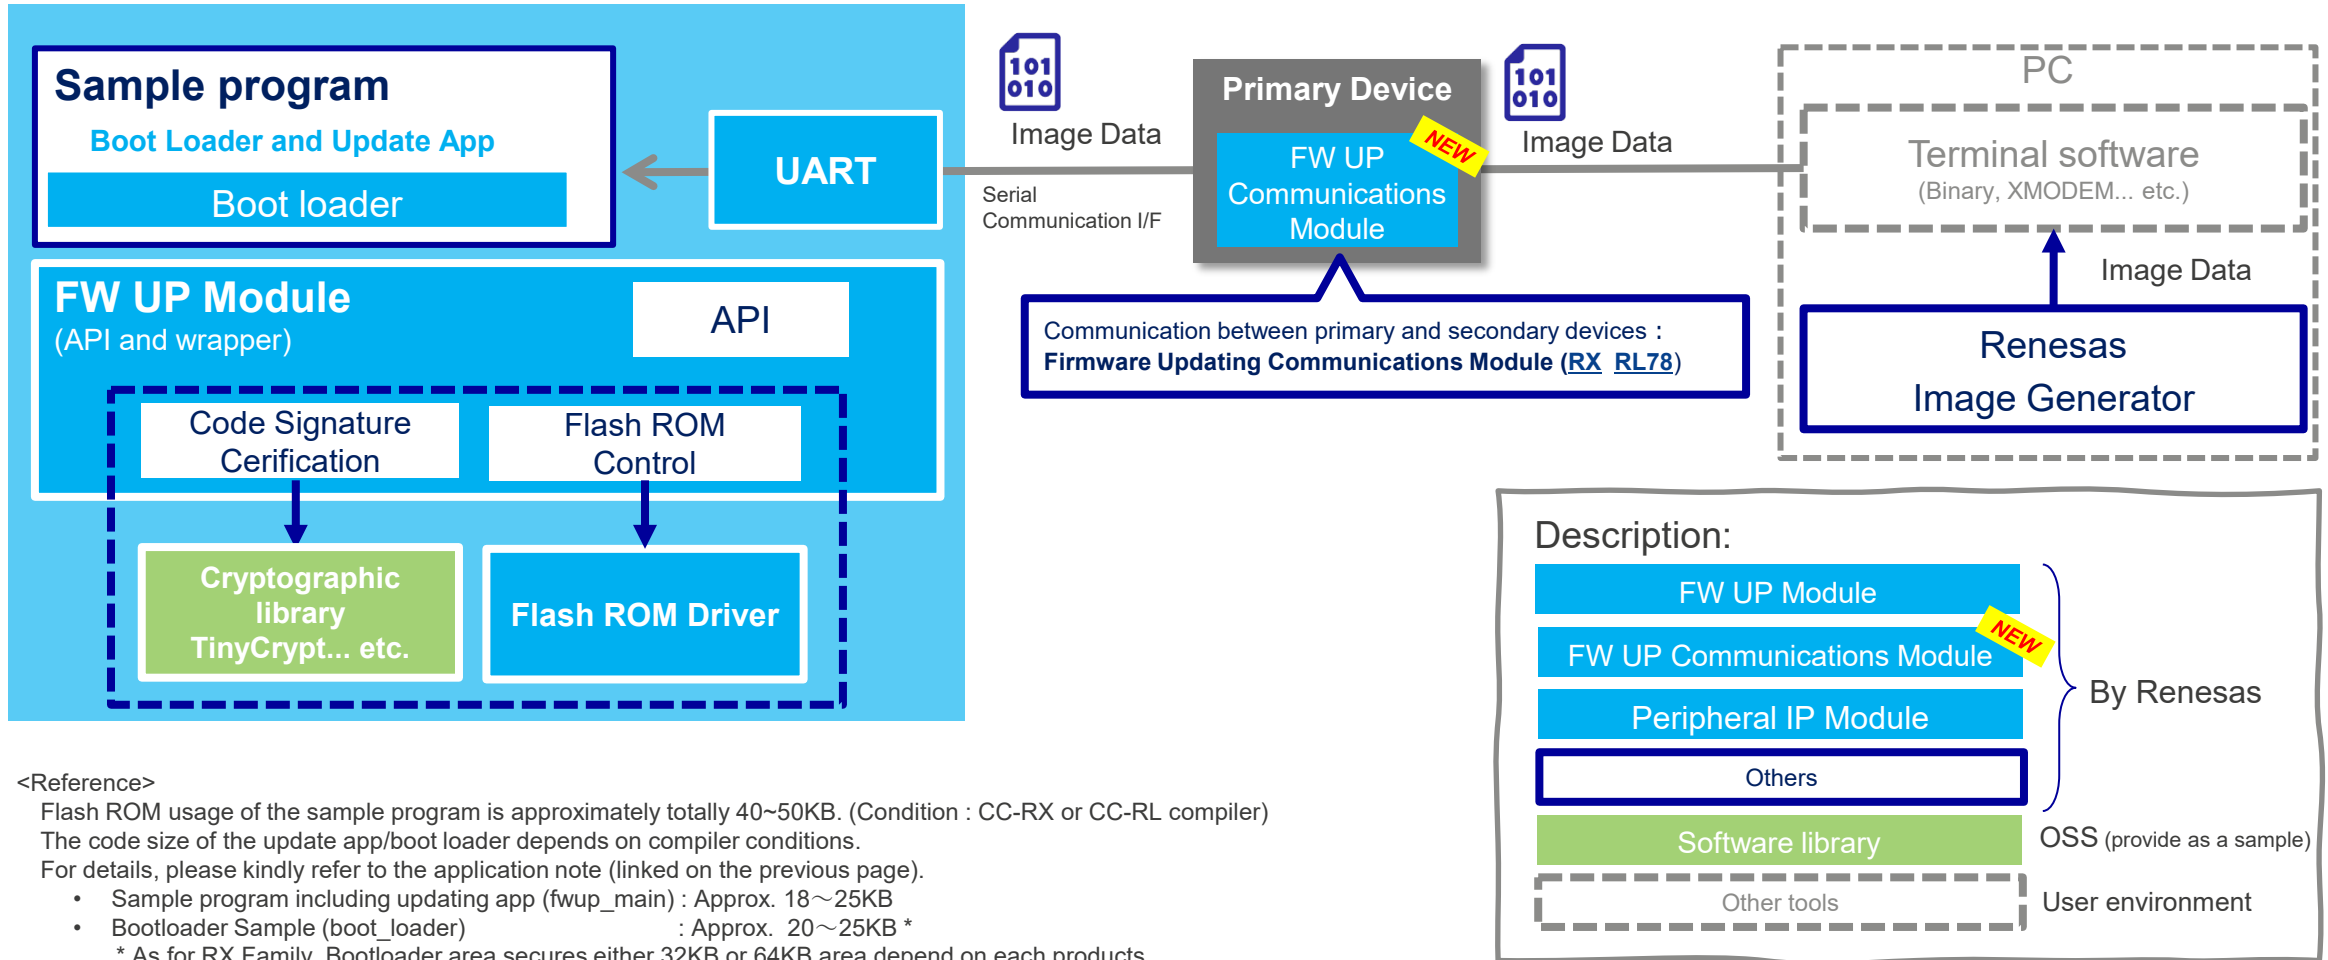

# What is Boot loader and its role

- Bootloader is a kind of software that is responsible for verifying the firmware Update FW Image and writing the firmware into Flash Memory.
- The bootloader sample for this FW UP Module uses an open source TinyCrypt.
- The roles of this bootloader for each Method are listed in the table below.

Firmware Update Method	Boot loader	
	FW Image Validation	Write to Flash ROM
1. Dual Mode (RX Family only) Dual Bank Method	✓	- *
2. Linear Mode Partial Update Method	✓	- *
3. Linear Mode Full Update Method	✓	✓

\* : This bootloader also includes a specification to write an initial firmware image to Flash ROM in MCU at a factory site.  
By writing only this bootloader in advance at the factory, the initial image is programed via UART communication into the Flash ROM.  
In case users wish to use other communication methods than UART, the communication method can be customized by the users.

# Selectable Update Method according to your MCU Flash ROM product

~ Support for development with sample programs of each Method ~




<Sample program>


RX : [#R01AN6850](#) / [Sample Zip](#)

RL78 : [#R01AN6374](#) / [Sample Zip](#)


## 1. Dual Mode: Dual-bank \* update operation

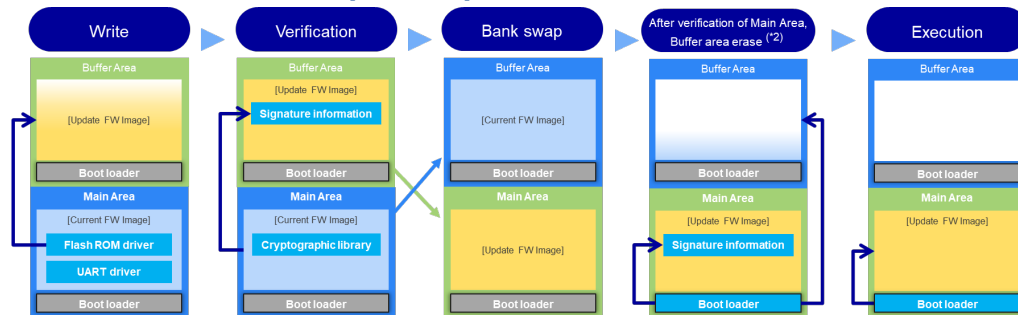

## 2. Linear Mode: Partial Update Method \*

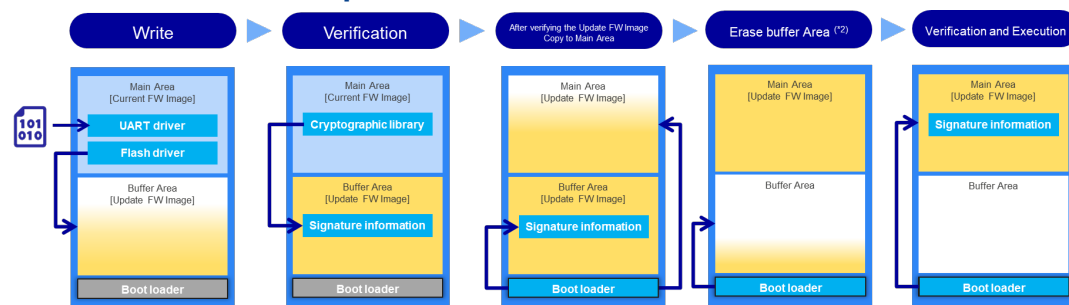

## 3. Linear Mode: Full Update Method \* update operation

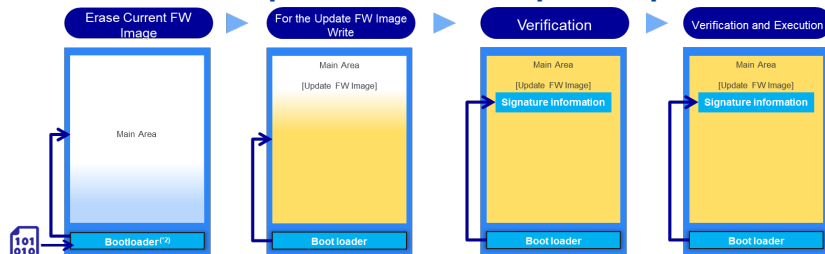

## Modes and Device Correspondence Table

Flash Product	4MB	2MB	1.5MB	1MB	768KB	512KB	384KB	256KB	128KB	96KB	64KB
RX130	-	-	-	-	-	L	L	L	L	-	-
RX140	-	-	-	-	-	-	-	L	L	-	-
RX231/230	-	-	-	-	-	L	L	L	L	-	-
RX23E-A	-	-	-	-	-	-	-	L	L	-	-
RX23E-B	-	-	-	-	-	-	-	L	L	-	-
RX24T	-	-	-	-	-	L	L	L	L	-	-
RX26T	-	-	-	-	-	DB/L	-	L	L	-	-
RX65N/651	-	DB/L	DB/L	L	L	L	-	-	-	-	-
RX66N	DB/L	L	-	-	-	-	-	-	-	-	-
RX66T	-	-	-	L	-	L	-	L	-	-	-
RX660	-	-	-	L	-	L	-	-	-	-	-
RX671	-	DB/L	DB/L	L	-	-	-	-	-	-	-
RX72M	DB/L	L	-	-	-	-	-	-	-	-	-
RX72N	DB/L	L	-	-	-	-	-	-	-	-	-
RL78/G22	-	-	-	-	-	-	-	-	-	-	L
RL78/G23	-	-	-	-	L	L	L	L	L	L	-
RL78/G24	-	-	-	-	-	-	-	-	L	-	L

DB : Products supporting Dual Mode (1. Dual Bank Method)

L : Products supporting Linear mode (2. Partial Update / 3. Full Update Method)

- : Not supported

red text: Products supporting the sample program(Sample provided in zip)

\* RL78 family currently does **not** support the dual-bank Method. Also, the updating Method name is partially different from the application note for RL78. No.2 means "Partial Update Method" and No.3 means "Full Update Method (without buffer)."


# 1. Dual Mode

## Dual Bank Method: Normal operation



For use case that doesn't want to stop user applications, Dual-bank supported MCUs are recommended !

For **Dual Bank** supported MCUs, Update FW Image can be written while the current program on the main is executing!  
Address placement management of programs is also not necessary to utilize the **Bank-Swap** function.

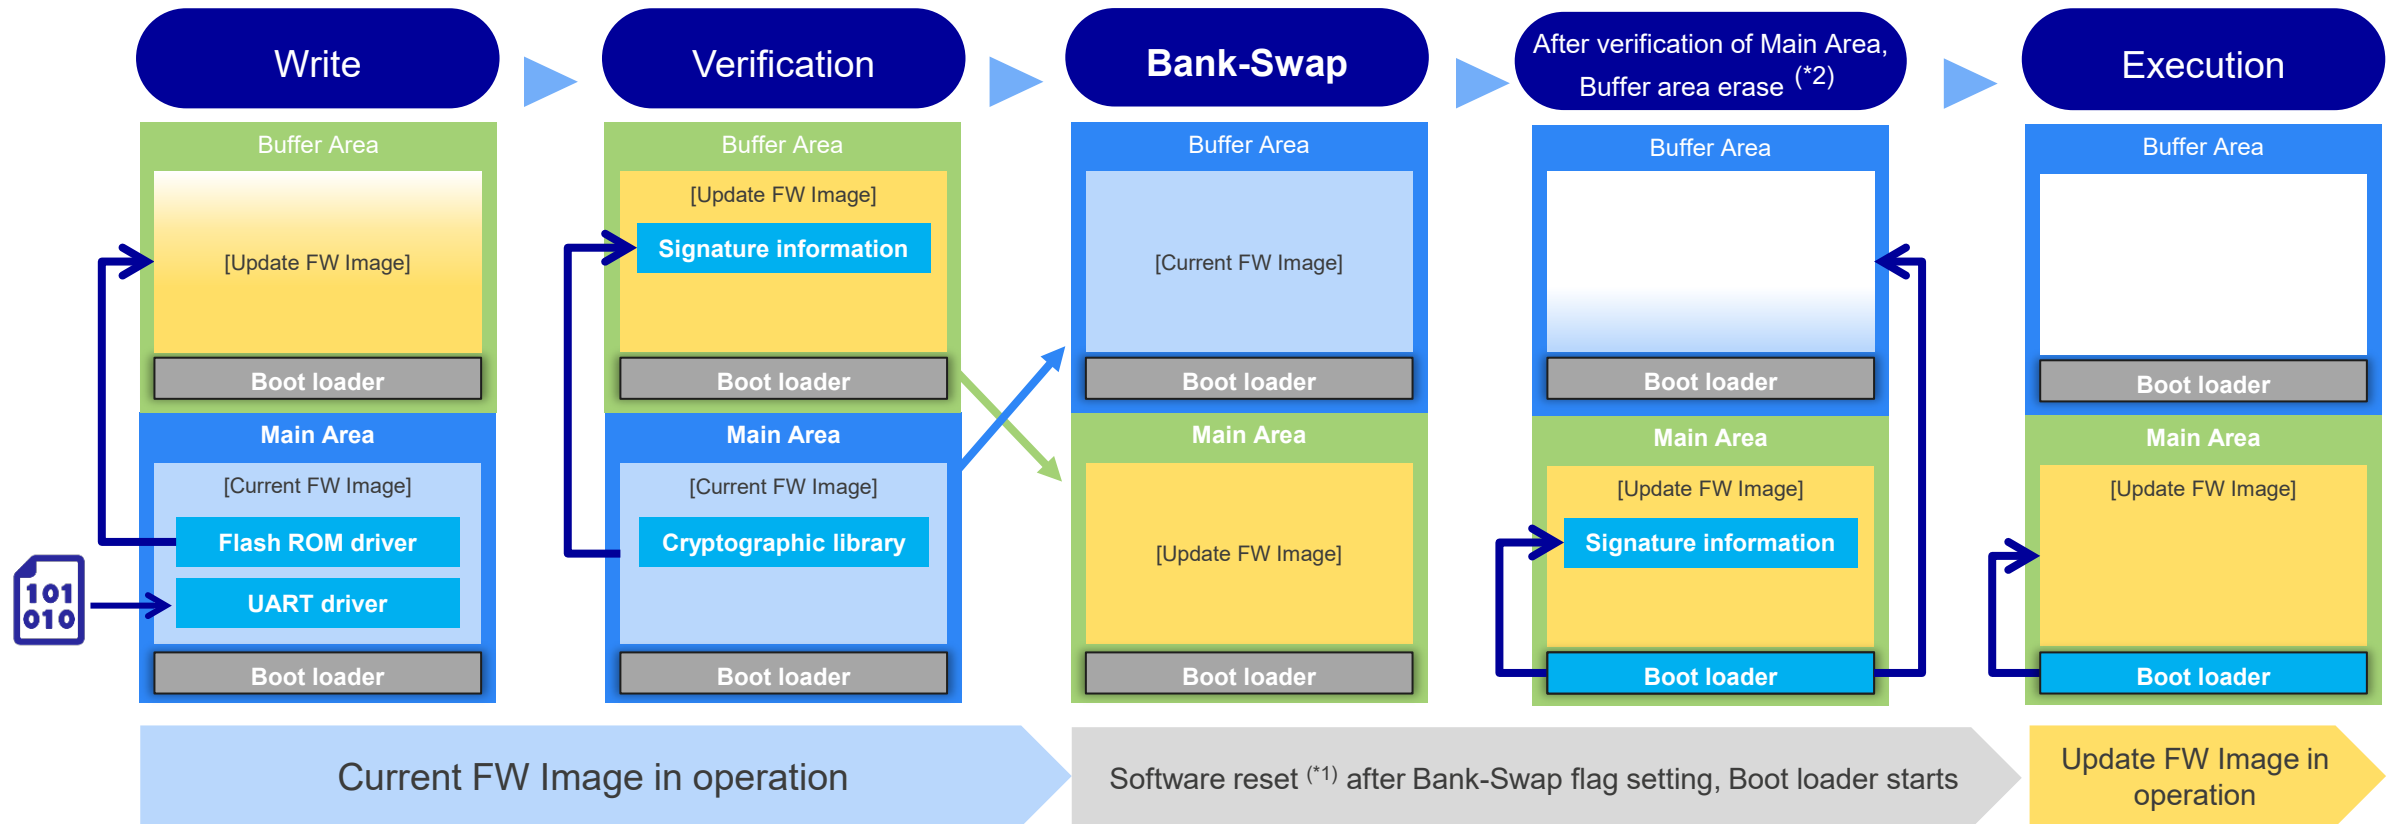

\*1 : For initialization by a software reset, please see the "Reset Chapter" in the hardware manual of each MCU.

\*2 : The demonstration program of the FW UP Module does not erase the buffer area. If it is necessary to erase the current(previous) Image before updating, users need to add the Image erase process of located the buffer side to prevent rollback.


# 1. Dual Mode

## Dual Bank Method: Operation with error occurs

If the firmware update process fails due to a power-cut/signature verification failure as abnormal process, Enables to boot the Current FW Image and redo the firmware update, again.

Buffer area	Disabled	Disabled	Enable	Enable
Main Area	Enable	Enable	Enable	Enable


Green text: Startable state / Black text: Unbootable state

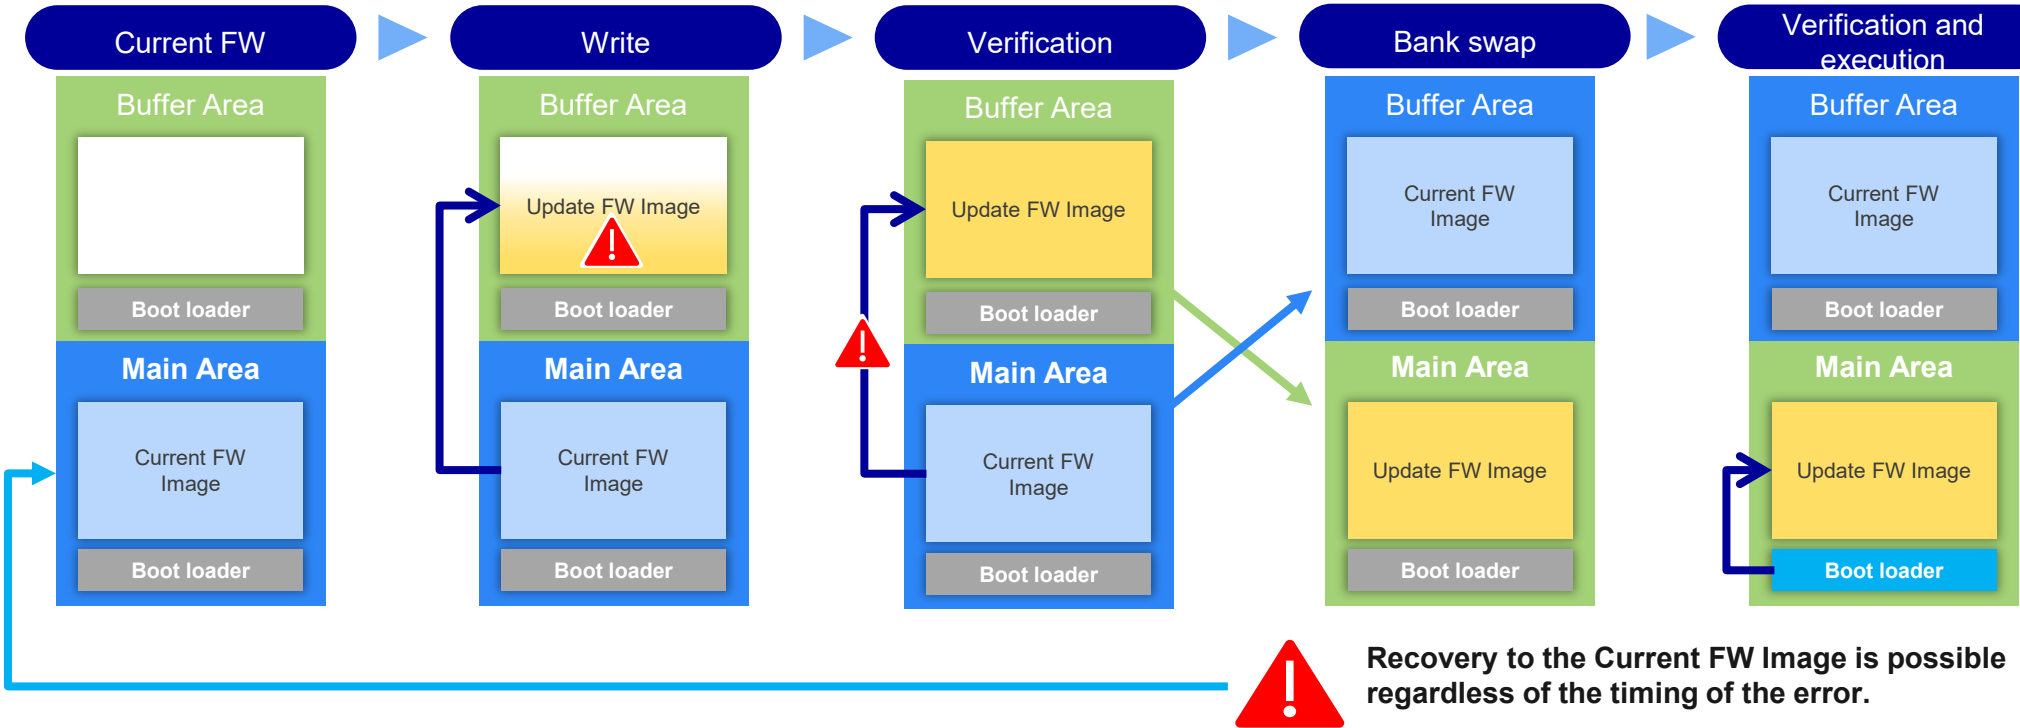

## 2. Linear Mode

### Partial Update Method: Normal operation

Even if MCU does not support Dual Bank, a firmware can be renewed with the previous FW Image retained by using the Partial Update Method.

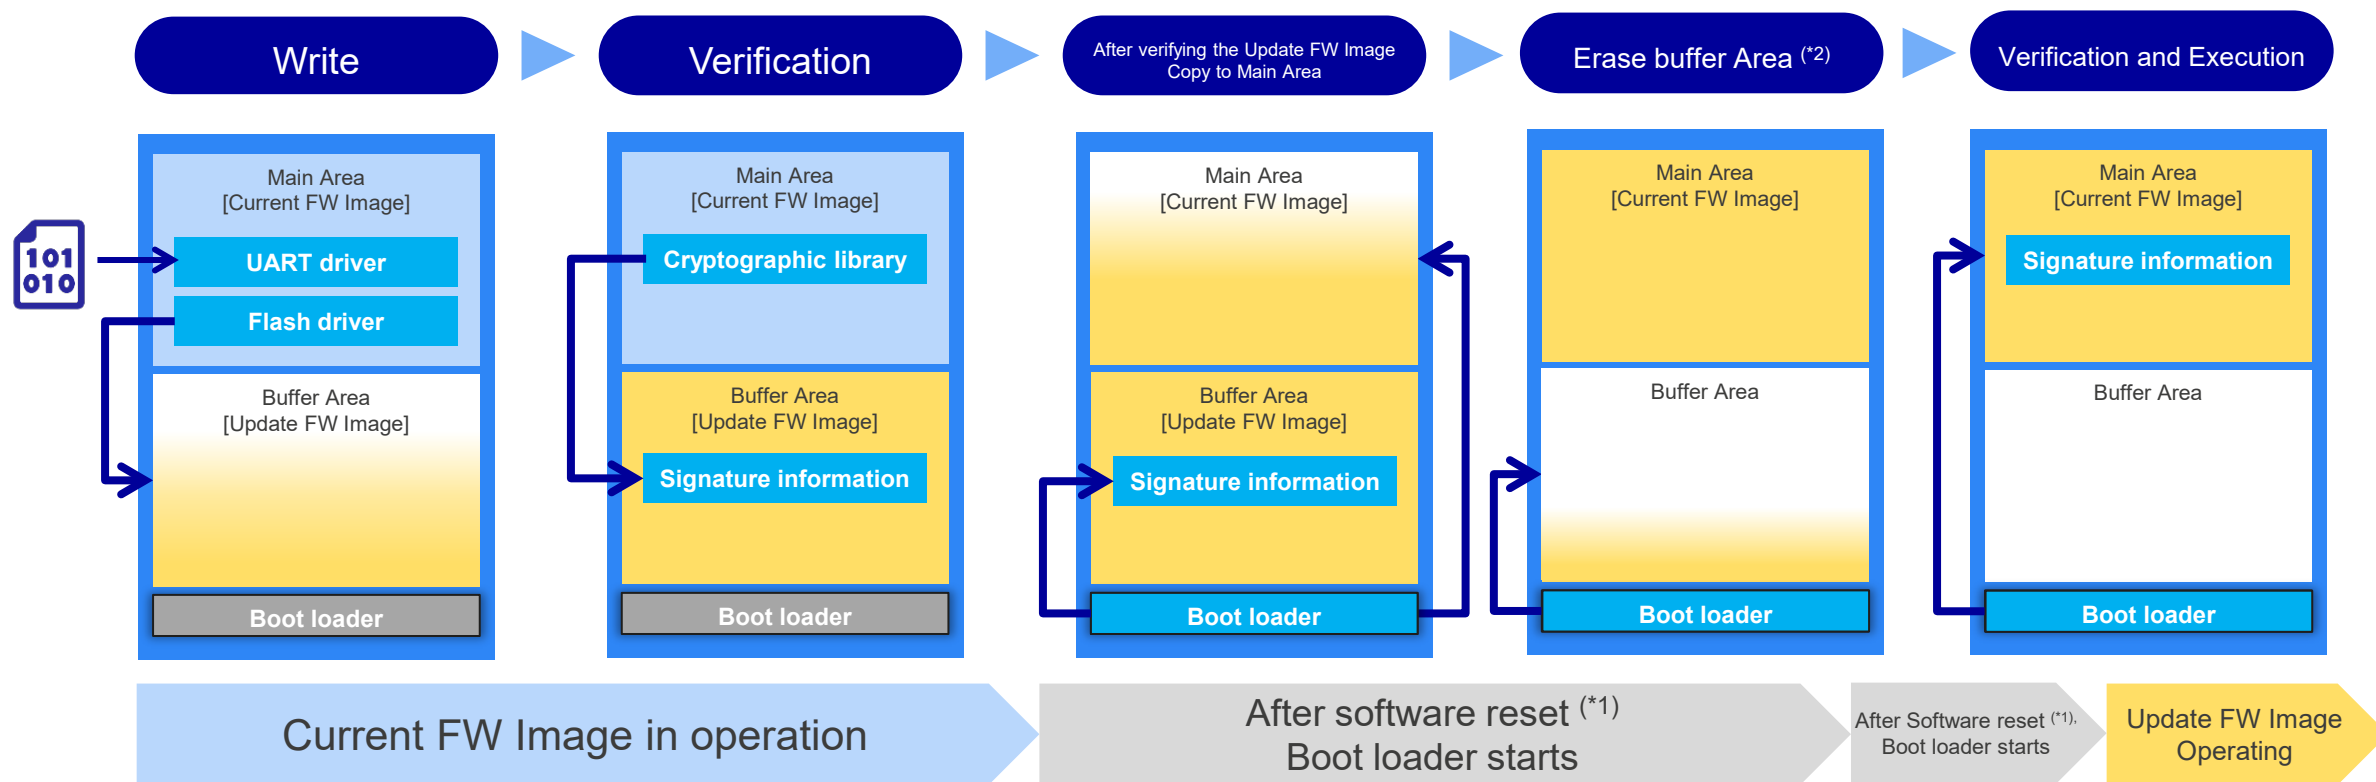

\*1 : For initialization by a software reset, please see the "Reset Chapter" in the hardware manual of each MCU.

\*2 : The demonstration program of the FW UP Module does not erase the buffer area. If it is necessary to erase the current(previous) Image before updating, users need to add the Image erase process of located the buffer side to prevent rollback.


# 2. Linear Mode

## Partial Update Method: Operation when an error occurs

If the firmware update fails due to a power-off or signature verification failure, You can start the Image before the update and start the firmware update again.

Main Area	Enable	Enable	Disabled	Enable	Enable
Buffer Area	Disabled	Disabled	Enable	Disabled	Disabled

Green text: Startable state / Black text: Unbootable state

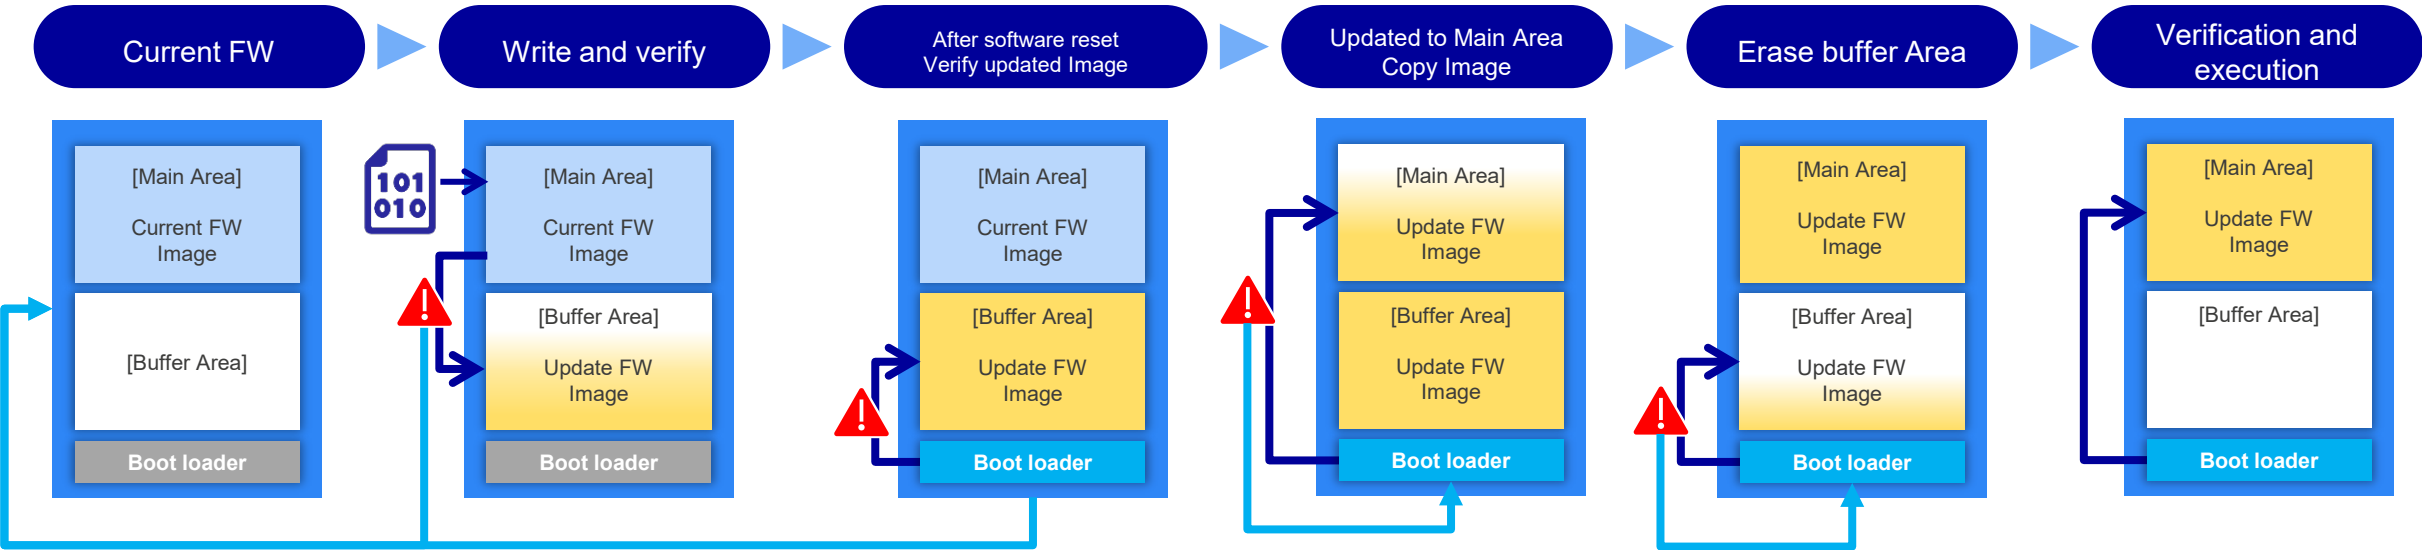

There is always a valid Image on either side, And recovery is possible in case of an error.


### 3. Linear Mode

## Full Update Method: Normal operation



If wants to secure the entire user program area of ROM at Low end MCU, Full Update Method is available.

Firmware updates can also be implemented for small ROM footprinted products using the Full Update Method.

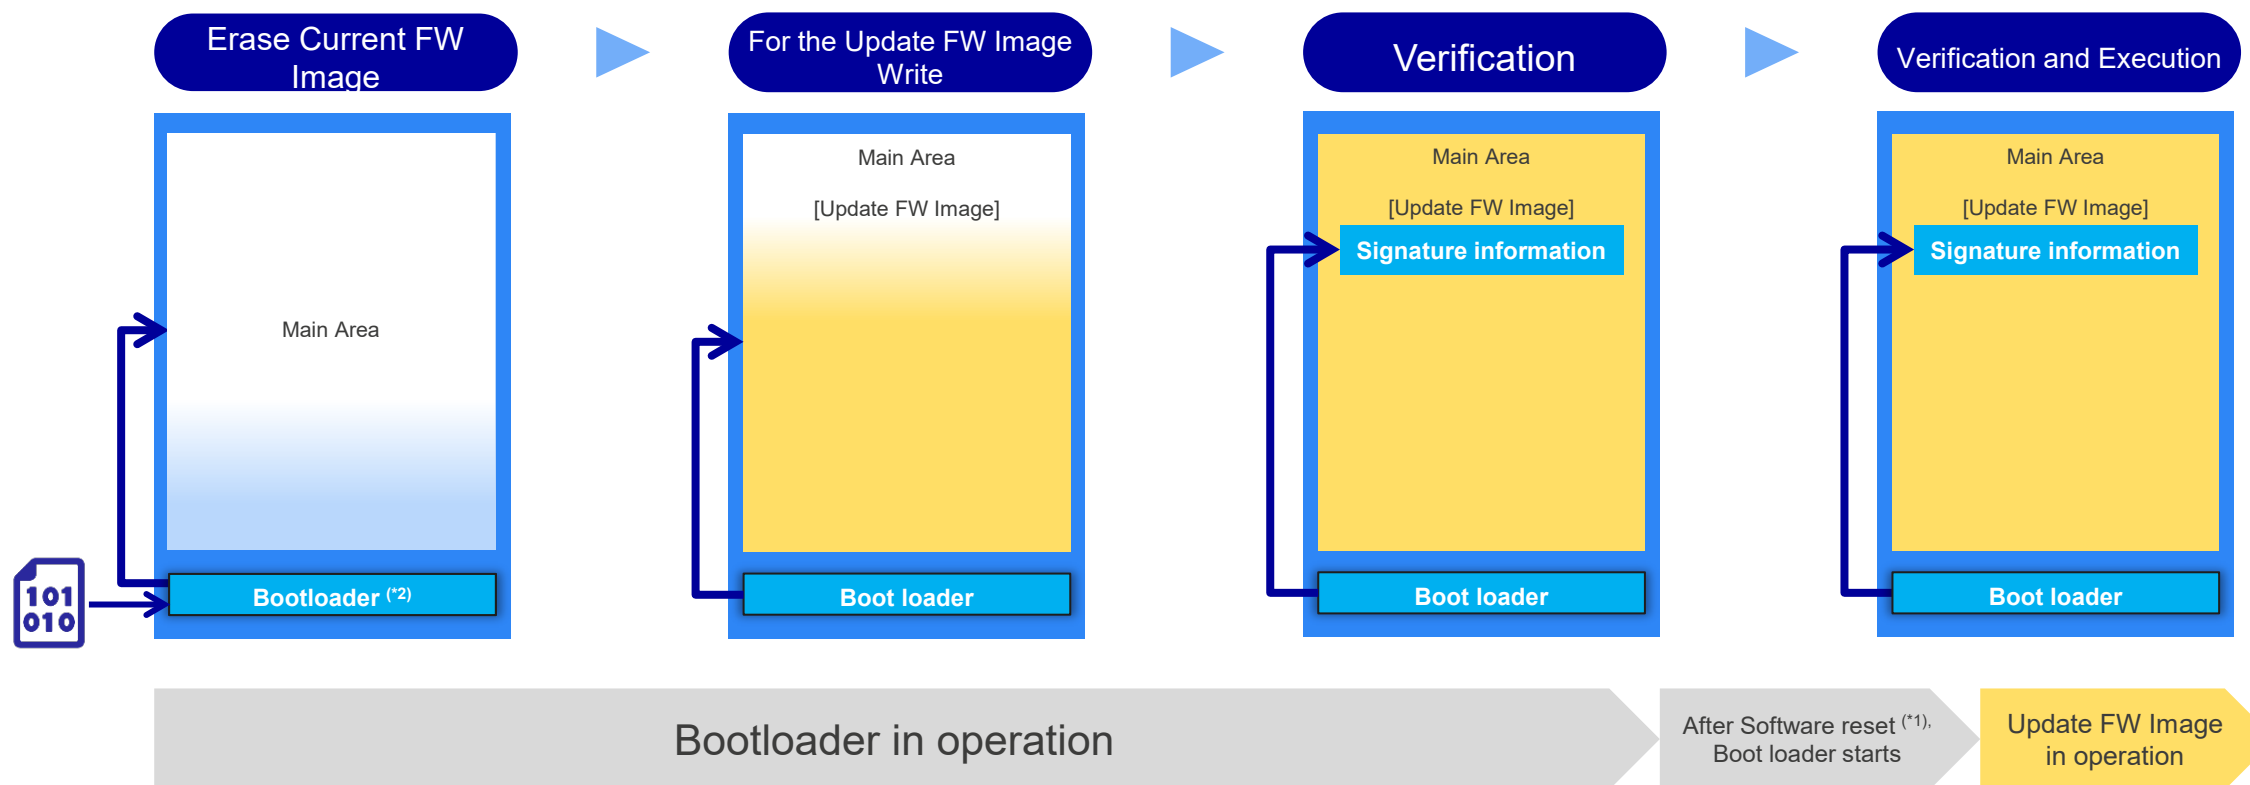

\*1 : For initialization by a software reset, please see the "Reset Chapter" in the hardware manual of each MCU.

\*2 : The demonstration program boot loader uses UART communication to obtain an updated Image. It is necessary to change it according to the communication Method customers want to use.


# 3. Linear Mode

## Full Update Method: Operation when an error occurs

With the Full Update Method, if the firmware update fails, use the boot loader function to perform the firmware update again.

Main Area	Enable	Disabled	Disabled	Enable
-----------	--------	----------	----------	--------

Green text: Startable state / Black text: Unbootable state

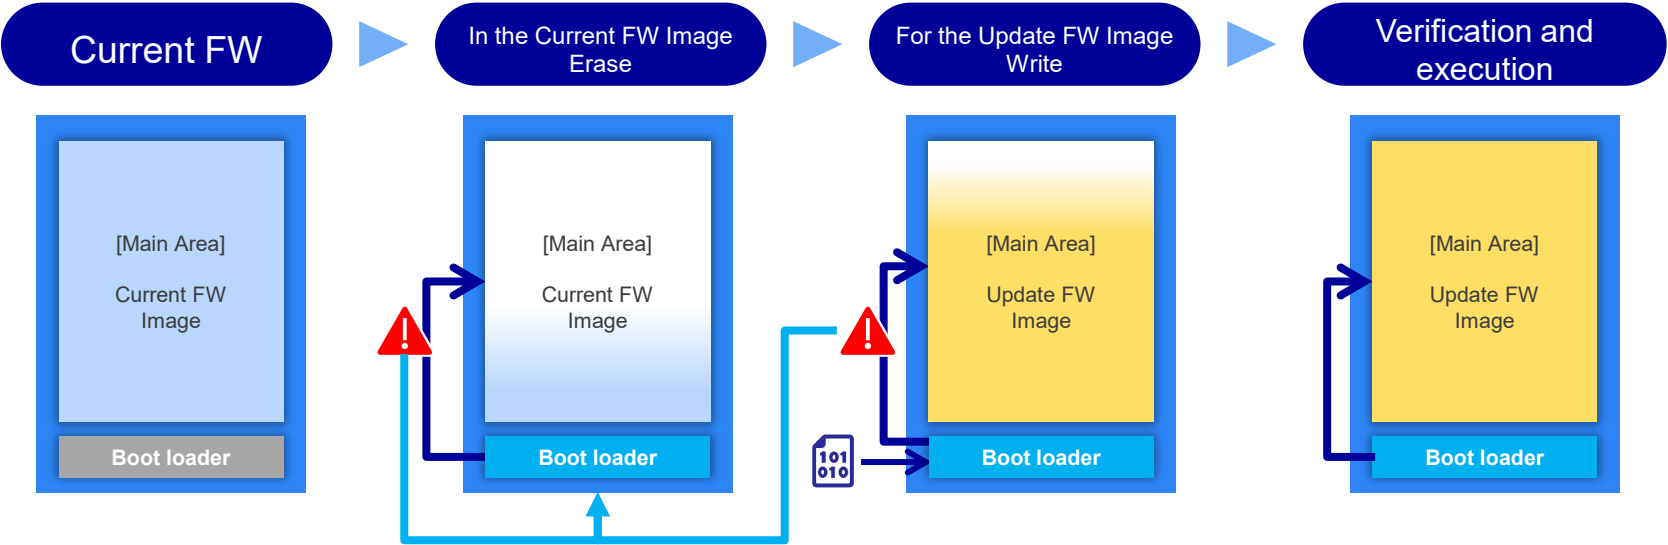

Repeat until the firmware update is successful.

# Generate Signed Initial FW and Updated FW Image using with Renesas Image Generator

Renesas Image Generator can easily realize for both "signing to firmware" and "binding with bootloader and user firmware "

## 1. Pre-Preparation

### Generate Key and Signature Information

OpenSSL



Public Key



Private Key

Generating Public Key and Private Key Key Pairs with the Key Generator

### Create a firmware

e<sup>2</sup> studio

Application



Boot loader



Including a Public Key for Validating Signatures in **Application** and **Bootloader**.

### Generate a mot Files

e<sup>2</sup> studio

Application.mot

Bootloader.mot

Build and Generate a mot file

## 2. Execute in the Renesas Image Generator

### Create RSU<sup>※</sup> Header Addresses

Create RSU Header address information according to the device using parameter file

RSU Header-Address Information

※RSU=Renesas Secure Update

### Grant RSU Header-Signing Information

Signing RSU Header Addresses and Applications with Private Key

RSU Header-Address Information

Application.mot



RSU Header-Signing Information

Generate initial Image with bootloader

## 3. Complete of generating the initial Image

### Initial Image of the Dual Bank Method (.mot Files)

Boot loader  
(Code flash data)  
[Buffer Area]

RSU Header-Signing Information  
(0x200 turning tool)

RSU Header-Address Information  
(0x100 turning tool)

Application  
Program data

Boot loader  
(Code flash data)  
[Main Area]

---

[Renesas.com](https://www.renesas.com)


# Appendix :

## Introduction to Firmware Update Solutions





# For optimal Firmware Updates on IoT products by Renesas MCU Family

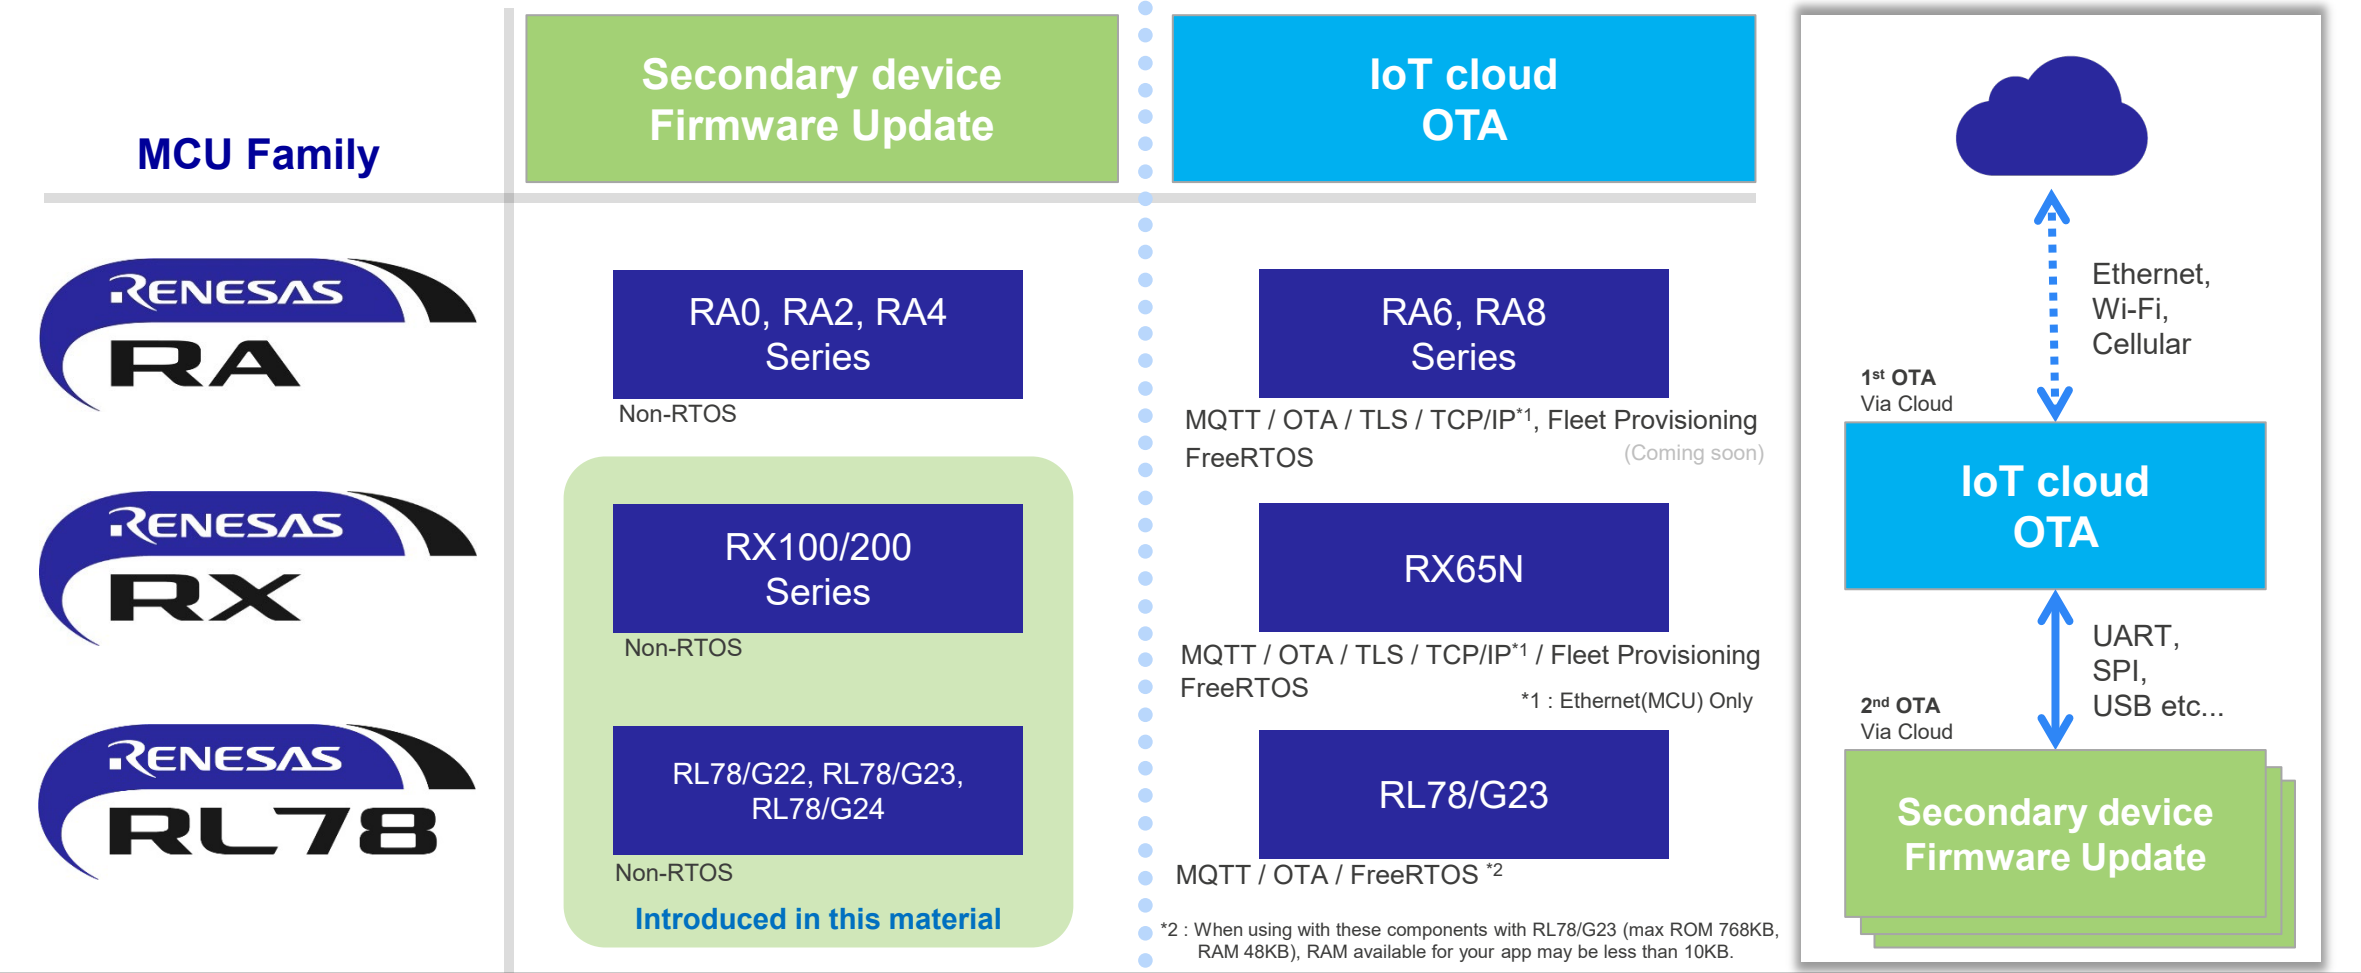Support for firmware updates via OTA(Over the Air) through the cloud!






# Firmware Update Solutions List

			
Secondary Device  Firmware Update	FW UP Module Sample code	✓ <a href="#">RX Family Firmware Update Module Using Firmware Integration Technology Application Notes - Sample Code</a>	✓ <a href="#">RL78/G22, RL78/G23, RL78/G24 Firmware Update Module - Sample Code</a>
	Firmware Updating Communications Module	✓ <a href="#">RX Family Firmware Updating Communications Module Using Firmware Integration Technology</a>	✓ <a href="#">RL78/G23 Firmware Updating Communications Module</a>
IoT Cloud  OTA	Secondary device OTA Firmware Update Sample code	✓ <a href="#">RX65N Group Sample Code for OTA Update of a Secondary Device by Amazon Web Services with the Use of FreeRTOS</a>	✓ <a href="#">RL78/G23 Sample Code for OTA Update of a Secondary Device by Amazon Web Services with the Use of FreeRTOS</a>
	OTA firmware Update sample code	✓ <a href="#">RX Family How to Implement FreeRTOS OTA Using Amazon Web Services (202406-LTS Version)</a>	✓ <a href="#">Getting Started Guide for Connecting Amazon Web Services in Wi-Fi Communication: RL78/G23-128p Fast Prototyping Board + FreeRTOS</a>
	Development product	✓ <a href="#">QE for OTA: Development Assistance Tool for Firmware Update</a>	

# QE for OTA: Development Assistance Tool for Firmware Update

From Over the Air (OTA) to Local application  
Firmware update with various system structure can be executed with simple GUI

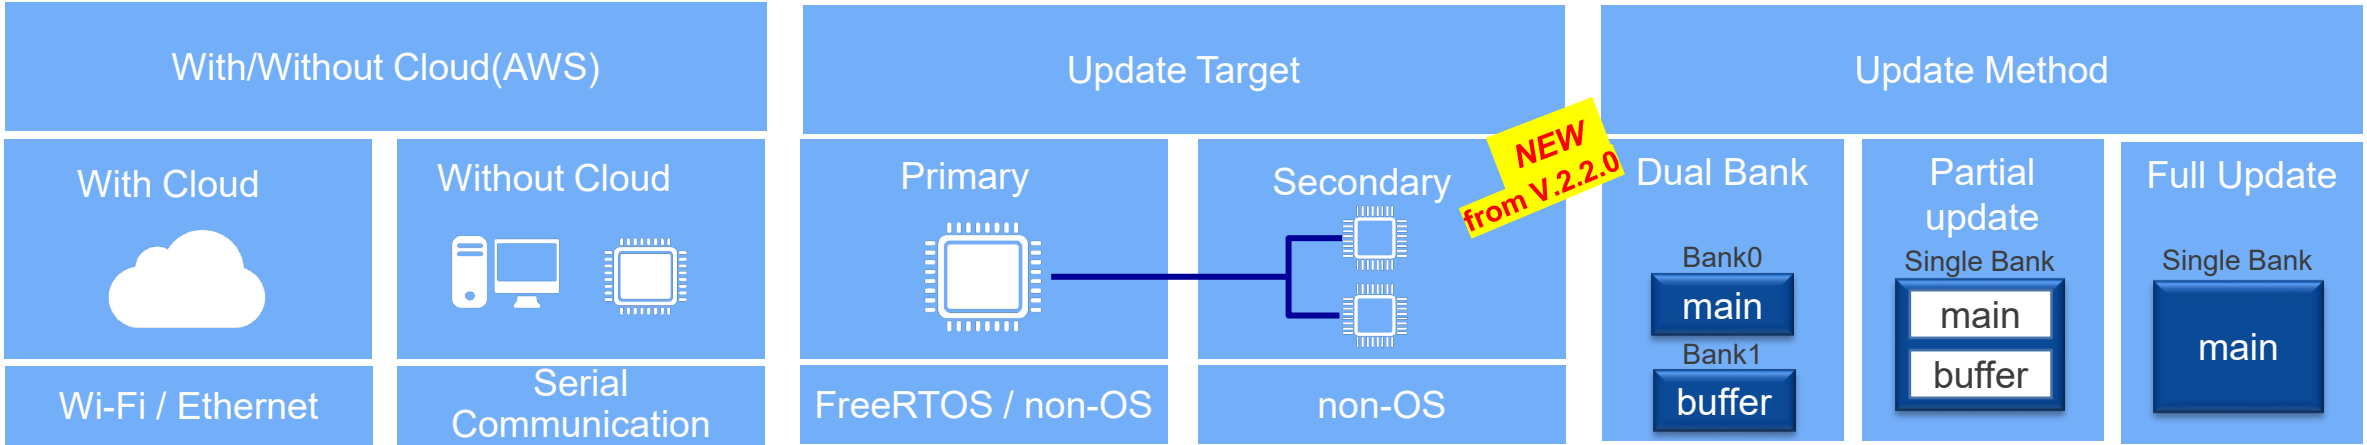





**NEW**  
from V.2.2.0

**Quick and Effective tool solution**



QE for OTA

Reduce time required for 1 IoT device OTA by 86%! Support smooth PoC development!

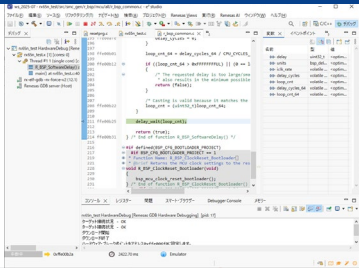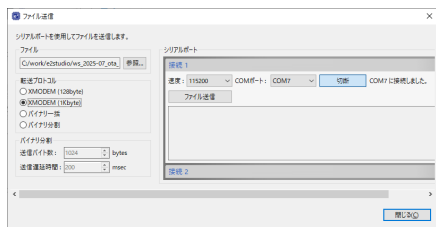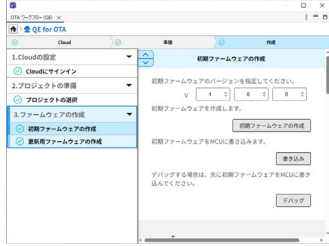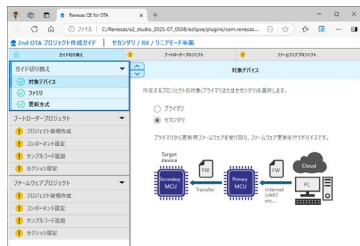

# Firmware Update Structures supported by QE FOR OTA V.2.2.0

NEW



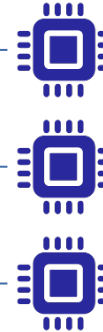

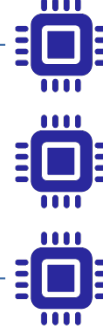


QE for OTA



< More information >

- [QE for OTA: Development Assistance for Cloud](#)
- [Firmware Update module](#)

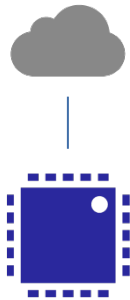	 IoT Device	 Primary  Secondary		 Primary  Secondary	
Over the Air (OTA)	✓	✓		-	
Cloud Services	AWS	AWS		-	
Update target	IoT Device	Primary	Secondary <b>NEW</b>	Primary	Secondary <b>NEW</b>
Device	RX65N, RA6M5, RL78/G23	RX65N	RX23E-B, RX66T, RX660, RX261, RX140, RL78/G23	RX65N	RX23E-B, RX66T, RX660, RX261, RX140, RL78/G23
RTOS	FreeRTOS	FreeRTOS	non-OS	FreeRTOS, non-OS	non-OS
Update Method	RA, RX : Dual Bank Method RL78 : Partial Update Method		Dual Bank method (※), Partial Update Method, Full update method ※Supported by only dual bank supported device		
Communication method	Wi-Fi, Ethernet		Serial Communication Firmware Updating Communications Module ( <a href="#">RX</a> , <a href="#">RL78</a> ) <b>NEW</b>		