

To our customers,

Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1st, 2010
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.
 - "Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.
8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

M3T-MR30/4 V.4.00

User's Manual

Real-time OS for M16C/10,M16C/20,M16C/30,
M16C/60,M16C/Tiny,R8C/Tiny Series

- Active X, Microsoft, MS-DOS, Visual Basic, Visual C++, Windows and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- IBM and AT are registered trademarks of International Business Machines Corporation.
- Intel and Pentium are registered trademarks of Intel Corporation.
- Adobe, Acrobat, and Acrobat Reader are trademarks of Adobe Systems Incorporated.
- TRON is an abbreviation of "The Real-time Operating system Nucleus."
- ITRON is an abbreviation of "Industrial TRON."
- μ ITRON is an abbreviation of "Micro Industrial TRON."
- TRON, ITRON, and μ ITRON do not refer to any specific product or products.
- All other brand and product names are trademarks, registered trademarks or service marks of their respective holders.

Keep safety first in your circuit designs!

- Renesas Technology Corporation and Renesas Solutions Corporation put the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

- These materials are intended as a reference to assist our customers in the selection of the Renesas Technology product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation, Renesas Solutions Corporation or a third party.
- Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
- All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation and Renesas Solutions Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor for the latest product information before purchasing a product listed herein. The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors. Please also pay attention to information published by Renesas Technology Corporation and Renesas Solutions Corporation by various means, including the Renesas home page (<http://www.renesas.com>).
- When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation and Renesas Solutions Corporation assume no responsibility for any damage, liability or other loss resulting from the information contained herein.
- Renesas Technology semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation, Renesas Solutions Corporation or an authorized Renesas Technology product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
- The prior written approval of Renesas Technology Corporation and Renesas Solutions Corporation is necessary to reprint or reproduce in whole or in part these materials.
- If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
- Please contact Renesas Technology Corporation or Renesas Solutions Corporation for further details on these materials or the products contained therein.

For inquiries about the contents of this document or product, fill in the text file the installer generates in the following directory and email to your local distributor.

\\SUPPORT\Product-name\\SUPPORT.TXT

Renesas Tools Homepage <http://www.renesas.com/en/tools>

Preface

The M3T-MR30/4(abbreviated as MR30) is a real-time operating system¹ for the M16C/10, M16C/20, M16C/30, M16C/60, M16C/Tiny and R8C/Tiny series microcomputers. The MR30 conforms to the μ ITRON Specification.²

This manual describes the procedures and precautions to observe when you use the MR30 for programming purposes. For the detailed information on individual service call procedures, refer to the MR30 Reference Manual.

Requirements for MR30 Use

When creating programs based on the MR30, it is necessary to purchase the following product of Renesas.

- C-compiler package M3T-NC30WA(abbreviated as NC30) for the M16C/10, M16C/20, M16C/30, M16C/60, M16C/Tiny and R8C/Tiny series microcomputers.

Document List

The following sets of documents are supplied with the MR30.

- Release Note
Presents a software overview and describes the corrections to the Users Manual and Reference Manual.
- Users Manual (PDF file)
Describes the procedures and precautions to observe when using the MR30 for programming purposes.

Right of Software Use

The right of software use conforms to the software license agreement. You can use the MR30 for your product development purposes only, and are not allowed to use it for the other purposes. You should also note that this manual does not guarantee or permit the exercise of the right of software use.

¹ Hereinafter abbreviated "real-time OS"

² μ ITRON4.0 Specification is the open real-time kernel specification upon which the TRON association decided
The specification document of μ ITRON4.0 specification can come to hand from a TRON association homepage
(<http://www.assoc.tron.org/>).

The copyright of μ ITRON4.0 specification belongs to the TRON association.

Contents

Requirements for MR30 Use	i
Document List	i
Right of Software Use	i
Contents.....	iii
List of Figures	ix
List of Tables	xi
1. User's Manual Organization.....	- 1 -
2. General Information	- 3 -
2.1 Objective of MR30 Development.....	- 3 -
2.2 Relationship between TRON Specification and MR30.....	- 5 -
2.3 MR30 Features	- 6 -
3. Introduction to Kernel	- 7 -
3.1 Concept of Real-time OS	- 7 -
3.1.1 Why Real-time OS is Necessary	- 7 -
3.1.2 Operating Principles of Kernel.....	- 10 -
3.2 Service Call	- 13 -
3.2.1 Service Call Processing	- 14 -
3.2.2 Processing Procedures for Service Calls from Handlers.....	- 15 -
Service Calls from a Handler That Caused an Interrupt during Task Execution.....	- 16 -
Service Calls from a Handler That Caused an Interrupt during Service Call Processing.....	- 17 -
Service Calls from a Handler That Caused an Interrupt during Handler Execution	- 18 -
3.3 Object.....	- 19 -
3.3.1 The specification method of the object in a service call	- 19 -
3.4 Task	- 20 -
3.4.1 Task Status	- 20 -
3.4.2 Task Priority and Ready Queue	- 24 -
3.4.3 Task Priority and Waiting Queue.....	- 25 -
3.4.4 Task Control Block(TCB)	- 26 -
3.5 System States.....	- 28 -
3.5.1 Task Context and Non-task Context.....	- 28 -
3.5.2 Dispatch Enabled/Disabled States	- 30 -
3.5.3 CPU Locked/Unlocked States.....	- 30 -
3.5.4 Dispatch Disabled and CPU Locked States.....	- 30 -
3.6 Regarding Interrupts.....	- 31 -
3.6.1 Types of Interrupt Handlers	- 31 -
3.6.2 The Use of Non-maskable Interrupt	- 31 -
3.6.3 Controlling Interrupts.....	- 32 -
3.7 Stacks	- 34 -
3.7.1 System Stack and User Stack.....	- 34 -
4. Kernel.....	- 35 -
4.1 Module Structure	- 35 -
4.2 Module Overview	- 36 -
4.3 Kernel Function	- 37 -
4.3.1 Task Management Function	- 37 -
4.3.2 Synchronization functions attached to task	- 39 -
4.3.3 Synchronization and Communication Function (Semaphore).....	- 43 -
4.3.4 Synchronization and Communication Function (Eventflag)	- 45 -

4.3.5	Synchronization and Communication Function (Data Queue)	- 47 -
4.3.6	Synchronization and Communication Function (Mailbox)	- 48 -
4.3.7	Memory pool Management Function(Fixed-size Memory pool)	- 50 -
4.3.8	Variable-size Memory Pool Management Function	- 51 -
4.3.9	Time Management Function.....	- 53 -
4.3.10	Cyclic Handler Function	- 55 -
4.3.11	Alarm Handler Function.....	- 56 -
4.3.12	System Status Management Function.....	- 57 -
4.3.13	Interrupt Management Function	- 58 -
4.3.14	System Configuration Management Function	- 59 -
4.3.15	Extended Function (Long Data Queue)	- 59 -
4.3.16	Extended Function (Reset Function)	- 60 -
5.	Service call reference	- 61 -
5.1	Task Management Function	- 61 -
act_tsk	Activate task	- 63 -
iact_tsk	Activate task (handler only).....	- 63 -
can_act	Cancel task activation request.....	- 65 -
ican_act	Cancel task activation request (handler only)	- 65 -
sta_tsk	Activate task with a start code	- 67 -
ista_tsk	Activate task with a start code (handler only).....	- 67 -
ext_tsk	Terminate invoking task	- 69 -
ter_tsk	Terminate task	- 71 -
chg_pri	Change task priority.....	- 73 -
ichg_pri	Change task priority(handler only)	- 73 -
get_pri	Reference task priority	- 75 -
iget_pri	Reference task priority(handler only)	- 75 -
ref_tsk	Reference task status	- 77 -
iref_tsk	Reference task status (handler only).....	- 77 -
ref_tst	Reference task status (simplified version)	- 80 -
iref_tst	Reference task status (simplified version, handler only).....	- 80 -
5.2	Task Dependent Synchronization Function.....	- 82 -
slp_tsk	Put task to sleep.....	- 83 -
tslp_tsk	Put task to sleep (with timeout).....	- 83 -
wup_tsk	Wakeup task.....	- 86 -
iwup_tsk	Wakeup task (handler only).....	- 86 -
can_wup	Cancel wakeup request.....	- 88 -
ican_wup	Cancel wakeup request (handler only)	- 88 -
rel_wai	Release task from waiting	- 90 -
irel_wai	Release task from waiting (handler only)	- 90 -
sus_tsk	Suspend task	- 92 -
isus_tsk	Suspend task (handler only)	- 92 -
rsm_tsk	Resume suspended task	- 94 -
irms_tsk	Resume suspended task(handler only)	- 94 -
frsm_tsk	Forcibly resume suspended task.....	- 94 -
ifrm_tsk	Forcibly resume suspended task(handler only)	- 94 -
dly_tsk	Delay task.....	- 96 -
5.3	Synchronization & Communication Function (Semaphore)	- 98 -
sig_sem	Release semaphore resource	- 99 -
isig_sem	Release semaphore resource (handler only)	- 99 -
wai_sem	Acquire semaphore resource.....	- 101 -
pol_sem	Acquire semaphore resource (polling)	- 101 -
ipol_sem	Acquire semaphore resource (polling, handler only)	- 101 -
twai_sem	Acquire semaphore resource(with timeout).....	- 101 -
ref_sem	Reference semaphore status	- 104 -
iref_sem	Reference semaphore status (handler only).....	- 104 -
5.4	Synchronization & Communication Function (Eventflag).....	- 106 -
set_flg	Set eventflag.....	- 107 -
iset_flg	Set eventflag (handler only).....	- 107 -
clr_flg	Clear eventflag.....	- 109 -

iclr_flg	Clear eventflag (handler only)	109
wai_flg	Wait for eventflag.....	111
pol_flg	Wait for eventflag(polling).....	111
ipol_flg	Wait for eventflag(polling, handler only).....	111
twai_flg	Wait for eventflag(with timeout).....	111
ref_flg	Reference eventflag status	114
iref_flg	Reference eventflag status (handler only).....	114
5.5	Synchronization & Communication Function (Data Queue)	116
snd_dtq	Send to data queue	117
psnd_dtq	Send to data queue (polling)	117
ipsnd_dtq	Send to data queue (polling, handler only).....	117
tsnd_dtq	Send to data queue (with timeout).....	117
fsnd_dtq	Forcibly send to data queue.....	117
ifsnd_dtq	Forcibly send to data queue (handler only)	117
rcv_dtq	Receive from data queue	120
prcv_dtq	Receive from data queue (polling).....	120
iprcv_dtq	Receive from data queue (polling, handler only).....	120
trcv_dtq	Receive from data queue (with timeout)	120
ref_dtq	Reference data queue status	123
iref_dtq	Reference data queue status (handler only)	123
5.6	Synchronization & Communication Function (Mailbox).....	125
snd_mbx	Send to mailbox	126
isnd_mbx	Send to mailbox (handler only)	126
rcv_mbx	Receive from mailbox.....	128
prcv_mbx	Receive from mailbox (polling)	128
iprcv_mbx	Receive from mailbox (polling, handler only).....	128
trcv_mbx	Receive from mailbox (with timeout)	128
ref_mbx	Reference mailbox status	131
iref_mbx	Reference mailbox status (handler only)	131
5.7	Memory Pool Management Function (Fixed-size Memory Pool)	133
get_mpf	Aquire fixed-size memory block	134
pget_mpf	Aquire fixed-size memory block (polling).....	134
ipget_mpf	Aquire fixed-size memory block (polling, handler only)	134
tget_mpf	Aquire fixed-size memory block (with timeout)	134
rel_mpf	Release fixed-size memory block.....	137
irel_mpf	Release fixed-size memory block (handler only)	137
ref_mpf	Reference fixed-size memory pool status	139
iref_mpf	Reference fixed-size memory pool status (handler only).....	139
5.8	Memory Pool Management Function (Variable-size Memory Pool)	141
pget_mpl	Aquire variable-size memory block (polling)	142
rel_mpl	Release variable-size memory block.....	144
ref_mpl	Reference variable-size memory pool status.....	146
iref_mpl	Reference variable-size memory pool status (handler only)	146
5.9	Time Management Function.....	148
set_tim	Set system time.....	149
iset_tim	Set system time (handler only)	149
get_tim	Reference system time.....	151
iget_tim	Reference system time (handler only)	151
isig_tim	Supply a time tick.....	153
5.10	Time Management Function (Cyclic Handler).....	154
sta_cyc	Start cyclic handler operation.....	155
ista_cyc	Start cyclic handler operation (handler only)	155
stp_cyc	Stops cyclic handler operation	157
istp_cyc	Stops cyclic handler operation (handler only).....	157
ref_cyc	Reference cyclic handler status.....	158
iref_cyc	Reference cyclic handler status (handler only)	158
5.11	Time Management Function (Alarm Handler)	160
sta_alm	Start alarm handler operation.....	161
ista_alm	Start alarm handler operation (handler only).....	161
stp_alm	Stop alarm handler operation	163

istp_alm	Stop alarm handler operation (handler only).....	163
ref_alm	Reference alarm handler status.....	164
iref_alm	Reference alarm handler status (handler only).....	164
5.12	System Status Management Function.....	166
rot_rdq	Rotate task precedence.....	167
irotd_rdq	Rotate task precedence (handler only).....	167
get_tid	Reference task ID in the RUNNING state.....	169
iget_tid	Reference task ID in the RUNNING state (handler only).....	169
loc_cpu	Lock the CPU.....	170
iloc_cpu	Lock the CPU (handler only).....	170
unl_cpu	Unlock the CPU.....	172
iunl_cpu	Unlock the CPU (handler only).....	172
dis_dsp	Disable dispatching.....	173
ena_dsp	Enables dispatching.....	175
sns_ctx	Reference context.....	176
sns_loc	Reference CPU state.....	177
sns_dsp	Reference dispatching state.....	178
sns_dpn	Reference dispatching pending state.....	179
5.13	Interrupt Management Function.....	180
ret_int	Returns from an interrupt handler (when written in assembly language).....	181
5.14	System Configuration Management Function.....	182
ref_ver	Reference version information.....	183
iref_ver	Reference version information (handler only).....	183
5.15	Extended Function (Long Data Queue).....	185
vsnd_dtq	Send to Long data queue.....	186
vpsnd_dtq	Send to Long data queue (polling).....	186
vipsnd_dtq	Send to Long data queue (polling, handler only).....	186
vtsnd_dtq	Send to Long data queue (with timeout).....	186
vfsnd_dtq	Forcibly send to Long data queue.....	186
vifsd_dtq	Forcibly send to Long data queue (handler only).....	186
vrcv_dtq	Receive from Long data queue.....	189
vprcv_dtq	Receive from Long data queue (polling).....	189
viprcv_dtq	Receive from Long data queue (polling, handler only).....	189
vtrcv_dtq	Receive from Long data queue (with timeout).....	189
vref_dtq	Reference Long data queue status.....	192
viref_dtq	Reference Long data queue status (handler only).....	192
5.16	Extended Function (Reset Function).....	194
vrst_dtq	Clear data queue area.....	195
vrst_vdtq	Clear Long data queue area.....	197
vrst_mbx	Clear mailbox area.....	199
vrst_mpf	Clear fixed-size memory pool area.....	201
vrst_mpl	Clear variable-size memory pool area.....	202
6.	Applications Development Procedure Overview.....	203
6.1	Overview.....	203
6.2	Development Procedure Example.....	205
6.2.1	Applications Program Coding.....	205
6.2.2	Configuration File Preparation.....	206
6.2.3	Configurator Execution.....	207
6.2.4	System generation.....	208
6.2.5	Writing ROM.....	208
7.	Detailed Applications.....	209
7.1	Program Coding Procedure in C Language.....	209
7.1.1	Task Description Procedure.....	209
7.1.2	Writing a Kernel (OS Dependent) Interrupt Handler.....	210
7.1.3	Writing Non-kernel (OS-independent) Interrupt Handler.....	211
7.1.4	Writing Cyclic Handler/Alarm Handler.....	211
7.2	Program Coding Procedure in Assembly Language.....	213
7.2.1	Writing Task.....	213

7.2.2	Writing Kernel(OS-dependent) Interrupt Handler	- 214 -
7.2.3	Writing Non-kernel(OS-independent) Interrupt Handler	- 214 -
7.2.4	Writing Cyclic Handler/Alarm Handler	- 214 -
7.3	Modifying MR30 Startup Program	- 216 -
7.3.1	C Language Startup Program (crt0mr.a30)	- 217 -
7.4	Memory Allocation	- 222 -
7.4.1	Section Allocation of start.a30	- 223 -
7.4.2	Section Allocation of crt0mr.a30	- 224 -
8.	Using Configurator	- 226 -
8.1	Configuration File Creation Procedure	- 226 -
8.1.1	Configuration File Data Entry Format	- 226 -
	Operator	- 227 -
	Direction of computation	- 227 -
8.1.2	Configuration File Definition Items	- 228 -
	[(System Definition Procedure)]	- 228 -
	[(System Clock Definition Procedure)]	- 230 -
	[(Definition respective maximum numbers of items)]	- 231 -
	[(Task definition)]	- 233 -
	[(Eventflag definition)]	- 235 -
	[(Semaphore definition)]	- 236 -
	[(Data queue definition)]	- 237 -
	[(Long data queue definition)]	- 238 -
	[(Mailbox definition)]	- 239 -
	[(Fixed-size memory pool definition)]	- 240 -
	[(Variable-size memory pool definition)]	- 241 -
	[(Cyclic handler definition)]	- 243 -
	[(Alarm handler definition)]	- 244 -
	[(Interrupt vector definition)]	- 246 -
8.1.3	Configuration File Example	- 249 -
8.2	Configurator Execution Procedures	- 253 -
8.2.1	Configurator Overview	- 253 -
8.2.2	Setting Configurator Environment	- 254 -
8.2.3	Configurator Start Procedure	- 254 -
8.2.4	makefile generate Function	- 255 -
8.2.5	Precautions on Executing Configurator	- 255 -
8.2.6	Configurator Error Indications and Remedies	- 255 -
	Error messages	- 255 -
	Warning messages	- 258 -
	Other messages	- 258 -
8.2.7	Editing makefile	- 259 -
8.2.8	About an error when you execute make	- 260 -
9.	Sample Program Description	- 261 -
9.1	Overview of Sample Program	- 261 -
9.2	Program Source Listing	- 262 -
9.3	Configuration File	- 263 -
9.4	Generation of application using M3T-MR30/4 in High - performance Embedded Workshop 4	- 264 -
10.	Stack Size Calculation Method	- 271 -
10.1	Stack Size Calculation Method	- 271 -
10.1.1	User Stack Calculation Method	- 273 -
10.1.2	System Stack Calculation Method	- 275 -
10.2	Necessary Stack Size	- 279 -
11.	Note	- 281 -
11.1	The Use of INT Instruction	- 281 -
11.2	The Use of registers of bank	- 281 -
11.3	Regarding Delay Dispatching	- 282 -
11.4	Regarding Initially Activated Task	- 282 -
11.5	Cautions for each microcontroler	- 283 -
11.5.1	To use the M16C/62 group MCUs	- 283 -

11.5.2	To use the M16C/6N group MCUs.....	- 283 -
12.	Separate ROMs.....	- 285 -
12.1	How to Form Separate ROMs	- 285 -
13.	Appendix	- 291 -
13.1	Common Constants and Packet Format of Structure	- 291 -
13.2	Assembly Language Interface.....	- 293 -

List of Figures

Figure 3.1 Relationship between Program Size and Development Period.....	- 7 -
Figure 3.2 Microcomputer-based System Example(Audio Equipment)	- 8 -
Figure 3.3 Example System Configuration with Real-time OS(Audio Equipment)	- 9 -
Figure 3.4 Time-division Task Operation	- 10 -
Figure 3.5 Task Execution Interruption and Resumption	- 11 -
Figure 3.6 Task Switching	- 11 -
Figure 3.7 Task Register Area	- 12 -
Figure 3.8 Actual Register and Stack Area Management	- 12 -
Figure 3.9 Service call.....	- 13 -
Figure 3.10 Service Call Processing Flowchart.....	- 14 -
Figure 3.11 Processing Procedure for a Service Call a Handler that caused an interrupt during Task Execution -	- 16 -
Figure 3.12 Processing Procedure for a Service Call from a Handler that caused an interrupt during Service Call Processing.....	- 17 -
Figure 3.13 Processing Procedure for a service call from a Multiplex interrupt Handler	- 18 -
Figure 3.14 Task Identification	- 19 -
Figure 3.15 Task Status.....	- 20 -
Figure 3.16 MR30 Task Status Transition	- 21 -
Figure 3.17 Ready Queue (Execution Queue)	- 24 -
Figure 3.18 Waiting queue of the TA_TPRI attribute	- 25 -
Figure 3.19 Waiting queue of the TA_TFIFO attribute.....	- 25 -
Figure 3.20 Task control block	- 27 -
Figure 3.21 Cyclic Handler/Alarm Handler Activation	- 29 -
Figure 3.22 Interrupt handler IPLs	- 31 -
Figure 3.23 Interrupt control in a Service Call that can be Issued from only a Task	- 32 -
Figure 3.24 Interrupt control in a Service Call that can be Issued from a Task-independent ...	- 33 -
Figure 3.25 System Stack and User Stack	- 34 -
Figure 4.1 MR30 Structure.....	- 35 -
Figure 4.2 Task Resetting.....	- 37 -
Figure 4.3 Alteration of task priority	- 38 -
Figure 4.4 Task rearrangement in a waiting queue	- 38 -
Figure 4.5 Wakeup Request Storage.....	- 39 -
Figure 4.6 Wakeup Request Cancellation.....	- 39 -
Figure 4.7 Forcible wait of a task and resume.....	- 40 -
Figure 4.8 Forcible wait of a task and forcible resume.....	- 41 -
Figure 4.9 dly_tsk service call	- 42 -
Figure 4.10 Exclusive Control by Semaphore	- 43 -
Figure 4.11 Semaphore Counter	- 43 -
Figure 4.12 Task Execution Control by Semaphore.....	- 44 -
Figure 4.13 Task Execution Control by the Eventflag.....	- 46 -
Figure 4.14 Data queue	- 47 -
Figure 4.15 Mailbox	- 48 -
Figure 4.16 Message queue	- 49 -
Figure 4.17 Memory Pool Management.....	- 50 -
Figure 4.18 pget_mpl processing.....	- 52 -
Figure 4.19 rel_mpl processing	- 52 -
Figure 4.20 Timeout Processing.....	- 53 -
Figure 4.21 Cyclic handler operation in cases where the activation phase is saved.....	- 55 -
Figure 4.22 Cyclic handler operation in cases where the activation phase is not saved.....	- 55 -
Figure 4.23 Typical operation of the alarm handler	- 56 -
Figure 4.24 Ready Queue Management by rot_rdq Service Call.....	- 57 -
Figure 4.25 Interrupt process flow.....	- 58 -
Figure 5.1 Manipulation of the ready queue by the rot_rdq service call.....	- 168 -
Figure 6.1 MR30 System Generation Detail Flowchart	- 204 -

Figure 6.2 Program Example	206 -
Figure 6.3 Configuration File Example	207 -
Figure 6.4 Configurator Execution	207 -
Figure 6.5 System Generation.....	208 -
Figure 7.1 Example Infinite Loop Task Described in C Language	209 -
Figure 7.2 Example Task Terminating with ext_tsk0 Described in C Language.....	210 -
Figure 7.3 Example of Kernel(OS-dependent) Interrupt Handler.....	211 -
Figure 7.4 Example of Non-kernel(OS-independent) Interrupt Handler.....	211 -
Figure 7.5 Example Cyclic Handler Written in C Language	212 -
Figure 7.6 Example Infinite Loop Task Described in Assembly Language.....	213 -
Figure 7.7 Example Task Terminating with ext_tsk Described in Assembly Language.....	213 -
Figure 7.8 Example of kernel(OS-depend) interrupt handler.....	214 -
Figure 7.9 Example of Non-kernel(OS-independent) Interrupt Handler of Specific Level.....	214 -
Figure 7.10 Example Handler Written in Assembly Language	215 -
Figure 7.11 C Language Startup Program (crt0mr.a30)	220 -
Figure 7.12 Selection Allocation in C Language Startup Program.....	225 -
Figure 8.1 The operation of the Configurator	254 -
Figure 10.1 System Stack and User Stack	271 -
Figure 10.2 Layout of Stacks.....	272 -
Figure 10.3 Example of Use Stack Size Calculation.....	274 -
Figure 10.4 System Stack Calculation Method.....	276 -
Figure 10.5 Stack size to be used by Kernel Interrupt Handler	277 -
Figure 12.1 ROM separate	287 -
Figure 12.2 Memory map.....	288 -

List of Tables

Table 3.1 Task Context and Non-task Context	- 28 -
Table 3.2 Invocable Service Calls in a CPU Locked State.....	- 30 -
Table 3.3 CPU Locked and Dispatch Disabled State Transitions Relating to dis_dsp and loc_cpu.....	- 30 -
Table 5.1 Specifications of the Task Management Function	- 61 -
Table 5.2 List of Task Management Function Service Call.....	- 61 -
Table 5.3 Specifications of the Task Dependent Synchronization Function	- 82 -
Table 5.4 List of Task Dependent Synchronization Service Call	- 82 -
Table 5.5 Specifications of the Semaphore Function	- 98 -
Table 5.6 List of Semaphore Function Service Call.....	- 98 -
Table 5.7 Specifications of the Eventflag Function.....	- 106 -
Table 5.8 List of Eventflag Function Service Call.....	- 106 -
Table 5.9 Specifications of the Data Queue Function.....	- 116 -
Table 5.10 List of Dataqueue Function Service Call.....	- 116 -
Table 5.11 Specifications of the Mailbox Function.....	- 125 -
Table 5.12 List of Mailbox Function Service Call	- 125 -
Table 5.13 Specifications of the Fixed-size memory pool Function.....	- 133 -
Table 5.14 List of Fixed-size memory pool Function Service Call	- 133 -
Table 5.15 Specifications of the Variable-size memory Pool Function.....	- 141 -
Table 5.16 List of Variable -size memory pool Function Service Call.....	- 141 -
Table 5.17 Specifications of the Time Management Function	- 148 -
Table 5.18 List of Time Management Function Service Call	- 148 -
Table 5.19 Specifications of the Cyclic Handler Function.....	- 154 -
Table 5.20 List of Cyclic Handler Function Service Call.....	- 154 -
Table 5.21 Specifications of the Alarm Handler Function.....	- 160 -
Table 5.22 List of Alarm Handler Function Service Call.....	- 160 -
Table 5.23 List of System Status Management Function Service Call	- 166 -
Table 5.24 List of Interrupt Management Function Service Call.....	- 180 -
Table 5.25 List of System Configuration Management Function Service Call.....	- 182 -
Table 5.26 Specifications of the Long Data Queue Function.....	- 185 -
Table 5.27 List of Long Dataqueue Function Service Call	- 185 -
Table 5.28 List of Reset Function Service Call.....	- 194 -
Table 7.1 C Language Variable Treatment.....	- 210 -
Table 8.1 Numerical Value Entry Examples	- 226 -
Table 8.2 Operators	- 227 -
Table 8.3 Interrupt Causes and Vector Numbers.....	- 248 -
Table 9.1 Functions in the Sample Program	- 261 -
Table 10.1 Stack Sizes Used by Service Calls Issued from Tasks (in bytes)	- 279 -
Table 10.2 Stack Sizes Used by Service Calls Issued from Handlers (in bytes)	- 280 -
Table 10.3 Stack Sizes Used by Service Calls Issued from Tasks and Handlers (in bytes)	- 280 -
Table 11.1 Interrupt Number Assignment.....	- 281 -

1. User's Manual Organization

The MR30 User's Manual consists of nine chapters and thee appendix.

- **2 General Information**
Outlines the objective of MR30 development and the function and position of the MR30.
- **3 Introduction to Kernel**
Explains about the ideas involved in MR30 operations and defines some relevant terms.
- **4 Kernel**
Outlines the applications program development procedure for the MR30.
- **5 Service call refference**
Details MR30 service call API.
- **6 Applications Development Procedure Overview**
Details the applications program development procedure for the MR30.
- **7 Detailed Applications**
Presents useful information and precautions concerning applications program development with MR30.
- **8 Using Configurator**
Describes the method for writing a configuration file and the method for using the configurator in detail.
- **9 Sample Program Description**
Describes the MR30 sample applications program which is included in the product in the form of a source file.
- **10 Stack Size Calculation Method**
Describes the calculation method of the task stack size and the system stack size.
- **11 Note**
Presents useful information and precautions concerning applications program development with MR30.
- **12 Separate ROMs**
Explains about how to Form Separate ROMs.
- **13 Appendix**
Data type and assembly language interface.

2. General Information

2.1 Objective of MR30 Development

In line with recent rapid technological advances in microcomputers, the functions of microcomputer-based products have become complicated. In addition, the microcomputer program size has increased. Further, as product development competition has been intensified, manufacturers are compelled to develop their microcomputer-based products within a short period of time.

In other words, engineers engaged in microcomputer software development are now required to develop larger-size programs within a shorter period of time. To meet such stringent requirements, it is necessary to take the following considerations into account.

- 1. To enhance software recyclability to decrease the volume of software to be developed.**

One way to provide for software recyclability is to divide software into a number of functional modules wherever possible. This may be accomplished by accumulating a number of general-purpose subroutines and other program segments and using them for program development. In this method, however, it is difficult to reuse programs that are dependent on time or timing. In reality, the greater part of application programs are dependent on time or timing. Therefore, the above recycling method is applicable to only a limited number of programs.

- 2. To promote team programming so that a number of engineers are engaged in the development of one software package**

There are various problems with team programming. One major problem is that debugging can be initiated only when all the software program segments created individually by team members are ready for debugging. It is essential that communication be properly maintained among the team members.

- 3. To enhance software production efficiency so as to increase the volume of possible software development per engineer.**

One way to achieve this target would be to educate engineers to raise their level of skill. Another way would be to make use of a structured descriptive assembler, C-compiler, or the like with a view toward facilitating programming. It is also possible to enhance debugging efficiency by promoting modular software development.

However, the conventional methods are not adequate for the purpose of solving the problems. Under these circumstances, it is necessary to introduce a new system named real-time OS ³

To answer the above-mentioned demand, Renesas has developed a real-time operating system, tradenamed MR30, for use with the M16C/10, M16C/20, M16C/30, M16C/60, M16C/Tiny and R8C/Tiny series of 16-bit microcomputers.

When the MR30 is introduced, the following advantages are offered.

- 1. Software recycling is facilitated.**

When the real-time OS is introduced, timing signals are furnished via the real-time OS so that programs dependent on timing can be reused. Further, as programs are divided into modules called tasks, structured programming will be spontaneously provided.

That is, recyclable programs are automatically prepared.

- 2. Ease of team programming is provided.**

When the real-time OS is put to use, programs are divided into functional modules called tasks. Therefore, engineers can be allocated to individual tasks so that all steps from development to debugging can be conducted independently for each task.

Further, the introduction of the real-time OS makes it easy to start debugging some already finished tasks even if the entire program is not completed yet. Since engineers can be allocated to individual tasks, work assignment is easy.

- 3. Software independence is enhanced to provide ease of program debugging.**

As the use of the real-time OS makes it possible to divide programs into small independent modules called tasks,

³ OS: Operating System

the greater part of program debugging can be initiated simply by observing the small modules.

4. Timer control is made easier.

To perform processing at 10 ms intervals, the microcomputer timer function was formerly used to periodically initiate an interrupt. However, as the number of usable microcomputer timers was limited, timer insufficiency was compensated for by, for instance, using one timer for a number of different processing operations.

When the real-time OS is introduced, however, it is possible to create programs for performing processing at fixed time intervals making use of the real-time OS time management function without paying special attention to the microcomputer timer function. At the same time, programming can also be done in such a manner as to let the programmer take that numerous timers are provided for the microcomputer.

5. Software maintainability is enhanced

When the real-time OS is put to use, the developed software consists of small program modules called tasks. Therefore, increased software maintainability is provided because developed software maintenance can be carried out simply by maintaining small tasks.

6. Increased software reliability is assured.

The introduction of the real-time OS makes it possible to carry out program evaluation and testing in the unit of a small module called task. This feature facilitates evaluation and testing and increases software reliability.

7. The microcomputer performance can be optimized to improve the performance of microcomputer-based products.

With the real-time OS, it is possible to decrease the number of unnecessary microcomputer operations such as I/O waiting. It means that the optimum capabilities can be obtained from microcomputers, and this will lead to microcomputer-based product performance improvement.

2.2 Relationship between TRON Specification and MR30

MR30 is the real-time operating system developed for use with the M16C/10, M16C/20, M16C/30, M16C/60, M16C/Tiny and R8C/Tiny series of 16-bit microcomputers compliant with μ ITRON 4.0 Specification. μ ITRON 4.0 Specification stipulates standard profiles as an attempt to ensure software portability. Of these standard profiles, MR30 has implemented in it all service calls except for static APIs and task exception APIs.

2.3 MR30 Features

The MR30 offers the following features.

1. Real-time operating system conforming to the μ ITRON Specification.

The MR30 is designed in compliance with the μ ITRON Specification which incorporates a minimum of the ITRON Specification functions so that such functions can be incorporated into a one-chip microcomputer. As the μ ITRON Specification is a subset of the ITRON Specification, most of the knowledge obtained from published ITRON textbooks and ITRON seminars can be used as is.

Further, the application programs developed using the real-time operating systems conforming to the ITRON Specification can be transferred to the MR30 with comparative ease.

2. High-speed processing is achieved.

MR30 enables high-speed processing by taking full advantage of the microcomputer architecture.

3. Only necessary modules are automatically selected to constantly build up a system of the minimum size.

MR30 is supplied in the object library format of the M16C/10, M16C/20, M16C/30, M16C/60, M16C/Tiny and R8C/Tiny series.

Therefore, the Linkage Editor LN30 functions are activated so that only necessary modules are automatically selected from numerous MR30 functional modules to generate a system.

Thanks to this feature, a system of the minimum size is automatically generated at all times.

4. With the C-compiler NC30WA, it is possible to develop application programs in C language.

Application programs of MR30 can be developed in C language by using the C compiler NC30WA. Furthermore, the interface library necessary to call the MR30 functions from C language is included with the software package.

5. An upstream process tool named "Configurator" is provided to simplify development procedures

A configurator is furnished so that various items including a ROM write form file can be created by giving simple definitions.

Therefore, there is no particular need to care what libraries must be linked.

In addition, a GUI version of the configurator is available beginning with M3T-MR30/4 V.4.00. It helps the user to create a configuration file without the need to learn how to write it.

3. Introduction to Kernel

3.1 Concept of Real-time OS

This section explains the basic concept of real-time OS.

3.1.1 Why Real-time OS is Necessary

In line with the recent advances in semiconductor technologies, the single-chip microcomputer ROM capacity has increased. ROM capacity of 32K bytes.

As such large ROM capacity microcomputers are introduced, their program development is not easily carried out by conventional methods. Figure 3.1 shows the relationship between the program size and required development time (program development difficulty).

This figure is nothing more than a schematic diagram. However, it indicates that the development period increases exponentially with an increase in program size.

For example, the development of four 8K byte programs is easier than the development of one 32K byte program.⁴

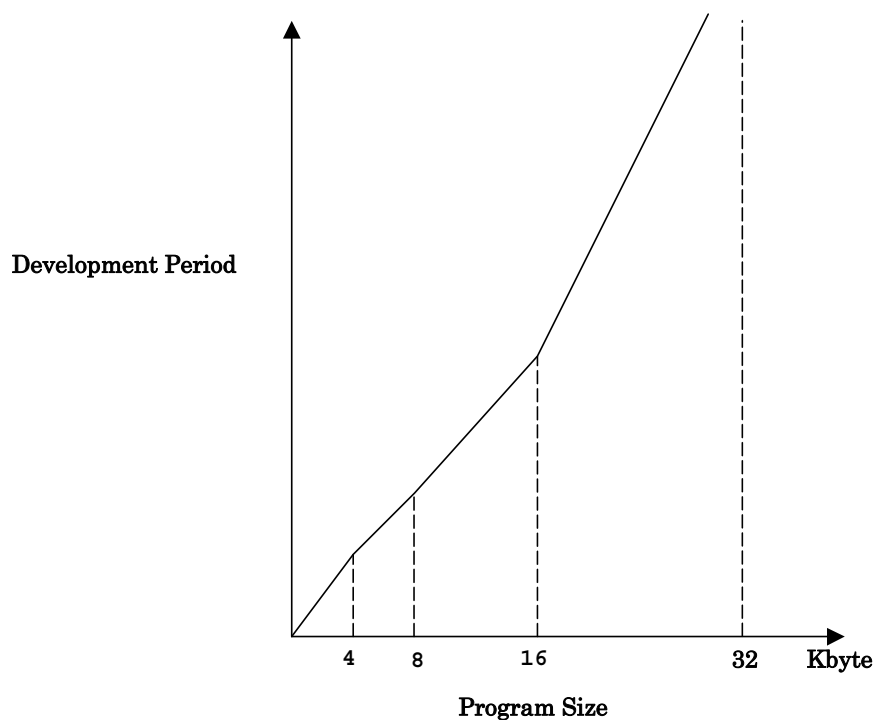


Figure 3.1 Relationship between Program Size and Development Period

Under these circumstances, it is necessary to adopt a method by which large-size programs can be developed within a short period of time. One way to achieve this purpose is to use a large number of microcomputers having a small ROM capacity. Figure 3.2 presents an example in which a number of microcomputers are used to build up an audio equipment system.

⁴ On condition that the ROM program burning step need not be performed.

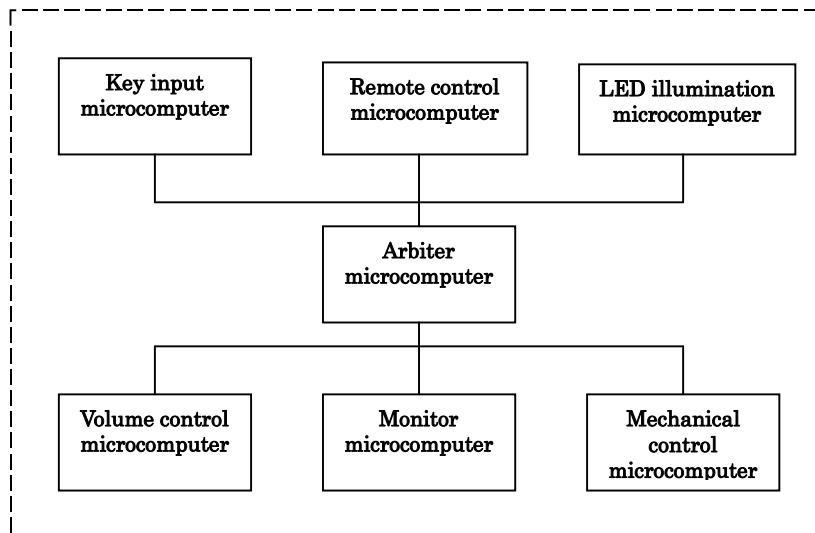


Figure 3.2 Microcomputer-based System Example(Audio Equipment)

Using independent microcomputers for various functions as indicated in the above example offers the following advantages.

1. **Individual programs are small so that program development is easy.**
2. **It is very easy to use previously developed software.**
3. **Completely independent programs are provided for various functions so that program development can easily be conducted by a number of engineers.**

On the other hand, there are the following disadvantages.

1. **The number of parts used increases, thereby raising the product cost.**
2. **Hardware design is complicated.**
3. **Product physical size is enlarged.**

Therefore, if you employ the real-time OS in which a number of programs to be operated by a number of microcomputers are placed under software control of one microcomputer, making it appear that the programs run on separate microcomputers, you can obviate all the above disadvantages while retaining the above-mentioned advantages.

Figure 3.3 shows an example system that will be obtained if the real-time OS is incorporated in the system indicated in Figure 3.2.

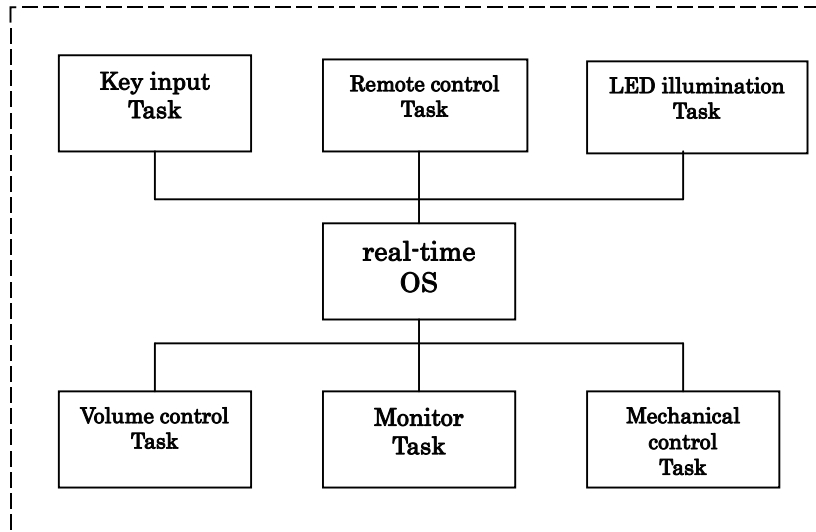


Figure 3.3 Example System Configuration with Real-time OS(Audio Equipment)

In other words, the real-time OS is the software that makes a one-microcomputer system look like operating a number of microcomputers.

In the real-time OS, the individual programs, which correspond to a number of microcomputers used in a conventional system, are called tasks.

3.1.2 Operating Principles of Kernel

A kernel is the core program of real-time OS. The kernel is the software that makes a one-microcomputer system look like operating a number of microcomputers. You should be wondering how the kernel makes a one-microcomputer system function like a number of microcomputers.

As shown in Figure 3.4 the kernel runs a number of tasks according to the time-division system. That is, it changes the task to execute at fixed time intervals so that a number of tasks appear to be executed simultaneously.

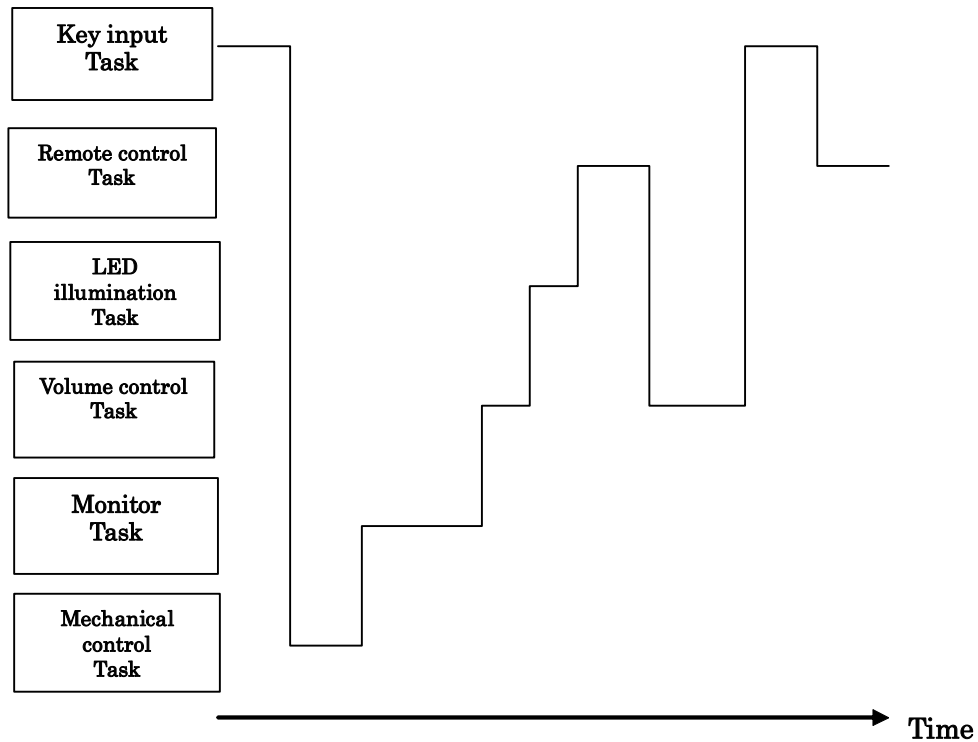


Figure 3.4 Time-division Task Operation

As indicated above, the kernel changes the task to execute at fixed time intervals. This task switching may also be referred to as dispatching. The factors causing task switching (dispatching) are as follows.

- Task switching occurs upon request from a task.
- Task switching occurs due to an external factor such as interrupt.

When a certain task is to be executed again upon task switching, the system resumes its execution at the point of last interruption (See Figure 3.5).

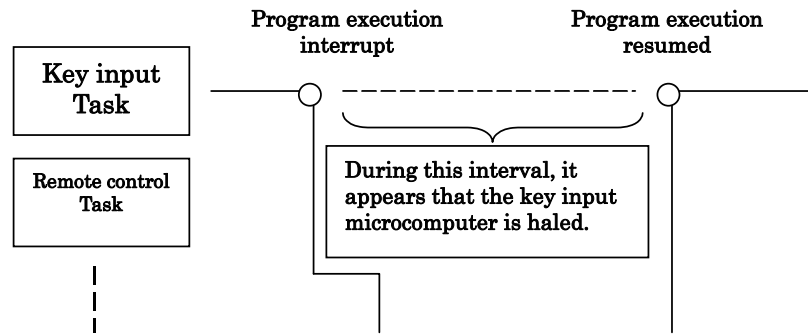


Figure 3.5 Task Execution Interruption and Resumption

In the state shown in Figure 3.5, it appears to the programmer that the key input task or its microcomputer is halted while another task assumes execution control.

Task execution restarts at the point of last interruption as the register contents prevailing at the time of the last interruption are recovered. In other words, task switching refers to the action performed to save the currently executed task register contents into the associated task management memory area and recover the register contents for the task to switch to.

To establish the kernel, therefore, it is only necessary to manage the register for each task and change the register contents upon each task switching so that it looks as if a number of microcomputers exist (See Figure 3.6).

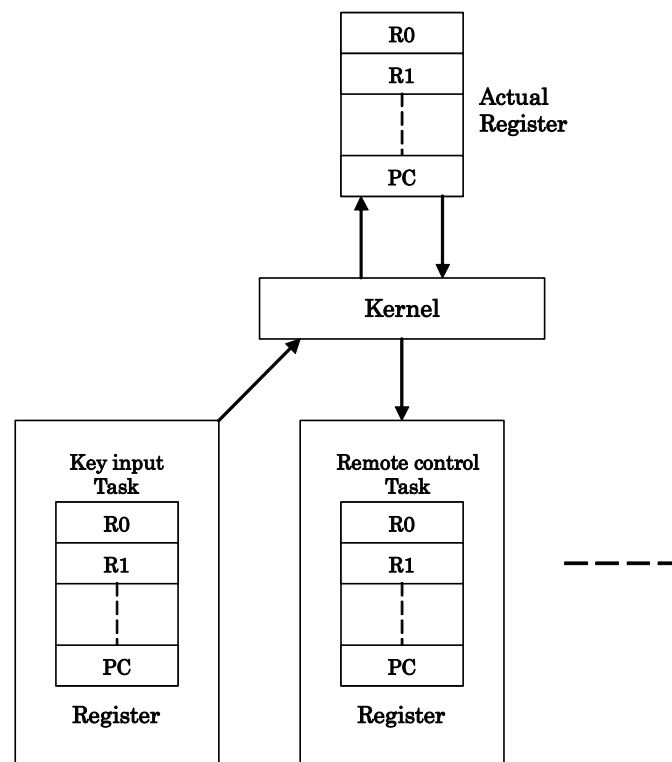


Figure 3.6 Task Switching

The example presented in Figure 3.7⁵ indicates how the individual task registers are managed. In reality, it is necessary to provide not only a register but also a stack area for each task.

⁵ It is figure where all the stack areas of the task were arranged in the same section.

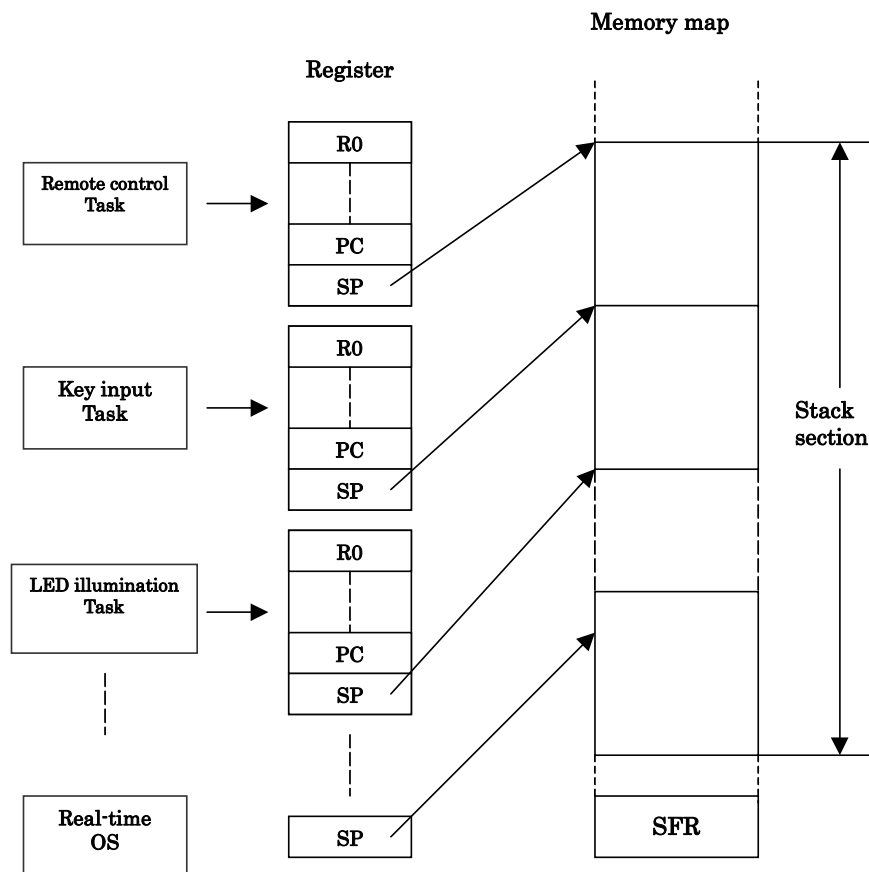


Figure 3.7 Task Register Area

Figure 3.8 shows the register and stack area of one task in detail. In the MR30, the register of each task is stored in a stack area as shown in Figure 3.8. This figure shows the state prevailing after register storage.

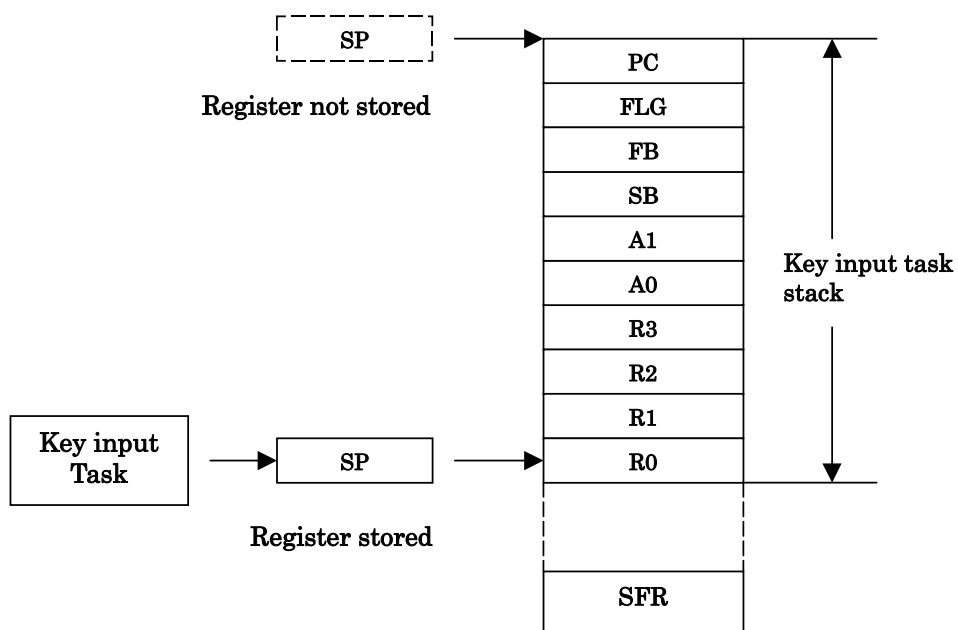


Figure 3.8 Actual Register and Stack Area Management

3.2 Service Call

How does the programmer use the kernel functions in a program?

First, it is necessary to call up kernel function from the program in some way or other. Calling a kernel function is referred to as a service call. Task activation and other processing operations can be initiated by such a service call (See Figure 3.9).

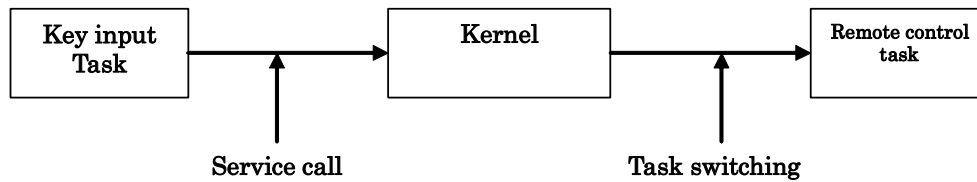


Figure 3.9 Service call

This service call is realized by a function call when the application program is written in C language, as shown below.

```
act_tsk(ID_main,3);
```

Furthermore, if the application program is written in assembly language, it is realized by an assembler macro call, as shown below.

```
act_tsk #ID_main
```

3.2.1 Service Call Processing

When a service call is issued, processing takes place in the following sequence.⁶

1. The current register contents are saved.
2. The stack pointer is changed from the task type to the real-time OS (system) type.
3. Processing is performed in compliance with the request made by the service call.
4. The task to be executed next is selected.
5. The stack pointer is changed to the task type.
6. The register contents are recovered to resume task execution.

The flowchart in Figure 3.10 shows the process between service call generation and task switching.

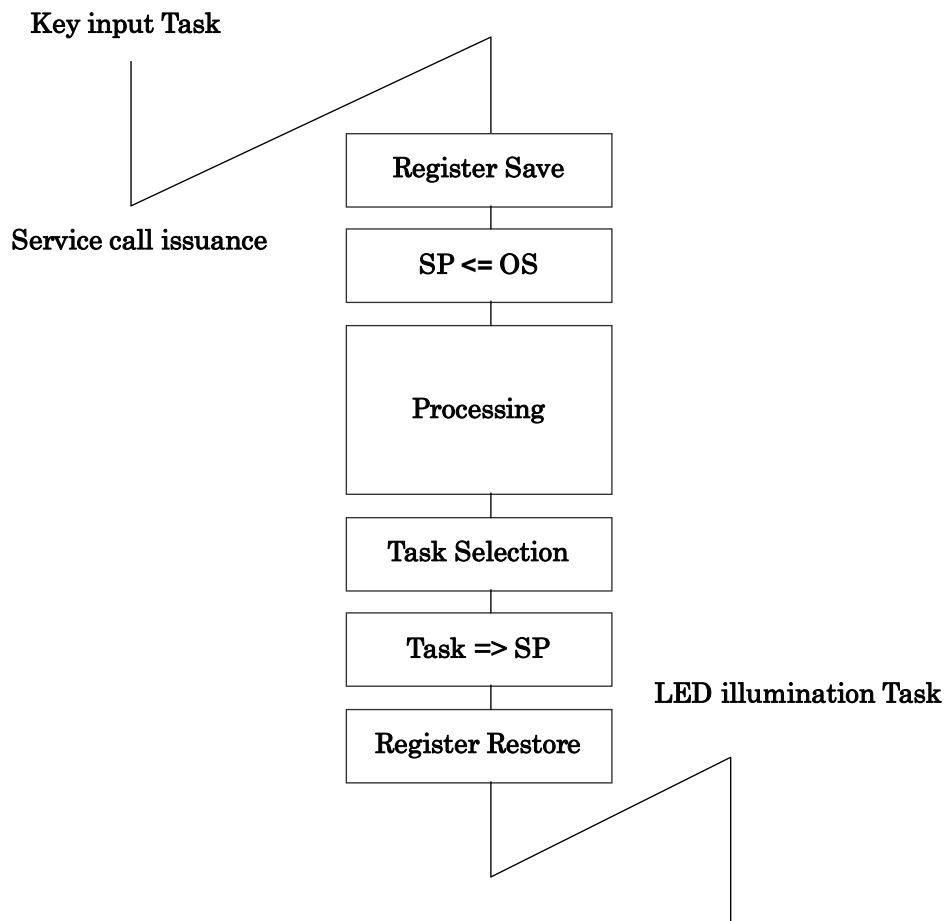


Figure 3.10 Service Call Processing Flowchart

⁶ A different sequence is followed if the issued service call does not evoke task switching.

3.2.2 Processing Procedures for Service Calls from Handlers

When a service call is issued from a handler, task switching does not occur unlike in the case of a service call from a task. However, task switching occurs when a return from a handler⁷ is made.

The processing procedures for service calls from handlers are roughly classified into the following three types.

- 1. A service call from a handler that caused an interrupt during task execution**
- 2. A service call from a handler that caused an interrupt during service call processing**
- 3. A service call from a handler that caused an interrupt (multiplex interrupt) during handler execution**

⁷ The service call can't be issued from OS-independent handler. Therefore, The handler described here does not include the OS-independent handler.

Service Calls from a Handler That Caused an Interrupt during Task Execution

Scheduling (task switching) is initiated by the `ret_int` service call⁸(See Figure 3.11).

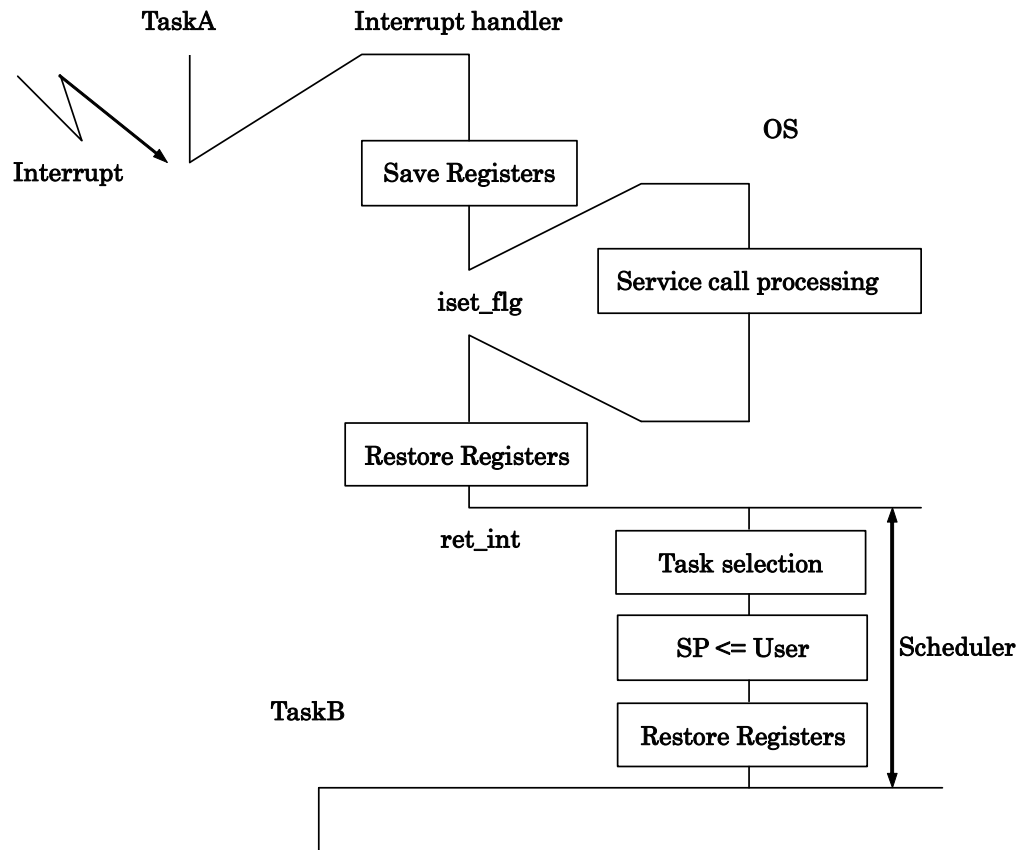


Figure 3.11 Processing Procedure for a Service Call a Handler that caused an interrupt during Task Execution

⁸ The `ret_int` service call is issued automatically when OS-dependent handler is written in C language (when `#pragma INTHANDLER` specified)

Service Calls from a Handler That Caused an Interrupt during Service Call Processing

Scheduling (task switching) is initiated after the system returns to the interrupted service call processing (See Figure 3.12).

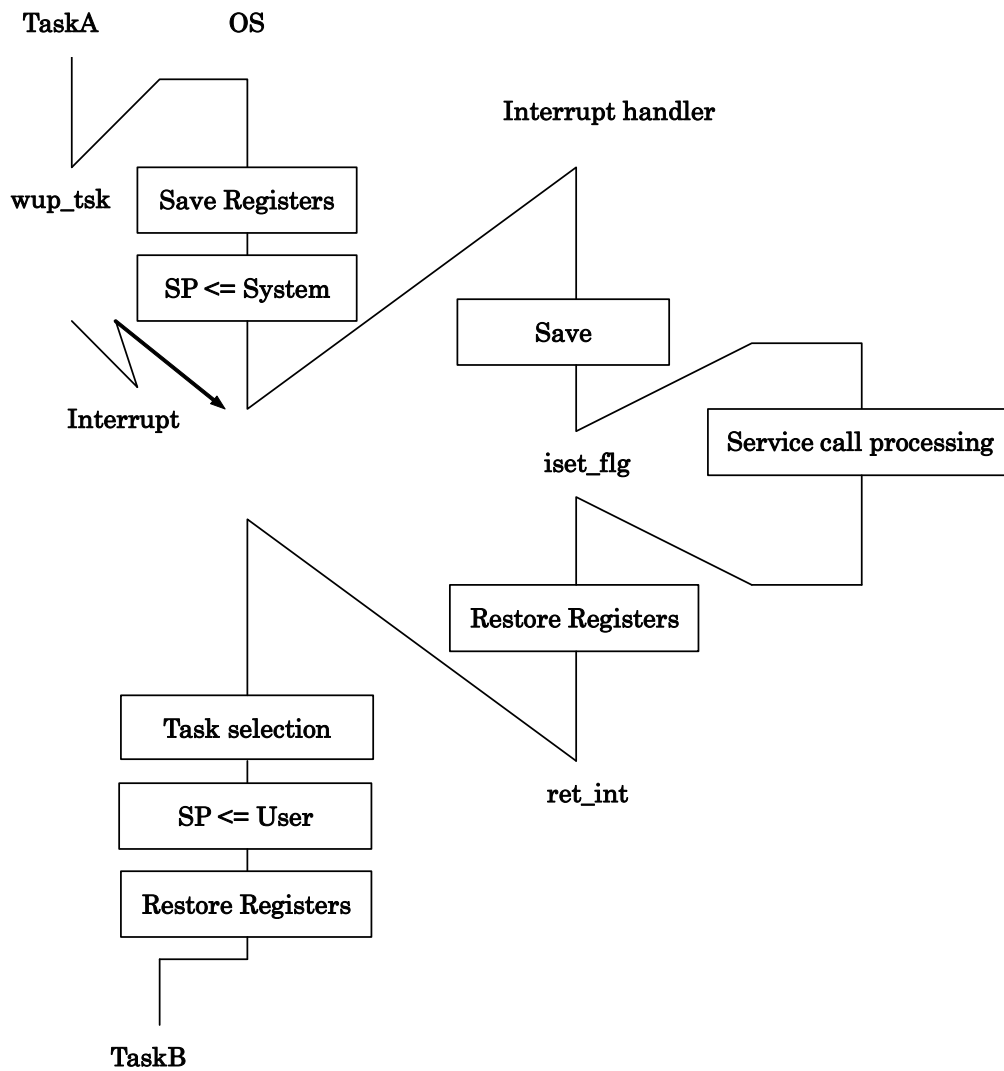


Figure 3.12 Processing Procedure for a Service Call from a Handler that caused an interrupt during Service Call Processing

Service Calls from a Handler That Caused an Interrupt during Handler Execution

Let us think of a situation in which an interrupt occurs during handler execution (this handler is hereinafter referred to as handler A for explanation purposes). When task switching is called for as a handler (hereinafter referred to as handler B) that caused an interrupt during handler A execution issued a service call, task switching does not take place during the execution of the service call (`ret_int` service call) returned from handler B, but is effected by the `ret_int` service call from handler A (See Figure 3.13).

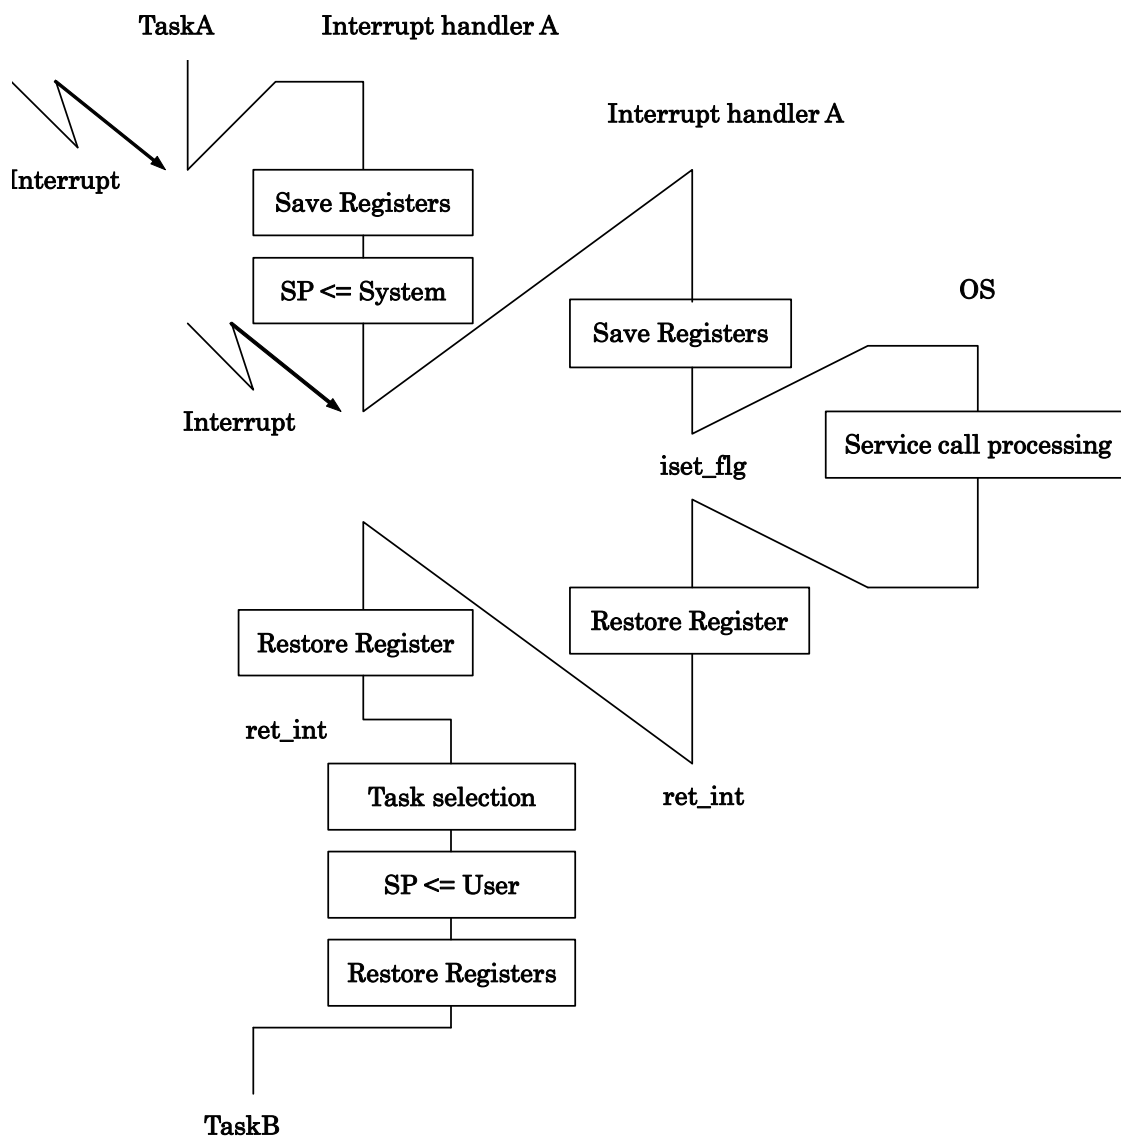


Figure 3.13 Processing Procedure for a service call from a Multiplex interrupt Handler

3.3 Object

The object operated by the service call of a semaphore, a task, etc. is called an "object." An object is identified by the ID number

3.3.1 The specification method of the object in a service call

Each task is identified by the ID number internally in MR30.

For example, the system says, "Start the task having the task ID number 1."

However, if a task number is directly written in a program, the resultant program would be very low in readability. If, for instance, the following is entered in a program, the programmer is constantly required to know what the No. 2 task is.

```
act_tsk(2);
```

Further, if this program is viewed by another person, he/she does not understand at a glance what the No. 2 task is. To avoid such inconvenience, the MR30 provides means of specifying the task by name (function or symbol name).

The program named "configurator cfg30," which is supplied with the MR30, then automatically converts the task name to the task ID number. This task identification system is schematized in Figure 3.14.

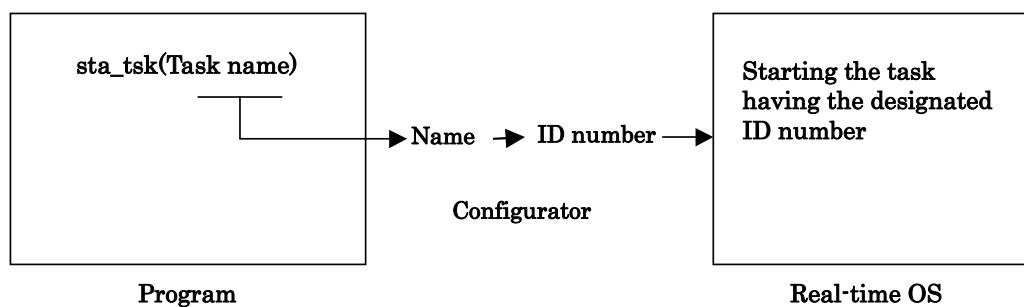


Figure 3.14 Task Identification

```
act_tsk(ID_task);
```

This example specifies that a task corresponding to "ID_task" be invoked.

It should also be noted that task name-to-ID number conversion is effected at the time of program generation. Therefore, the processing speed does not decrease due to this conversion feature.

3.4 Task

This section describes how tasks are managed by MR30.

3.4.1 Task Status

The real-time OS monitors the task status to determine whether or not to execute the tasks.

Figure 3.15 shows the relationship between key input task execution control and task status. When there is a key input, the key input task must be executed. That is, the key input task is placed in the execution (RUNNING) state. While the system waits for key input, task execution is not needed. In that situation, the key input task is in the WAITING state.

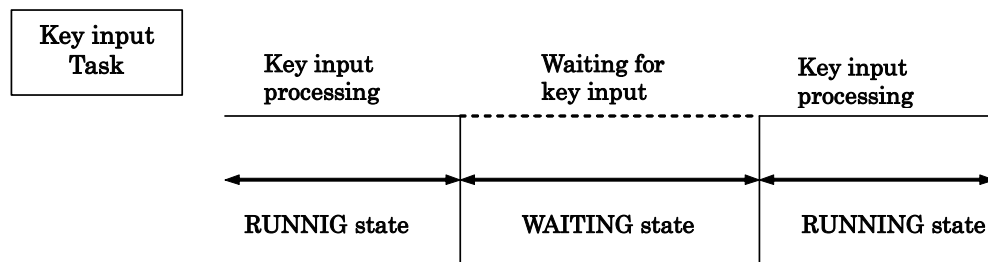


Figure 3.15 Task Status

The MR30 controls the following six different states including the RUNNING and WAITING states.

1. **RUNNING state**
2. **READY state**
3. **WAITING state**
4. **SUSPENDED state**
5. **WAITING-SUSPENDED state**
6. **DORMANT state**

Every task is in one of the above six different states. Figure 3.16 shows task status transition.

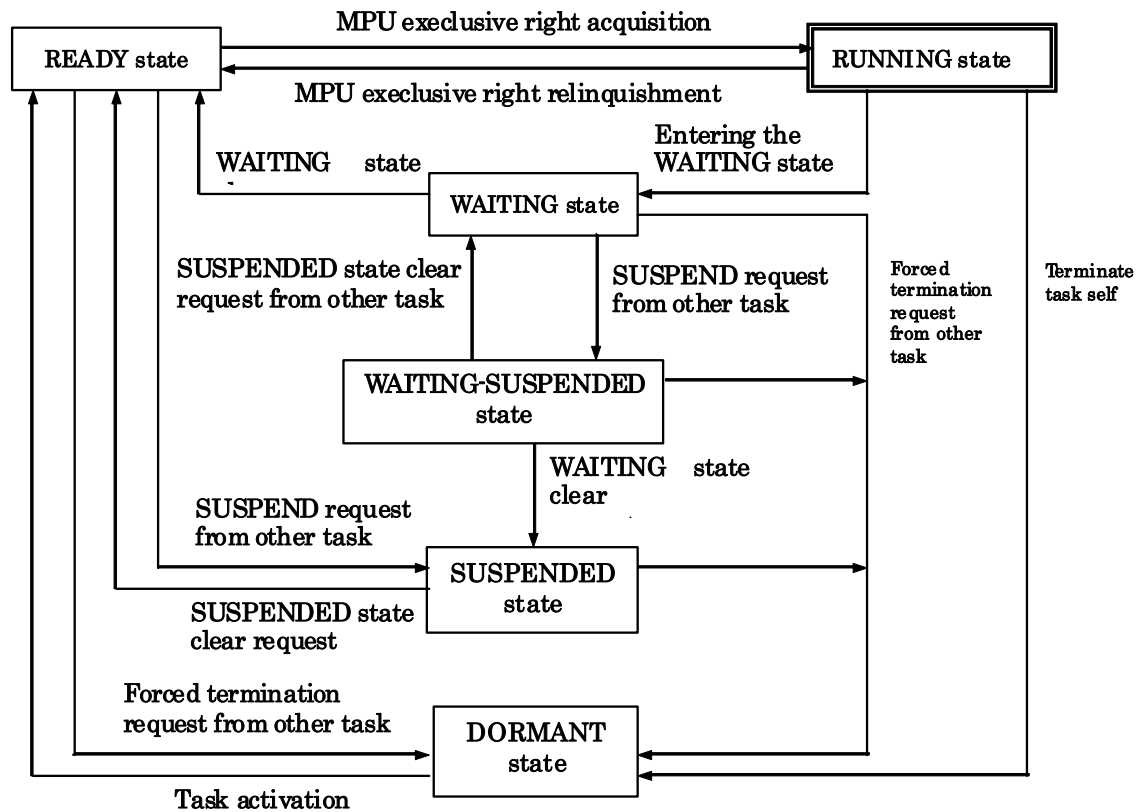


Figure 3.16 MR30 Task Status Transition

1. RUNNING state

In this state, the task is being executed. Since only one microcomputer is used, it is natural that only one task is being executed.

The currently executed task changes into a different state when any of the following conditions occurs.

- ◆ The task has normally terminated itself by ext_tsk service call.
- ◆ The task has placed itself in the WAITING.⁹
- ◆ Since the service call was issued from the RUNNING state task, the WAITING state of another task with a priority higher than the RUNNING state task is cleared.
- ◆ Due to interruption or other event occurrence, the interrupt handler has placed a different task having a higher priority in the READY state.
- ◆ The priority assigned to the task has been changed by chg_pri or ichg_pri service call so that the priority of another READY task is rendered higher.
- ◆ When the ready queue of the issuing task priority is rotated by the rot_rdq or irot_rdq service call and control of execution is thereby abandoned

When any of the above conditions occurs, rescheduling takes place so that the task having the highest priority among those in the RUNNING or READY state is placed in the RUNNING state, and the execution of that task starts.

2. READY state

The READY state refers to the situation in which the task that meets the task execution conditions is still waiting for execution because a different task having a higher priority is currently being executed.

When any of the following conditions occurs, the READY task that can be executed second according to the ready queue is placed in the RUNNING state.

- ◆ A currently executed task has normally terminated itself by ext_tsk service call.

⁹ By issuing dly_tsk, slp_tsk, tslp_tsk, wai_flg, twai_flg, wai_sem, twai_sem, rcv_mbx, trcv_mbx, snd_dtq, tsnd_dtq, rcv_dtq, trcv_dtq, vtsnd_dtq, vsnd_dtq, vtrcv_dtq, vrcv_dtq, get_mpf and tget_mpf service call.

- ◆ A currently executed task has placed itself in the WAITING state.¹⁰
- ◆ A currently executed task has changed its own priority by `chg_pri` or `ichg_pri` service call so that the priority of a different READY task is rendered higher.
- ◆ Due to interruption or other event occurrence, the priority of a currently executed task has been changed so that the priority of a different READY task is rendered higher.
- ◆ When the ready queue of the issuing task priority is rotated by the `rot_rdq` or `irrot_rdq` service call and control of execution is thereby abandoned

3. WAITING state

When a task in the RUNNING state requests to be placed in the WAITING state, it exits the RUNNING state and enters the WAITING state. The WAITING state is usually used as the condition in which the completion of I/O device I/O operation or the processing of some other task is awaited.

The task goes into the WAITING state in one of the following ways.

- ◆ The task enters the WAITING state simply when the `slp_tsk` service call is issued. In this case, the task does not go into the READY state until its WAITING state is cleared explicitly by some other task.
- ◆ The task enters and remains in the WAITING state for a specified time period when the `dly_tsk` service call is issued. In this case, the task goes into the READY state when the specified time has elapsed or its WAITING state is cleared explicitly by some other task.
- ◆ The task is placed into WAITING state for a wait request by the `wai_flg`, `wai_sem`, `rcv_mbx`, `snd_dtq`, `rcv_dtq`, `vsnd_dtq`, `vrcv_dtq`, or `get_mpf` service call. In this case, the task goes from WAITING state to READY state when the request is met or WAITING state is explicitly canceled by another task.
- ◆ The `tslp_tsk`, `twai_flg`, `twai_sem`, `trcv_mbx`, `tsnd_dtq`, `trcv_dtq`, `vtsnd_dtq`, `vtrcv_dtq`, and `tget_mpf` service calls are the timeout-specified versions of the `slp_tsk`, `wai_flg`, `wai_sem`, `rcv_mbx`, `snd_dtq`, `rcv_dtq`, `vsnd_dtq`, `vrcv_dtq`, and `get_mpf` service calls. The task is placed into WAITING state for a wait request by one of these service calls. In this case, the task goes from WAITING state to READY state when the request is met or the specified time has elapsed.
- ◆ If the task is placed into WAITING state for a wait request by the `wai_flg`, `wai_sem`, `rcv_mbx`, `snd_dtq`, `rcv_dtq`, `vsnd_dtq`, `vrcv_dtq`, `get_mpf`, `twai_flg`, `twai_sem`, `trcv_mbx`, `tsnd_dtq`, `trcv_dtq`, `vtsnd_dtq`, `vtrcv_dtq`, or `tget_mpf` service call, the task is queued to one of the following waiting queues depending on the request.
 - Event flag waiting queue
 - Semaphore waiting queue
 - Mailbox message reception waiting queue
 - Data queue data transmission waiting queue
 - Data queue data reception waiting queue
 - Short data queue data transmission waiting queue
 - Short data queue data reception waiting queue
 - Fixed-size memory pool acquisition waiting queue

4. SUSPENDED state

When the `sus_tsk` service call is issued from a task in the RUNNING state or the `isus_tsk` service call is issued from a handler, the READY task designated by the service call or the currently executed task enters the SUSPENDED state. If a task in the WAITING state is placed in this situation, it goes into the WAITING-SUSPENDED state.

The SUSPENDED state is the condition in which a READY task or currently executed task¹¹ is excluded from scheduling to halt processing due to I/O or other error occurrence. That is, when the suspend request is made to a READY task, that task is excluded from the execution queue.

¹⁰ Depends on the `dly_tsk`, `slp_tsk`, `tslp_tsk`, `wai_flg`, `twai_flg`, `wai_sem`, `twai_sem`, `rcv_mbx`, `trcv_mbx`, `snd_dtq`, `tsnd_dtq`, `rcv_dtq`, `trcv_dtq`, `vtsnd_dtq`, `vsnd_dtq`, `vtrcv_dtq`, `tget_mpf`, `get_mpf` or `vrcv_dtq` service call.

¹¹ If the task under execution is placed into a forcible wait state by the `isus_tsk` service call from the handler, the task goes from an executing state directly to a forcible wait state. Please note that in only this case exceptionally, it is possible that a task will go from an executing state directly to a forcible wait state.

Note that no queue is formed for the suspend request. Therefore, the suspend request can only be made to the tasks in the RUNNING, READY, or WAITING state.¹² If the suspend request is made to a task in the SUSPENDED state, an error code is returned.

5. WAITING-SUSPENDED

If a suspend request is issued to a task currently in a WAITING state, the task goes to a WAITING-SUSPENDED state. If a suspend request is issued to a task that has been placed into a WAITING state for a wait request by the slp_tsk, wai_flg, wai_sem, rcv_mbx, snd_dtq, rcv_dtq, vsnd_dtq, vrcv_dtq, get_mpf, tslp_tsk, twai_flg, twai_sem, trcv_mbx, tsnd_dtq, trcv_dtq, vtsnd_dtq, vtrcv_dtq, or tget_mpf service call, the task goes to a WAITING-SUSPENDED state.

When the wait condition for a task in the WAITING-SUSPENDED state is cleared, that task goes into the SUSPENDED state. It is conceivable that the wait condition may be cleared, when any of the following conditions occurs.

- ◆ The task wakes up upon wup_tsk, or iwup_tsk service call issuance.
- ◆ The task placed in the WAITING state by the dly_tsk or tslp_tsk service call wakes up after the specified time elapse.
- ◆ The request of the task placed in the WAITING state by the wai_flg, wai_sem, rcv_mbx, snd_dtq, rcv_dtq, vsnd_dtq, vrcv_dtq, get_mpf, tslp_tsk, twai_flg, twai_sem, trcv_mbx, tsnd_dtq, trcv_dtq, vtsnd_dtq, vtrcv_dtq, or tget_mpf service call is fulfilled.
- ◆ The WAITING state is forcibly cleared by the rel_wai or irel_wai service call

When the SUSPENDED state clear request by rsm_tsk or irsm_tsk is made to a task in the WAITING-SUSPENDED state, that task goes into the WAITING state. Since a task in the SUSPENDED state cannot request to be placed in the WAITING state, status change from SUSPENDED to WAITING-SUSPENDED does not possibly occur.

6. DORMANT

This state refers to the condition in which a task is registered in the MR30 system but not activated. This task state prevails when either of the following two conditions occurs.

- ◆ The task is waiting to be activated.
- ◆ The task is normally terminated by ext_tsk service call or forcibly terminated by ter_tsk service call.

¹² If a forcible wait request is issued to a task currently in a wait state, the task goes to a WAITING-SUSPENDED state.

3.4.2 Task Priority and Ready Queue

In the kernel, several tasks may simultaneously request to be executed. In such a case, it is necessary to determine which task the system should execute first. To properly handle this kind of situation, the system organizes the tasks into proper execution priority and starts execution with a task having the highest priority. To complete task execution quickly, tasks related to processing operations that need to be performed immediately should be given higher priorities.

The MR30 permits giving the same priority to several tasks. To provide proper control over the READY task execution order, the kernel generates a task execution queue called "ready queue." The ready queue structure is shown in Figure 3.17¹³ The ready queue is provided and controlled for each priority level. The first task in the ready queue having the highest priority is placed in the RUNNING state.¹⁴

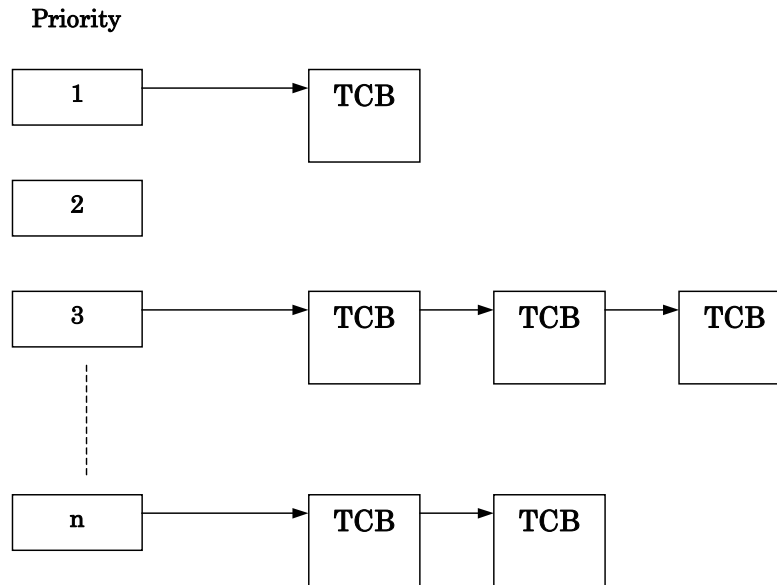


Figure 3.17 Ready Queue (Execution Queue)

¹³ The TCB(task control block is described in the next chapter.)

¹⁴ The task in the RUNNING state remains in the ready queue.

3.4.3 Task Priority and Waiting Queue

In The standard profiles in μ ITRON 4.0 Specification support two waiting methods for each object. In one method, tasks are placed in a waiting queue in order of priority (TA_TPRI attribute); in another, tasks are placed in a waiting queue in order of FIFO (TA_TFIFO).

Figure 3.18 and Figure 3.19 depict the manner in which tasks are placed in a waiting queue in order of "taskD," "taskC," "taskA," and "taskB."

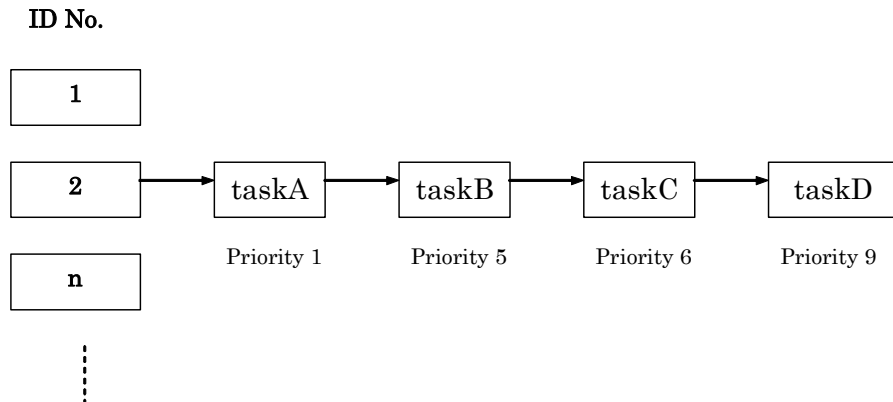


Figure 3.18 Waiting queue of the TA_TPRI attribute

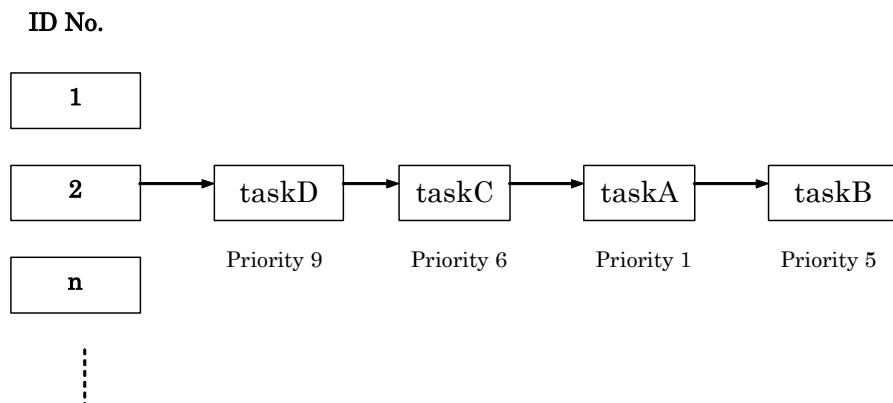


Figure 3.19 Waiting queue of the TA_TFIFO attribute

3.4.4 Task Control Block(TCB)

The task control block (TCB) refers to the data block that the real-time OS uses for individual task status, priority, and other control purposes.

The MR30 manages the following task information as the task control block

- Task connection pointer
Task connection pointer used for ready queue formation or other purposes.
- Task status
- Task priority
- Task register information and other data¹⁵ storage stack area pointer(current SP register value)
- Wake-up counter
Task wake-up request storage area.
- Time-out counter or wait flag pattern
When a task is in a time-out wait state, the remaining wait time is stored; if in a flag wait state, the flag's wait pattern is stored in this area.
- Flag wait mode
This is a wait mode during eventflag wait.
- Timer queue connection pointer
This area is used when using the timeout function. This area stores the task connection pointer used when constructing the timer queue.
- Flag wait pattern
This area is used when using the timeout function.
This area stores the flag wait pattern when using the eventflag wait service call with the timeout function (twai_flg). No flag wait pattern area is allocated when the eventflag is not used.
- Startup request counter
This is the area in which task startup requests are accumulated.
- Extended task information
Extended task information that was set during task generation is stored in this area.

The task control block is schematized in Figure 3.20.

¹⁵ Called the task context

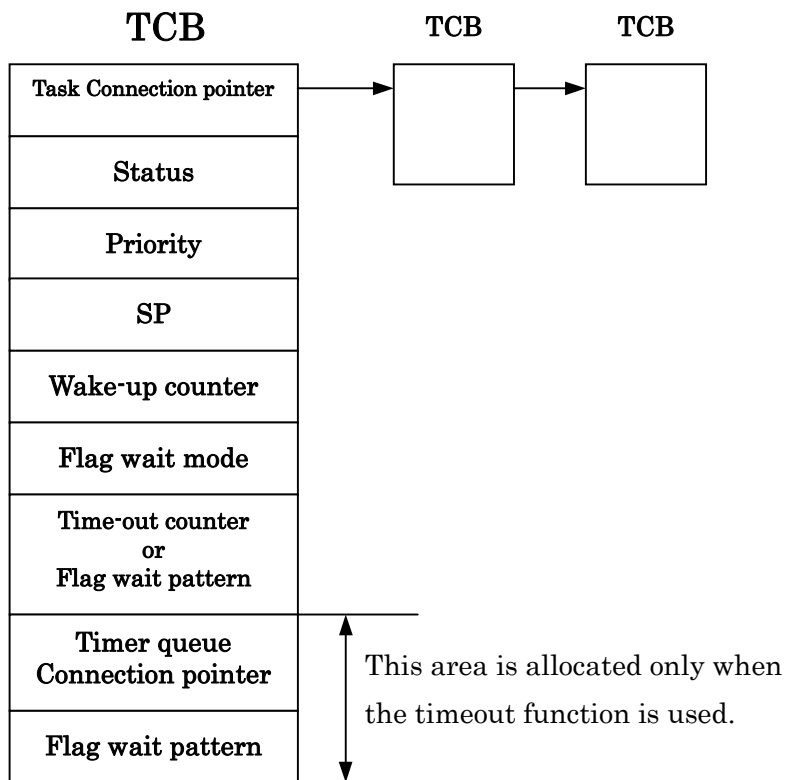


Figure 3.20 Task control block

3.5 System States

3.5.1 Task Context and Non-task Context

The system runs in either context state, "task context" or "non-task context." The differences between the task content and non-task context are shown in Table 3-1. Task Context and Non-task Context.

Table 3.1 Task Context and Non-task Context

	Task context	Non-task context
Invocable service call	Those that can be invoked from task context	Those that can be invoked from non-task context
Task scheduling	Occurs when the queue state has changed to other than dispatch disabled and CPU locked states.	It does not occur.
Stack	User stack	System stack

The processes executed in non-task context include the following.

1. Interrupt Handler

A program that starts upon hardware interruption is called the interrupt handler. The MR30 is not concerned in interrupt handler activation. Therefore, the interrupt handler entry address is to be directly written into the interrupt vector table.

There are two interrupt handlers: Non-kernel interrupts (OS independent interrupts) and kernel interrupts (OS dependent interrupts). For details about each type of interrupt, refer to Section 3.6.

The system clock interrupt handler (isig_tim) is one of these interrupt handlers.

2. Cyclic Handler

The cyclic handler is a program that is started cyclically every preset time. The set cyclic handler may be started or stopped by the sta_cyc(ista_cyc) or stp_cyc(istp_cyc) service call.

The cyclic handler startup time of day is unaffected by a change in the time of day by set_tim(iset_tim).

3. Alarm Handler

The alarm handler is a handler that is started after the lapse of a specified relative time of day. The alarm handler startup time of day is determined by a time of day relative to the time of day set by sta_alm(ista_alm), and is unaffected by a change in the time of day by set_tim(iset_tim).

The cyclic and alarm handlers are invoked by a subroutine call from the system clock interrupt (timer interrupt) handler. Therefore, cyclic and alarm handlers operate as part of the system clock interrupt handler. Note that when the cyclic or alarm handler is invoked, it is executed in the interrupt priority level of the system clock interrupt.

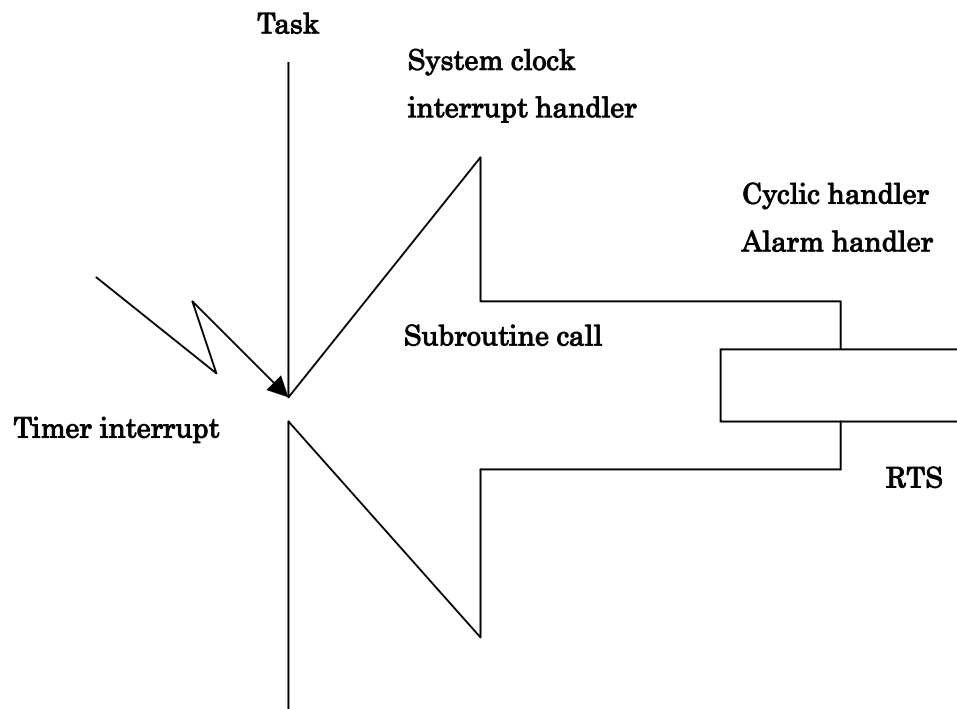


Figure 3.21 Cyclic Handler/Alarm Handler Activation

3.5.2 Dispatch Enabled/Disabled States

The system assumes either a dispatch enabled state or a dispatch disabled state. In a dispatch disabled state, no task scheduling is performed. Nor can service calls be invoked that may cause the service call issuing task to enter a wait state.¹⁶

The system can be placed into a dispatch disabled state or a dispatch enabled state by the `dis_dsp` or `ena_dsp` service call, respectively. Whether the system is in a dispatch disabled state can be known by the `sns_dsp` service call.

3.5.3 CPU Locked/Unlocked States

The system assumes either a CPU locked state or a CPU unlocked state. In a CPU locked state, all external interrupts are disabled against acceptance, and task scheduling is not performed either.

The system can be placed into a CPU locked state or a CPU unlocked state by the `loc_cpu(iloc_cpu)` or `unl_cpu(iunl_cpu)` service call, respectively. Whether the system is in a CPU locked state can be known by the `sns_loc` service call.

The service calls that can be issued from a CPU locked state are limited to those that are listed in Table 3-2.¹⁷

Table 3.2 Invocable Service Calls in a CPU Locked State

<code>loc_cpu</code>	<code>iloc_cpu</code>	<code>unl_cpu</code>	<code>iunl_cpu</code>
<code>ext_tsk</code>	<code>sns_dpn</code>	<code>sns_dsp</code>	<code>sns_ctx</code>
<code>sns_loc</code>			

3.5.4 Dispatch Disabled and CPU Locked States

In μ ITRON 4.0 Specification, the dispatch disabled and the CPU locked states are clearly discriminated. Therefore, if the `unl_cpu` service call is issued in a dispatch disabled state, the dispatch disabled state remains intact and no task scheduling is performed. State transitions are summarized in Table 3.3.

Table 3.3 CPU Locked and Dispatch Disabled State Transitions Relating to `dis_dsp` and `loc_cpu`

State number	Content of state		<code>dis_dsp</code> executed	<code>ena_dsp</code> executed	<code>loc_cpu</code> executed	<code>unl_cpu</code> executed
	CPU locked state	Dispatch disabled state				
1	O	X	X	X	=> 1	=> 3
2	O	O	X	X	=> 2	=> 4
3	X	X	=> 4	=> 3	=> 1	=> 3
4	X	O	=> 4	=> 3	=> 2	=> 4

¹⁶ If a service call not issuable is issued when dispatch disabled, MR30 doesn't return the error and doesn't guarantee the operation.


¹⁷ MR30 does not return an error even when an uninvocable service call is issued from a CPU locked state, in which case, however, its operation cannot be guaranteed.

3.6.3 Controlling Interrupts

Interrupt enable/disable control in a service call is accomplished by IPL manipulation. The IPL value in a service call is set to the kernel mask level(OS interrupt disable level = system.IPL) in order to disable interrupts for the kernel (OS-dependent) interrupt handler. In sections where all interrupts can be enabled, it is returned to the initial IPL value when the service call was invoked.

- For service calls that can be issued from only task context.

When the I flag before issuing a service call is 1.

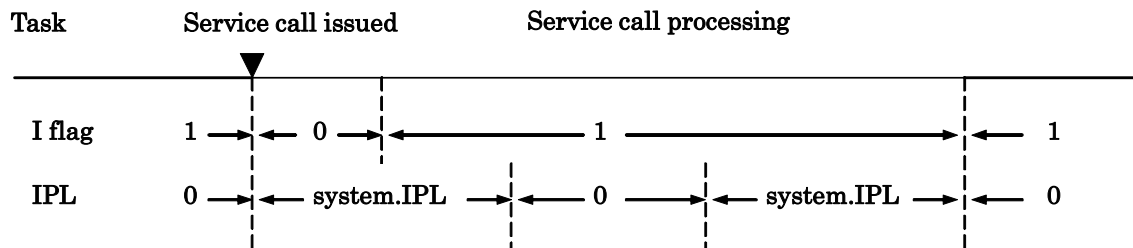

When the I flag before issuing a service call is 0.


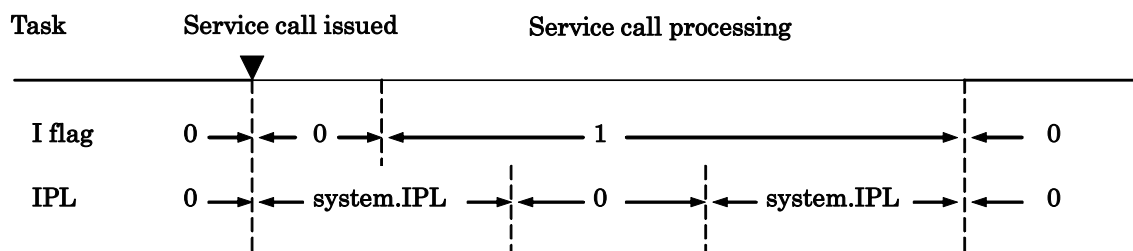


Figure 3.23 Interrupt control in a Service Call that can be Issued from only a Task

- For service calls that can be issued from only non-task context or from both task context and non-task context.

When the I flag before issuing a service call is 1

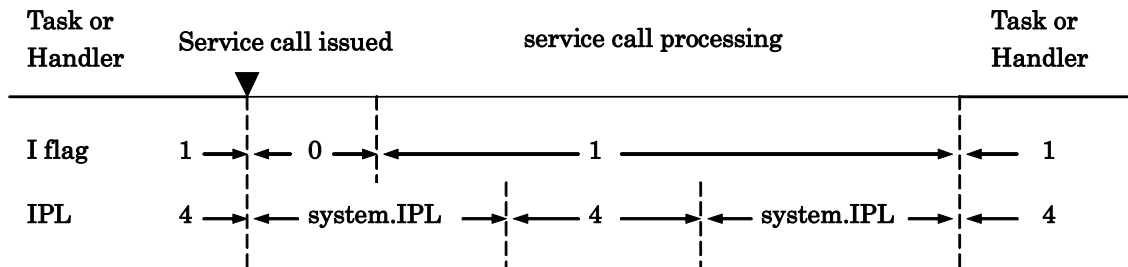

When the I flag before issuing a service call is 0

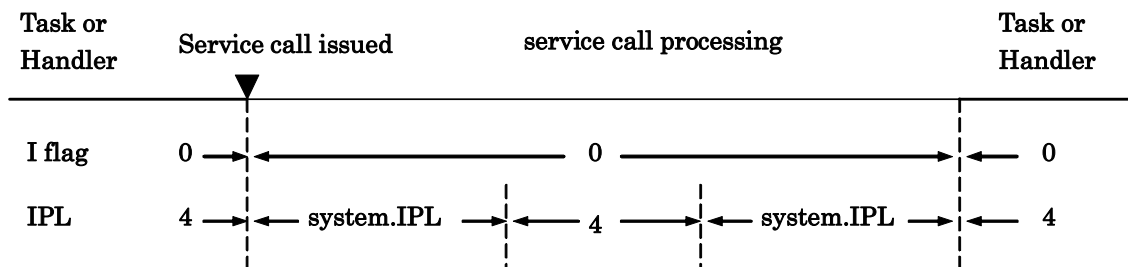


Figure 3.24 Interrupt control in a Service Call that can be Issued from a Task-independent

As shown in Figure 3.23 and Figure 3.24, the interrupt enable flag and IPL change in a service call. For this reason, if you want to disable interrupts in a user application, Renesas does not recommend using the method for manipulating the interrupt disable flag and IPL to disable the interrupts.

The following two methods for interrupt control are recommended:

1. **Modify the interrupt control register (SFR) for the interrupt you want to be disabled.**
2. **Use service calls `loc_cpu(iloc_cpu)` and `unl_cpu(iunl_cpu)`.**

The interrupts that can be controlled by the `loc_cpu(iloc_cpu)` service call are only the kernel(OS-dependent) interrupt. Use method 1 to control the non-kernel(OS-independent) interrupts.

3.7 Stacks

3.7.1 System Stack and User Stack

The MR30 provides two types of stacks: system stack and user stack.

- **User Stack**
One user stack is provided for each task. Therefore, when writing applications with the MR30, it is necessary to furnish the stack area for each task.
- **System Stack**
This stack is used within the MR30 (during service call processing). When a service call is issued from a task, the MR30 switches the stack from the user stack to the system stack (See Figure 3.25). The system stack use the interrupt stack(ISP).

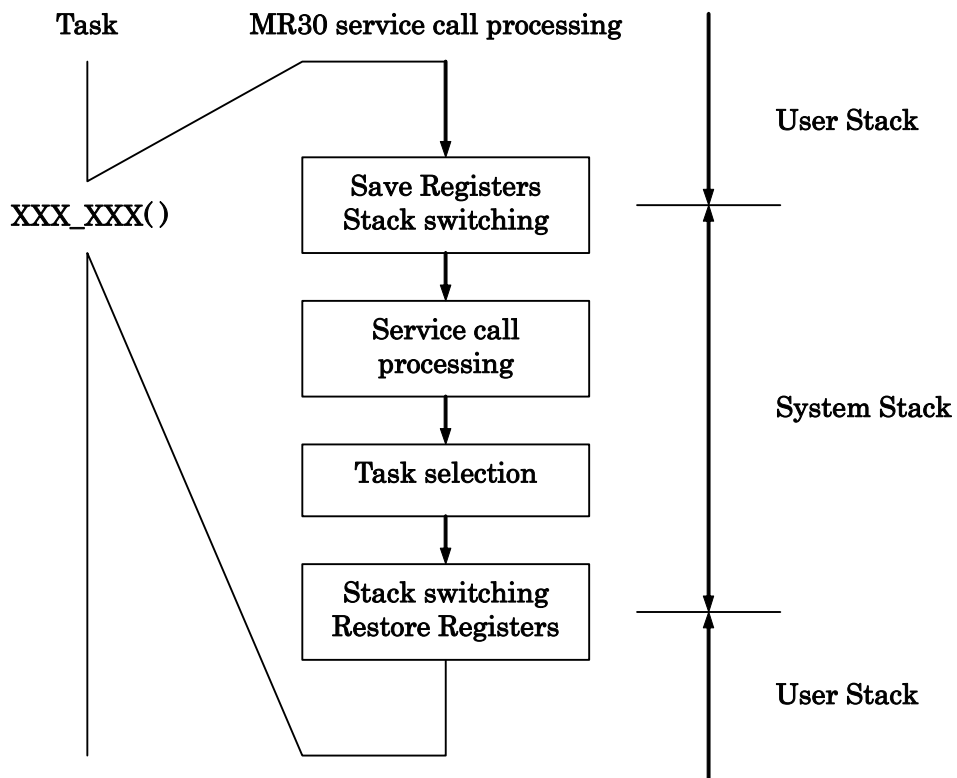


Figure 3.25 System Stack and User Stack

Switchover from user stack to system stack occurs when an interrupt of vector numbers 0 to 31 or 247 to 255 is generated. Consequently, all stacks used by the interrupt handler are the system stack.

4. Kernel

4.1 Module Structure

The MR30 kernel consists of the modules shown in Figure 4.1. Each of these modules is composed of functions that exercise individual module features.

The MR30 kernel is supplied in the form of a library, and only necessary features are linked at the time of system generation. More specifically, only the functions used are chosen from those which comprise these modules and linked by means of the Linkage Editor LN30. However, the scheduler module, part of the task management module, and part of the time management module are linked at all times because they are essential feature functions.

The applications program is a program created by the user. It consists of tasks, interrupt handler, alarm handler, and cyclic handler.¹⁸

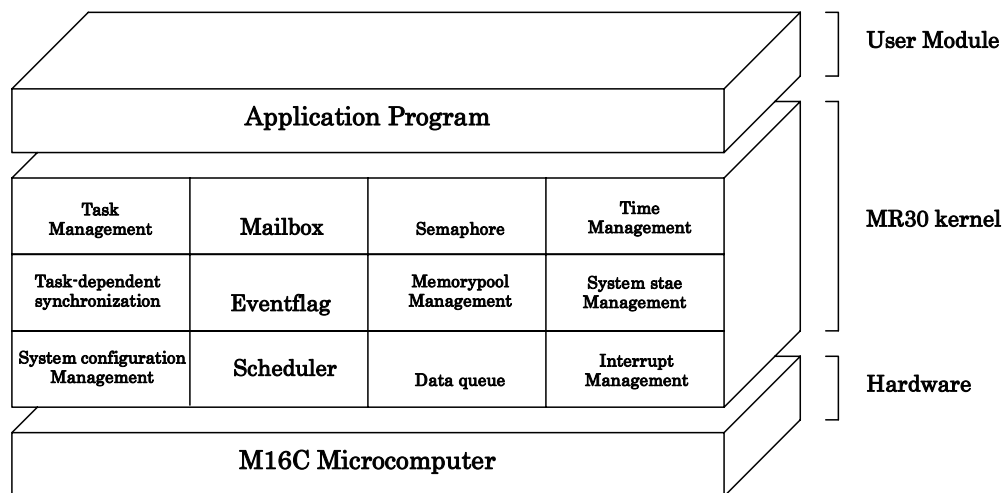


Figure 4.1 MR30 Structure

¹⁸ For details, See 4.3.9.

4.2 Module Overview

The MR30 kernel modules are outlined below.

- **Scheduler**
Forms a task processing queue based on task priority and controls operation so that the high-priority task at the beginning in that queue (task with small priority value) is executed.
- **Task Management Module**
Exercises the management of various task states such as the RUNNING, READY, WAIT, and SUSPENDED state.
- **Task Synchronization Module**
Accomplishes inter-task synchronization by changing the task status from a different task.
- **Interrupt Management Module**
Makes a return from the interrupt handler.
- **Time Management Module**
Sets up the system timer used by the MR30 kernel and starts the user-created alarm handler¹⁹ and cyclic handler.²⁰
- **System Status Management Module**
Gets the system status of MR30.
- **System Configuration Management Module**
Reports the MR30 kernel version number or other information.
- **Sync/Communication Module**
This is the function for synchronization and communication among the tasks. The following three functional modules are offered.
 - ◆ **Eventflag**
Checks whether the flag controlled within the MR30 is set up and then determines whether or not to initiate task execution. This results in accomplishing synchronization between tasks.
 - ◆ **Semaphore**
Reads the semaphore counter value controlled within the MR30 and then determines whether or not to initiate task execution. This also results in accomplishing synchronization between tasks.
 - ◆ **Mailbox**
Provides inter-task data communication by delivering the first data address.
 - ◆ **Data queue**
Performs 16-bit data communication between tasks.
- **Memory pool Management Module**
Provides dynamic allocation or release of a memory area used by a task or a handler.
- **Extended Function Module**
Outside the scope of μ ITRON 4.0 Specification, this function performs reset processing on objects and long data queue function.

¹⁹ This handler actuates once only at preselected times.

²⁰ This handler periodically actuates.

4.3 Kernel Function

4.3.1 Task Management Function

The task management function is used to perform task operations such as task start/stop and task priority updating. The MR30 kernel offers the following task management function service calls.

- **Activate Task (act_tsk, iact_tsk)**
Activates the task, changing its status from DORMANT to either READY or RUNNING. In this service call, unlike in sta_tsk(ista_tsk), startup requests are accumulated, but startup code cannot be specified.
- **Activate Task (sta_tsk, ista_tsk)**
Activates the task, changing its status from DORMANT to either READY or RUNNING. In this service call, unlike in act_tsk(iact_tsk), startup requests are not accumulated, but startup code can be specified.
- **Terminate Invoking Task (ext_tsk)**
When the issuing task is terminated, its state changes to DORMANT state. The task is therefore not executed until it is restarted. If startup requests are accumulated, task startup processing is performed again. In that case, the issuing task behaves as if it were reset.
If written in C language, this service call is automatically invoked at return from the task regardless of whether it is explicitly written when terminated.
- **Terminate Task (ter_tsk)**
Other tasks in other than DORMANT state are forcibly terminated and placed into DORMANT state. If startup requests are accumulated, task startup processing is performed again. In that case, the task behaves as if it was reset. (See Figure 4.2).


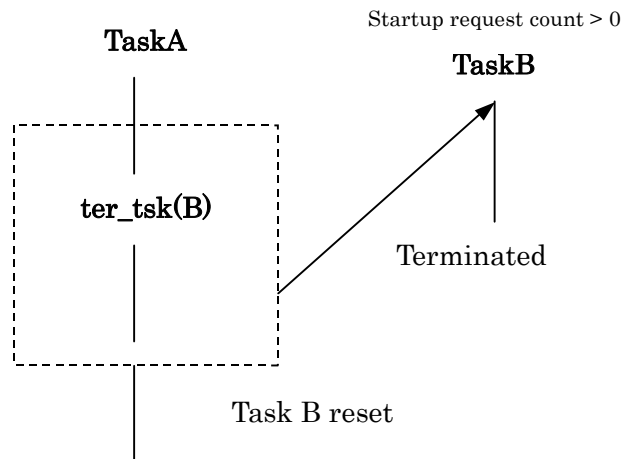



Figure 4.2 Task Resetting

- **Change Task Priority (chg_pri, ichg_pri)**
If the priority of a task is changed while the task is in READY or RUNNING state, the ready queue also is updated. (See Figure 4.3).
Furthermore, if the target task is placed in a waiting queue of objects with TA_TPRI attribute, the waiting queue also is updated. (See Figure 4.4).

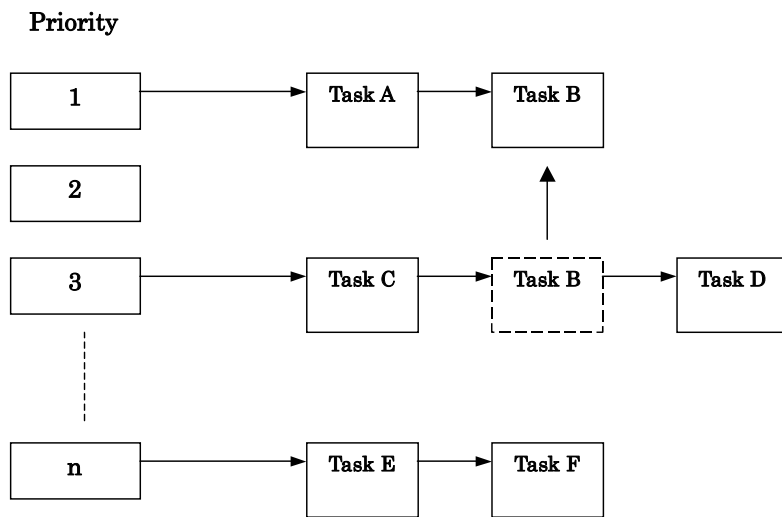

When the priority of task B has been changed from 3 to 1

Figure 4.3 Alteration of task priority

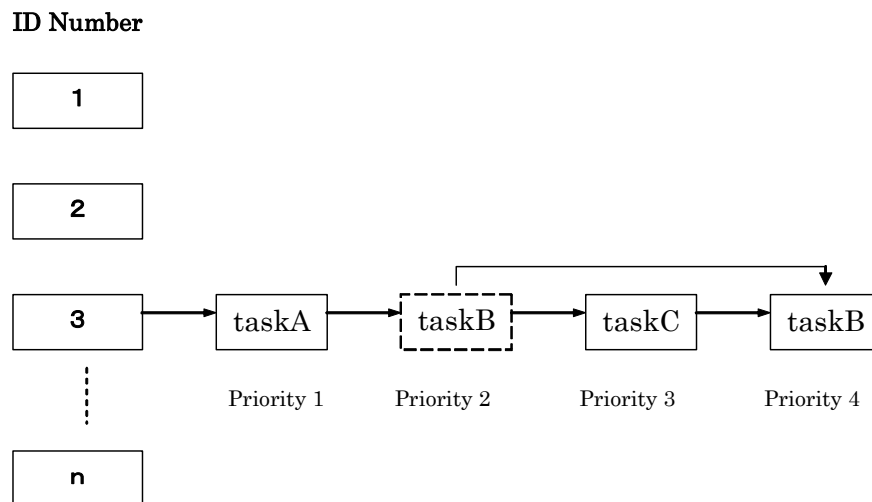

When the priority of Task B is changed into 4

Figure 4.4 Task rearrangement in a waiting queue

- Reference task priority (get_pri, iget_pri)
Gets the priority of a task.
- Reference task status (simple version) (ref_tst, iref_tst)
Refers to the state of the target task.
- Reference task status (ref_tsk, iref_tsk)
Refers to the state of the target task and its priority, etc.

4.3.2 Synchronization functions attached to task

The task-dependent synchronization functions attached to task is used to accomplish synchronization between tasks by placing a task in the WAIT, SUSPENDED, or WAIT-SUSPENDED state or waking up a WAIT state task.

The MR30 offers the following task incorporated synchronization service calls.

- Put Task to sleep (slp_tsk,tslp_tsk)
- Wakeup task (wup_tsk, iwup_tsk)
Wakeup a task that has been placed in a WAIT state by the slp_tsk or tslp_tsk service call.
No task can be waked up unless they have been placed in a WAIT state by.²¹
If a wakeup request is issued to a task that has been kept waiting for conditions other than the slp_tsk or tslp_tsk service call or a task in other than DORMANT state by the wup_tsk or iwup_tsk service call, that wakeup request only will be accumulated.
Therefore, if a wakeup request is issued to a task RUNNING state, for example, this wakeup request is temporarily stored in memory. Then, when the task in RUNNING state is going to be placed into WAIT state by the slp_tsk or tslp_tsk service call, the accumulated wakeup request becomes effective, so that the task continues executing again without going to WAIT state. (See Figure 4.5).
- Cancel Task Wakeup Requests (can_wup)
Clears the stored wakeup request.(See Figure 4.6).

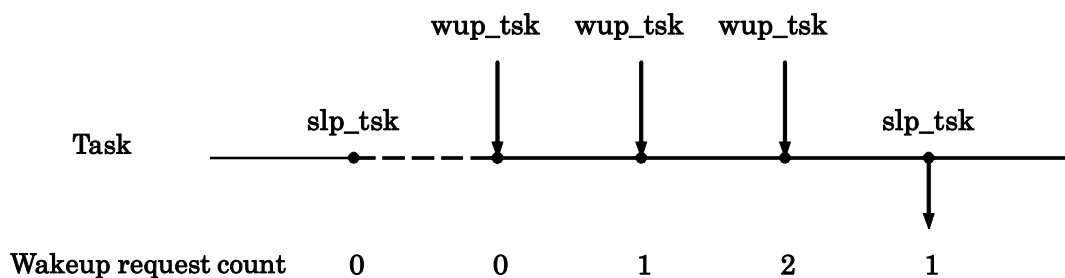


Figure 4.5 Wakeup Request Storage

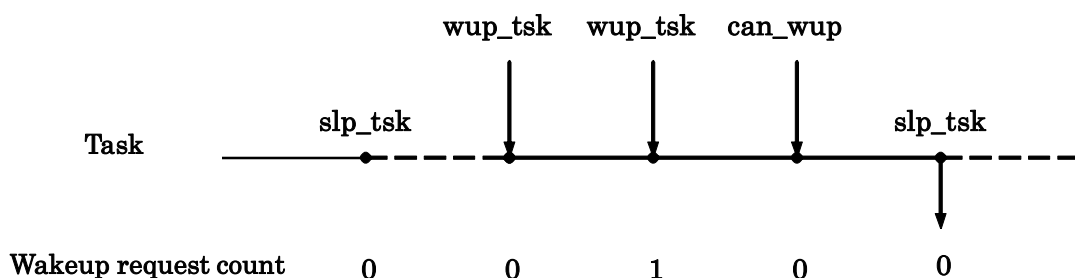


Figure 4.6 Wakeup Request Cancellation

²¹ Note that tasks in WAIT state, but kept waiting for the following conditions are not awoken.

Eventflag wait state, semaphore wait state, data transmission wait state, data reception wait state, timeout wait state, fixed length memory pool acquisition wait, short data transmission wait, or short data reception wait

- These service calls forcibly keep a task suspended for execution or resume execution of a task. If a suspend request is issued to a task in READY state, the task is placed into SUSPENDED state; if issued to a task in WAIT state, the task is placed into WAIT-SUSPENDED state. Since MR30 allows only one forcible wait request to be nested, if sus_tsk is issued to a task in a forcible wait state, the error E_QOVR is returned. (See Figure 4.7).



- Forcibly resume suspended task (frsm_tsk, ifrsm_tsk)
Clears the number of suspension requests nested to 0 and forcibly resumes execution of a task. Since MR30 allows only one suspension request to be nested, this service call behaves the same way as rsm_tsk and irsm_tsk..(See Figure 4.8).

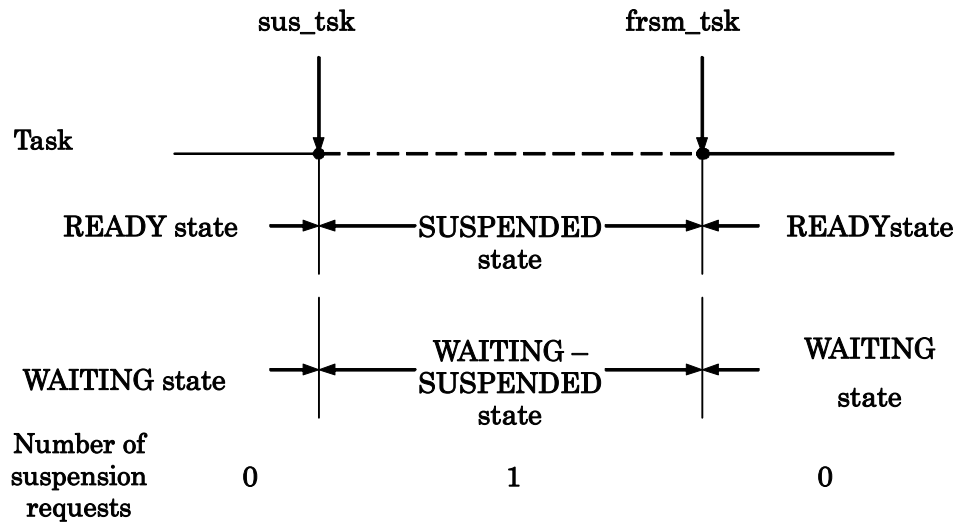


Figure 4.8 Forcible wait of a task and forcible resume

- Release task from waiting (rel_wai, irel_wai)
Forcibly frees a task from WAITING state. A task is freed from WAITING state by this service call when it is in one of the following wait states.
 - ◆ Timeout wait state
 - ◆ Wait state entered by slp_tsk service call (+ timeout included)
 - ◆ Event flag (+ timeout included) wait state
 - ◆ Semaphore (+ timeout included) wait state
 - ◆ Message (+ timeout included) wait state
 - ◆ Data transmission (+ timeout included) wait state
 - ◆ Data reception (+ timeout included) wait state
 - ◆ Fixed-size memory block (+ timeout included) acquisition wait state
 - ◆ Short data transmission (+ timeout included) wait state
 - ◆ Short data reception (+ timeout included) wait state

- Delay task (dly_tsk)
Keeps a task waiting for a finite length of time. Figure 4.9 shows an example in which execution of a task is kept waiting for 10 ms by the dly_tsk service call. The timeout value should be specified in ms units, and not in time tick units.

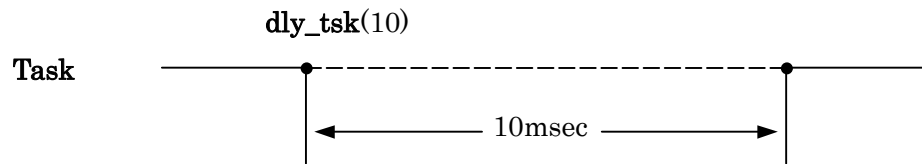


Figure 4.9 dly_tsk service call

4.3.3 Synchronization and Communication Function (Semaphore)

The semaphore is a function executed to coordinate the use of devices and other resources to be shared by several tasks in cases where the tasks simultaneously require the use of them. When, for instance, four tasks simultaneously try to acquire a total of only three communication lines as shown in Figure 4.10, communication line-to-task connections can be made without incurring contention.

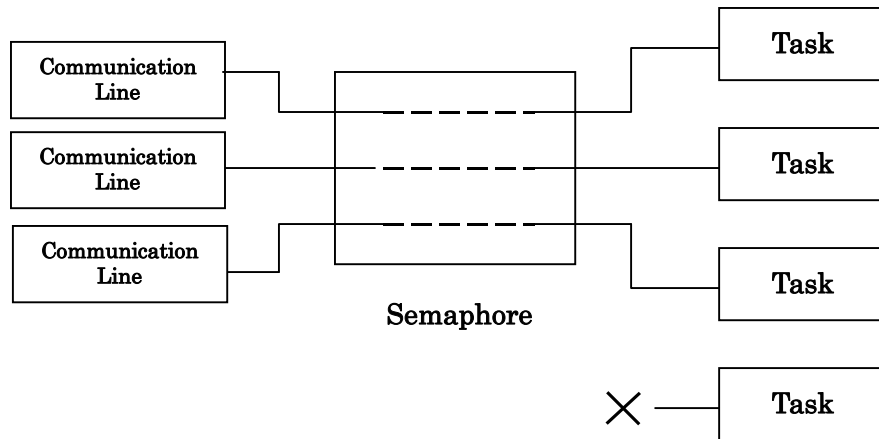


Figure 4.10 Exclusive Control by Semaphore

The semaphore has an internal semaphore counter. In accordance with this counter, the semaphore is acquired or released to prevent competition for use of the same resource.(See Figure 4.11).

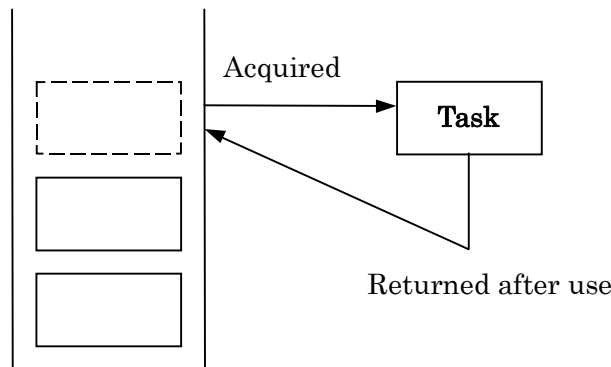


Figure 4.11 Semaphore Counter

The MR30 kernel offers the following semaphore synchronization service calls.

- **Release Semaphore Resource(sig_sem, isig_sem)**
Releases one resource to the semaphore. This service call wakes up a task that is waiting for the semaphores service, or increments the semaphore counter by 1 if no task is waiting for the semaphores service.
- **Acquire Semaphore Resource(wai_sem, twai_sem)**
Waits for the semaphores service. If the semaphore counter value is 0 (zero), the semaphore cannot be acquired. Therefore, the WAITING state prevails.
- **Acquire Semaphore Resource(pol_sem, ipol_sem)**
Acquires the semaphore resource. If there is no semaphore resource to acquire, an error code is returned and the WAITING state does not prevail.

- **Reference Semaphore Status (ref_sem, iref_sem)**
Refers the status of the target semaphore. Checks the count value and existence of the wait task for the target semaphore.
Figure 4.12 shows example task execution control provided by the wai_sem and sig_sem service calls.

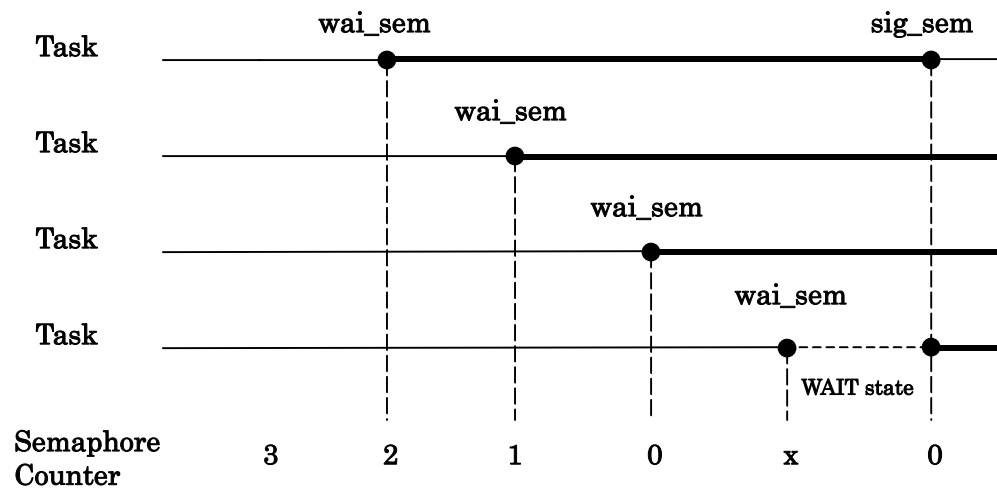


Figure 4.12 Task Execution Control by Semaphore

4.3.4 Synchronization and Communication Function (Eventflag)

The eventflag is an internal facility of MR30 that is used to synchronize the execution of multiple tasks. The eventflag uses a flag wait pattern and a 16-bit pattern to control task execution. A task is kept waiting until the flag wait conditions set are met.

It is possible to determine whether multiple waiting tasks can be enqueued in one eventflag waiting queue by specifying the eventflag attribute TA_WSGL or TA_WMUL.

Furthermore, it is possible to clear the eventflag bit pattern to 0 when the eventflag meets wait conditions by specifying TA_CLR for the eventflag attribute.

There are following eventflag service calls that are provided by the MR30 kernel.

- **Set Eventflag (set_flg, iset_flg)**
Sets the eventflag so that a task waiting the eventflag is released from the WAITING state.
- **Clear Eventflag (clr_flg, iclr_flg)**
Clears the Eventflag.
- **Wait for Eventflag (wai_flg, twai_flg)**
Waits until the eventflag is set to a certain pattern. There are two modes as listed below in which the eventflag is waited for.
 - ◆ **AND wait**
Waits until all specified bits are set.
 - ◆ **OR wait**
Waits until any one of the specified bits is set
- **Wait for Eventflag (polling)(pol_flg, ipol_flg)**
Examines whether the eventflag is in a certain pattern. In this service call, tasks are not placed in WAITING state.
- **Reference Eventflag Status (ref_flg, iref_flg)**
Checks the existence of the bit pattern and wait task for the target eventflag.

Figure 4.13 shows an example of task execution control by the eventflag using the wai_flg and set_flg service calls.

The eventflag has a feature that it can wake up multiple tasks collectively at a time.

In Figure 4.13, there are six tasks linked one to another, task A to task F. When the flag pattern is set to 0xF by the set_flg service call, the tasks that meet the wait conditions are removed sequentially from the top of the queue. In this diagram, the tasks that meet the wait conditions are task A, task C, and task E. Out of these tasks, task A, task C, and task E are removed from the queue.

If this event flag has a TA_CLR attribute, when the waiting of Task A is canceled, the bit pattern of the event flag will be set to 0, and Task C and Task E will not be removed from queue.

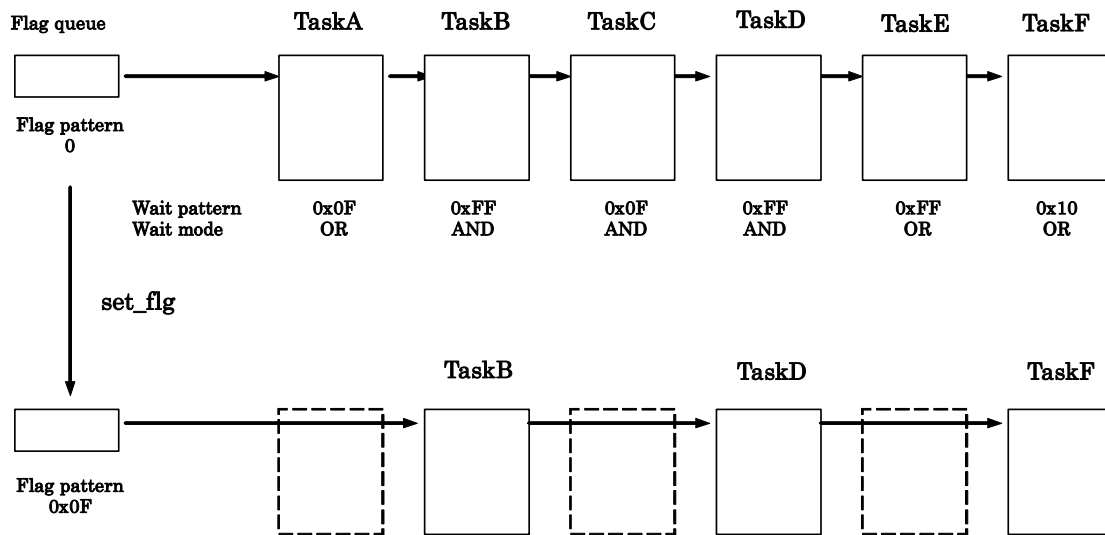


Figure 4.13 Task Execution Control by the Eventflag

4.3.5 Synchronization and Communication Function (Data Queue)

The data queue is a mechanism to perform data communication between tasks. In Figure 4.14, for example, task A can transmit data to the data queue and task B can receive the transmitted data from the data queue.

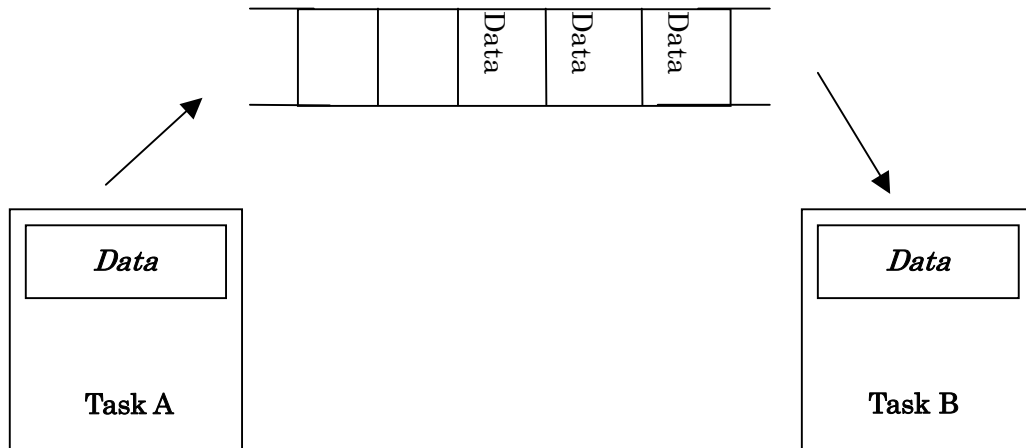


Figure 4.14 Data queue

Data in width of 16 bits can be transmitted to this data queue.

The data queue has the function to accumulate data. The accumulated data is retrieved in order of FIFO²². However, the number of data that can be accumulated in the data queue is limited. If data is transmitted to the data queue that is full of data, the service call issuing task goes to a data transmission wait state.

There are following data queue service calls that are provided by the MR30 kernel.

- **Send to Data Queue (snd_dtq, tsnd_dtq)**
The data is transmitted to the data queue. If the data queue is full of data, the task goes to a data transmission wait state.
- **Send to Data Queue (psnd_dtq, ipsnd_dtq)**
The data is transmitted to the data queue. If the data queue is full of data, the task returns error code without going to a data transmission wait state.
- **Forced Send to Data Queue (fsnd_dtq, ifsnd_dtq)**
The data is transmitted to the data queue. If the data queue is full of data, the data at the top of the data queue or the oldest data is removed, and the transmitted data is stored at the tail of the data queue.
- **Receive from Data Queue (rcv_dtq, trcv_dtq)**
The data is retrieved from the data queue. If the data queue has no data in it, the task is kept waiting until data is transmitted to the data queue.
- **Receive from Data Queue (prcv_dtq, iprcv_dtq)**
The data is received from the data queue. If the data queue has no data in it, the task returns error code without going to a data reception wait state.
- **Reference Data Queue Status (ref_dtq, iref_dtq)**
Checks to see if there are any tasks waiting for data to be entered in the target data queue and refers to the number of the data in the data queue.

²² First In First Out

4.3.6 Synchronization and Communication Function (Mailbox)

The mailbox is a mechanism to perform data communication between tasks. In Figure 4.15, for example, task A can drop a message into the mailbox and task B can retrieve the message from the mailbox. Since mailbox-based communication is achieved by transferring the start address of a message from a task to another, this mode of communication is performed at high speed independently of the message size.

The kernel manages the message queue by means of a link list. The application should prepare a header area that is to be used for a link list. This is called the message header. The message header and the area actually used by the application to store a message are called the message packet. The kernel rewrites the content of the message header as it manages the message queue. The message header cannot be rewritten from the application. The structure of the message queue is shown in Figure 4.16. The message header has its data types defined as shown below.

T_MSG: Mailbox message header
T_MSG_PRI: Mailbox message header with priority included

Messages in any size can be enqueued in the message queue because the header area is reserved on the application side. In no event will tasks be kept waiting for transmission.

Messages can be assigned priority, so that messages will be received in order of priority beginning with the highest. In this case, TA_MPRI should be added to the mailbox attribute. If messages need to be received in order of FIFO, add TA_MFIFO to the mailbox attribute.²³ Furthermore, if tasks in a message wait state are to receive a message, the tasks can be prioritized in which order they can receive a message, beginning with one that has the highest priority. In this case, add TA_TPRI to the mailbox attribute. If tasks are to receive a message in order of FIFO, add TA_TFIFO to the mailbox attribute.²⁴

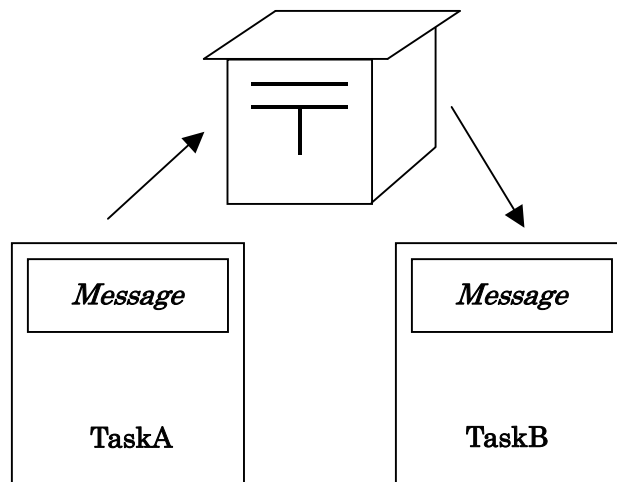


Figure 4.15 Mailbox

²³ It is in the mailbox definition "message_queue" of the configuration file that the TA_MPRI or TA_MFIFO attribute should be added.

²⁴ It is in the mailbox definition "wait_queue" of the configuration file that the TA_TPRI or TA_TFIFO attribute should be added.

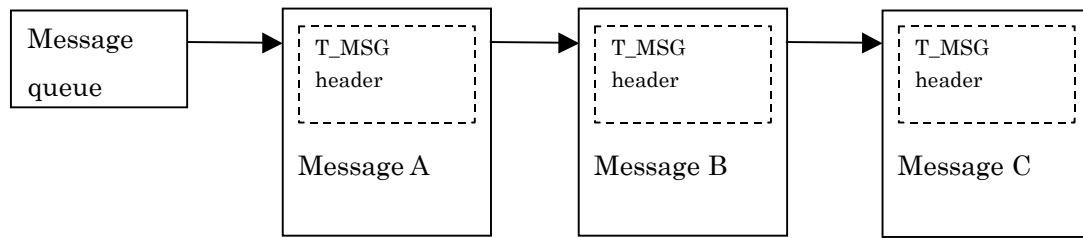


Figure 4.16 Message queue

There are following data queue service calls that are provided by the MR30 kernel.

- **Send to Mailbox (snd_mbx, isnd_mbx)**
Transmits a message. Namely, a message is dropped into the mailbox.
- **Receive from Mailbox (rcv_mbx, trcv_mbx)**
Receives a message. Namely, a message is retrieved from the mailbox. At this time, if the mailbox has no messages in it, the task is kept waiting until a message is sent to the mailbox.
- **Receive from Mailbox (polling) (prcv_mbx, iprcv_mbx)**
Receives a message. The difference from the rcv_mbx service call is that if the mailbox has no messages in it, the task returns error code without going to a wait state.
- **Reference Mailbox Status (ref_mbx, iref_mbx)**
Checks to see if there are any tasks waiting for a message to be put into the target mailbox and refers to the message present at the top of the mailbox.

4.3.7 Memory pool Management Function(Fixed-size Memory pool)

A fixed-size memory pool is the memory of a certain decided size. The memory block size is specified at the time of a configuration. Figure 4.17 is a figure about the example of a fixed-size memory pool of operation.

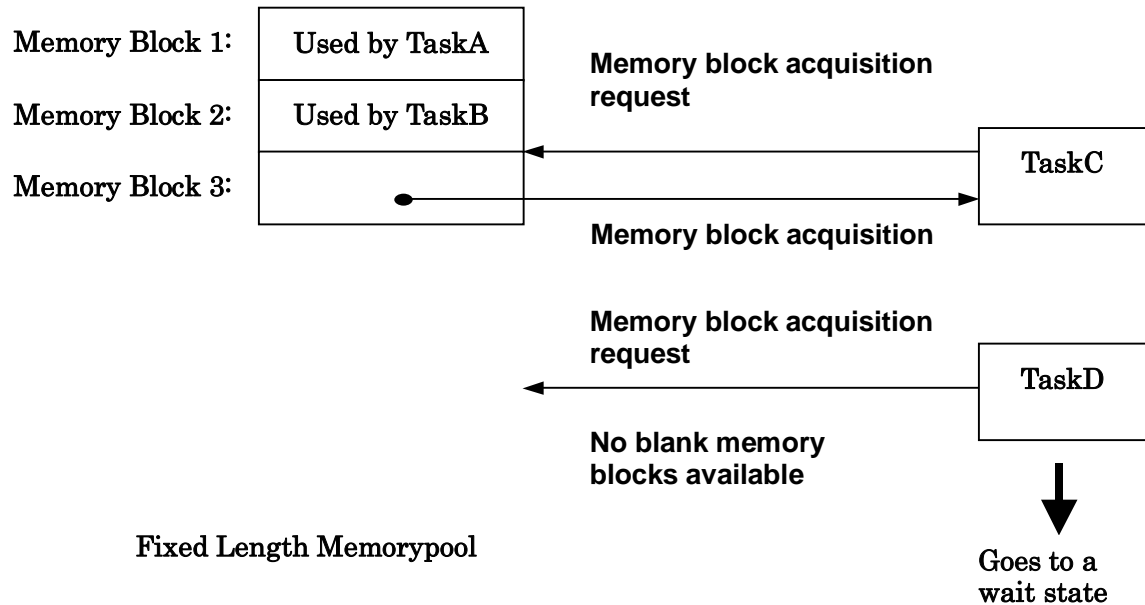


Figure 4.17 Memory Pool Management

- **Acquire Fixed-size Memory Block (get_mpf, tget_mpf)**
Acquires a memory block from the fixed-size memory pool that has the specified ID. If there are no blank memory blocks in the specified fixed-size memory pool, the task that issued this service call goes to WAITING state and is enqueued in a waiting queue.
- **Acquire Fixed-size Memory Block (polling) (pget_mpf, ipget_mpf)**
Acquires a memory block from the fixed-size memory pool that has the specified ID. The difference from the get_mpf and tget_mpf service calls is that if there are no blank memory blocks in the memory pool, the task returns error code without going to WAITING state.
- **Release Fixed-size Memory Block (rel_mpf, irel_mpf)**
Frees the acquired memory block. If there are any tasks in a wait state for the specified fixed-size memory pool, the task enqueued at the top of the waiting queue is assigned the freed memory block. In this case, the task changes its state from WAITING state to READY state. If there are no tasks in a wait state, the memory block is returned to the memory pool.
- **Reference Fixed-size Memory Pool Status (ref_mpf, iref_mpf)**
Checks the number and the size of blank blocks available in the target memory pool.

4.3.8 Variable-size Memory Pool Management Function

The technique that allows you to arbitrary define the size of memory block acquirable from the memory pool is termed Variable-size scheme. The MR30 manages memory in terms of four fixed-size memory block sizes.

The MR30 calculates the size of individual blocks based on the maximum memory block size to be acquired. You specify the maximum memory block size using the configuration file.

e.g.

```
variable_memorypool[] {  
    max_memsize      = 400; <---- Maximum size  
    heap_size        = 5000;  
};
```

Defining a variable-size memory pool as shown above causes four fixed-size memory block sizes to become 56 bytes, 112 bytes, 224 bytes, and 448 bytes in compliance with max_memsize.

In the case of user-requested memory, the MR30 performs calculations based on the specified size and selects and allocates the optimum one of four fixed-size memory block sizes. The MR30 cannot allocate a memory block that is not one of the four sizes.

Service calls the MR30 provides include the following.

- **Acquire Variable-size Memory Block (pget_mpl)**
Round off a block size you specify to the optimal block size among the four block sizes, and acquires memory having the rounded-off size from the memory pool.
The following equations define the block sizes:

```
a = (((max_memsize+(X-1))/ X * 8) + 1) * 8  
b = a * 2  
c = a * 4  
d = a * 8
```

max_memsize: the value specified in the configuration file

X: data size for block control (8 byte)

For example, if you request 200-byte, the MR30 rounds off the size to 244 bytes, and acquires 244-byte memory. If memory acquirement goes well, the MR30 returns the first address of the memory acquired along with the error code "E_OK". If memory acquirement fails, the MR30 returns the error code "E_TMOUT".

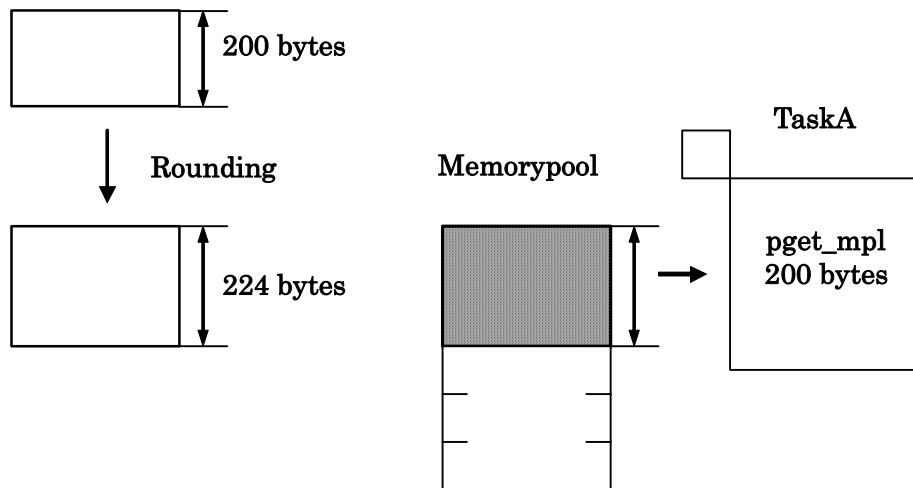


Figure 4.18 pget_mpl processing

- **Release Acquire Variable-size Memory Block (rel_mpl)**
Releases a acquired memory block by pget_mpl service call.

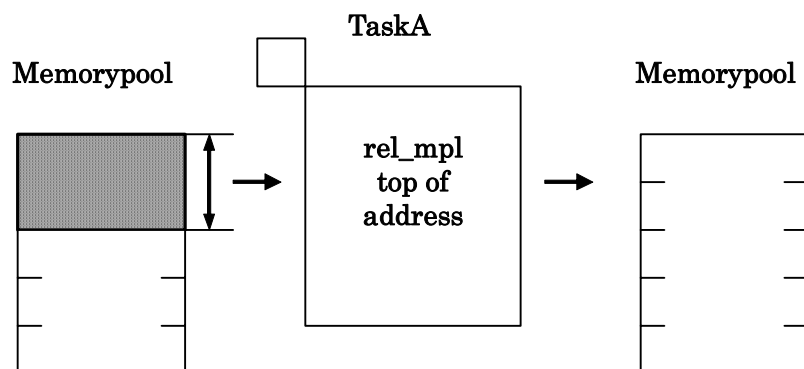


Figure 4.19 rel_mpl processing

- **Reference Acquire Variable-size Memory Pool Status (ref_mpl, iref_mpl)**
Checks the total free area of the memory pool, and the size of the maximum free area that can immediately be acquired.

4.3.9 Time Management Function

The time management function provides system time management, time reading²⁵, time setup²⁶, and the functions of the alarm handler, which actuates at preselected times, and the cyclic handler, which actuates at preselected time intervals.

The MR30 kernel requires one timer for use as the system clock. There are following time management service calls that are provided by the MR30 kernel. Note, however, that the system clock is not an essential function of MR30. Therefore, if the service calls described below and the time management function of the MR30 are unused, a timer does not need to be occupied for use by MR30.

- Place a task in a finite time wait state by specifying a timeout value
A timeout can be specified in a service call that places the issuing task into WAITING state.²⁷ This service call includes `tslp_tsk`, `twai_flg`, `twai_sem`, `tsnd_dtq`, `trcv_dtq`, `trcv_mbx`, `tget_mpf`, `vtsnd_dtq`, and `vtrcv_dtq`. If the wait cancel condition is not met before the specified timeout time elapses, the error code `E_TMOUT` is returned, and the task is freed from the wait state. If the wait cancel condition is met, the error code `E_OK` is returned. The timeout time should be specified in ms units.

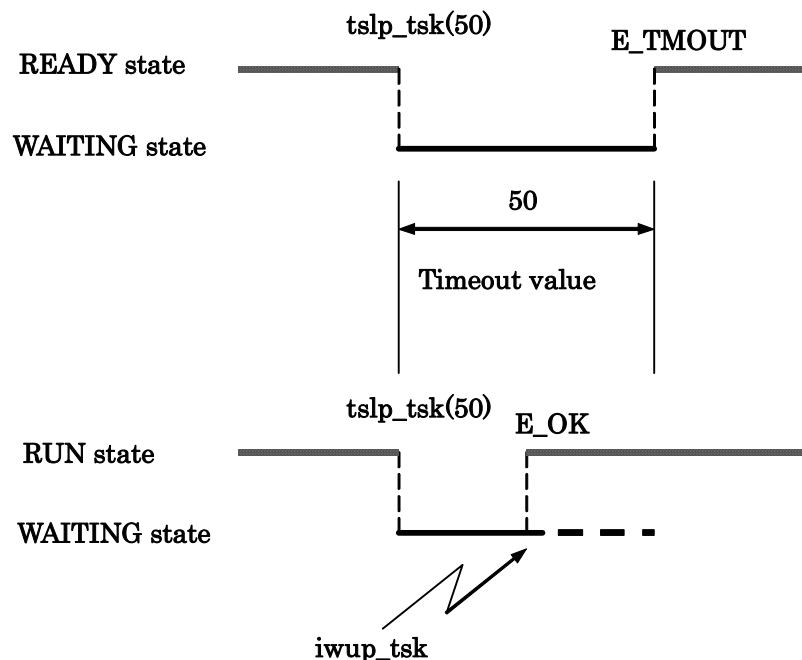


Figure 4.20 Timeout Processing

MR30 guarantees that as stipulated in μ ITRON specification, timeout processing is not performed until a time equal to or greater than the specified timeout value elapses. More specifically, timeout processing is performed with the following timing.

- If the timeout value is 0 (for only `dly_tsk`)²⁸
The task times out at the first time tick after the service call is issued.²⁹
- If the timeout value is a multiple of time tick interval
The timer times out at the $(\text{timeout value} / \text{time tick interval}) + \text{first time tick}$. For example, if the time tick interval is 10 ms and the specified timeout value is 40 ms, then the timer times out at the fifth occurrence of the time tick. Similarly, if the time tick interval is 5 ms and the specified timeout value is 15 ms, then the timer times out at the fourth occurrence of the time tick.

²⁵ `get_tim` service call

²⁶ `set_tim` service call

²⁷ SUSPENDED state is not included.

²⁸ Strictly, in a `dly_tsk` service call, the "timeout value" is not correct. "delay time" is correct.

²⁹ Strictly, in a `dly_tsk` service call, a timeout is not carried out, but the waiting for delay is canceled and the service call carries out the normal end.

3. If the timeout value is not a multiple of time tick interval
The timer times out at the $(\text{timeout value} / \text{time tick interval}) + \text{second time tick}$. For example, if the time tick interval is 10 ms and the specified timeout value is 35 ms, then the timer times out at the fifth occurrence of the time tick.
- Set System Time (set_tim,iset_tim)
 - Reference System Time (get_tim,iget_tim)
The system time indicates an elapsed time from when the system was reset by using 48-bit data. The time is expressed in ms units.

4.3.10 Cyclic Handler Function

The cyclic handler is a time event handler that is started every startup cycle after a specified startup phase has elapsed.

The cyclic handler may be started with or without saving the startup phase. In the former case, the cyclic handler is started relative to the point in time at which it was generated. In the latter case, the cyclic handler is started relative to the point in time at which it started operating. Figure 4.21 and Figure 4.22 show typical operations of the cyclic handler.

If the startup cycle is shorter than the time tick interval, the cyclic handler is started only once every time tick supplied (processing equivalent to `isig_tim`). For example, if the time tick interval is 10 ms and the startup cycle is 3 ms and the cyclic handler has started operating when a time tick is supplied, then the cyclic handler is started every time tick.

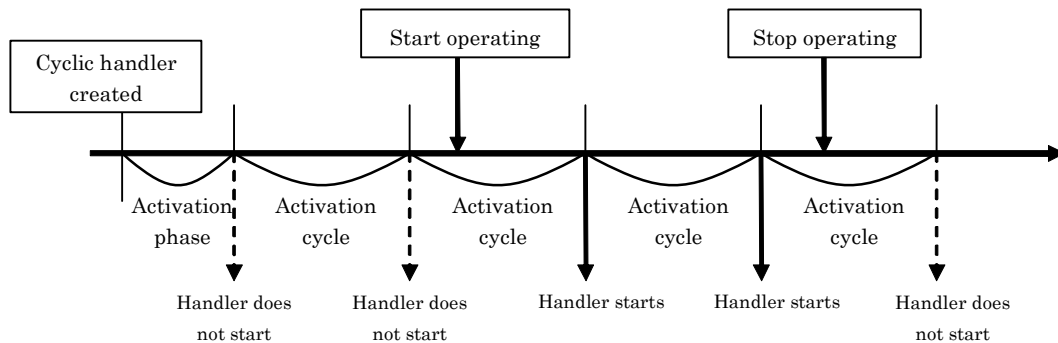


Figure 4.21 Cyclic handler operation in cases where the activation phase is saved

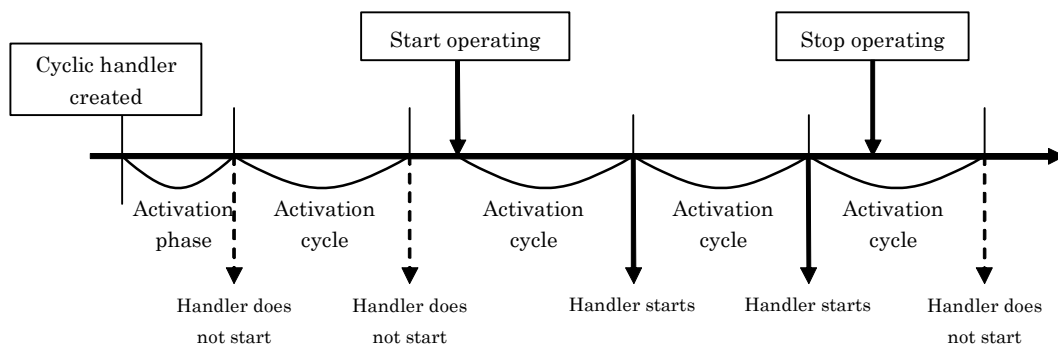


Figure 4.22 Cyclic handler operation in cases where the activation phase is not saved

- **Start Cyclic Handler Operation (`sta_cyc`, `ista_cyc`)**
Causes the cyclic handler with the specified ID to operational state.
- **Stop Cyclic Handler Operation (`stp_cyc`, `istp_cyc`)**
Causes the cyclic handler with the specified ID to non-operational state.
- **Reference Cyclic Handler Status (`ref_cyc`, `iref_cyc`)**
Refers to the status of the cyclic handler. The operating status of the target cyclic handler and the remaining time before it starts next time are inspected.

4.3.11 Alarm Handler Function

The alarm handler is a time event handler that is started only once at a specified time.

Use of the alarm handler makes it possible to perform time-dependent processing. The time of day is specified by a relative time. Figure 4.23 shows a typical operation of the alarm handler.

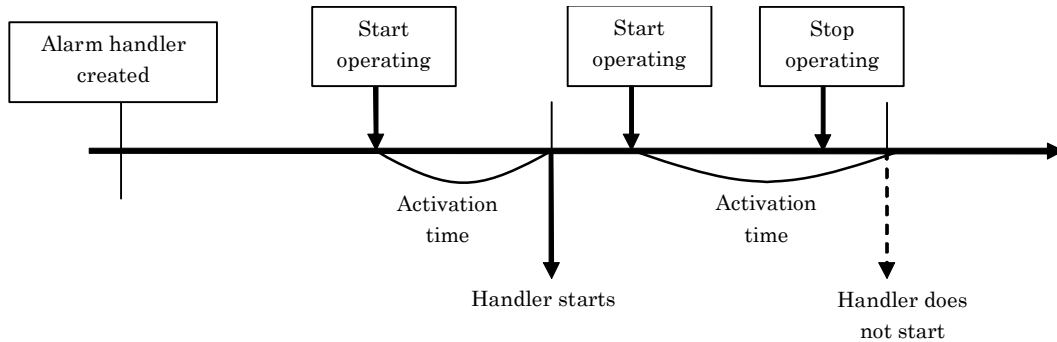


Figure 4.23 Typical operation of the alarm handler

- **Start Alarm Handler Operation (sta_alm, ista_alm)**
Causes the alarm handler with the specified ID to operational state.
- **Stop alarm Handler Operation (stp_alm, istp_alm)**
Causes the alarm handler with the specified ID to non-operational state.
- **Reference Alarm Handler Status (ref_alm, iref_alm)**
Refers to the status of the alarm handler. The operating status of the target alarm handler and the remaining time before it starts are inspected.

4.3.12 System Status Management Function

- Rotate Task Precedence (rot_rdq, irot_rdq)

This service call establishes the TSS (time-sharing system). That is, if the ready queue is rotated at regular intervals, round robin scheduling required for the TSS is accomplished (See Figure 4.24)

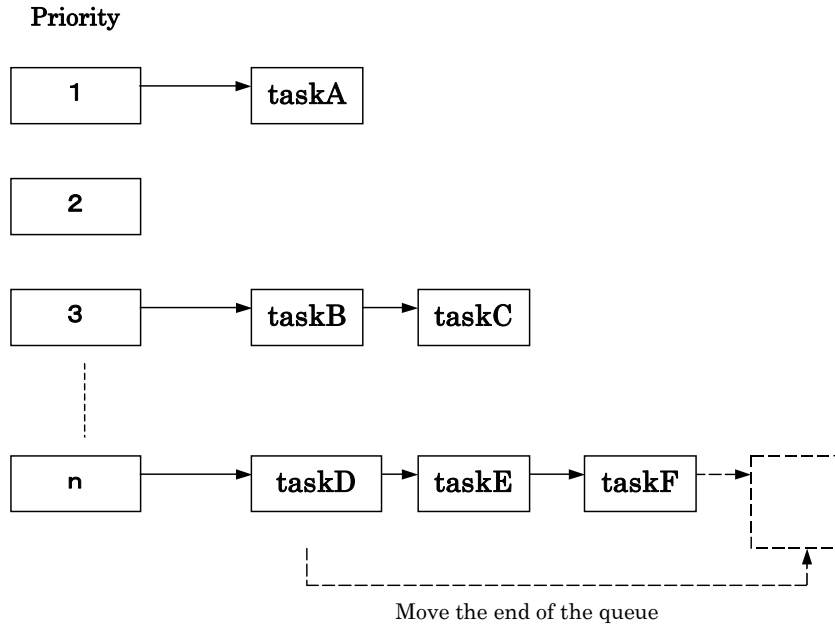


Figure 4.24 Ready Queue Management by rot_rdq Service Call

- Reference task ID in the RUNNING state (get_tid, iget_tid)
References the ID number of the task in the RUNNING state. If issued from the handler, TSK_NONE(=0) is obtained instead of the ID number.
- Lock the CPU (loc_cpu, iloc_cpu)
Places the system into a CPU locked state.
- Unlock the CPU (unl_cpu, iunl_cpu)
Frees the system from a CPU locked state.
- Disable dispatching (dis_dsp)
Places the system into a dispatching disabled state.
- Enable dispatching (ena_dsp)
Frees the system from a dispatching disabled state.
- Reference context (sns_ctx)
Gets the context status of the system.
- Reference CPU state (sns_loc)
Gets the CPU lock status of the system.
- Reference dispatching state (sns_dsp)
Gets the dispatching disable status of the system.
- Reference dispatching pending state (sns_dpn)
Gets the dispatching pending status of the system.

4.3.13 Interrupt Management Function

The interrupt management function provides a function to process requested external interrupts in real time.

The interrupt management service calls provided by the MR30 kernel include the following:

- Returns from interrupt handler (`ret_int`)
The `ret_int` service call activates the scheduler to switch over tasks as necessary when returning from the interrupt handler.
When using the C language,³⁰, this function is automatically called at completion of the handler function. In this case, therefore, there is no need to invoke this service call.

Figure 4.25 shows an interrupt processing flow. Processing a series of operations from task selection to register restoration is called a "scheduler."

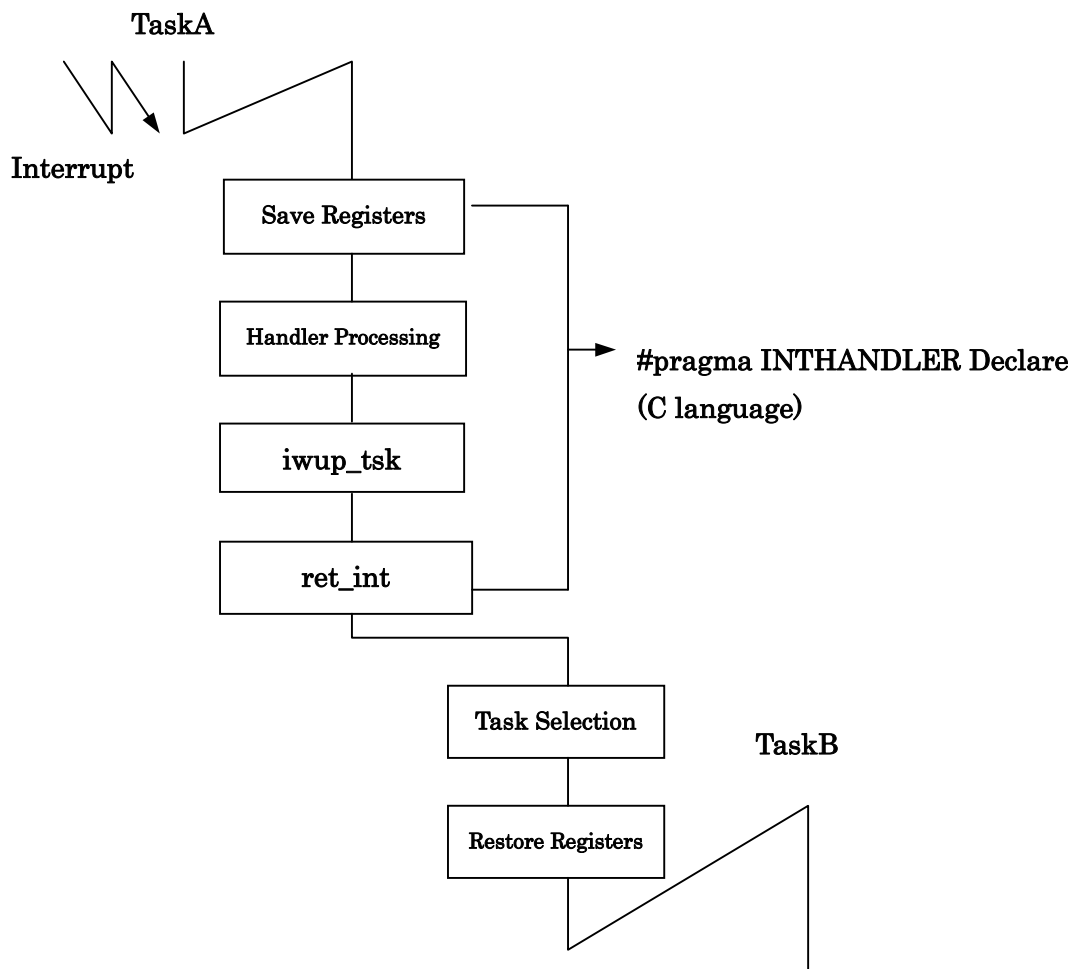


Figure 4.25 Interrupt process flow

³⁰ In the case that the interrupt handler is specified by `"#pragma INTHANDLER"`.

4.3.14 System Configuration Management Function

This function inspects the version information of MR30.

- **References Version Information(ref_ver, iref_ver)**
The ref_ver service call permits the user to get the version information of MR30. This version information can be obtained in the standardized format of μ ITRON specification.

4.3.15 Extended Function (Long Data Queue)

The long data queue is a function outside the scope of μ ITRON 4.0 Specification. The data queue function handles data as consisting of 16 bits, whereas the short data queue handles data as consisting of 32 bits. Both behave the same way except only that the data sizes they handle are different.

- **Send to Long Data Queue (vsnd_dtq, vtsnd_dtq)**
The data is transmitted to the long data queue. If the long data queue is full of data, the task goes to a data transmission wait state.
- **Send to Long Data Queue (vpsnd_dtq, vipnd_dtq)**
The data is transmitted to the long data queue. If the long data queue is full of data, the task returns error code without going to a data transmission wait state.
- **Forced Send to Long Data Queue (vfsnd_dtq, vifsd_dtq)**
The data is transmitted to the long data queue. If the long data queue is full of data, the data at the top of the long data queue or the oldest data is removed, and the transmitted data is stored at the tail of the long data queue.
- **Receive from Long Data Queue(vrcv_dtq, vtrcv_dtq)**
The data is retrieved from the long data queue. If the long data queue has no data in it, the task is kept waiting until data is transmitted to the long data queue.
- **Receive from Long Data Queue (vprcv_dtq, viprcv_dtq)**
The data is received from the long data queue. If the long data queue has no data in it, the task returns error code without going to a data reception wait state.
- **Reference Long Data Queue Status (vref_dtq, viref_dtq)**
Checks to see if there are any tasks waiting for data to be entered in the target long data queue and refers to the number of the data in the long data queue.

4.3.16 Extended Function (Reset Function)

The reset function is a function outside the scope of μ ITRON 4.0 Specification. It initializes the mailbox, data queue, and memory pool, etc.

- **Clear Data Queue Area (vrst_dtq)**
Initializes the data queue. If there are any tasks waiting for transmission, they are freed from WAITING state and the error code EV_RST is returned.
- **Clear Mailbox Area (vrst_mbx)**
Initializes the mailbox.
- **Clear Fixed-size Memory Pool Area (vrst_mpf)**
Initializes the fixed-size memory pool. If there are any tasks in WAITING state, they are freed from the WAITING state and the error code EV_RST is returned.
- **Clear Variable-size Memory Pool Area (vrst_mpl)**
Initializes the variable length memory pool.
- **Clear Short Data Queue Area (vrst_vdtq)**
Initializes the short data queue. If there are any tasks waiting for transmission, they are freed from WAITING state and the error code EV_RST is returned.

5. Service call reffernce

5.1 Task Management Function

Specifications of the task management function of MR30 are listed in Table 5.1 below. The task description languages in item No. 4 are those specified in the GUI configurator. They are not output to a configuration file, nor are the MR30 kernel concerned with them.

The task stack permits a section name to be specified for each task individually.

Table 5.1 Specifications of the Task Management Function

No.	Item	Content
1	Task ID	1-255
2	Task priority	1-255
3	Maximum number of activation request count	15
4	Task attribute	TA_HLNG : Tasks written in high-level language TA_ASM : Tasks written in assembly language TA_ACT: Startup attribute
5	Task stack	Section specifiable

Table 5.2 List of Task Management Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	act_tsk	[S]	Activates task	O		O	O	O	
2	iact_tsk	[S]			O	O	O	O	
3	can_act	[S]	Cancels task activation request	O		O	O	O	
4	ican_act				O	O	O	O	
5	sta_tsk		Starts task and specifies start code	O		O	O	O	
6	ista_tsk				O	O	O	O	
7	ext_tsk	[S]	Exits current task	O		O	O	O	O
8	ter_tsk	[S]	Forcibly terminates a task	O		O	O	O	
9	chg_pri	[S]	Changes task priority	O		O	O	O	
10	ichg_pri				O	O	O	O	
11	get_pri	[S]	Refers to task priority	O		O	O	O	
12	iget_pri				O	O	O	O	
13	ref_tsk		Refers to task state	O		O	O	O	
14	iref_tsk				O	O	O	O	
15	ref_tst		Refers to task state (simple version)	O		O	O	O	
16	iref_tst				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

act_tsk	Activate task
iact_tsk	Activate task (handler only)

[[C Language API]]

```
ER ercd = act_tsk( ID tskid );
ER ercd = iact_tsk( ID tskid );
```

● Parameters

ID	tskid	ID number of the task to be started
----	-------	-------------------------------------

● Return parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
act_tsk TSKID
iact_tsk TSKID
```

● Parameters

TSKID	ID number of the task to be started
-------	-------------------------------------

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	Task ID

[[Error Code]]

E_QOVR	Queuing overflow
--------	------------------

[[Functional description]]

This service call starts the task indicated by `tskid`. The started task goes from DORMANT state to READY state or RUNNING state.

The following lists the processing performed on startup.

1. Initializes the current priority of the task.
2. Clears the number of queued wakeup requests.
3. Clears the number of suspension requests.

Specifying `tskid=TSK_SELF(0)` specifies the issuing task itself. The task has passed to it as parameter the extended information of it that was specified when the task was created. If `TSK_SELF` is specified for `tskid` in non-task context, operation of this service call cannot be guaranteed.

If the target task is not in DORMANT state, a task activation request by this service call is enqueued. In other words, the activation request count is incremented by 1. The maximum value of the task activation request is 15. If this limit is exceeded, the error code `E_QOVR` is returned.

If `TSK_SELF` is specified for `tskid`, the issuing task itself is made the target task.

If this service call is to be issued from task context, use `act_tsk`; if issued from non-task context, use `iact_tsk`.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task1( VP_INT stacd )
{
    ER ercd;
    :
    ercd = act_tsk( ID_task2 );
    :
}
void task2( VP_INT stacd )
{
    :
    ext_tsk();
}
```

<<Example statement in assembly language>>

```
.INCLUDE    mr30.inc
.GLB       task
task:
    pushm           :           A0
    act_tsk         :           #ID_TASK3
    :
```


can_act
ican_act

Cancel task activation request **Cancel task activation request (handler only)**

[[C Language API]]

```
ER_UINT actcnt = can_act( ID tskid );  
ER_UINT actcnt = ican_act( ID tskid );
```

● Parameters

ID	tskid	ID number of the task to cancel
----	-------	---------------------------------

● Return Parameters

ER_UINT	actcnt > 0	Canceled activation request count
	actcnt = 0	
	actcnt < 0	Error code

[[Assembly language API]]

```
.include mr30.inc  
can_act TSKID  
ican_act TSKID
```

● Parameters

TSKID	ID number of the task to cancel
-------	---------------------------------

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Canceled startup request count or error code
A0	ID number of the target task

[[Error code]]

None

[[Functional description]]

This service call finds the number of task activation requests enqueued for the task indicated by tskid, returns the result as a return parameter, and at the same time invalidates all of the task's activation requests.

Specifying tskid=TSK_SELF(0) specifies the issuing task itself. If TSK_SELF is specified for tskid in non-task context, operation of this service call cannot be guaranteed.

This service call can be invoked for a task in DORMANT state as the target task. In that case, the return parameter is 0.

If this service call is to be issued from task context, use can_act; if issued from non-task context, use ican_act.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task1()
{
    ER_UINT actcnt;
    :
    actcnt = can_act( ID_task2 );
    :
}
void task2()
{
    :
    ext_tsk();
}
```

<<Example statement in assembly language>>

```
.INCLUDE    mr30.inc
.GLB       task
task:
    :
    PUSHM   A0
    can_act    #ID_TASK2
    :
```

sta_tsk	Activate task with a start code
ista_tsk	Activate task with a start code (handler only)

[[C Language API]]

```
ER ercd = sta_tsk( ID tskid,VP_INT stacd );
ER ercd = ista_tsk ( ID tskid,VP_INT stacd );
```

● Parameters

ID	tskid	ID number of the target task
VP_INT	stacd	Task start code

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
sta_tsk  TSKID,STACD
ista_tsk TSKID,STACD
```

● Parameters

TSKID	ID number of the target task
STATCD	Task start code

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
R1	Task start code
A0	ID number of the target task

[[Error code]]

E_OBJ	Object status invalid (task indicated by tskid is not DOMANT state)
-------	---

[[Functional description]]

This service call starts the task indicated by `tskid`. In other words, it places the specified task from DORMANT state into READY state or RUNNING state. This service call does not enqueue task activation requests. Therefore, if a task activation request is issued while the target task is not DORMANT state, the error code `E_OBJ` is returned to the service call issuing task. This service call is effective only when the specified task is in DORMANT state. The task start code `stacd` is 16 bits long. This task start code is passed as parameter to the activated task.

If a task is restarted that was once terminated by `ter_tsk` or `ext_tsk`, the task performs the following as it starts up.

1. Initializes the current priority of the task.
2. Clears the number of queued wakeup requests.
3. Clears the number of nested forcible wait requests.

If this service call is to be issued from task context, use `sta_tsk`; if issued from non-task context, use `ista_tsk`.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    ER ercd;
    VP_INT stacd = 0;
    ercd = sta_tsk( ID_task2, stacd );
    :
}
void task2(VP_INT msg)
{
    if(msg == 0)
    :
}
```

<<Example statement in assembly language>>

```
.INCLUDE    mr30.inc
.GLB       task
task:
    :
    PUSHM   A0,R1,R3
    sta_tsk    #ID_TASK4,#012345678H
    :
```

[[C Language API]]

```
ER ercd = ext_tsk();
```

● Parameters

None

● Return Parameters

Not return from this service call

[[Assembly language API]]

```
.include mr30.inc
```

```
ext_tsk
```

● Parameters

None

● Register contents after service call is issued

Not return from this service call

[[Error code]]

Not return from this service call

[[Functional description]]

This service call terminates the invoking task. In other words, it places the issuing task from RUNNING state into DORMANT state. However, if the activation request count for the issuing task is 1 or more, the activation request count is decremented by 1, and processing similar to that of act_tsk or iact_tsk is performed. In that case, the task is placed from DORMANT state into READY state. The task has its extended information passed to it as parameter when the task starts up.

This service call is designed to be issued automatically at return from a task.

In the invocation of this service call, the resources the issuing task had acquired previously (e.g., semaphore) are not released.

This service call can only be used in task context. This service call can be used even in a CPU locked state, but cannot be used in non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task(void)
{
    :
    ext_tsk();
}
```

<<Example statement in assembly language>>

```
.INCLUDE    mr30.inc
.GLB       task
task:
    :
    ext_tsk
```

[[C Language API]]

```
ER ercd = ter_tsk( ID tskid );
```

- **Parameters**

ID	tskid	ID number of the forcibly terminated task
----	-------	---

- **Return Parameters**

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
ter_tsk TSKID
```

- **Parameters**

TSKID	ID number of the forcibly terminated task
-------	---

- **Register contents after service call is issued**

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

A0	ID number of the target task
----	------------------------------

[[Error code]]

E_OBJ	Object status invalid(task indicated by tskid is an inactive state)
E_ILUSE	Service call improperly used task indicated by tskid is the issuing task itself)

[[Functional description]]

This service call terminates the task indicated by tskid. If the activation request count of the target task is equal to or greater than 1, the activation request count is decremented by 1, and processing similar to that of act_tsk or iact_tsk is performed. In that case, the task is placed from DORMANT state into READY state. The task has its extended information passed to it as parameter when the task starts up.

If a task specifies its own task ID or TSK_SELF, an E_ILUSE error is returned.

If the specified task was placed into WAITING state and has been enqueued in some waiting queue, the task is dequeued from it by execution of this service call. However, the semaphore and other resources the specified task had acquired previously are not released.

If the task indicated by tskid is in DORMANT state, it returns the error code E_OBJ as a return value for the service call.

This service call can only be used in task context, and cannot be used in non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    ter_tsk( ID_main );
    :
}
```

<<Example statement in assembly language>>

```
.INCLUDE    mr30.inc
.GLB       task
task:
    :
    PUSHM   A0
    ter_tsk #ID_TASK3
    :
```


chg_pri	Change task priority
ichg_pri	Change task priority(handler only)

[[C Language API]]

```
ER ercd = chg_pri( ID tskid, PRI tskpri );
ER ercd = ichg_pri( ID tskid, PRI tskpri );
```

● Parameters

ID	tskid	ID number of the target task
PRI	tskpri	Priority of the target task

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
chg_pri TSKID,TSKPRI
ichg_pri TSKID,TSKPRI
```

● Parameters

TSKID	ID number of the target task
TSKPRI	Priority of the target task

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
R3	Priority of the target task
A0	ID number of the target task

[[Error code]]

E_OBJ	Object status invalid(task indicated by tskid is an inactive state)
-------	---

[[Functional description]]

This service call changes the priority of the task indicated by `tskid` to the value indicated by `tskpri`, and performs rescheduling based on the result of that priority change. Therefore, if this service call is executed on a task enqueued in a ready queue (including one that is in an executing state) or a task in a waiting queue in which tasks are enqueued in order of priority, the target task is moved to behind the tail of a relevant priority part of the queue. Even when the same priority as the previous one is specified, the task is moved to behind the tail of the queue.

The smaller the number, the higher the task priority, with 1 assigned the highest priority. The minimum value specifiable as priority is 1. The specifiable maximum value of priority is the maximum value of priority specified in a configuration file, providing that it is within the range 1 to 255. For example, if system specification in a configuration file is as follows,

```
system{
    stack_size    = 0x100;
    priority      = 13;
};
```

then priority can be specified in the range 1 to 13.

If `TSK_SELF` is specified, the priority of the issuing task is changed. If `TSK_SELF` is specified for `tskid` in non-task context, operation of the service call cannot be guaranteed. If `TPRI_INI` is specified, the task has its priority changed to the initial priority that was specified when the task was created. The changed task priority remains effective until the task is terminated or this service call is executed again.

If the task indicated by `tskid` is in DORMANT state, it returns the error code `E_OBJ` as a return value for the service call. Since the M3T-MR30 does not support the mutex function, in no case will the error code `E_ILUSE` be returned.

If this service call is to be issued from task context, use `chg_pri`; if issued from non-task context, use `ichg_pri`.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    chg_pri( ID_task2, 2 );
    :
}
```

<<Example statement in assembly language>>

```
.INCLUDE    mr30.inc
.GLB       task
task:
    :
    pushm   A0,R3
    chg_pri #ID_TASK3,#1
    :
```

get_pri
iget_pri

Reference task priority
Reference task priority(handler only)

[[C Language API]]

```
ER ercd = get_pri( ID tskid, PRI *p_tskpri );  
ER ercd = iget_pri( ID tskid, PRI *p_tskpri );
```

● **Parameters**

ID	tskid	ID number of the target task
PRI	*p_tskpri	Pointer to the area to which task priority is returned

● **Return Parameters**

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc  
get_pri TSKID  
iget_pri TSKID
```

● **Parameters**

TSKID	ID number of the target task
-------	------------------------------

● **Register contents after service call is issued**

Register name	Content after service call is issued
R0	Error code
A0	Acquired task priority

[[Error code]]

E_OBJ	Object status invalid(task indicated by tskid is an inactive state)
-------	---

[[Functional description]]

This service call returns the priority of the task indicated by tskid to the area indicated by p_tskpri. If TSK_SELF is specified, the priority of the issuing task itself is acquired. If TSK_SELF is specified for tskid in non-task context, operation of the service call cannot be guaranteed.

If the task indicated by tskid is in DORMANT state, it returns the error code E_OBJ as a return value for the service call.

If this service call is to be issued from task context, use get_pri; if issued from non-task context, use iget_pri.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    PRI p_tskpri;
    ER ercd;
    :
    ercd = get_pri( ID_task2, &p_tskpri );
    :
}
```

<<Example statement in assembly language>>

```
.INCLUDE    mr30.inc
.GLB       task
task:
    :
    PUSHM   A0
    get_pri #ID_TASK2
    :
```

ref_tsk	Reference task status
iref_tsk	Reference task status (handler only)

[[C Language API]]

```
ER ercd = ref_tsk( ID tskid, T_RTsk *pk_rtsk );
ER ercd = iref_tsk( ID tskid, T_RTsk *pk_rtsk );
```

● Parameters

ID	tskid	ID number of the target task
T_RTsk	*pk_rtsk	Pointer to the packet to which task status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

Contents of pk_rtsk

```
typedef struct t_rtsk{
    STAT  tskstat    +0    2    Task status
    PRI   tskpri     +2    2    Current priority of task
    PRI   tskbpri    +4    2    Base priority of task
    STAT  tskwait    +6    2    Cause of wait
    ID    wobjid     +8    2    Waiting object ID
    TMO   lefttmo    +10   4    Left time before timeout
    UINT  actcnt     +14   2    Number of queued activation request counts
    UINT  wupcnt     +16   2    Number of queued wakeup request counts
    UINT  suscnt     +18   2    Number of nested suspension request counts
} T_RTsk;
```

[[Assembly language API]]

```
.include mr30.inc
ref_tsk  TSKID, PK_RTsk
iref_tsk TSKID, PK_RTsk
```

● Parameters

TSKID	ID number of the target task
PK_RTsk	Pointer to the packet to which task status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target task
A1	Pointer to the packet to which task status is returned

[[Error code]]

None

[[Functional description]]

This service call inspects the status of the task indicated by `tskid` and returns the current information on that task to the area pointed to by `pk_rtsk` as a return parameter. If `TSK_SELF` is specified, the status of the issuing task itself is inspected. If `TSK_SELF` is specified for `tskid` in non-task context, operation of the service call cannot be guaranteed.

◆ **tskstat (task status)**

`tskstat` has one of the following values returned to it depending on the status of the specified task.

- `TTS_RUN(0x0001)` RUNNING state
- `TTS_RDY(0x0002)` READY state
- `TTS_WAI(0x0004)` WAITING state
- `TTS_SUS(0x0008)` SUSPENDED state
- `TTS_WAS(0x000C)` WAITING-SUSPENDED state
- `TTS_DMT(0x0010)` DORMANT state

◆ **tskpri (current priority of task)**

`tskpri` has the current priority of the specified task returned to it. If the task is in DOMANT state, `tskpri` is indeterminate.

◆ **tskbpri (base priority of task)**

`tskbpri` has the base priority of the specified task returned to it. Since the M3T-MR30 does not support the mutex function, `tskpri` and `tskbpri` assume the same value. If the task is in DOMANT state, `tskbpri` is indeterminate.

◆ **tskwait (cause of wait)**

If the target task is in a wait state, one of the following causes of wait is returned. The values of the respective causes of wait are listed below. If the task status is other than a wait state (`TTS_WAI` or `TTS_WAS`), `tskwait` is indeterminate.

- `TTW_SLP(0x0001)` Kept waiting by `slp_tsk` or `tslp_tsk`
- `TTW_DLY(0x0002)` Kept waiting by `dly_tsk`
- `TTW_SEM(0x0004)` Kept waiting by `wai_sem` or `twai_sem`
- `TTW_FLG(0x0008)` Kept waiting by `wai_flg` or `twai_flg`
- `TTW_SDTQ(0x0010)` Kept waiting by `snd_dtq` or `tsnd_dtq`
- `TTW_RDTQ(0x0020)` Kept waiting by `rcv_dtq` or `trcv_dtq`
- `TTW_MBX(0x0040)` Kept waiting by `rcv_mbx` or `trcv_mbx`
- `TTW_MPF(0x2000)` Kept waiting by `get_mpf` or `tget_mpf`
- `TTW_VSDTQ(0x4000)` Kept waiting by `vsnd_dtq` or `vtsnd_dtq`³¹
- `TTW_VRDTQ(0x8000)` Kept waiting by `vrcv_dtq` or `vtrcv_dtq`

◆ **wobjid (waiting object ID)**

If the target task is in a wait state (`TTS_WAI` or `TTS_WAS`), the ID of the waiting target object is returned. Otherwise, `wobjid` is indeterminate.

◆ **lefttmo(left time before timeout)**

If the target task has been placed in WAITING state (`TTS_WAI` or `TTS_WAS`) by other than `dly_tsk`, the left time before it times out is returned. If the task is kept waiting perpetually, `TMO_FEVR` is returned. Otherwise, `lefttmo` is indeterminate.

◆ **actcnt(task activation request)**

The number of currently queued task activation request is returned.

◆ **wupcnt (wake up request count)**

The number of currently queued wake up requests is returned. If the task is in DORMANT state, `wupcnt` is indeterminate.

◆ **suscnt (suspension request count)**

The number of currently nested suspension requests is returned. If the task is in DORMANT state, `suscnt` is indeterminate.

If this service call is to be issued from task context, use `ref_tsk`; if issued from non-task context, use `iref_tsk`.

³¹ `TTW_VSDTQ` and `TTW_VRDTQ` are the causes of wait outside the scope of μ ITRON 4.0 Specification.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RTSK rtsk;
    ER ercd;
    :
    ercd = ref_tsk( ID_main, &rtsk );
    :
}
```

<<Example statement in assembly language>>

```
_refdata:    .blkb    20
    .include mr30.inc
    .GLB      task
task:
    :
    PUSHM    A0,A1
    ref_tsk   #TSK_SELF,#_refdata
    :
```

ref_tst
iref_tst

Reference task status (simplified version)
Reference task status (simplified version, handler only)

[[C Language API]]

```
ER ercd = ref_tst( ID tskid, T_RTST *pk_rtst );  
ER ercd = iref_tst( ID tskid, T_RTST *pk_rtst );
```

● Parameters

ID	tskid	ID number of the target task
T_RTST	*pk_rtst	Pointer to the packet to which task status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

Contents of pk_rtsk

```
typedef struct t_rtst{  
    STAT tskstat +0 2 Task status  
    STAT tskwait +2 2 Cause of wait  
} T_RTST;
```

[[Assembly language API]]

```
.include mr30.inc  
ref_tst TSKID, PK_RTST  
iref_tst TSKID, PK_RTST
```

● Parameters

TSKID	ID number of the target task
PK_RTST	Pointer to the packet to which task status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target task
A1	Pointer to the packet to which task status is returned

[[Error code]]

None

[[Functional description]]

This service call inspects the status of the task indicated by `tskid` and returns the current information on that task to the area pointed to by `pk_rtst` as a return value. If `TSK_SELF` is specified, the status of the issuing task itself is inspected. If `TSK_SELF` is specified for `tskid` in non-task context, operation of the service call cannot be guaranteed.

◆ **tskstat (task status)**

`tskstat` has one of the following values returned to it depending on the status of the specified task.

- `TTS_RUN(0x0001)` RUNNING state
- `TTS_RDY(0x0002)` READY state
- `TTS_WAI(0x0004)` WAITING state
- `TTS_SUS(0x0008)` SUSPENDED state
- `TTS_WAS(0x000C)` WAITING-SUSPENDED state
- `TTS_DMT(0x0010)` DORMANT state

◆ **tskwait (cause of wait)**

If the target task is in a wait state, one of the following causes of wait is returned. The values of the respective causes of wait are listed below. If the task status is other than a wait state (`TTS_WAI` or `TTS_WAS`), `tskwait` is indeterminate.

- `TTW_SLP (0x0001)` Kept waiting by `slp_tsk` or `tslp_tsk`
- `TTW_DLY (0x0002)` Kept waiting by `dly_tsk`
- `TTW_SEM (0x0004)` Kept waiting by `wai_sem` or `twai_sem`
- `TTW_FLG (0x0008)` Kept waiting by `wai_flg` or `twai_flg`
- `TTW_SDTQ(0x0010)` Kept waiting by `snd_dtq` or `tsnd_dtq`
- `TTW_RDTQ(0x0020)` Kept waiting by `rcv_dtq` or `trcv_dtq`
- `TTW_MBX (0x0040)` Kept waiting by `rcv_mbx` or `trcv_mbx`
- `TTW_MPF (0x2000)` Kept waiting by `get_mpf` or `tget_mpf`
- `TTW_VSDTQ (0x4000)` Kept waiting by `vsnd_dtq` or `vtsnd_dtq`³²
- `TTW_VRDTQ(0x8000)` Kept waiting by `vrcv_dtq` or `vtrcv_dtq`

If this service call is to be issued from task context, use `ref_tst`; if issued from non-task context, use `iref_tst`.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RTST rtst;
    ER ercd;

    :
    ercd = ref_tst( ID_main, &rtst );
    :
}
```

<<Example statement in assembly language>>

```
_refdata:      .blkb    4
               .include mr30.inc
               .GLB      task
task:
               :
PUSHM         A0,A1
ref_tst        #ID_TASK2,#_refdata
               :
```

³² `TTW_VSDTQ` and `TTW_VRDTQ` are the causes of wait outside the scope of μ ITRON 4.0 Specification.

5.2 Task Dependent Synchronization Function

Specifications of the task-dependent synchronization function are listed in below.

Table 5.3 Specifications of the Task Dependent Synchronization Function

No.	Item	Content
1	Maximum value of task wakeup request count	15
2	Maximum number of nested forcible task wait requests count	1

Table 5.4 List of Task Dependent Synchronization Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	slp_tsk	[S]	Puts task to sleep	O		O		O	
2	tslp_tsk	[S]	Puts task to sleep (with timeout)	O		O		O	
3	wup_tsk	[S]	Wakes up task	O		O	O	O	
4	iwup_tsk	[S]			O	O	O	O	
5	can_wup		Cancels wakeup request	O		O	O	O	
6	ican_wup				O	O	O	O	
7	rel_wai	[S]	Releases task from waiting	O		O	O	O	
8	irel_wai	[S]			O	O	O	O	
9	sus_tsk	[S]	Suspends task	O		O	O	O	
10	isus_tsk				O	O	O	O	
11	rsm_tsk	[S]	Resumes suspended task	O		O	O	O	
12	irms_tsk				O	O	O	O	
13	frsm_tsk	[S]	Forcibly resumes suspended task	O		O	O	O	
14	ifrm_tsk				O	O	O	O	
15	dly_tsk	[S]	Delays task	O		O		O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

slp_tsk
tslp_tsk

Put task to sleep
Put task to sleep (with timeout)

[[C Language API]]

```
ER ercd = slp_tsk();  
ER ercd = tslp_tsk( TMO tmout );
```

● **Parameters**

- **slp_tsk**
None
- **tslp_tsk**
TMO tmout Timeout value

● **Return Parameters**

ER ercd Terminated normally (E_OK) or error code

[[Assembly language API]]

```
.include mr30.inc  
slp_tsk  
tslp_tsk TMO
```

● **Parameters**

TMO Timeout value

● **Register contents after service call is issued**

tslp_tsk

Register name	Content after service call is issued
R0	Error code
R1	Timeout value (16 low-order bits)
R3	Timeout value (16 high-order bits)

slp_tsk

Register name	Content after service call is issued
R0	Error code

[[Error code]]

E_TMOUT	Timeout
E_RLWAI	Forced release from waiting

[[Functional description]]

This service call places the issuing task itself from RUNNING state into sleeping wait state. The task placed into WAITING state by execution of this service call is released from the wait state in the following cases:

- ◆ **When a task wakeup service call is issued from another task or an interrupt**
The error code returned in this case is E_OK.
- ◆ **When a forcible awaking service call is issued from another task or an interrupt**
The error code returned in this case is E_RLWAI.
- ◆ **When the first time tick occurred after tmout elapsed (for tslp_tsk)**
The error code returned in this case is E_TMOUT.

If the task receives sus_tsk issued from another task while it has been placed into WAITING state by this service call, it goes to WAITING-SUSPENDED state. In this case, even when the task is released from WAITING state by a task wakeup service call, it still remains in SUSPENDED state, and its execution cannot be resumed until rsm_tsk is issued.

The service call tslp_tsk may be used to place the issuing task into sleeping state for a given length of time by specifying tmout in a parameter to it. The parameter tmout is expressed in ms units. For example, if this service call is written as tslp_tsk(10);, then the issuing task is placed from RUNNING state into WAITING state for a period of 10 ms. If specified as tmout=TMO_FEVR(-1), the task will be kept waiting perpetually, with the service call operating the same way as slp_tsk.

The values specified for tmout must be within 0x7fffffff - time tick. If any value exceeding this limit is specified, operation of the service call cannot be guaranteed.

This service call can only be issued from task context, and cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    if( slp_tsk() != E_OK )
        error("Forced wakeup\n");
    :
    if( tslp_tsk( 10 ) == E_TMOUT )
        error("time out\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB          task
task:
    :
    slp_tsk
    :
    PUSHM      R1,R3
    tslp_tsk   #TMO_FEVR
    :
    PUSHM      R1,R3
    tslp_tsk   #100
    :
```

wup_tsk iwup_tsk	Wakeup task Wakeup task (handler only)
-----------------------------------	---

[[C Language API]]

```
ER ercd = wup_tsk( ID tskid );
ER ercd = iwup_tsk( ID tskid );
```

● Parameters

ID	tskid	ID number of the target task
----	-------	------------------------------

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
wup_tsk TSKID
iwup_tsk TSKID
```

● Parameters

TSKID	ID number of the target task
-------	------------------------------

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target task

[[Error code]]

E_OBJ	Object status invalid(task indicated by tskid is an inactive state)
E_QOVR	Queuing overflow

[[Functional description]]

If the task specified by tskid has been placed into WAITING state by slp_tsk or tslp_tsk, this service call wakes up the task from WAITING state to place it into READY or RUNNING state. Or if the task specified by tskid is in WAITING-SUSPENDED state, this service call awakes the task from only the sleeping state so that the task goes to SUSPENDED state.

If a wakeup request is issued while the target task remains in DORMANT state, the error code E_OBJ is returned to the service call issuing task. If TSK_SELF is specified for tskid, it means specifying the issuing task itself. If TSK_SELF is specified for tskid in non-task context, operation of the service call cannot be guaranteed.

If this service call is issued to a task that has not been placed in WAITING state or in WAITING-SUSPENDED state by execution of slp_tsk or tslp_tsk, the wakeup request is accumulated. More specifically, the wakeup request count for the target task to be awakened is incremented by 1, in which way wakeup requests are accumulated.

The maximum value of the wakeup request count is 15. If while the wakeup request count = 15 a new wakeup request is generated exceeding this limit, the error code E_QOVR is returned to the task that issued the service call, with the wakeup request count left intact.

If this service call is to be issued from task context, use wup_tsk; if issued from non-task context, use iwup_tsk.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    if( wup_tsk( ID_main ) != E_OK )
        printf("Can't wakeup main()\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM    A0
    wup_tsk  #ID_TASK1
    :
```

can_wup
ican_wup

Cancel wakeup request
Cancel wakeup request (handler only)

[[C Language API]]

```
ER_UINT wupcnt = can_wup( ID tskid );  
ER_UINT wupcnt = ican_wup( ID tskid );
```

● Parameters

ID	tskid	ID number of the target task
----	-------	------------------------------

● Return Parameters

ER_UINT	wupcnt > 0	Canceled wakeup request count
	wupcnt = 0	
	wupcnt < 0	Error code

[[Assembly language API]]

```
.include mr30.inc  
can_wup TSKID  
ican_wup TSKID
```

● Parameters

TSKID	ID number of the target task
-------	------------------------------

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code, Canceled wakeup request count
A0	ID number of the target task

[[Error code]]

E_OBJ	Object status invalid(task indicated by tskid is an inactive state)
-------	---

[[Functional description]]

This service call clears the wakeup request count of the target task indicated by tskid to 0. This means that because the target task was in either WAITING state nor WAITING-SUSPENDED state when an attempt was made to wake it up by wup_tsk or iwup_tsk before this service call was issued, the attempt resulted in only accumulating wakeup requests and this service call clears all of those accumulated wakeup requests.

Furthermore, the wakeup request count before being cleared to 0 by this service call, i.e., the number of wakeup requests that were issued in vain (wupcnt) is returned to the issuing task. If a wakeup request is issued while the target task is in DORMANT state, the error code E_OBJ is returned. If TSK_SELF is specified for tskid, it means specifying the issuing task itself. If TSK_SELF is specified for tskid in non-task context, operation of this service call cannot be guaranteed.

If this service call is to be issued from task context, use can_wup; if issued from non-task context, use ican_wup.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    ER_UINT wupcnt;
    :
    wupcnt = can_wup(ID_main);
    if( wup_cnt > 0 )
        printf("wupcnt = %d\n",wupcnt);
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM    A0
    can_wup  #ID_TASK3
    :
```

rel_wai	Release task from waiting
irel_wai	Release task from waiting (handler only)

[[C Language API]]

```
ER ercd = rel_wai( ID tskid );
ER ercd = irel_wai( ID tskid );
```

● Parameters

ID	tskid	ID number of the target task
----	-------	------------------------------

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
rel_wai TSKID
irel_wai TSKID
```

● Parameters

TSKID	ID number of the target task
-------	------------------------------

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target task

[[Error code]]

E_OBJ	Object status invalid(task indicated by tskid is not an wait state)
-------	---

[[Functional description]]

This service call forcibly release the task indicated by tskid from waiting (except SUSPENDED state) to place it into READY or RUNNING state. The forcibly released task returns the error code E_RLWAI. If the target task has been enqueued in some waiting queue, the task is dequeued from it by execution of this service call.

If this service call is issued to a task in WAITING-SUSPENDED state, the target task is released from WAITING state and goes to SUSPENDED state.³³

If the target task is not in WAITING state, the error code E_OBJ is returned. This service call forbids specifying the issuing task itself for tskid.

If this service call is to be issued from task context, use rel_wai; if issued from non-task context, use irel_wai.

³³ This means that tasks cannot be resumed from SUSPENDED state by this service call. Only the rsm_tsk, irsm_tsk, frsm_tsk, and ifrsm_tsk service calls can release them from SUSPENDED state.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    if( rel_wai( ID_main ) != E_OK )
        error("Can't rel_wai main()\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB          task
task:
    :
    PUSHM     A0
    rel_wai   #ID_TASK2
    :
```

sus_tsk	Suspend task
isus_tsk	Suspend task (handler only)

[[C Language API]]

```
ER ercd = sus_tsk( ID tskid );
ER ercd = isus_tsk( ID tskid );
```

● Parameters

ID	tskid	ID number of the target task
----	-------	------------------------------

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
sus_tsk TSKID
isus_tsk TSKID
```

● Parameters

TSKID	ID number of the target task
-------	------------------------------

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target task

[[Error code]]

E_OBJ	Object status invalid(task indicated by tskid is an inactive state)
E_QOVR	Queuing overflow

[[Functional description]]

This service call aborts execution of the task indicated by tskid and places it into SUSPENDED state. Tasks are resumed from this SUSPENDED state by the rsm_tsk, irsm_tsk, frsm_tsk, or ifrsm_tsk service call. If the task indicated by tskid is in DORMANT state, it returns the error code E_OBJ as a return value for the service call.

The maximum number of suspension requests by this service call that can be nested is 1. If this service call is issued to a task which is already in SUSPENDED state, the error code E_QOVR is returned.

This service call forbids specifying the issuing task itself for tskid.

If this service call is to be issued from task context, use sus_tsk; if issued from non-task context, use isus_tsk.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    if( sus_tsk( ID_main ) != E_OK )
        printf("Can't suspend task main()\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0
    sus_tsk    #ID_TASK2
    :
```

rsm_tsk	Resume suspended task
irmsm_tsk	Resume suspended task(handler only)
frsm_tsk	Forcibly resume suspended task
ifrsn_tsk	Forcibly resume suspended task(handler only)

[[C Language API]]

```
ER ercd = rsm_tsk( ID tskid );
ER ercd = irsm_tsk( ID tskid );
ER ercd = frsm_tsk( ID tskid );
ER ercd = ifrsn_tsk( ID tskid );
```

● Parameters

ID tskid ID number of the target task

● Return Parameters

ER ercd Terminated normally (E_OK) or error code

[[Assembly language API]]

```
.include mr30.inc
rsm_tsk TSKID
irmsm_tsk TSKID
frsm_tsk TSKID
ifrsn_tsk TSKID
```

● Parameters

TSKID ID number of the target task

● Register contents after service call is issued

Register name Content after service call is issued

R0 Error code

A0 ID number of the target task

[[Error code]]

E_OBJ Object status invalid(task indicated by tskid is not a forcible wait state)

[[Functional description]]

If the task indicated by tskid has been aborted by sus_tsk, this service call resumes the target task from SUSPENDED state. In this case, the target task is linked to behind the tail of the ready queue. In the case of frsm_tsk and ifrsn_tsk, the task is forcibly resumed from SUSPENDED state.

If a request is issued while the target task is not in SUSPENDED state (including DORMANT state), the error code E_OBJ is returned to the service call issuing task.

The rsm_tsk, irsm_tsk, frsm_tsk, and ifrsn_tsk service calls each operate the same way, because the maximum number of forcible wait requests that can be nested is 1.

If this service call is to be issued from task context, use rsm_tsk/frsm_tsk; if issued from non-task context, use irsm_tsk/ifrsn_tsk.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task1()
{
    :
    if( rsm_tsk( ID_main ) != E_OK )
        printf("Can't resume main()\n");
    :
    :
    if(frsm_tsk( ID_task2 ) != E_OK )
        printf("Can't forced resume task2()\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0
    rsm_tsk     #ID_TASK2
    :
    PUSHM      A0
    frsm_tsk    #ID_TASK1
    :
```

[[C Language API]]

```
ER ercd = dly_tsk(RELTIM dlytim);
```

- **Parameters**

RELTIM	dlytim	Delay time
--------	--------	------------

- **Return Parameters**

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
dly_tsk RELTIM
```

- **Parameters**

RELTIM	Delay time
--------	------------

- **Register contents after service call is issued**

Register name	Content after service call is issued
R0	Error code
R1	Delay time (16 low-order bits)
R3	Delay time (16 high-order bits)

[[Error code]]

E_RLWAI	Forced release from waiting
---------	-----------------------------

[[Functional description]]

This service call temporarily stops execution of the issuing task itself for a duration of time specified by dlytim to place the task from RUNNING state into WAITING state. In this case, the task is released from the WAITING state at the first time tick after the time specified by dlytim has elapsed. Therefore, if specified dlytim = 0, the task is placed into WAITING state briefly and then released from the WAITING state at the first time tick.

The task placed into WAITING state by invocation of this service call is released from the WAITING state in the following cases. Note that when released from WAITING state, the task that issued the service call is removed from the timeout waiting queue and linked to a ready queue.

- ◆ **When the first time tick occurred after dlytim elapsed**

The error code returned in this case is E_OK.

- ◆ **When the rel_wai or irel_wai service call is issued before dlytim elapses**

The error code returned in this case is E_RLWAI.

Note that even when the wup_tsk or iwup_tsk service call is issued during the delay time, the task is not released from WAITING state.

The delay time dlytim is expressed in ms units. Therefore, if specified as dly_tsk(50);, the issuing task is placed from RUNNING state into a delayed wait state for a period of 50 ms.

The values specified for dlytim must be within 0x7ffffff - time tick. If any value exceeding this limit is specified, the service call may not operate correctly.

This service call can be issued only from task context. It cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    if( dly_tsk() != E_OK )
        error("Forced wakeup\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM    R1,R3
    dly_tsk  #500
    :
```

5.3 Synchronization & Communication Function (Semaphore)

Specifications of the semaphore function of MR30 are listed in Table 5.5.

Table 5.5 Specifications of the Semaphore Function

No.	Item	Content
1	Semaphore ID	1-255
2	Maximum number of resources	1-65535
3	Semaphore attribute	TA_FIFO: Tasks enqueued in order of FIFO TA_TPRI: Tasks enqueued in order of priority

Table 5.6 List of Semaphore Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	sig_sem	[S]	Releases semaphore resource	O		O	O	O	
2	isig_sem	[S]			O	O	O	O	
3	wai_sem	[S]	Acquires semaphore resource	O		O		O	
4	pol_sem	[S]	Acquires semaphore resource(polling)	O		O	O	O	
5	ipol_sem				O	O	O	O	
6	twai_sem	[S]	Acquires semaphore resource(with timeout)	O		O		O	
7	ref_sem		References semaphore status	O		O	O	O	
8	iref_sem				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

sig_sem	Release semaphore resource
isig_sem	Release semaphore resource (handler only)

[[C Language API]]

```
ER ercd = sig_sem( ID semid );
ER ercd = isig_sem( ID semid );
```

● Parameters

ID	semid	Semaphore ID number to which returned
----	-------	---------------------------------------

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
sig_sem SEMID
isig_sem SEMID
```

● Parameters

SEMID	Semaphore ID number to which returned
-------	---------------------------------------

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	Semaphore ID number to which returned

[[Error code]]

E_QOVR	Queuing overflow
--------	------------------

[[Functional description]]

This service call releases one resource to the semaphore indicated by semid.

If tasks are enqueued in a waiting queue for the target semaphore, the task at the top of the queue is placed into READY state. Conversely, if no tasks are enqueued in that waiting queue, the semaphore resource count is incremented by 1. If an attempt is made to return resources (sig_sem or isig_sem service call) causing the semaphore resource count value to exceed the maximum value specified in a configuration file (maxsem), the error code E_QOVR is returned to the service call issuing task, with the semaphore count value left intact.

If this service call is to be issued from task context, use sig_sem; if issued from non-task context, use isig_sem.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    if( sig_sem( ID_sem ) == E_QOVR )
        error("Overflow\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM    A0
    sig_sem  #ID_SEM2
    :
```

wai_sem	Acquire semaphore resource
pol_sem	Acquire semaphore resource (polling)
ipol_sem	Acquire semaphore resource (polling, handler only)
twai_sem	Acquire semaphore resource(with timeout)

[[C Language API]]

```
ER ercd = wai_sem( ID semid );
ER ercd = pol_sem( ID semid );
ER ercd = ipol_sem( ID semid );
ER ercd = twai_sem( ID semid, TMO tmout );
```

● Parameters

ID	semid	Semaphore ID number to be acquired
TMO	tmout	Timeout value (for twai_sem)

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
wai_sem SEMID
pol_sem SEMID
ipol_sem SEMID
twai_sem SEMID,TMO
```

● Parameters

SEMID	Semaphore ID number to be acquired
TMO	Timeout value(twai_sem)

● Register contents after service call is issued

wai_sem,pol_sem,ipol_sem

Register name	Content after service call is issued
R0	Error code
A0	Semaphore ID number to be acquired

twai_sem

Register name	Content after service call is issued
R0	Error code
R1	Timeout value(16 low-order bits)
R3	Timeout value(16 high-order bits)
A0	Semaphore ID number to be acquired

[[Error code]]

E_RLWAI	Forced release from waiting
E_TMOUT	Polling failure or timeout

[[Functional description]]

This service call acquires one semaphore resource from the semaphore indicated by semid.

If the semaphore resource count is equal to or greater than 1, the semaphore resource count is decremented by 1, and the service call issuing task continues execution. On the other hand, if the semaphore count value is 0, the wai_sem or twai_sem service call invoking task is enqueued in a waiting queue for that semaphore. If the attribute of the semaphore semid is TA_TFIFO, the task is enqueued in order of FIFO; if TA_TPRI, the task is enqueued in order of priority. For the pol_sem and ipol_sem service calls, the task returns immediately and responds to the call with the error code E_TMOUT.

For the twai_sem service call, specify a wait time for tmout in ms units. The values specified for tmout must be within 0x7ffffff - time tick. If any value exceeding this limit is specified, operation of the service call cannot be guaranteed. If TMO_POL=0 is specified for tmout, it means specifying 0 as a timeout value, in which case the service call operates the same way as pol_sem. Furthermore, if specified as tmout=TMO_FEVR(-1), it means specifying an infinite wait, in which case the service call operates the same way as wai_sem.

The task placed into WAITING state by execution of the wai_sem or twai_sem service call is released from the WAITING state in the following cases:

- ◆ **When the sig_sem or isig_sem service call is issued before the tmout time elapses, with task-awaking conditions thereby satisfied**
The error code returned in this case is E_OK.
- ◆ **When the first time tick occurred after tmout elapsed while task-awaking conditions remain unsatisfied**
The error code returned in this case is E_TMOUT.
- ◆ **When the task is forcibly released from WAITING state by the rel_wai or irel_wai service call issued from another task or a handler**
The error code returned in this case is E_RLWAI.

If this service call is to be issued from task context, use wai_sem, twai_sem, or pol_sem; ; if issued from non-task context, use ipol_sem.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    if( wai_sem( ID_sem ) != E_OK )
        printf("Forced wakeup\n");
    :
    if( pol_sem( ID_sem ) != E_OK )
        printf("Timeout\n");
    :
    if( twai_sem( ID_sem, 10 ) != E_OK )
        printf("Forced wakeup or Timeout\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0
    pol_sem    #ID_SEM1
    :
    PUSHM      A0
    wai_sem    #ID_SEM2
    :
    PUSHM      A0,R1,R3
    twai_sem   #ID_SEM3,300
    :
```

ref_sem	Reference semaphore status
iref_sem	Reference semaphore status (handler only)

[[C Language API]]

```
ER ercd = ref_sem( ID semid, T_RSEM *pk_rsem );
ER ercd = iref_sem( ID semid, T_RSEM *pk_rsem );
```

● Parameters

ID	semid	ID number of the target semaphore
T_RSEM	*pk_rsem	Pointer to the packet to which semaphore status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK)
T_RSEM	*pk_rsem	Pointer to the packet to which semaphore status is returned

Contents of pk_rsem

```
typedef struct t_rsem{
    ID      wtskid      +0    2    ID number of the task at the head of the semaphore's wait queue
    UINT    semcnt      +2    2    Current semaphore resource count
} T_RSEM;
```

[[Assembly language API]]

```
.include mr30.inc
ref_sem SEMID, PK_RSEM
iref_sem SEMID, PK_RSEM
```

● Parameters

SEMID	ID number of the target semaphore
PK_RSEM	Pointer to the packet to which semaphore status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target semaphore
A1	Pointer to the packet to which semaphore status is returned

[[Error code]]

None

[[Functional description]]

This service call returns various statuses of the semaphore indicated by semid.

◆ wtskid

Returned to wtskid is the ID number of the task at the head of the semaphore's wait queue (the next task to be dequeued). If no tasks are kept waiting, TSK_NONE is returned.

◆ semcnt

Returned to semcnt is the current semaphore resource count.

If this service call is to be issued from task context, use ref_sem; if issued from non-task context, use iref_sem.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RSEM rsem;
    ER ercd;
    :
    ercd = ref_sem( ID_sem1, &rsem );
    :
}
```

<<Example statement in assembly language>>

```
_ refsem:      .blkb    4
               .include mr30.inc
               .GLB     task
task:
               :
               PUSHM    A0,A1
               ref_sem  #ID_SEM1,#_refsem
               :
```

5.4 Synchronization & Communication Function (Eventflag)

Specifications of the eventflag function of MR30 are listed in Table 5.7.

Table 5.7 Specifications of the Eventflag Function

No.	Item	Content
1	Event0flag ID	1-255
2	Number of bits comprising eventflag	16 bits
3	Eventflag attribute	TA_TFIFO: Waiting tasks enqueued in order of FIFO TA_TPRI: Waiting tasks enqueued in order of priority TA_WSGL: Multiple tasks cannot be kept waiting TA_WMUL: Multiple tasks can be kept waiting TA_CLR: Bit pattern cleared when waiting task is released

Table 5.8 List of Eventflag Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	set_flg	[S]	Sets eventflag	O		O	O	O	
2	iset_flg	[S]			O	O	O	O	
3	clr_flg	[S]	Clears eventflag	O		O	O	O	
4	iclr_flg				O	O	O	O	
5	wai_flg	[S]	Waits for eventflag	O		O		O	
6	pol_flg	[S]	Waits for eventflag(polling)	O		O	O	O	
7	ipol_flg	[S]			O	O	O	O	
8	twai_flg	[S]	Waits for eventflag(with timeout)	O		O		O	
9	ref_flg		References eventflag status	O		O	O	O	
10	iref_flg				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

set_flg iset_flg

Set eventflag Set eventflag (handler only)

[[C Language API]]

```
ER ercd = set_flg( ID flgid, FLGPTN setptn );  
ER ercd = iset_flg( ID flgid, FLGPTN setptn );
```

● Parameters

ID	flgid	ID number of the eventflag to be set
FLGPTN	setptn	Bit pattern to be set

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc  
set_flg FLGID,SETPTN  
iset_flg FLGID,SETPTN
```

● Parameters

FLGID	ID number of the eventflag to be set
SETPTN	Bit pattern to be set

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
R3	Bit pattern to be set
A0	Eventflag ID number

[[Error code]]

None

[[Functional description]]

Of the 16-bit eventflag indicated by flgid, this service call sets the bits indicated by setptn. In other words, the value of the eventflag indicated by flgid is OR'd with setptn. If the alteration of the eventflag value results in task-awaking conditions for a task that has been kept waiting for the eventflag by the wai_flg or twai_flg service call becoming satisfied, the task is released from WAITING state and placed into READY or RUNNING state.

Task-awaking conditions are evaluated sequentially beginning with the top of the waiting queue. If TA_WMUL is specified as an eventflag attribute, multiple tasks kept waiting for the eventflag can be released from WAITING state at the same time by one set_flg or iset_flg service call issued. Furthermore, if TA_CLR is specified for the attribute of the target eventflag, all bit patterns of the eventflag are cleared, with which processing of the service call is terminated.³⁴

If all bits specified in setptn are 0, no operation will be performed for the target eventflag, in which case no errors are assumed, however.

If this service call is to be issued from task context, use set_flg; if issued from non-task context, use iset_flg.

³⁴ The indivisibility of a service call is not guaranteed in the combination of this service call, and iclr_flg, iref_flg, iref_tsk and an iref_tst service call. That is, being processed to the state under this service call execution may occur.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task(void)
{
    :
    set_flg( ID_flg, (FLGPTN) 0xff00 );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM    A0, R3
    set_flg  #ID_FLG3, #0ff00H
    :
```

clr_flg	Clear eventflag
iclr_flg	Clear eventflag (handler only)

[[C Language API]]

```
ER ercd = clr_flg( ID flgid, FLGPTN clrptn );
ER ercd = iclr_flg( ID flgid, FLGPTN clrptn );
```

● Parameters

ID	flgid	ID number of the eventflag to be cleared
FLGPTN	clrptn	Bit pattern to be cleared

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
clr_flg FLGID,CLRPTN
iclr_flg FLGID,CLRPTN
```

● Parameters

FLGID	ID number of the eventflag to be cleared
CLRPTN	Bit pattern to be cleared

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the eventflag to be cleared
R3	Bit pattern to be cleared

[[Error code]]

None

[[Functional description]]

Of the 16-bit eventflag indicated by flgid, this service call clears the bits whose corresponding values in clrptn are 0. In other words, the eventflag bit pattern indicated by flgid is updated by AND'ing it with clrptn. If all bits specified in clrptn are 1, no operation will be performed for the target eventflag, in which case no errors are assumed, however.

If this service call is to be issued from task context, use clr_flg; if issued from non-task context, use iclr_flg.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task(void)
{
    :
    clr_flg( ID_flg, (FLGPTN) 0xf0f0);
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0, R3
    clr_flg    #ID_FLG1, #0f0f0H
    :
```

wai_flg	Wait for eventflag
pol_flg	Wait for eventflag(polling)
ipol_flg	Wait for eventflag(polling, handler only)
twai_flg	Wait for eventflag(with timeout)

[[C Language API]]

```
ER ercd = wai_flg( ID flgid, FLGPTN waiptn, MODE wfmode, FLGPTN *p_flgptn );
ER ercd = pol_flg( ID flgid, FLGPTN waiptn, MODE wfmode, FLGPTN *p_flgptn );
ER ercd = ipol_flg( ID flgid, FLGPTN waiptn, MODE wfmode, FLGPTN *p_flgptn );
ER ercd = twai_flg( ID flgid, FLGPTN waiptn, MODE wfmode, FLGPTN *p_flgptn,
                    TMO tmout );
```

● Parameters

ID	flgid	ID number of the eventflag waited for
FLGPTN	waiptn	Wait bit pattern
MODE	wfmode	Wait mode
FLGPTN	*p_flgptn	Pointer to the area to which bit pattern is returned when released from wait
TMO	tmout	Timeout value (for twai_flg)

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
FLGPTN	*p_flgptn	Pointer to the area to which bit pattern is returned when released from wait

[[Assembly language API]]

```
.include mr30.inc
wai_flg  FLGID, WAIPTN, WFMODE
pol_flg  FLGID, WAIPTN, WFMODE
ipol_flg FLGID, WAIPTN, WFMODE
twai_flg FLGID, WAIPTN, WFMODE, TMO
```

● Parameters

FLGID	ID number of the eventflag waited for
WAIPTN	Wait bit pattern
WFMODE	Wait mode
TMO	Timeout value (for twai_flg)

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
R1	Wait mode
R2	bit pattern is returned when released from wait
R3	Wait bit pattern
A0	ID number of the eventflag waited for

[[Error code]]

E_RLWAI	Forced release from waiting
E_TMOUT	Polling failure or timeout or timed out
E_ILUSE	Service call improperly used (Tasks present waiting for TA_WSGL attribute eventflag)

[[Functional description]]

This service call waits until the eventflag indicated by flgid has its bits specified by waiptn set according to task-awaking conditions indicated by wfmoe. Returned to the area pointed to by p_flgptn is the eventflag bit pattern at the time the task is released from WAITING state.

If the target eventflag has the TA_WSGL attribute and there are already other tasks waiting for the eventflag, the error code E_ILUSE is returned.

If task-awaking conditions have already been met when this service call is invoked, the task returns immediately and responds to the call with E_OK. If task-awaking conditions are not met and the invoked service call is wai_flg or twai_flg, the task is enqueued in an eventflag waiting queue. In that case, if the attribute of the specified eventflag is TA_TFIFO, the task is enqueued in order of FIFO; if TA_TPRI, the task is enqueued in order of priority. For the pol_flg and ipol_flg service calls, the task returns immediately and responds to the call with the error code E_TMOUT.

For the twai_flg service call, specify a wait time for tmout in ms units. The values specified for tmout must be within 0x7fffffff - time tick. If any value exceeding this limit is specified, the service call may not operate correctly. If TMO_POL=0 is specified for tmout, it means specifying 0 as a timeout value, in which case the service call operates the same way as pol_flg. Furthermore, if specified as tmout=TMO_FEVR(-1), it means specifying an infinite wait, in which case the service call operates the same way as wai_flg.

The task placed into a wait state by execution of the wai_flg or twai_flg service call is released from WAITING state in the following cases:

- ◆ **When task-awaking conditions are met before the tmout time elapses**
The error code returned in this case is E_OK.
- ◆ **When the first time tick occurred after tmout elapsed while task-awaking conditions remain unsatisfied**
The error code returned in this case is E_TMOUT.
- ◆ **When the task is forcibly released from WAITING state by the rel_wai or irel_wai service call issued from another task or a handler**
The error code returned in this case is E_RLWAI.

The following shows how wfmoe is specified and the meaning of each mode.

wfmoe (wait mode)	Meaning
TWF_ANDW	Wait until all bits specified by waiptn are set (wait for the bits AND'ed)
TWF_ORW	Wait until one of the bits specified by waiptn is set (wait for the bits OR'ed)

If this service call is to be issued from task context, use wai_flg, twai_flg, pol_flg; if issued from non-task context, use ipol_flg.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    UINT flgpntn;
    :
    if(wai_flg(ID_flg2, (FLGPNTN)0x0ff0, TWF_ANDW, &flgpntn)!=E_OK)
        error("Wait Released\n");
    :
    :
    if(pol_flg(ID_flg2, (FLGPNTN)0x0ff0, TWF_ORW, &flgpntn)!=E_OK)
        printf("Not set EventFlag\n");
    :
    :
    if( twai_flg(ID_flg2, (FLGPNTN)0x0ff0, TWF_ANDW, &flgpntn, 5) != E_OK )
        error("Wait Released\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM    A0,R1,R3
    wai_flg  #ID_FLG1,#0003H,#TWF_ANDW
    :
    PUSHM    A0,R1,R3
    pol_flg  #ID_FLG2,#0008H,#TWF_ORW
    :
    PUSHM    A0,R1,R3
    wai_flg  #ID_FLG3,#0003H,#TWF_ANDW,20
    :
```

ref_flg	Reference eventflag status
iref_flg	Reference eventflag status (handler only)

[[C Language API]]

```
ER ercd = ref_flg( ID flgid, T_RFLG *pk_rflg );
ER ercd = iref_flg( ID flgid, T_RFLG *pk_rflg );
```

● Parameters

ID	flgid	ID number of the target eventflag
T_RFLG	*pk_rflg	Pointer to the packet to which eventflag status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK)
T_RFLG	*pk_rflg	Pointer to the packet to which eventflag status is returned

Contents of pk_rflg

```
typedef struct t_rflg{
    ID      wtskid      +0    2    Reception waiting task ID
    FLGPTN  flgptn      +2    2    Current eventflag bit pattern
} T_RFLG;
```

[[Assembly language API]]

```
.include mr30.inc
ref_flg  FLGID, PK_RFLG
iref_flg FLGID, PK_RFLG
```

● Parameters

FLGID	ID number of the target eventflag
PK_RFLG	Pointer to the packet to which eventflag status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target eventflag
A1	Pointer to the packet to which eventflag status is returned

[[Error code]]

None

[[Functional description]]

This service call returns various statuses of the eventflag indicated by flgid.

◆ wtskid

Returned to wtskid is the ID number of the task at the top of a waiting queue (the next task to be dequeued). If no tasks are kept waiting, TSK_NONE is returned.

◆ flgptn

Returned to flgptn is the current eventflag bit pattern.

If this service call is to be issued from task context, use ref_flg; if issued from non-task context, use iref_flg.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RFLG rflg;
    ER ercd;
    :
    ercd = ref_flg( ID_FLG1, &rflg );
    :
}
```

<<Example statement in assembly language>>

```
_ refflg:      .blkb    4
               .include mr30.inc
               .GLB     task
task:
    :
    PUSHM     A0,A1
    ref_flg #ID_FLG1,#_refflg
    :
```

5.5 Synchronization & Communication Function (Data Queue)

Specifications of the data queue function of MR30 are listed in Table 5.9.

Table 5.9 Specifications of the Data Queue Function

No.	Item	Content
1	Data queue ID	1-255
2	Capacity (data bytes) in data queue area	0-65535
3	Data size	16 bits
4	Data queue attribute	TA_TFIFO: Waiting tasks enqueued in order of FIFO TA_TPRI: Waiting tasks enqueued in order of priority

Table 5.10 List of Dataqueue Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	snd_dtq	[S]	Sends to data queue	O		O		O	
2	psnd_dtq	[S]	Sends to data queue (polling)		O	O	O	O	
3	ipsnd_dtq	[S]		O		O	O	O	
4	tsnd_dtq	[S]	Sends to data queue (with timeout)		O	O		O	
5	fsnd_dtq	[S]	Forced sends to data queue	O		O	O	O	
6	ifsnd_dtq	[S]		O		O	O	O	
7	rcv_dtq	[S]	Receives from data queue		O	O		O	
8	prcv_dtq	[S]	Receives from data queue (polling)	O		O	O	O	
9	iprcv_dtq			O		O	O	O	
10	trcv_dtq	[S]	Receives from data queue (with timeout)		O	O		O	
11	ref_dtq		References data queue status	O		O	O	O	
12	iref_dtq				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

snd_dtq	Send to data queue
psnd_dtq	Send to data queue (polling)
ipsnd_dtq	Send to data queue (polling, handler only)
tsnd_dtq	Send to data queue (with timeout)
fsnd_dtq	Forcibly send to data queue
ifsnd_dtq	Forcibly send to data queue (handler only)

[[C Language API]]

```
ER ercd = snd_dtq( ID dtqid, VP_INT data );
ER ercd = psnd_dtq( ID dtqid, VP_INT data );
ER ercd = ipsnd_dtq( ID dtqid, VP_INT data );
ER ercd = tsnd_dtq( ID dtqid, VP_INT data, TMO tmout );
ER ercd = fsnd_dtq( ID dtqid, VP_INT data );
ER ercd = ifsnd_dtq( ID dtqid, VP_INT data );
```

● Parameters

ID	dtqid	ID number of the data queue to which transmitted
TMO	tmout	Timeout value(tsnd_dtq)
VP_INT	data	Data to be transmitted

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
snd_dtq DTQID, DTQDATA
isnd_dtq DTQID, DTQDATA
psnd_dtq DTQID, DTQDATA
ipsnd_dtq DTQID, DTQDATA
tsnd_dtq DTQID, DTQDATA, TMO
fsnd_dtq DTQID, DTQDATA
ifsnd_dtq DTQID, DTQDATA
```

● Parameters

DTQID	ID number of the data queue to which transmitted
DTQDATA	Data to be transmitted
TMO	Timeout value (tsnd_dtq)

● Register contents after service call is issued

snd_dtq, psnd_dtq, ipsnd_dtq, fsnd_dtq, ifsnd_dtq

Register name	Content after service call is issued
R0	Error code
R1	Data to be transmitted
A0	ID number of the data queue to which transmitted

tsnd_dtq

Register name	Content after service call is issued
R0	Error code
R1	Data to be transmitted
R2	Timeout value (16 high-order bits)
A0	ID number of the data queue to which transmitted

[[Error code]]

E_RLWAI	Forced release from waiting
E_TMOUT	Polling failure or timeout or timed out
E_ILUSE	Service call improperly used (fsnd_dtq or ifsnd_dtq is issued for a data queue whose dtqcnt = 0)
EV_RST	Released from WAITING state by clearing of the data queue area

[[Functional description]]

This service call sends the 2-byte data indicated by data to the data queue indicated by dtqid. If any task is kept waiting for reception in the target data queue, the data is not stored in the data queue and instead sent to the task at the top of the reception waiting queue, with which the task is released from the reception wait state.

On the other hand, if snd_dtq or tsnd_dtq is issued for a data queue that is full of data, the task that issued the service call goes from RUNNING state to a data transmission wait state, and is enqueued in transmission waiting queue, kept waiting for the data queue to become available. In that case, if the attribute of the specified data queue is TA_TFIFO, the task is enqueued in order of FIFO; if TA_TPRI, the task is enqueued in order of priority. For psnd_dtq and ipsnd_dtq, the task returns immediately and responds to the call with the error code E_TMOUT.

For the tsnd_dtq service call, specify a wait time for tmout in ms units. The values specified for tmout must be within 0x7ffffff - time tick. If any value exceeding this limit is specified, the service call may not operate correctly. If TMO_POL=0 is specified for tmout, it means specifying 0 as a timeout value, in which case the service call operates the same way as psnd_dtq. Furthermore, if specified as tmout=TMO_FEVR(-1), it means specifying an infinite wait, in which case the service call operates the same way as snd_dtq.

If there are no tasks waiting for reception, nor is the data queue area filled, the transmitted data is stored in the data queue.

The task placed into WAITING state by execution of the snd_dtq or tsnd_dtq service call is released from WAITING state in the following cases:

- ◆ **When the rcv_dtq, trcv_dtq, prcv_dtq, or iprcv_dtq service call is issued before the tmout time elapses, with task-awaking conditions thereby satisfied**
The error code returned in this case is E_OK.
- ◆ **When the first time tick occurred after tmout elapsed while task-awaking conditions remain unsatisfied**
The error code returned in this case is E_TMOUT.
- ◆ **When the task is forcibly released from WAITING state by the rel_wai or irel_wai service call issued from another task or a handler**
The error code returned in this case is E_RLWAI.
- ◆ **When the target data queue being waited for is removed by the vrst_dtq service call issued from another task**
The error code returned in this case is EV_RST.

For fsnd_dtq and ifsnd_dtq, the data at the top of the data queue or the oldest data is removed, and the transmitted data is stored at the tail of the data queue. If the data queue area is not filled with data, fsnd_dtq and ifsnd_dtq operate the same way as snd_dtq.

If this service call is to be issued from task context, use snd_dtq,tsnd_dtq,psnd_dtq,fsnd_dtq; if issued from non-task context, use ipsnd_dtq,ifsnd_dtq.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
VP_INT data[10];
void task(void)
{
    :
    if( snd_dtq( ID_dtq, data[0]) == E_RLWAI ){
        error("Forced released\n");
    }
    :
    if( psnd_dtq( ID_dtq, data[1]) == E_TMOUT ){
        error("Timeout\n");
    }
    :
    if( tsnd_dtq( ID_dtq, data[2], 10 ) != E_TMOUT ){
        error("Timeout\n");
    }
    :
    if( fsnd_dtq( ID_dtq, data[3]) != E_OK ){
        error("error\n");
    }
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_g_dtq: .LWORD 12345678H
task:
    :
    PUSHM      R1,R2,R3,A0
    tsnd_dtq   #ID_DTQ1,_g_dtq,#100
    :
    PUSHM      R1,R3,A0
    psnd_dtq   #ID_DTQ2,#0FFFFH
    :
    PUSHM      R1,R3,A0
    fsnd_dtq   #ID_DTQ3,#0ABCDH
    :
```

rcv_dtq	Receive from data queue
prcv_dtq	Receive from data queue (polling)
iprcv_dtq	Receive from data queue (polling, handler only)
trcv_dtq	Receive from data queue (with timeout)

[[C Language API]]

```
ER ercd = rcv_dtq( ID dtqid, VP_INT *p_data );
ER ercd = prcv_dtq( ID dtqid, VP_INT *p_data );
ER ercd = iprcv_dtq( ID dtqid, VP_INT *p_data );
ER ercd = trcv_dtq( ID dtqid, VP_INT *p_data, TMO tmout );
```

● Parameters

ID	dtqid	ID number of the data queue from which to receive
TMO	tmout	Timeout value (trcv_dtq)
VP_INT	*p_data	Pointer to the start of the area in which received data is stored

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
VP_INT	*p_data	Pointer to the start of the area in which received data is stored

[[Assembly language API]]

```
.include mr30.inc
rcv_dtq DTQID
prcv_dtq DTQID
iprcv_dtq DTQID
trcv_dtq DTQID,TMO
```

● Parameters

DTQID	ID number of the data queue from which to receive
TMO	Timeout value (trcv_dtq)

● Register contents after service call is issued

rcv_dtq,prcv_dtq,iprcv_dtq

Register name	Content after service call is issued
R0	Error code
R1	Received data
A0	Data queue ID number

trcv_dtq

Register name	Content after service call is issued
R0	Error code
R1	Received data
R2	Timeout value(16 high-order bits)
A0	ID number of the data queue from which to receive

[[Error code]]

E_RLWAI	Forced release from waiting
E_TMOUT	Polling failure or timeout or timed out

[[Functional description]]

This service call receives data from the data queue indicated by dtqid and stores the received data in the area pointed to by p_data. If data is present in the target data queue, the data at the top of the queue or the oldest data is received. This results in creating a free space in the data queue area, so that a task enqueued in a transmission waiting queue is released from WAITING state, and starts sending data to the data queue area.

If no data exist in the data queue and there is any task waiting to send data (i.e., data bytes in the data queue area = 0), data for the task at the top of the data transmission waiting queue is received. As a result, the task kept waiting to send that data is released from WAITING state.

On the other hand, if rcv_dtq or trcv_dtq is issued for the data queue which has no data stored in it, the task that issued the service call goes from RUNNING state to a data reception wait state, and is enqueued in a data reception waiting queue. At this time, the task is enqueued in order of FIFO. For the prcv_dtq and iprcv_dtq service calls, the task returns immediately and responds to the call with the error code E_TMOUT.

For the trcv_dtq service call, specify a wait time for tmout in ms units. The values specified for tmout must be within 0x7fffffff - time tick. If any value exceeding this limit is specified, the service call may not operate correctly. If TMO_POL=0 is specified for tmout, it means specifying 0 as a timeout value, in which case the service call operates the same way as prcv_dtq. Furthermore, if specified as tmout=TMO_FEVR(-1), it means specifying an infinite wait, in which case the service call operates the same way as rcv_dtq.

The task placed into a wait state by execution of the rcv_dtq or trcv_dtq service call is released from the wait state in the following cases:

- ◆ **When the rcv_dtq, trcv_dtq, prcv_dtq, or iprcv_dtq service call is issued before the tmout time elapses, with task-awaking conditions thereby satisfied**
The error code returned in this case is E_OK.
- ◆ **When the first time tick occurred after tmout elapsed while task-awaking conditions remain unsatisfied**
The error code returned in this case is E_TMOUT.
- ◆ **When the task is forcibly released from WAITING state by the rel_wai or irel_wai service call issued from another task or a handler**
The error code returned in this case is E_RLWAI.

If this service call is to be issued from task context, use rcv_dtq, trcv_dtq, prcv_dtq; if issued from non-task context, use iprcv_dtq.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"

void task()
{
    VP_INT data;
    :
    if( rcv_dtq( ID_dtq, &data ) != E_RLWAI )
        error("forced wakeup\n");
    :
    if( prcv_dtq( ID_dtq, &data ) != E_TMOUT )
        error("Timeout\n");
    :
    if( trcv_dtq( ID_dtq, &data, 10 ) != E_TMOUT )
        error("Timeout \n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0
    trcv_dtq    #ID_DTQ1,#TMO_POL
    :
    PUSHM      A0
    prcv_dtq    #ID_DTQ2
    :
    PUSHM      A0
    rcv_dtq     #ID_DTQ2
    :
```

ref_dtq iref_dtq	Reference data queue status Reference data queue status (handler only)
-----------------------------------	---

[[C Language API]]

```
ER ercd = ref_dtq( ID dtqid, T_RDTQ *pk_rdtq );
ER ercd = iref_dtq( ID dtqid, T_RDTQ *pk_rdtq );
```

● Parameters

ID	dtqid	ID number of the target data queue
T_RDTQ	*pk_rdtq	Pointer to the packet to which data queue status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK)
T_RDTQ	*pk_rdtq	Pointer to the packet to which data queue status is returned

Contents of pk_rdtq

```
typedef struct t_rdtq{
    ID      stskid      +0    2    Transmission waiting task ID
    ID      wtskid      +2    2    Reception waiting task ID
    UINT    sdtqcnt     +4    2    Data bytes contained in data queue
} T_RDTQ;
```

[[Assembly language API]]

```
.include mr30.inc
ref_dtq DTQID, PK_RDTQ
iref_dtq DTQID, PK_RDTQ
```

● Parameters

DTQID	ID number of the target data queue
PK_RDTQ	Pointer to the packet to which data queue status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target data queue
A1	Pointer to the packet to which data queue status is returned

[[Error code]]

None

[[Functional description]]

This service call returns various statuses of the data queue indicated by dtqid.

◆ stskid

Returned to stskid is the ID number of the task at the top of a transmission waiting queue (the next task to be dequeued). If no tasks are kept waiting, TSK_NONE is returned.

◆ wtskid

Returned to wtskid is the ID number of the task at the top of a reception waiting queue (the next task to be dequeued). If no tasks are kept waiting, TSK_NONE is returned.

◆ sdtqcnt

Returned to sdtqcnt is the number of data bytes stored in the data queue area.

If this service call is to be issued from task context, use ref_dtq; if issued from non-task context, use iref_dtq.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RDTQ rdtq;
    ER ercd;
    :
    ercd = ref_dtq( ID_DTQ1, &rdtq );
    :
}
```

<<Example statement in assembly language>>

```
_refdtq:    .blkb    6
            .include mr30.inc
            .GLB     task
task:
    :
    PUSHM   A0,A1
    ref_dtq #ID_DTQ1,#_refdtq
    :
```

5.6 Synchronization & Communication Function (Mailbox)

Specifications of the mailbox function of MR30 are listed in Table 5.11.

Table 5.11 Specifications of the Mailbox Function

No.	Item	Content
1	Mailbox ID	1-255
2	Mailbox priority	1-255
3	Mailbox attribute	TA_TFIFO: Waiting tasks enqueued in order of FIFO TA_TPRI: Waiting tasks enqueued in order of priority TA_MFIFO: Messages enqueued in order of FIFO TA_MPRI: Messages enqueued in order of priority

Table 5.12 List of Mailbox Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	snd_mbx	[S]	Send to mailbox	O		O	O	O	
2	isnd_mbx				O	O	O	O	
3	rcv_mbx	[S]	Receive from mailbox	O		O		O	
4	prcv_mbx	[S]	Receive from mailbox (polling)	O		O	O	O	
5	iprcv_mbx				O	O	O	O	
6	trcv_mbx	[S]	Receive from mailbox (with timeout)	O		O		O	
7	ref_mbx		Reference mailbox status	O		O	O	O	
8	iref_mbx				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

snd_mbx
isnd_mbx

Send to mailbox
Send to mailbox (handler only)

[[C Language API]]

```
ER ercd = snd_mbx( ID mbxid, T_MSG *pk_msg );  
ER ercd = isnd_mbx( ID mbxid, T_MSG *pk_msg );
```

● Parameters

ID	mbxid	ID number of the mailbox to which transmitted
T_MSG	*pk_msg	Message to be transmitted

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc  
snd_mbx    MBXID, PK_MBX  
isnd_mbx   MBXID, PK_MBX
```

● Parameters

MBXID	ID number of the mailbox to which transmitted
PK_MBX	Message to be transmitted (address)

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the mailbox to which transmitted
A1	Message to be transmitted (address)

[[Structure of the message packet]]

```
<<Mailbox message header>>  
typedef struct t_msg{  
    VP      msghead  +0    2    Kernel managed area  
} T_MSG;  
<<Mailbox message header with priority included>>  
typedef struct t_msg{  
    T_MSG    msgque   +0    2    Message header  
    PRI      msgpri   +2    2    Message priority  
} T_MSG_PRI;
```

[[Error code]]

None

[[Functional description]]

This service call sends the message indicated by pk_msg to the mailbox indicated by mbxid. T_MSG* should be specified with a 16-bit address. If there is any task waiting to receive a message in the target mailbox, the transmitted message is passed to the task at the top of the waiting queue, and the task is released from WAITING state.

To send a message to a mailbox whose attribute is TA_MFIFO, add a T_MSG structure at the beginning of the message when creating it, as shown in the example below.

To send a message to a mailbox whose attribute is TA_MPRI, add a T_MSG_PRI structure at the beginning of the message when creating it, as shown in the example below.

Messages should always be created in a RAM area regardless of whether its attribute is TA_MFIFO or TA_MPRI.

The T_MSG area is used by the kernel, so that it cannot be rewritten after a message has been sent. If this area is rewritten before the message is received after it was sent, operation of the service call cannot be guaranteed.

If this service call is to be issued from task context, use snd_mbx; if issued from non-task context, use isnd_mbx.

<<Example format of a message>>

```
typedef struct user_msg{
    T_MSG t_msg;      /* T_MSG structure */
    B data[16];      /* User message data */
} USER_MSG;
```

<<Example format of a message with priority included>>

```
typedef struct user_msg{
    T_MSG_PRI t_msg;      /* T_MSG_PRI structure */
    B data[16];      /* User message data */
} USER_MSG;
```

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
typedef struct pri_message
{
    T_MSG_PRI msgheader;
    char body[12];
} PRI_MSG;

void task(void)
{
    PRI_MSG * msg;
    :
    msg->msgheader.msgpri = 5;
    snd_mbx( ID_msg, (T_MSG *) &msg);
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB task
_g_userMsg: .blkb 4 ; Header
            .blkb 12 ; Body
task:
:
PUSHM A0,A1
snd_mbx #ID_MBX1, #_g_userMsg
:
```

rcv_mbx	Receive from mailbox
prcv_mbx	Receive from mailbox (polling)
iprcv_mbx	Receive from mailbox (polling, handler only)
trcv_mbx	Receive from mailbox (with timeout)

[[C Language API]]

```
ER ercd = rcv_mbx( ID mbxid, T_MSG **ppk_msg );
ER ercd = prcv_mbx( ID mbxid, T_MSG **ppk_msg );
ER ercd = iprcv_mbx( ID mbxid, T_MSG **ppk_msg );
ER ercd = trcv_mbx( ID mbxid, T_MSG **ppk_msg, TMO tmout );
```

● Parameters

ID	mbxid	ID number of the mailbox from which to receive
TMO	tmout	Timeout value (for trcv_mbx)
T_MSG	**ppk_msg	Pointer to the start of the area in which received message is stored

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
T_MSG	**ppk_msg	Pointer to the start of the area in which received message is stored

[[Assembly language API]]

```
.include mr30.inc
rcv_mbx MBXID
prcv_mbx MBXID
iprcv_mbx MBXID
trcv_mbx MBXID, TMO
```

● Parameters

MBXID	ID number of the mailbox from which to receive
TMO	Timeout value (for trcv_mbx)

● Register contents after service call is issued

rcv_mbx, prcv_mbx, iprcv_mbx

Register name	Content after service call is issued
R0	Error code
R2	Received message
A0	ID number of the mailbox from which to receive

trcv_mbx

Register name	Content after service call is issued
R0	Error code
R2	Received message
R3	Timeout value(16 high-order bits)
A0	ID number of the mailbox from which to receive

[[Error code]]

E_RLWAI	Forced release from waiting
E_TMOUT	Polling failure or timeout or timed out

[[Functional description]]

This service call receives a message from the mailbox indicated by `mbxid` and stores the start address of the received message in the area pointed to by `ppk_msg`. `T_MSG*` should be specified with a 16-bit address. If data is present in the target mailbox, the data at the top of the mailbox is received.

On the other hand, if `rcv_mbx` or `trcv_mbx` is issued for a mailbox that has no messages in it, the task that issued the service call goes from `RUNNING` state to a message reception wait state, and is enqueued in a message reception waiting queue. In that case, if the attribute of the specified mailbox is `TA_TFIFO`, the task is enqueued in order of FIFO; if `TA_TPRI`, the task is enqueued in order of priority. For `prcv_mbx` and `iprcv_mbx`, the task returns immediately and responds to the call with the error code `E_TMOUT`.

For the `trcv_mbx` service call, specify a wait time for `tmout` in ms units. The values specified for `tmout` must be within `0x7fffffff` - time tick. If any value exceeding this limit is specified, the service call may not operate correctly. If `TMO_POL=0` is specified for `tmout`, it means specifying 0 as a timeout value, in which case the service call operates the same way as `prcv_mbx`. Furthermore, if specified as `tmout=TMO_FEVR(-1)`, it means specifying an infinite wait, in which case the service call operates the same way as `rcv_mbx`.

The task placed into `WAITING` state by execution of the `rcv_mbx` or `trcv_mbx` service call is released from `WAITING` state in the following cases:

- ◆ **When the `rcv_mbx`, `trcv_mbx`, `prcv_mbx`, or `iprcv_mbx` service call is issued before the `tmout` time elapses, with task-awaking conditions thereby satisfied**
The error code returned in this case is `E_OK`.
- ◆ **When the first time tick occurred after `tmout` elapsed while task-awaking conditions remain unsatisfied**
The error code returned in this case is `E_TMOUT`.
- ◆ **When the task is forcibly released from `WAITING` state by the `rel_wai` or `irel_wai` service call issued from another task or a handler**
The error code returned in this case is `E_RLWAI`.

If this service call is to be issued from task context, use `rcv_mbx`, `trcv_mbx`, `prcv_mbx`; if issued from non-task context, use `iprcv_mbx`.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"

typedef struct fifo_message
{
    T_MSG    head;
    char     body[12];
} FIFO_MSG;
void task()
{
    FIFO_MSG *msg;
    :
    if( rcv_mbx((T_MSG **)&msg, ID_mbx) == E_RLWAI )
        error("forced wakeup\n");
    :
    :
    if( prcv_mbx((T_MSG **)&msg, ID_mbx) != E_TMOUT )
        error("Timeout\n");
    :
    :
    if( trcv_mbx((T_MSG **)&msg, ID_mbx,10) != E_TMOUT )
        error("Timeout\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      R3,A0
    trcv_mbx   #ID_MBX1,#100
    :
    PUSHM      R3,A0
    rcv_mbx    #ID_MBX1
    :
    PUSHM      R3,A0
    prcv_mbx   #ID_MBX1
    :
```

ref_mbx	Reference mailbox status
iref_mbx	Reference mailbox status (handler only)

[[C Language API]]

```
ER ercd = ref_mbx( ID mbxid, T_RMBX *pk_rmbx );
ER ercd = iref_mbx( ID mbxid, T_RMBX *pk_rmbx );
```

● Parameters

ID	Mbxid	ID number of the target mailbox
T_RMBX	*pk_rmbx	Pointer to the packet to which mailbox status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK)
T_RMBX	*pk_rmbx	Pointer to the packet to which mailbox status is returned

Contents of pk_rmbx

```
typedef struct t_rmbx{
    ID      wtskid      +0    2    Reception waiting task ID
    T_MSG   *pk_msg     +4    4    Next message packet to be received
} T_RMBX;
```

[[Assembly language API]]

```
.include mr30.inc
ref_mbx  MBXID, PK_RMBX
iref_mbx MBXID, PK_RMBX
```

● Parameters

MBXID	ID number of the target mailbox
PK_RMBX	Pointer to the packet to which mailbox status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target mailbox
A1	Pointer to the packet to which mailbox status is returned

[[Error code]]

None

[[Functional description]]

This service call returns various statuses of the mailbox indicated by mbxid.

◆ wtskid

Returned to wtskid is the ID number of the task at the top of a reception waiting queue (the next task to be dequeued). If no tasks are kept waiting, TSK_NONE is returned.

◆ *pk_msg

Returned to *pk_msg is the start address of the next message to be received. If there are no messages to be received next, NULL is returned. T_MSG* should be specified with a 16-bit address.

If this service call is to be issued from task context, use ref_mbx; if issued from non-task context, use iref_mbx.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RMBX rmbx;
    ER ercd;
    :
    ercd = ref_mbx( ID_MBX1, &rmbx );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_refmbx:  .blkb  6
task:
    :
    PUSHM  A0,A1
    ref_mbx #ID_MBX1,#_refmbx
    :
```

5.7 Memory Pool Management Function (Fixed-size Memory Pool)

Specifications of the fixed-size memory pool function of MR30 are listed in Table 5.13.

The memory pool area to be acquired can be specified by a section name for each memory pool during configuration.

Table 5.13 Specifications of the Fixed-size memory pool Function

No.	Item	Content
1	Fixed-size memory pool ID	1-255
2	Number of fixed-size memory block	1-65535
3	Size of fixed-size memory block	2-65535
4	Supported attributes	TA_TFIFO: Waiting tasks enqueued in order of FIFO TA_TPRI: Waiting tasks enqueued in order of priority
5	Specification of memory pool area	Area to be acquired specifiable by a section

Table 5.14 List of Fixed-size memory pool Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	get_mpf	[S]	Aquires fixed-size memory block	O		O		O	
2	pget_mpf	[S]	Aquires fixed-size memory block	O		O	O	O	
3	ipget_mpf		(polling)		O	O	O	O	
4	tget_mpf	[S]	Aquires fixed-size memory block (with timeout)	O		O		O	
5	rel_mpf	[S]	Releases fixed-size memory block	O		O	O	O	
6	irel_mpf				O	O	O	O	
7	ref_mpf		References fixed-size memory pool status	O		O	O	O	
8	iref_mpf				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

get_mpf	Aquire fixed-size memory block
pget_mpf	Aquire fixed-size memory block (polling)
ipget_mpf	Aquire fixed-size memory block (polling, handler only)
tget_mpf	Aquire fixed-size memory block (with timeout)

[[C Language API]]

```
ER ercd = get_mpf( ID mpfid, VP *p_blk );
ER ercd = pget_mpf( ID mpfid, VP *p_blk );
ER ercd = ipget_mpf( ID mpfid, VP *p_blk );
ER ercd = tget_mpf( ID mpfid, VP *p_blk, TMO tmout );
```

● Parameters

ID	mpfid	ID number of the target fixed-size memory pool to be acquired
VP	*p_blk	Pointer to the start address of the acquired memory block
TMO	tmout	Timeout value(tget_mpf)

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
VP	*p_blk	Pointer to the start address of the acquired memory block

[[Assembly language API]]

```
.include mr30.inc
get_mpf MPFID
pget_mpf MPFID
ipget_mpf MPFID
tget_mpf MPFID, TMO
```

● Parameters

MPFID	ID number of the target fixed-size memory pool to be acquired
TMO	Timeout value(tget_mpf)

● Register contents after service call is issued

get_mpf, pget_mpf, ipget_mpf

Register name	Content after service call is issued
R0	Error code
R1	Start address of the acquired memory block
A0	ID number of the target fixed-size memory pool to be acquired

tget_mpf

Register name	Content after service call is issued
R0	Error code
R1	Start address of the acquired memory block
R2	Timeout value(16 high-order bits)
A0	ID number of the target fixed-size memory pool to be acquired

[[Error code]]

E_RLWAI	Forced release from waiting
E_TMOUT	Polling failure or timeout or timed out
EV_RST	Released from WAITING state by clearing of the memory pool area

[[Functional description]]

This service call acquires a memory block from the fixed-size memory pool indicated by mpfid and stores the start address of the acquired memory block in the variable p_blk. The content of the acquired memory block is indeterminate.

If the fixed-size memory pool indicated by mpfid has no memory blocks in it and the used service call is tget_mpf or get_mpf, the task that issued it goes to a memory block wait state and is enqueued in a memory block waiting queue. In that case, if the attribute of the specified fixed-size memory pool is TA_TFIFO, the task is enqueued in order of FIFO; if TA_TPRI, the task is enqueued in order of priority. If the issued service call was pget_mpf or ipget_mpf, the task returns immediately and responds to the call with the error code E_TMOUT.

For the tget_mpf service call, specify a wait time for tmout in ms units. The values specified for tmout must be within (0x7fffffff – time tick). If any value exceeding this limit is specified, the service call may not operate correctly. If TMO_POL=0 is specified for tmout, it means specifying 0 as a timeout value, in which case the service call operates the same way as pget_mpf. Furthermore, if specified as tmout=TMO_FEVR(-1), it means specifying an infinite wait, in which case the service call operates the same way as get_mpf.

The task placed into WAITING state by execution of the get_mpf or tget_mpf service call is released from WAITING state in the following cases:

- ◆ **When the rel_mpf or irel_mpf service call is issued before the tmout time elapses, with task-awaking conditions thereby satisfied**
The error code returned in this case is E_OK.
- ◆ **When the first time tick occurred after tmout elapsed while task-awaking conditions remain unsatisfied**
The error code returned in this case is E_TMOUT.
- ◆ **When the task is forcibly released from WAITING state by the rel_wai or irel_wai service call issued from another task or a handler**
The error code returned in this case is E_RLWAI.
- ◆ **When the target memory pool being waited for is removed by the vrst_mpf service call issued from another task**
The error code returned in this case is EV_RST.

The value of the memory block acquired by this service call is indeterminate because it is not initialized.

If this service call is to be issued from task context, use get_mpf, pget_mpf, tget_mpf; if issued from non-task context, use ipget_mpf.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
VP      p_blk;
void task()
{
    if( get_mpf(ID_mpf ,&p_blk) != E_OK ){
        error("Not enough memory\n");
    }
    :
    if( pget_mpf(ID_mpf ,&p_blk) != E_OK ){
        error("Not enough memory\n");
    }
    :
    if( tget_mpf(ID_mpf ,&p_blk, 10) != E_OK ){
        error("Not enough memory\n");
    }
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0
    get_mpf     #ID_MPF1
    :
    PUSHM      A0
    pget_mpf    #ID_MPF1
    :
    PUSHM      A0
    tget_mpf    #ID_MPF1,#200
    :
```


rel_mpf
irel_mpf

Release fixed-size memory block
Release fixed-size memory block (handler only)

[[C Language API]]

```
ER ercd = rel_mpf( ID mpfid, VP blk );  
ER ercd = irel_mpf( ID mpfid, VP blk );
```

● **Parameters**

ID	mpfid	ID number of the fixed-size memory pool to be released
VP	blk	Start address of the memory block to be returned

● **Return Parameters**

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc  
rel_mpf  MPFID,BLK  
irel_mpf MPFID,BLK
```

● **Parameters**

MPFID	ID number of the fixed-size memory pool to be released
BLK	Start address of the memory block to be returned

● **Register contents after service call is issued**

Register name	Content after service call is issued
R0	Error code
R1	Start address of the memory block to be returned
A0	ID number of the fixed-size memory pool to be released

[[Error code]]

None

[[Functional description]]

This service call releases a memory block whose start address is indicated by blk. The start address of the memory block to be released that is specified here should always be that of the memory block acquired by get_mpf, tget_mpf, pget_mpf, or ipget_mpf.

If tasks are enqueued in a waiting queue for the target memory pool, the task at the top of the waiting queue is dequeued and linked to a ready queue, and is assigned a memory block. At this time, the task changes state from a memory block wait state to RUNNING or READY state. This service call does not check the content of blk, so that if the address stored in blk is incorrect, the service call may not operate correctly.

If this service call is to be issued from task context, use rel_mpf; if issued from non-task context, use irel_mpf.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    VP    p_blf;
    if( get_mpf(ID_mpf1,&p_blf) != E_OK )
        error("Not enough memory \n");
    :
    rel_mpf(ID_mpf1,p_blf);
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_g_blk: .blkb 4
task:
    :
    PUSHM      A0
    get_mpf    #ID_MPF1
    :
    MOV.L      R3R1,_g_blk
    PUSHM      A0
    rel_mpf    #ID_MPF1,_g_blk
    :
```

ref_mpf
iref_mpf

Reference fixed-size memory pool status Reference fixed-size memory pool status (handler only)

[[C Language API]]

```
ER ercd = ref_mpf( ID mpfid, T_RMPF *pk_rmpf );  
ER ercd = iref_mpf( ID mpfid, T_RMPF *pk_rmpf );
```

● Parameters

ID	mpfid	Task ID waiting for memory block to be acquired
T_RMPF	*pk_rmpf	Pointer to the packet to which fixed-size memory pool status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK)
T_RMPF	*pk_rmpf	Pointer to the packet to which fixed-size memory pool status is returned

Contents of pk_rmpf

```
typedef struct t_rmpf{  
    ID      wtskid      +0    2    Task ID waiting for memory block to be acquired  
    UINT    fblkcnt     +2    2    Number of free memory blocks  
} T_RMPF;
```

[[Assembly language API]]

```
.include mr30.inc  
ref_mpf  MPFID,PK_RMPF  
iref_mpf MPFID,PK_RMPF
```

● Parameters

MPFID	Task ID waiting for memory block to be acquired
PK_RMPF	Pointer to the packet to which fixed-size memory pool status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	Task ID waiting for memory block to be acquired
A1	Pointer to the packet to which fixed-size memory pool status is returned

[[Error code]]

None

[[Functional description]]

This service call returns various statuses of the message buffer indicated by mpfid.

◆ wtskid

Returned to wtskid is the ID number of the task at the top of a memory block waiting queue (the first queued task). If no tasks are kept waiting, TSK_NONE is returned.

◆ fblkcnt

The number of free memory blocks in the specified memory pool is returned.

If this service call is to be issued from task context, use rel_mpf; if issued from non-task context, use irel_mpf.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RMPF rmpf;
    ER ercd;
    :
    ercd = ref_mpf( ID_MPF1, &rmpf );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_refmpf:   .blkb   4
task:
    :
    PUSHM  A0,A1
    ref_mpf #ID_MPF1,#_refmpf
    :
```

5.8 Memory Pool Management Function (Variable-size Memory Pool)

Specifications of the Variable-size Memory pool function of MR30 are listed in Table 5.15.

The memory pool area to be acquired can be specified by a section name for each memory pool during configuration.

Table 5.15 Specifications of the Variable-size memory Pool Function

No.	Item	Content
1	Variable-size memory pool ID	1-255
2	Size of Variable-size Memory pool	16-65535
3	Maximum number of memory blocks to be acquired	1-65520
4	Supported attributes	When memory is insufficient, task-waiting APIs are not supported.
5	Specification of memory pool area	Area to be acquired specifiable by a section

Table 5.16 List of Variable -size memory pool Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	pget_mpl		Acquires variable-size memory block (polling)	O		O	O	O	
2	rel_mpl		Releases variable-size memory block	O		O	O	O	
3	ref_mpl		References variable-size memory pool status	O		O	O	O	
4	iref_mpl				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

[[C Language API]]

```
ER ercd = pget_mpl( ID mplid, UINT blksz, VP *p_blk );
```

● Parameters

ID	mplid	ID number of the target Variable-size Memory pool to be acquired
UINT	blksz	Memory size to be acquired (in bytes)
VP	*p_blk	Pointer to the start address of the acquired variable memory

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
VP	*p_blk	Pointer to the start address of the acquired variable memory

[[Assembly language API]]

```
.include mr30.inc  
pget_mpl MPLID,BLSZ
```

● Parameters

MPLID	ID number of the target Variable-size Memory pool to be acquired
BLKSZ	Memory size to be acquired (in bytes)

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
R1	Memory size to be acquired
A0	ID number of the target Variable-size Memory pool to be acquired

[[Error code]]

E_TMOUT	No memory block
---------	-----------------

[[Functional description]]

This service call acquires a memory block from the variable-size memory pool indicated by mplid and stores the start address of the acquired memory block in the variable p_blk. The content of the acquired memory block is indeterminate.

If the specified variable-size memory pool has no memory blocks in it, the task returns immediately and responds to the call with the error code E_TMOUT.

The value of the memory block acquired by this service call is indeterminate because it is not initialized.

This service call can be issued only from task context. It cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
VP      p_blk;
void task()
{
    if( pget_mpl(ID_mpl , 200, &p_blk) != E_OK ){
        error("Not enough memory\n");
    }
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM    A0
    pget_mpl    #ID_MPL1,#200
    :
```

[[C Language API]]

```
ER ercd = rel_mpl( ID mplid, VP blk );
```

● **Parameters**

ID	mplid	ID number of Variable-size Memory pool of the memory block to be released
VP	Blk	Start address of the memory block to be returned

● **Return Parameters**

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
rel_mpl  MPLID,BLK
```

● **Parameters**

MPLID	ID number of Variable-size Memory pool of the memory block to be released
BLK	Start address of the memory block to be returned

● **Register contents after service call is issued**

Register name	Content after service call is issued
R0	Error code
R1	Start address of the memory block to be returned (16 low-order bits)
R3	Start address of the memory block to be returned (16 high-order bits)
A0	ID number of Variable-size Memory pool of the memory block to be released

[[Error code]]

None

[[Functional description]]

This service call releases a memory block whose start address is indicated by blk. The start address of the memory block to be released that is specified here should always be that of the memory block acquired by pget_mpl.

This service call does not check the content of blk, so that if the address stored in blk is incorrect, the service call may not operate correctly.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    VP    p_blk;
    if( get_mpl(ID_mpl1, 200, &p_blk) != E_OK )
        error("Not enough memory\n");
        :
    rel_mpl(ID_mpl1,p_blk);
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_g_blk: .blkb 4
task:
    :
    PUSHM    A0
    get_mpl    #ID_MPL1,#200
    :
    MOV.L     R3R1,_g_blk
    PUSHM    A0
    rel_mpf    #ID_MPL1,_g_blk
    :
```

ref_mpl
iref_mpl

Reference variable-size memory pool status Reference variable-size memory pool status (handler only)

[[C Language API]]

```
ER ercd = ref_mpl( ID mplid, T_RMPL *pk_rmpl );  
ER ercd = iref_mpl( ID mplid, T_RMPL *pk_rmpl );
```

● Parameters

ID mplid ID number of the target variable-size memory pool

T_RMPL *pk_rmpl Pointer to the packet to which variable-size memory pool status is returned

● Return Parameters

ER ercd Terminated normally (E_OK)
T_RMPL *pk_rmpl Pointer to the packet to which variable-size memory pool status is returned

Contents of pk_rmpl

```
typedef       struct       t_rmpl{  
    ID        wtskid        +0    2    Task ID waiting for memory block to be acquired (unused)  
    SIZE      fmplsz       +4    4    Free memory size (in bytes)  
    UINT      fblksz       +8    2    Maximum size of memory that can be acquired immediately (in  
                                         bytes)  
} T_RMPL;
```

[[Assembly language API]]

```
.include mr30.inc  
ref_mpl    MPLID,PK_RMPL  
iref_mpl   MPLID,PK_RMPL
```

● Parameters

MPLID ID number of the target variable-size memory pool

PK_RMPL Pointer to the packet to which variable-size memory pool status is returned

● Register contents after service call is issued

Register name Content after service call is issued

R0 Error code

A0 ID number of the target variable-size memory pool

A1 Pointer to the packet to which variable-size memory pool status is returned

[[Error code]]

None

[[Functional description]]

This service call returns various statuses of the message buffer indicated by mplid.

◆ wtskid

Unused.

◆ fmplsz

A free memory size is returned.

◆ fblksz

The maximum size of memory that can be acquired immediately is returned.

If this service call is to be issued from task context, use ref_mpl; if issued from non-task context, use iref_mpl.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RMPL rmpl;
    ER ercd;
    :
    ercd = ref_mpl( ID_MPL1, &rmpl );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_refmpl:  .blkb  8
task:
    :
    PUSHM  A0,A1
    ref_mpl #ID_MPL1,_refmpl
    :
```

5.9 Time Management Function

Specifications of the time management function of MR30 are listed in Table 5.17.

Table 5.17 Specifications of the Time Management Function

No.	Item	Content
1	System time value	Unsigned 48 bits
2	Unit of system time value	1[ms]
3	System time updating cycle	User-specified time tick updating time [ms]
4	Initial value of system time (at initial startup)	000000000000H

Table 5.18 List of Time Management Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	get_tim	[S]	Reference system time	○		○	○	○	
2	iget_tim				○	○	○	○	
3	set_tim	[S]	Set system time	○		○	○	○	
4	iset_tim				○	○	○	○	
5	isig_tim	[S]	Supply a time tick		○	○	○	○	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

set_tim
iset_tim

Set system time
Set system time (handler only)

[[C Language API]]

```
ER ercd = set_tim( SYSTIM *p_system );  
ER ercd = iset_tim( SYSTIM *p_system );
```

● Parameters

SYSTIM *p_system Pointer to the packet that indicates the system time to be set

Contents of p_system

```
typedef struct t_system {  
    UH      utime      0      2      (16 high-order bits)  
    UW      ltime      +4     4      (32 low-order bits)  
} SYSTIM;
```

● Return Parameters

ER ercd Terminated normally (E_OK)

[[Assembly language API]]

```
.include mr30.inc  
set_tim    PK_TIM  
iset_tim   PK_TIM
```

● Parameters

PK_TIM Pointer to the packet that indicates the system time to be set

● Register contents after service call is issued

Register name Content after service call is issued

R0 Error code

A0 Pointer to the packet that indicates the system time to be set

[[Error code]]

None

[[Functional description]]

This service call updates the current value of the system time to the value indicated by p_system. The time specified in p_system is expressed in ms units, and not by the number of time ticks.

The values specified for p_system must be within 0x7FFFFFFFFFFFFF. If any value exceeding this limit is specified, the service call may not operate correctly.

If this service call is to be issued from task context, use set_tim; if issued from non-task context, use iset_tim.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    SYSTIME time;          /* Time data storing variable */
    time.utime = 0;        /* Sets upper time data */
    time.ltime = 0;        /* Sets lower time data */
    set_tim( &time );      /* Sets the system time */
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_g_sysstim:
    .WORD  1111H
    .LWORD 22223333H
task:
    :
    PUSHM  A0
    set_tim #_g_sysstim
    :
```

get_tim
iget_tim

Reference system time
Reference system time (handler only)

[[C Language API]]

```
ER ercd = get_tim( SYSTIM *p_system );  
ER ercd = iget_tim( SYSTIM *p_system );
```

● Parameters

SYSTIM *p_system Pointer to the packet to which current system time is returned

● Return Parameters

ER ercd Terminated normally (E_OK)
SYSTIM *p_system Pointer to the packet to which current system time is returned

Contents of p_system

```
typedef struct t_system {  
    UH      utime      0      2      (16 high-order bits)  
    UW      ltime      +4     4      (32 low-order bits)  
} SYSTIM;
```

[[Assembly language API]]

```
.include mr30.inc  
get_tim  PK_TIM  
iget_tim PK_TIM
```

● Parameters

PK_TIM Pointer to the packet to which current system time is returned

● Register contents after service call is issued

Register name Content after service call is issued

R0 Error code

A0 Pointer to the packet to which current system time is returned

[[Error code]]

None

[[Functional description]]

This service call stores the current value of the system time in p_system.

If this service call is to be issued from task context, use get_tim; if issued from non-task context, use iget_tim.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    SYSTIME time;          /* Time data storing variable */
    get_tim( &time );      /* Refers to the system time */
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_g_systim:      .blkb      6
task:
:
    PUSHM      A0
    get_tim    #_g_systim
:
```


[[Functional description]]

This service call updates the system time.

The isig_tim is automatically started every tick_time interval(ms) if the system clock is defined by the configuration file. The application cannot call this function because it is not implementing as service call.

When a time tick is supplied, the kernel is processed as follows:

- (1) Updates the system time
- (2) Starts an alarm handler
- (3) Starts a cyclic handler
- (4) Processes the timeout processing of the task put on WAITING state by service call with timeout such as tslp_tsk.

5.10 Time Management Function (Cyclic Handler)

Specifications of the cyclic handler function of MR30 are listed in Table 5.19. The cyclic handler description languages in item No. 4 are those specified in the GUI configurator. They are not output to a configuration file, nor are the MR30 kernel concerned with them.

Table 5.19 Specifications of the Cyclic Handler Function

No.	Item	Content
1	Cyclic handler ID	1-255
2	Activation cycle	0-7ffffff[ms]
3	Activation phase	0-7ffffff[ms]
4	Extended information	16 bits
5	Cyclic handler attribute	TA_HLNG: Handlers written in high-level language TA_ASM: Handlers written in assembly language TA_STA: Starts operation of cyclic handler TA_PHS: Saves activation phase

Table 5.20 List of Cyclic Handler Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	sta_cyc	[S]	Starts cyclic handler operation	O		O	O	O	
2	ista_cyc				O	O	O	O	
3	stp_cyc	[S]	Stops cyclic handler operation	O		O	O	O	
4	istp_cyc				O	O	O	O	
5	ref_cyc		Reference cyclic handler status	O		O	O	O	
6	iref_cyc				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

sta_cyc
ista_cyc

Start cyclic handler operation
Start cyclic handler operation (handler only)

[[C Language API]]

```
ER ercd = sta_cyc( ID cycid );  
ER ercd = ista_cyc( ID cycid );
```

● **Parameters**

ID	cycid	ID number of the cyclic handler to be operated
----	-------	--

● **Return Parameters**

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc  
sta_cyc CYCNO  
ista_cyc CYCNO
```

● **Parameters**

CYCNO	ID number of the cyclic handler to be operated
-------	--

● **Register contents after service call is issued**

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

A0	ID number of the cyclic handler to be operated
----	--

[[Error code]]

None

[[Functional description]]

This service call places the cyclic handler indicated by cycid into an operational state. If the cyclic handler attribute of TA_PHS is not specified, the cyclic handler is started every time the activate cycle elapses, start with the time at which this service call was invoked.

If while TA_PHS is not specified this service call is issued to a cyclic handler already in an operational state, it sets the time at which the cyclic handler is to start next.

If while TA_PHS is specified this service call is issued to a cyclic handler already in an operational state, it does not set the startup time.

If this service call is to be issued from task context, use sta_cyc; if issued from non-task context, use ista_cyc.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    sta_cyc ( ID_cycl );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM  A0
    sta_cyc #ID_CYC1
    :
```

stp_cyc	Stops cyclic handler operation
istp_cyc	Stops cyclic handler operation (handler only)

[[C Language API]]

```
ER ercd = stp_cyc( ID cycid );
ER ercd = istp_cyc( ID cycid );
```

● Parameters

ID	cycid	ID number of the cyclic handler to be stopped
----	-------	---

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
stp_cyc  CYCNO
istp_cyc CYCNO
```

● Parameters

CYCNO	ID number of the cyclic handler to be stopped
-------	---

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the cyclic handler to be stopped

[[Error code]]

None

[[Functional description]]

This service call places the cyclic handler indicated by cycid into a non-operational state.

If this service call is to be issued from task context, use stp_cyc; if issued from non-task context, use istp_cyc.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    stp_cyc ( ID_cyc1 );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM  A0
    stp_cyc #ID_CYC1
    :
```

ref_cyc	Reference cyclic handler status
iref_cyc	Reference cyclic handler status (handler only)

[[C Language API]]

```
ER ercd = ref_cyc( ID cycid, T_RCYC *pk_rcyc );
ER ercd = iref_cyc( ID cycid, T_RCYC *pk_rcyc );
```

● Parameters

ID	cycid	ID number of the target cyclic handler
T_RCYC	*pk_rcyc	Pointer to the packet to which cyclic handler status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK)
T_RCYC	*pk_rcyc	Pointer to the packet to which cyclic handler status is returned

Contents of pk_rcyc

```
typedef struct t_rcyc{
    STAT    cycstat    +0    2    Operating status of cyclic handler
    RELTIM  lefttim    +2    4    Left time before cyclic handler starts up
} T_RCYC;
```

[[Assembly language API]]

```
.include mr30.inc
ref_cyc  ID,PK_RCYC
iref_cyc ID,PK_RCYC
```

● Parameters

CYCNO	ID number of the target cyclic handler
PK_RCYC	Pointer to the packet to which cyclic handler status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target cyclic handler
A1	Pointer to the packet to which cyclic handler status is returned

[[Error code]]

None

[[Functional description]]

This service call returns various statuses of the cyclic handler indicated by cycid.

◆ cycstat

The status of the target cyclic handler is returned.

*TCYC_STA	Cyclic handler is an operational state.
*TCYC_STP	Cyclic handler is a non-operational state.

◆ lefttim

The remaining time before the target cyclic handler will start next is returned. This time is expressed in ms units. If the target cyclic handler is non-operational state, the returned value is indeterminate.

If this service call is to be issued from task context, use ref_cyc; if issued from non-task context, use iref_cyc.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RCYC rcyc;
    ER ercd;
    :
    ercd = ref_cyc( ID_CYC1, &rcyc );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_refcyc:   .blkb   6
task:
    :
    PUSHM  A0,A1
    ref_cyc #ID_CYC1,#_refcyc
    :
```

5.11 Time Management Function (Alarm Handler)

Specifications of the alarm handler function of MR30 are listed in Table 5.21. The alarm handler description languages in item No. 4 are those specified in the GUI configurator. They are not output to a configuration file, nor are the MR30 kernel concerned with them.

Table 5.21 Specifications of the Alarm Handler Function

No.	Item	Content
1	Alarm handler ID	1-255
2	Activation time	0-7ffffff [ms]
3	Extended information	16 bits
4	Alarm handler attribute	TA_HLNG: Handlers written in high-level language TA_ASM: Handlers written in assembly language

Table 5.22 List of Alarm Handler Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	sta_alm		Starts alarm handler operation	○		○	○	○	
2	ista_alm				○	○	○	○	
3	stp_alm		Stops alarm handler operation	○		○	○	○	
4	istp_alm				○	○	○	○	
5	ref_alm		References alarm handler status	○		○	○	○	
6	iref_alm				○	○	○	○	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

sta_alm
ista_alm

Start alarm handler operation
Start alarm handler operation (handler only)

[[C Language API]]

```
ER ercd = sta_alm( ID almid, RELTIM almtim );  
ER ercd = ista_alm( ID almid, RELTIM almtim );
```

● Parameters

ID	almid	ID number of the alarm handler to be operated
RELTIM	almtim	Alarm handler startup time (relative time)

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc  
sta_alm ALMID,ALMTIM  
ista_alm ALMID,ALMTIM
```

● Parameters

ALMID	ID number of the alarm handler to be operated
ALMTIM	Alarm handler startup time (relative time)

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
R1	Alarm handler startup time (relative time)
A0	ID number of the alarm handler to be operated

[[Error code]]

None

[[Functional description]]

This service call sets the activation time of the alarm handler indicated by almid as a relative time of day after the lapse of the time specified by almtim from the time at which it is invoked, and places the alarm handler into an operational state.

If an already operating alarm handler is specified, the previously set activation time is cleared and updated to a new activation time. If almtim = 0 is specified, the alarm handler starts at the next time tick. The values specified for almtim must be within (0x7ffffff - time tick). If any value exceeding this limit is specified, the service call may not operate correctly. If 0 is specified for almtim, the alarm handler is started at the next time tick.

If this service call is to be issued from task context, use sta_alm; if issued from non-task context, use ista_alm.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    sta_alm ( ID_alm1,100 );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM  A0
    sta_alm #ID_ALM1,#100
    :
```

stp_alm	Stop alarm handler operation
istp_alm	Stop alarm handler operation (handler only)

[[C Language API]]

```
ER ercd = stp_alm( ID almid );
ER ercd = istp_alm( ID almid );
```

● Parameters

ID	almid	ID number of the alarm handler to be stopped
----	-------	--

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
stp_alm ALMID
istp_alm ALMID
```

● Parameters

ALMID	ID number of the alarm handler to be stopped
-------	--

● Register contents after service call is issued

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

A0	ID number of the alarm handler to be stopped
----	--

[[Error code]]

None

[[Functional description]]

This service call places the alarm handler indicated by almid into a non-operational state.

If this service call is to be issued from task context, use stp_alm; if issued from non-task context, use istp_alm.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    stp_alm ( ID_alm1 );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM  A0
    stp_alm #ID_ALM1
    :
```

ref_alm
iref_alm

Reference alarm handler status

Reference alarm handler status (handler only)

[[C Language API]]

```
ER ercd = ref_alm( ID almid, T_RALM *pk_ralm );  
ER ercd = iref_alm( ID almid, T_RALM *pk_ralm );
```

● Parameters

ID	almid	ID number of the target alarm handler
T_RALM	*pk_ralm	Pointer to the packet to which alarm handler status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK)
T_RALM	*pk_ralm	Pointer to the packet to which alarm handler status is returned

Contents of pk_ralm

```
typedef struct t_ralm{  
    STAT    almstat    +0    2    Operating status of alarm handler  
    RELTIM   lefttim    +2    4    This service call returns various statuses of the alarm handler  
                                indicat  
} T_RALM;
```

[[Assembly language API]]

```
.include mr30.inc  
ref_alm  ALMID,PK_RALM  
iref_alm ALMID,PK_RALM
```

● Parameters

ALMID	ID number of the target alarm handler
PK_RALM	Pointer to the packet to which alarm handler status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target alarm handler
A1	Pointer to the packet to which alarm handler status is returned

[[Error code]]

None

[[Functional description]]

This service call returns various statuses of the alarm handler indicated by almid.

◆ almstat

The status of the target alarm handler is returned.

*TALM_STA	Alarm handler is an operational state.
*TALM_STP	Alarm handler is a non-operational state.

◆ lefttim

The remaining time before the target alarm handler will start next is returned. This time is expressed in ms units. If the target alarm handler is a non-operational state, the returned value is indeterminate.

If this service call is to be issued from task context, use ref_alm; if issued from non-task context, use iref_alm.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RALM ralm;
    ER ercd;
    :
    ercd = ref_alm( ID_ALM1, &ralm );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_refalm:  .blkb  6
task:
    :
    PUSHM  A0,A1
    ref_alm #ID_ALM1,#_refalm
    :
```

5.12 System Status Management Function

Table 5.23 List of System Status Management Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	rot_rdq	[S]	Rotates task precedence	O		O	O	O	
2	irotd_rdq	[S]			O	O	O	O	
3	get_tid	[S]	References task ID in the RUNNING state	O		O	O	O	
4	iget_tid	[S]			O	O	O	O	
5	loc_cpu	[S]	Locks the CPU	O		O	O	O	O
6	iloc_cpu	[S]			O	O	O	O	O
7	unl_cpu	[S]	Unlocks the CPU	O		O	O	O	O
8	iunl_cpu	[S]			O	O	O	O	O
9	dis_dsp	[S]	Disables dispatching	O		O	O	O	
10	ena_dsp	[S]	Enables dispatching	O		O	O	O	
11	sns_ctx	[S]	References context	O		O	O	O	O
12	sns_loc	[S]	References CPU state	O		O	O	O	O
13	sns_dsp	[S]	References dispatching state	O		O	O	O	O
14	sns_dpn	[S]	References dispatching pending state	O		O	O	O	O

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

rot_rdq
irotd_rdq

Rotate task precedence
Rotate task precedence (handler only)

[[C Language API]]

```
ER ercd = rot_rdq( PRI tskpri );  
ER ercd = irot_rdq( PRI tskpri );
```

● **Parameters**

PRI tskpri Task priority to be rotated

● **Return Parameters**

ER ercd Terminated normally (E_OK)

[[Assembly language API]]

```
.include mr30.inc  
rot_rdq    TSKPRI  
irotd_rdq TSKPRI
```

● **Parameters**

TSKPRI Task priority to be rotated

● **Register contents after service call is issued**

Register name Content after service call is issued

R0 Error code

R3 Task priority to be rotated

[[Error code]]

None

[[Functional description]]

This service call rotates the ready queue whose priority is indicated by `tskpri`. In other words, it relocates the task enqueued at the top of the ready queue of the specified priority by linking it to behind the tail of the ready queue, thereby switching over the executed tasks that have the same priority. Figure5.1 depicts the manner of how this is performed.

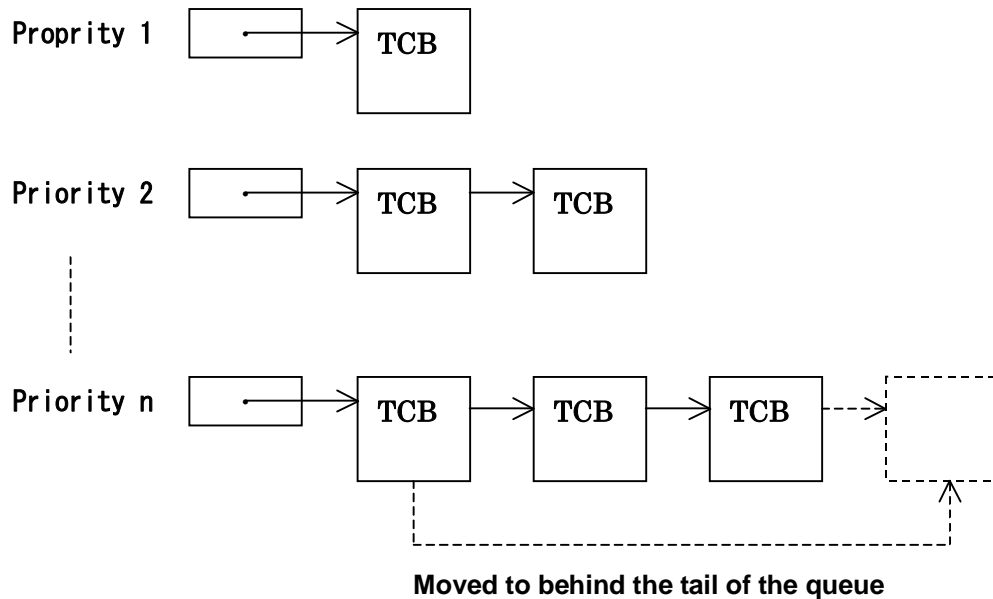


Figure5.1. Manipulation of the ready queue by the `rot_rdq` service call

By issuing this service call at given intervals, it is possible to perform round robin scheduling. If `tskpri=TPRI_SELF` is specified when using the `rot_rdq` service call, the ready queue whose priority is that of the issuing task is rotated. `TPRI_SELF` cannot be specified in the `irotd_rdq` service call. `TPRI_SELF` cannot be specified by `irotd_rdq` service call. However, an error is not returned even if it is specified.

If the priority of the issuing task itself is specified in this service call, the issuing task is relocated to behind the tail of the ready queue in which it is enqueued. Note that if the ready queue of the specified priority has no tasks in it, no operation is performed.

If this service call is to be issued from task context, use `rot_rdq`; if issued from non-task context, use `irotd_rdq`.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    rot_rdq( 2 );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM  R3
    rot_rdq #2
    :
```


get_tid
iget_tid

Reference task ID in the RUNNING state
Reference task ID in the RUNNING state
(handler only)

[[C Language API]]

```
ER ercd = get_tid( ID *p_tskid );  
ER ercd = iget_tid( ID *p_tskid );
```

● Parameters

ID	*p_tskid	Pointer to task ID
----	----------	--------------------

● Return Parameters

ER	ercd	Terminated normally (E_OK)
ID	*p_tskid	Pointer to task ID

[[Assembly language API]]

```
.include mr30.inc  
get_tid  
iget_tid
```

● Parameters

None

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	Acquired task ID

[[Error code]]

None

[[Functional description]]

This service call returns the task ID currently in RUNNING state to the area pointed to by p_tskid. If this service call is issued from a task, the ID number of the issuing task is returned. If this service call is issued from non-task context, the task ID being executed at that point in time is returned. If there are no tasks currently in an executing state, TSK_NONE is returned.

If this service call is to be issued from task context, use get_tid; if issued from non-task context, use iget_tid.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>  
#include <kernel.h>  
#include "kernel_id.h"  
void task()  
{  
    ID tskid;  
    :  
    get_tid(&tskid);  
    :  
}
```

<<Example statement in assembly language>>

```
.include mr30.inc  
.GLB      task  
task:  
    :  
    PUSHM  A0  
    get_tid  
    :
```

loc_cpu
iloc_cpu

Lock the CPU
Lock the CPU (handler only)

[[C Language API]]

```
ER ercd = loc_cpu();  
ER ercd = iloc_cpu();
```

● Parameters

None

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc  
loc_cpu  
iloc_cpu
```

● Parameters

None

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code

[[Error code]]

None

[[Functional description]]

This service call places the system into a CPU locked state, thereby disabling interrupts and task dispatches. The features of a CPU locked state are outlined below.

- (1) No task scheduling is performed during a CPU locked state.
- (2) No external interrupts are accepted unless their priority levels are higher than the kernel interrupt mask level defined in the configurator.
- (3) Only the following service calls can be invoked from a CPU locked state. If any other service calls are invoked, operation of the service call cannot be guaranteed.
 - * ext_tsk
 - * loc_cpu, iloc_cpu
 - * unl_cpu, iunl_cpu
 - * sns_ctx
 - * sns_loc
 - * sns_dsp
 - * sns_dpn

The system is freed from a CPU locked state by one of the following operations.

- (a) Invocation of the unl_cpu or iunl_cpu service call
- (b) Invocation of the ext_tsk service call

Transitions between CPU locked and CPU unlocked states occur only when the loc_cpu, iloc_cpu, unl_cpu, iunl_cpu, or ext_tsk service call is invoked. The system must always be in a CPU unlocked state when the interrupt handler or the time event handler is terminated. If either handler terminates while the system is in a CPU locked state, handler operation cannot be guaranteed. Note that the system is always in a CPU unlocked state when these handlers start.

Invoking this service call again while the system is already in a CPU locked state does not cause an error, in which case task queuing is not performed, however.

If this service call is to be issued from task context, use loc_cpu; if issued from non-task context, use iloc_cpu.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    loc_cpu();
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    loc_cpu
    :
```

unl_cpu
iunl_cpu

Unlock the CPU
Unlock the CPU (handler only)

[[C Language API]]

```
ER ercd = unl_cpu();  
ER ercd = iunl_cpu();
```

● Parameters

None

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc  
unl_cpu  
iunl_cpu
```

● Parameters

None

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code

[[Error code]]

None

[[Functional description]]

This service call frees the system from a CPU locked state that was set by the loc_cpu or iloc_cpu service call. If the unl_cpu service call is issued from a dispatching enabled state, task scheduling is performed. If the system was put into a CPU locked state by invoking iloc_cpu within an interrupt handler, the system must always be placed out of a CPU locked state by invoking iunl_cpu before it returns from the interrupt handler.

The CPU locked state and the dispatching disabled state are managed independently of each other. Therefore, the system cannot be freed from a dispatching disabled state by the unl_cpu or iunl_cpu service call unless the ena_dsp service call is used.

If this service call is to be issued from task context, use unl_cpu; if issued from non-task context, use iunl_cpu.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>  
#include <kernel.h>  
#include "kernel_id.h"  
void task()  
{  
:  
    unl_cpu();  
:  
}
```

<<Example statement in assembly language>>

```
.include mr30.inc  
.GLB      task  
task:  
:  
    unl_cpu  
:  
:
```

[[C Language API]]

```
ER ercd = dis_dsp();
```

- **Parameters**

None

- **Return Parameters**

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
```

```
dis_dsp
```

- **Parameters**

None

- **Register contents after service call is issued**

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

[[Error code]]

None

[[Functional description]]

This service call places the system into a dispatching disabled state. The features of a dispatching disabled state are outlined below.

- (1) Since task scheduling is not performed anymore, no tasks other than the issuing task itself will be placed into RUNNING state.
- (2) Interrupts are accepted.
- (3) No service calls can be invoked that will place tasks into WAITING state.

If one of the following operations is performed during a dispatching disabled state, the system status returns to a task execution state.

- (a) Invocation of the ena_dsp service call
- (b) Invocation of the ext_tsk service call

Transitions between dispatching disabled and dispatching enabled states occur only when the dis_dsp, ena_dsp, or ext_tsk service call is invoked.

Invoking this service call again while the system is already in a dispatching disabled state does not cause an error, in which case task queuing is not performed, however.

This service call can be issued only from task context. It cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
```

```
    :
    dis_dsp();
    :
```

```
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
```

task:

```
    :
    dis_dsp
    :
```

[[C Language API]]

```
ER ercd = ena_dsp();
```

- **Parameters**

None

- **Return Parameters**

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
```

```
ena_dsp
```

- **Parameters**

None

- **Register contents after service call is issued**

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

[[Error code]]

None

[[Functional description]]

This service call frees the system from a dispatching disabled state that was set by the dis_dsp service call. As a result, task scheduling is resumed when the system has entered a task execution state.

Invoking this service call from a task execution state does not cause an error, in which case task queuing is not performed, however.

This service call can be issued only from task context. It cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    :
    ena_dsp();
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    ena_dsp
    :
```

[[C Language API]]

```
BOOL state = sns_ctx();
```

- **Parameters**

None

- **Return Parameters**

BOOL	state	TRUE: Non-task context FALSE: Task context
------	-------	---

[[Assembly language API]]

```
.include mr30.inc
sns_ctx
```

- **Parameters**

None

- **Register contents after service call is issued**

Register name	Content after service call is issued
R0	TRUE:Non-Task context FALSE: Task context

[[Error code]]

None

[[Functional description]]

This service call returns TRUE when it is invoked from non-task context, or returns FALSE when invoked from task context. This service call can also be invoked from a CPU locked state.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    BOOL stat;
    :
    stat = sns_ctx();
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    sns_ctx
    :
```


[[C Language API]]

```
BOOL state = sns_loc();
```

- **Parameters**

None

- **Return Parameters**

BOOL	state	TRUE: CPU locked state FALSE: CPU unlocked state
------	-------	---

[[Assembly language API]]

```
.include mr30.inc
sns_loc
```

- **Parameters**

None

- **Register contents after service call is issued**

Register name	Content after service call is issued
R0	TRUE: CPU locked state FALSE: CPU unlocked state

[[Error code]]

None

[[Functional description]]

This service call returns TRUE when the system is in a CPU locked state, or returns FALSE when the system is in a CPU unlocked state. This service call can also be invoked from a CPU locked state.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    BOOL stat;
    :
    stat = sns_loc();
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    sns_loc
    :
```

[[C Language API]]

```
BOOL state = sns_dsp();
```

- **Parameters**

None

- **Return Parameters**

BOOL	state	TRUE: Dispatching disabled state FALSE: Dispatching enabled state
------	-------	--

[[Assembly language API]]

```
.include mr30.inc
sns_dsp
```

- **Parameters**

None

- **Register contents after service call is issued**

Register name	Content after service call is issued
R0	TRUE: Dispatching disabled state FALSE: Dispatching enabled state

[[Error code]]

None

[[Functional description]]

This service call returns TRUE when the system is in a dispatching disabled state, or returns FALSE when the system is in a dispatching enabled state. This service call can also be invoked from a CPU locked state.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    BOOL stat;
    :
    stat = sns_dsp();
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    sns_dsp
    :
```

[[C Language API]]

```
BOOL state = sns_dpn();
```

- **Parameters**

None

- **Return Parameters**

BOOL

state

TRUE: Dispatching pending state

FALSE: Not dispatching pending state

[[Assembly language API]]

```
.include mr30.inc
```

```
sns_dpn
```

- **Parameters**

None

- **Register contents after service call is issued**

Register name

Content after service call is issued

R0

TRUE: Dispatching pending state

FALSE: Not dispatching pending state

[[Error code]]

None

[[Functional description]]

This service call returns TRUE when the system is in a dispatching pending state, or returns FALSE when the system is not in a dispatching pending state. More specifically, FALSE is returned when all of the following conditions are met; otherwise, TRUE is returned.

- (1) The system is not in a dispatching pending state.
- (2) The system is not in a CPU locked state.
- (3) The object made pending is a task.

This service call can also be invoked from a CPU locked state. It returns TRUE when the system is in a dispatching disabled state, or returns FALSE when the system is in a dispatching enabled state.

[[Example program statement]]

```
<<Example statement in C language>>
```

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    BOOL stat;
    :
    stat = sns_dpn();
    :
}
```

```
<<Example statement in assembly language>>
```

```
.include mr30.inc
.GLB      task
task:
    :
    sns_dpn
    :
```

5.13 Interrupt Management Function

Table 5.24 List of Interrupt Management Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	ret_int		Returns from an interrupt handler		O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

ret_int

Returns from an interrupt handler (when written in assembly language)

[[C Language API]]

This service call cannot be written in C language.³⁵

[[Assembly language API]]

```
.include mr30.inc  
ret_int
```

● Parameters

None

[[Error code]]

Not return to the interrupt handler that issued this service call.

[[Functional description]]

This service call performs the processing necessary to return from an interrupt handler. Depending on return processing, it activates the scheduler to switch tasks from one to another.

If this service call is executed in an interrupt handler, task switching does not occur, and task switching is postponed until the interrupt handler terminates.

However, if the ret_int service call is issued from an interrupt handler that was invoked from an interrupt that occurred within another interrupt, the scheduler is not activated. The scheduler is activated for interrupts from a task only.

When writing this service call in assembly language, be aware that the service call cannot be issued from a subroutine that is invoked from an interrupt handler entry routine. Always make sure this service call is executed in the entry routine or entry function of an interrupt handler. For example, a program like the one shown below may not operate normally.

```
.include mr30.inc  
/* NG */  
.GLB intr  
intr:  
    jsr.b func  
:  
func:  
    ret_int
```

Therefore, write the program as shown below.

```
.include mr30.inc  
/* OK */  
.GLB intr  
intr:  
    jsr.b func  
    ret_int  
func:  
:  
    rts
```

Make sure this service call is issued from only an interrupt handler. If issued from a cyclic handler, alarm handler, or a task, this service call may not operate normally.

³⁵ If the starting function of an interrupt handler is declared by #pragma INTHANDLER, the ret_int service call is automatically issued at the exit of the function.

5.14 System Configuration Management Function

Table 5.25 List of System Configuration Management Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	ref_ver	[S]	References version information	O		O	O	O	
2	iref_ver				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

ref_ver	Reference version information
iref_ver	Reference version information (handler only)

[[C Language API]]

```
ER ercd = ref_ver( T_RVER *pk_rver );
ER ercd = iref_ver( T_RVER *pk_rver );
```

● **Parameters**

T_RVER *pk_rver Pointer to the packet to which version information is returned

Contents of pk_rver

```
typedef struct t_rver {
    UH      maker      0      2      Kernel manufacturer code
    UH      prid       +2     2      Kernel identification number
    UH      spver      +4     2      ITRON specification version number
    UH      prver      +6     2      Kernel version number
    UH      prno[4]    +8     2      Kernel product management information
} T_RVER;
```

● **Return Parameters**

ER ercd Terminated normally (E_OK)

[[Assembly language API]]

```
.include mr30.inc
ref_ver  PK_VER
iref_ver PK_VER
```

● **Parameters**

PK_VER Pointer to the packet to which version information is returned

● **Register contents after service call is issued**

Register name Content after service call is issued

R0 Error code

A0 Pointer to the packet to which version information is returned

[[Error code]]

None

[[Functional description]]

This service call reads out information about the version of the currently executing kernel and returns the result to the area pointed to by `pk_rver`.

The following information is returned to the packet pointed to by `pk_rver`.

- ◆ **maker**
The code H'115 denoting Renesas Technology Corporation is returned.
- ◆ **prid**
The internal identification code IDH'150 of the M3T-MR30 is returned.
- ◆ **spver**
The code H'5402 denoting that the kernel is compliant with μ ITRON Specification Ver 4.02.00 is returned.
- ◆ **prver**
The code H'0401 denoting the version of the M3T-MR30/4 is returned.
- ◆ **prno**
 - `prno[0]`
Reserved for future extension.
 - `prno[1]`
The 2 low-order digits of the product release year (calendar) and the month H'0806 are acquired.
 - `prno[2]`
Reserved for future extension.
 - `prno[3]`
Reserved for future extension.

If this service call is to be issued from task context, use `ref_ver`; if issued from non-task context, use `iref_ver`.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RVER    pk_rver;
    ref_ver( &pk_rver );
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_refver:  .blkb  6
task:
:
PUSHM    A0
ref_ver  #_refver
:
```


5.15 Extended Function (Long Data Queue)

Specifications of the Long data queue function of MR30 are listed in Table 5.26. This function is outside the scope of μ ITRON 4.0 Specification.

Table 5.26 Specifications of the Long Data Queue Function

No.	Item	Content
1	Data queue ID	1-255
2	Capacity (data bytes) in data queue area	0-65535
3	Data size	32 bits
4	Data queue attribute	TA_TFIFO: Waiting tasks enqueued in order of FIFO TA_TPRI: Waiting tasks enqueued in order of priority

Table 5.27 List of Long Dataqueue Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	vsnd_dtq	[S]	Sends to long data queue	O		O		O	
2	vpsnd_dtq	[S]	Sends to long data queue (polling)		O	O	O	O	
3	vipsnd_dtq	[S]		O		O	O	O	
4	vtsnd_dtq	[S]	Sends to long data queue (with timeout)		O	O		O	
5	vfsnd_dtq	[S]	Forced sends to long data queue	O		O	O	O	
6	vifsnd_dtq	[S]		O		O	O	O	
7	vrcv_dtq	[S]	Receives from long data queue		O	O		O	
8	vprcv_dtq	[S]	Receives from long data queue (polling)	O		O	O	O	
9	viprcv_dtq			O		O	O	O	
10	vtrcv_dtq	[S]	Receives from long data queue (with timeout)		O	O		O	
11	vref_dtq		References long data queue status	O		O	O	O	
12	viref_dtq				O	O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

vsnd_dtq	Send to Long data queue
vpsnd_dtq	Send to Long data queue (polling)
vipsnd_dtq	Send to Long data queue (polling, handler only)
vtsnd_dtq	Send to Long data queue (with timeout)
vfsnd_dtq	Forcibly send to Long data queue
vifsnd_dtq	Forcibly send to Long data queue (handler only)

[[C Language API]]

```
ER ercd = vsnd_dtq( ID vdtqid, W data );
ER ercd = vpsnd_dtq( ID vdtqid, W data );
ER ercd = vipsnd_dtq( ID vdtqid, W data );
ER ercd = vtstd_dtq( ID vdtqid, W data, TMO tmout );
ER ercd = vfsnd_dtq( ID vdtqid, W data );
ER ercd = vifsnd_dtq( ID vdtqid, W data );
```

● Parameters

ID	vdtqid	ID number of the Long data queue to which transmitted
TMO	tmout	Timeout value(vtsnd_dtq)
W	data	Data to be transmitted

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
----	------	--

[[Assembly language API]]

```
.include mr30.inc
vsnd_dtq      VDTQID, DTQDATA
visnd_dtq     VDTQID, DTQDATA
vpsnd_dtq     VDTQID, DTQDATA
vipsnd_dtq    VDTQID, DTQDATA
vtstd_dtq     VDTQID, DTQDATA, TMO
vfsnd_dtq     VDTQID, DTQDATA
vifsnd_dtq    VDTQID, DTQDATA
```

● Parameters

VDTQID	ID number of the Long data queue to which transmitted
DTQDATA	Data to be transmitted
TMO	Timeout value(vtsnd_dtq)

● Register contents after service call is issued

vsnd_dtq,vpsnd_dtq,vipsnd_dtq,vfsnd_dtq,vifsnd_dtq

Register name	Content after service call is issued
R0	Error code
R1	Data to be transmitted (16 low-order bits)
R3	Data to be transmitted (16 high-order bits)
A0	ID number of the Long data queue to which transmitted

vtstd_dtq

Register name	Content after service call is issued
R0	Error code
R1	Data to be transmitted(16 low-order bits)
R2	Timeout value(16 high-order bits)
R3	Data to be transmitted (16 high-order bits)
A0	ID number of the Long data queue to which transmitted

[[Error code]]

E_RLWAI	Forced release from waiting
E_TMOUT	Polling failure or timeout or timed out
E_ILUSE	Service call improperly used (vfsnd_dtq or vifsnd_dtq is issued for a Long data queue whose dtqcnt = 0)
EV_RST	Released from a wait state by clearing of the Long data queue area

[[Functional description]]

This service call sends the signed 4-byte data indicated by data to the Long data queue indicated by vdtqid. If any task is kept waiting for reception in the target Long data queue, the data is not stored in the Long data queue and instead sent to the task at the top of the reception waiting queue, with which the task is released from the reception wait state.

On the other hand, if vsnd_dtq or vtsnd_dtq is issued for a Long data queue that is full of data, the task that issued the service call goes from RUNNING state to a data transmission wait state, and is enqueued in a transmission waiting queue, kept waiting for the Long data queue to become available. In that case, if the attribute of the specified Long data queue is TA_TFIFO, the task is enqueued in order of FIFO; if TA_TPRI, the task is enqueued in order of priority. For vpsnd_dtq and vipsnd_dtq, the task returns immediately and responds to the call with the error code E_TMOUT.

For the vtsnd_dtq service call, specify a wait time for tmout in ms units. The values specified for tmout must be within 0x7fffffff - time tick. If any value exceeding this limit is specified, the service call may not operate correctly. If TMO_POL=0 is specified for tmout, it means specifying 0 as a timeout value, in which case the service call operates the same way as vpsnd_dtq. Furthermore, if specified as tmout=TMO_FEVR(-1), it means specifying an infinite wait, in which case the service call operates the same way as vsnd_dtq.

If there are no tasks waiting for reception, nor is the Long data queue area filled, the transmitted data is stored in the Long data queue.

The task placed into a wait state by execution of the vsnd_dtq or vtsnd_dtq service call is released from WAITING state in the following cases:

- ◆ **When the vrcv_dtq, vtrcv_dtq, vprcv_dtq, or viprcv_dtq service call is issued before the tmout time elapses, with task-awaking conditions thereby satisfied**
The error code returned in this case is E_OK.
- ◆ **When the first time tick occurred after tmout elapsed while task-awaking conditions remain unsatisfied**
The error code returned in this case is E_TMOUT.
- ◆ **When the task is forcibly released from WAITING state by the rel_wai or irel_wai service call issued from another task or a handler**
The error code returned in this case is E_RLWAI.
- ◆ **When the target Long data queue being waited for is removed by the vrst_vdtq service call issued from another task**
The error code returned in this case is EV_RST.

For vfsnd_dtq and vifsnd_dtq, the data at the top of the Long data queue or the oldest data is removed, and the transmitted data is stored at the tail of the Long data queue. If the Long data queue area is not filled with data, vfsnd_dtq and vifsnd_dtq operate the same way as vsnd_dtq.

If this service call is to be issued from task context, use vsnd_dtq, vtsnd_dtq, vpsnd_dtq, vfsnd_dtq; if issued from non-task context, use vipsnd_dtq, vifsnd_dtq.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
W data[10];
void task(void)
{
    :
    if( vsnd_dtq( ID_dtq, data[0]) == E_RLWAI ){
        error("Forced released\n");
    }
    :
    if( vpsnd_dtq( ID_dtq, data[1]) == E_TMOUT ){
        error("Timeout\n");
    }
    :
    if( vtsnd_dtq( ID_dtq, data[2], 10 ) != E_TMOUT ){
        error("Timeout \n");
    }
    :
    if( vfsnd_dtq( ID_dtq, data[3]) != E_OK ){
        error("Error\n");
    }
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
_g_dtq: .LONG 12345678H
task:
    :
    PUSHM    R1,R2,R3,A0
    vtsnd_dtq #ID_DTQ1,_g_dtq,#100
    :
    PUSHM    R1,R3,A0
    vpsnd_dtq #ID_DTQ2,#0FFFFH
    :
    PUSHM    R1,R3,A0
    vfsnd_dtq #ID_DTQ3,#0ABCDEFGHH
    :
```

vrcv_dtq	Receive from Long data queue
vprcv_dtq	Receive from Long data queue (polling)
viprcv_dtq	Receive from Long data queue (polling,handler only)
vtrcv_dtq	Receive from Long data queue (with timeout)

[[C Language API]]

```
ER ercd = vrcv_dtq( ID dtqid, W *p_data );
ER ercd = vprcv_dtq( ID dtqid, W *p_data );
ER ercd = viprcv_dtq( ID dtqid, W *p_data );
ER ercd = vtrcv_dtq( ID dtqid, W *p_data, TMO tmout );
```

● Parameters

ID	dtqid	ID number of the Long data queue from which to receive
TMO	tmout	Timeout value(vtrcv_dtq)
W	*p_data	Pointer to the start of the area in which received data is stored

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
W	*p_data	Pointer to the start of the area in which received data is stored

[[Assembly language API]]

```
.include mr30.inc
vrcv_dtq      VDTQID
vprcv_dtq     VDTQID
viprcv_dtq    VDTQID
vtrcv_dtq     VDTQID, TMO
```

● Parameters

VDTQID	ID number of the Long data queue from which to receive
TMO	Timeout value(trcv_dtq)

● Register contents after service call is issued

vrcv_dtq,vprcv_dtq,viprcv_dtq

Register name	Content after service call is issued
R0	Error code
R1	Received data
A0	ID number of the Long data queue from which to receive

vtrcv_dtq

Register name	Content after service call is issued
R0	Error code
R1	Received data
R2	Timeout value(16 high-order bits)
A0	ID number of the Long data queue from which to receive

[[Error code]]

E_RLWAI	Forced release from waiting
E_TMOUT	Polling failure or timeout or timed out

[[Functional description]]

This service call receives data from the Long data queue indicated by `vdtqid` and stores the received data in the area pointed to by `p_data`. If data is present in the target Long data queue, the data at the top of the queue or the oldest data is received. This results in creating a free space in the Long data queue area, so that a task enqueued in a transmission waiting queue is released from WAITING state, and starts sending data to the Long data queue area.

If no data exist in the Long data queue and there is any task waiting to send data (i.e., data bytes in the Long data queue area = 0), data for the task at the top of the data transmission waiting queue is received. As a result, the task kept waiting to send that data is released from WAITING state.

On the other hand, if `vrcv_dtq` or `vtrcv_dtq` is issued for the Long data queue which has no data stored in it, the task that issued the service call goes from RUNNING state to a data reception wait state, and is enqueued in a data reception waiting queue. At this time, the task is enqueued in order of FIFO. For the `vprcv_dtq` and `viprcv_dtq` service calls, the task returns immediately and responds to the call with the error code `E_TMOUT`.

For the `vtrcv_dtq` service call, specify a wait time for `tmout` in ms units. The values specified for `tmout` must be within `0x7fffffff` - time tick. If any value exceeding this limit is specified, the service call may not operate correctly. If `TMO_POL=0` is specified for `tmout`, it means specifying 0 as a timeout value, in which case the service call operates the same way as `vprcv_dtq`. Furthermore, if specified as `tmout=TMO_FEVR(-1)`, it means specifying an infinite wait, in which case the service call operates the same way as `vrcv_dtq`.

The task placed into a wait state by execution of the `vrcv_dtq` or `vtrcv_dtq` service call is released from the wait state in the following cases:

- ◆ **When the `vrcv_dtq`, `vtrcv_dtq`, `vprcv_dtq`, or `viprcv_dtq` service call is issued before the `tmout` time elapses, with task-awaking conditions thereby satisfied**
The error code returned in this case is `E_OK`.
- ◆ **When the first time tick occurred after `tmout` elapsed while task-awaking conditions remain unsatisfied**
The error code returned in this case is `E_TMOUT`.
- ◆ **When the task is forcibly released from WAITING state by the `rel_wai` or `irel_wai` service call issued from another task or a handler**
The error code returned in this case is `E_RLWAI`.

If this service call is to be issued from task context, use `vrcv_dtq`, `vtrcv_dtq`, `vprcv_dtq`; if issued from non-task context, use `viprcv_dtq`.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    W data;
    :
    if( vrcv_dtq( ID_dtq, &data ) != E_RLWAI )
        error("forced wakeup\n");
    :
    if( vprcv_dtq( ID_dtq, &data ) != E_TMOUT )
        error("Timeout\n");
    :
    if( vtrcv_dtq( ID_dtq, &data, 10 ) != E_TMOUT )
        error("Timeout\n");
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0,R3
    vtrcv_dtq  #ID_DTQ1,#TMO_POL
    :
    PUSHM      A0
    vprcv_dtq  #ID_DTQ2
    :
    PUSHM      A0
    vrcv_dtq   #ID_DTQ2
    :
```

vref_dtq	Reference Long data queue status
viref_dtq	Reference Long data queue status (handler only)

[[C Language API]]

```
ER ercd = vref_dtq( ID vdtqid, T_RDTQ *pk_rdtq );
ER ercd = viref_dtq( ID vdtqid, T_RDTQ *pk_rdtq );
```

● Parameters

ID	vdtqid	ID number of the target Long data queue
T_RDTQ	*pk_rdtq	Pointer to the packet to which Long data queue status is returned

● Return Parameters

ER	ercd	Terminated normally (E_OK) or error code
T_RDTQ	*pk_rdtq	Pointer to the packet to which Long data queue status is returned

Contents of pk_rdtq

```
typedef struct t_rdtq{
    ID      stskid      +0    2    Transmission waiting task ID
    ID      wtskid      +2    2    Reception waiting task ID
    UINT    sdtqcnt     +4    2    Data bytes contained in Long data queue
} T_RDTQ;
```

[[Assembly language API]]

```
.include mr30.inc
vref_dtq VDTQID, PK_RDTQ
viref_dtq VDTQID, PK_RDTQ
```

● Parameters

VDTQID	ID number of the target Long data queue
PK_RDTQ	Pointer to the packet to which Long data queue status is returned

● Register contents after service call is issued

Register name	Content after service call is issued
R0	Error code
A0	ID number of the target Long data queue
A1	Pointer to the packet to which Long data queue status is returned

[[Error code]]

None

[[Functional description]]

This service call returns various statuses of the Long data queue indicated by vdtqid.

◆ stskid

Returned to stskid is the ID number of the task at the top of a transmission waiting queue (the next task to be dequeued). If no tasks are kept waiting, TSK_NONE is returned.

◆ wtskid

Returned to wtskid is the ID number of the task at the top of a reception waiting queue (the next task to be dequeued). If no tasks are kept waiting, TSK_NONE is returned.

◆ sdtqcnt

Returned to sdtqcnt is the number of data bytes stored in the Long data queue area.

If this service call is to be issued from task context, use ref_dtq; if issued from non-task context, use iref_dtq.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task()
{
    T_RDTQ rdtq;
    ER ercd;
    :
    ercd = vref_dtq( ID_DTQ1, &rdtq );
    :
}
```

<<Example statement in assembly language>>

```
_refdtq:      .blkb    6
              .include mr30.inc
              .GLB     task
task:
              :
              PUSHM    A0,A1
              vref_dtq    #ID_DTQ1,#_refdtq
              :
```

5.16 Extended Function (Reset Function)

This function initializes the content of an object. This function is outside the scope of μ ITRON 4.0 Specification.

Table 5.28 List of Reset Function Service Call

No.	Service Call		Function	System State					
				T	N	E	D	U	L
1	vrst_dtq		Clear data queue area	O		O	O	O	
2	vrst_vdtq		Clear Long data queue area	O		O	O	O	
3	vrst_mbx		Clear mailbox area	O		O	O	O	
4	vrst_mpf		Clear fixed-size memory pool area	O		O	O	O	
5	vrst_mpl		Clear variable-size memory pool area	O		O	O	O	

Notes:

- [S]: Standard profile service calls
- Each sign within " System State " is a following meaning.
 - ◆ T: Can be called from task context
 - ◆ N: Can be called from non-task context
 - ◆ E: Can be called from dispatch-enabled state
 - ◆ D: Can be called from dispatch-disabled state
 - ◆ U: Can be called from CPU-unlocked state
 - ◆ L: Can be called from CPU-locked state

[[C Language API]]

```
ER ercd = vrst_dtq( ID dtqid );
```

● Parameters

ID	dtqid	Data queue ID to be cleared
----	-------	-----------------------------

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
```

```
vrst_dtq DTQID
```

● Parameters

DTQID	Data queue ID to be cleared
-------	-----------------------------

● Register contents after service call is issued

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

A0	Data queue ID to be cleared
----	-----------------------------

[[Error code]]

None

[[Functional description]]

This service call clears the data stored in the data queue indicated by dtqid. If the data queue area has no more areas to be added and tasks are enqueued in a data transmission waiting queue, all of the tasks enqueued in the data transmission waiting queue are released from WAITING state. Furthermore, the error code EV_RST is returned to the tasks that have been released from WAITING state.

Even when the number of data queues defined is 0, all of the tasks enqueued in a data transmission waiting queue are released from WAITING state.

This service call can be issued only from task context. It cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task1(void)
{
    :
    vrst_dtq( ID_dtq1 );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0
    vrst_dtq    #ID_DTQ1
    :
```

[[C Language API]]

```
ER ercd = vrst_vdtq( ID vdtqid );
```

● **Parameters**

ID	vdtqid	Long data queue ID to be cleared
----	--------	----------------------------------

● **Return Parameters**

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
vrst_vdtq VDTQID
```

● **Parameters**

VDTQID	Long data queue ID to be cleared
--------	----------------------------------

● **Register contents after service call is issued**

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

A0	Long data queue ID to be cleared
----	----------------------------------

[[Error code]]

None

[[Functional description]]

This service call clears the data stored in the Long data queue indicated by vdtqid. If the Long data queue area has no more areas to be added and tasks are enqueued in a data transmission waiting queue, all of the tasks enqueued in the data transmission waiting queue are released from WAITING state. Furthermore, the error code EV_RST is returned to the tasks that have been released from WAITING state.

Even when the number of Long data queues defined is 0, all of the tasks enqueued in a data transmission waiting queue are released from WAITING state.

This service call can be issued only from task context. It cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task1(void)
{
    :
    vrst_vdtq( ID_vdtq1 );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0
    vrst_vdtq   #ID_VDTQ1
    :
```

[[C Language API]]

```
ER ercd = vrst_mbx( ID mbxid );
```

● Parameters

ID	mbxid	Mailbox ID to be cleared
----	-------	--------------------------

● Return Parameters

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
```

```
vrst_mbx MBXID
```

● Parameters

MBXID	Mailbox ID to be cleared
-------	--------------------------

● Register contents after service call is issued

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

A0	Mailbox ID to be cleared
----	--------------------------

[[Error code]]

None

[[Functional description]]

This service call clears the messages stored in the mailbox indicated by mbxid.

This service call can be issued only from task context. It cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task1(void)
{
    :
    vrst_mbx( ID_mbx1 );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0
    vrst_mbx    #ID_MBX1
    :
```


[[C Language API]]

```
ER ercd = vrst_mpf( ID mpfid );
```

- **Parameters**

ID	mpfid	Fixed-size memory pool ID to be cleared
----	-------	---

- **Return Parameters**

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
vrst_mpf MPFID
```

- **Parameters**

MPFID	Fixed-size memory pool ID to be cleared
-------	---

- **Register contents after service call is issued**

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

A0	Fixed-size memory pool ID to be cleared
----	---

[[Error code]]

None

[[Functional description]]

This service call initializes the fixed-size memory pool indicated by mpfid. If tasks are enqueued in a memory block waiting queue, all of the tasks enqueued in the memory block waiting queue are released from WAITING state. Furthermore, the error code EV_RST is returned to the tasks that have been released from WAITING state.

This service call can be issued only from task context. It cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task1(void)
{
    :
    vrst_mpf( ID_mpfl );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM    A0
    vrst_mpf    #ID_MPF1
    :
```

[[C Language API]]

```
ER ercd = vrst_mpl( ID mplid );
```

● **Parameters**

ID	mplid	Variable-size memory pool ID to be cleared
----	-------	--

● **Return Parameters**

ER	ercd	Terminated normally (E_OK)
----	------	----------------------------

[[Assembly language API]]

```
.include mr30.inc
vrst_mpl MPLID
```

● **Parameters**

MPLID	Variable-size memory pool ID to be cleared
-------	--

● **Register contents after service call is issued**

Register name	Content after service call is issued
---------------	--------------------------------------

R0	Error code
----	------------

A0	Variable-size memory pool ID to be cleared
----	--

[[Error code]]

None

[[Functional description]]

This service call initializes the variable-size memory pool indicated by mplid.

This service call can be issued only from task context. It cannot be issued from non-task context.

[[Example program statement]]

<<Example statement in C language>>

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"
void task1(void)
{
    :
    vrst_mpl( ID_mpl1 );
    :
}
```

<<Example statement in assembly language>>

```
.include mr30.inc
.GLB      task
task:
    :
    PUSHM      A0
    vrst_mpl    #ID_MPL1
    :
```

6. Applications Development Procedure Overview

6.1 Overview

Application programs for MR30 should generally be developed following the procedure described below.

1. Generating a project

When using HEW³⁶, create a new project using MR30 on HEW.

2. Coding the application program

Write the application program in code form using C or assembly language. If necessary, correct the sample startup program (crt0mr.a30) and section definition file (c_sec.inc or asm_sec.inc).

3. Creating a configuration file

Create a configuration file which has defined in it the task entry address, stack size, etc. by using an editor.

The GUI configurator available for MR30 may be used to create a configuration file.

4. Executing the configurator

From the configuration file, create system data definition files (sys_rom.inc, sys_ram.inc), include files (mr30.inc, kernel_id.h), and a system generation procedure description file (makefile).

5. System generation

Execute the make³⁷ command or execute build on HEW to generate a system.

6. Writing to ROM

Using the ROM programming format file created, write the finished program file into the ROM. Or load it into the debugger to debug.

Figure 6.1 shows a detailed flow of system generation.

³⁶ It is abbreviation of High-performance Embedded Workshop.

³⁷ The make command comes the UNIX standard and UNIX compatible.

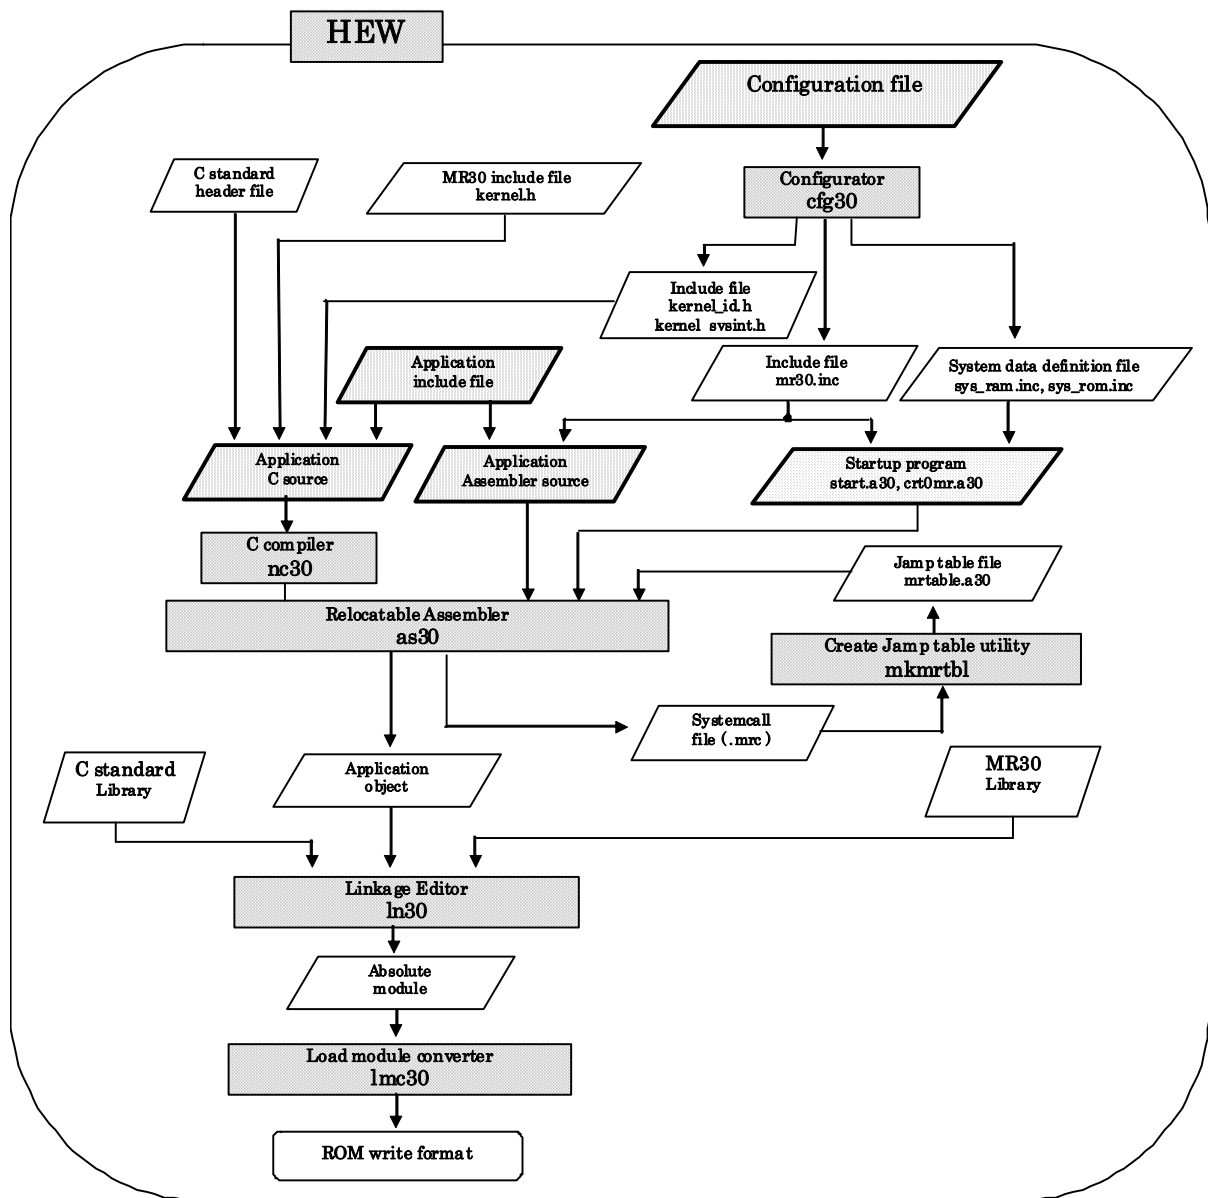


Figure 6.1 MR30 System Generation Detail Flowchart

6.2 Development Procedure Example

This chapter outlines the development procedures on the basis of a typical MR30 application example.

6.2.1 Applications Program Coding

Figure 6.2 shows a program that simulates laser beam printer operations. Let us assume that the file describing the laser beam printer simulation program is named lbp.c. This program consists of the following three tasks and one interrupt handler.

- Main Task
- Image expansion task
- Printer engine task
- Centronics interface interrupt handler

This program uses the following MR30 library functions.

- **sta_tsk()**
Starts a task. Give the appropriate ID number as the argument to select the task to be activated. When the kernel_id.h file, which is generated by the configurator, is included, it is possible to specify the task by name (character string).³⁸
- **wai_flg()**
Waits until the eventflag is set up. In the example, this function is used to wait until one page of data is entered into the buffer via the Centronics interface.
- **wup_tsk()**
Wakes up a specified task from the WAITING state. This function is used to start the printer engine task.
- **slp_tsk()**
Causes a task in the RUNNING state to enter the WAITING state. In the example, this function is used to make the printer engine task wait for image expansion.
- **iset_flg()**
Sets the eventflag. In the example, this function is used to notify the image expansion task of the completion of one-page data input.

³⁸ The configurator converts the ID number to the associated name(character string) in accordance with the information entered into the configuration file.

```

#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"

void main() /* main task */
{
    printf("LBP start simulation \n");
    sta_tsk(ID_idle,1); /* activate idle task */
    sta_tsk(ID_image,1); /* activate image expansion task */
    sta_tsk(ID_printer,1); /* activate printer engine task */
}
void image() /* activate image expansion task */
{
    while(1){
        wai_flg(ID_pagein,waiptn,TWF_ANDW, &flgpntn);/* wait for 1-page input */

        printf(" bit map expansion processing \n");
        wup_tsk(ID_printer); /* wake up printer engine task */
    }
}
void printer() /* printer engine task */
{
    while(1){
        slp_tsk();
        printf(" printer engine operation \n");
    }
}
void sent_in() /* Centronics interface handler */
{
    /* Process input from Centronics interface */
    if ( /* 1-page input completed */ )
        iset_flg(ID_pagein,setptn);
}

```

Figure 6.2 Program Example

6.2.2 Configuration File Preparation

Create a configuration file which has defined in it the task entry address, stack size, etc. Use of the GUI configurator available for MR30 helps to create a configuration file easily without having to learn how to write it.

Figure 6.3 Configuration File Example

shows an example configuration file for a laser beam printer simulation program (filename "lbp.cfg").

```

// System Definition
system{
    stack_size           = 1024;
    priority              = 5;
    system_IPL            = 4;
    tick_num             = 10;
};
//System Clock Definition
clock{
    mpu_clock            = 20MHz;
    timer                = A0;
    IPL                  = 4;
};
//Task Definition
task[1]{
    name                 = ID_main;
    entry_address        = main();
    stack_size           = 512;
    priority             = 1;
    initial_start        = ON;
};
task[2]{
    name                 = ID_image;
    entry_address        = image();
    stack_size           = 512;
    priority             = 2;
};
task[3]{
    name                 = ID_printer;
    entry_address        = printer();
    stack_size           = 512;
    priority             = 4;
};
task[4]{
    name                 = ID_idle;
    entry_address        = idle();
    stack_size           = 256;
    priority             = 5;
};
//Eventflag Definition
flag[1]{
    name                 = pagein;
};
//Interrupt Vector Definition
interrupt_vector[0x23]{
    os_int               = YES;
    entry_address        = sent_in();
};

```

Figure 6.3 Configuration File Example

6.2.3 Configurator Execution

When using HEW, select "Build all," which enables the user to execute the procedures described in 6.2.3, "Executing the Configurator," and 6.2.4, "System Generation."

Execute the configurator `cfg30` to generate system data definition files (`sys_rom.inc`, `sys_ram.inc`), include files (`mr30.inc`, `kernel_id.h`), and a system generation procedure description file (`makefile`) from the configuration file.

```

A> cfg30 -mv lbp.cfg

MR30 system configurator V.4.00.06
Copyright 2003,2005 RENESAS TECHNOLOGY CORPORATION
AND RENESAS SOLUTIONS CORPORATION ALL RIGHTS RESERVED.
MR30 version ==> V.4.00 Release 01

A>

```

Figure 6.4 Configurator Execution

6.2.4 System generation

Execute the make command³⁹ to generate the system.

```
A> make -f makefile
as30 -F -Dtest=1 crt0mr.a30
nc30 -c task.c
ln30 @ln30.sub

A>
```

Figure 6.5 System Generation

6.2.5 Writing ROM

Using the lmc30 load module converter, convert the absolute module file into a ROM writable format and then write it into ROM. Or read the file into the debugger and debug it.

³⁹ There are two types of make commands, one of which conforms to the MS-DOS standard, and the other conforms to or is compliant with the UNIX standard. MR30 accepts only the make command that conforms to or is compliant with the UNIX standard. When using MS-DOS, use a UNIX compatible make command (e.g., the make command included with the C compiler from Microsoft Corporation). For details about the usefulness of UNIX compatible make commands, refer to the release notes from Renesas. The description in this chapter is made for the case where a UNIX compatible make command is executed, as an example.

7. Detailed Applications

7.1 Program Coding Procedure in C Language

7.1.1 Task Description Procedure

1. Describe the task as a function.

To register the task for the MR30, enter its function name in the configuration file. When, for instance, the function name "task()" is to be registered as the task ID number 3, proceed as follows.

```
task[3] {  
    name          = ID_task;  
    entry_address = task();  
    stack_size    = 100;  
    priority      = 3;  
};
```

2. At the beginning of file, be sure to include "itron.h","kernel.h" which is in system directory as well as "kernel_id.h" which is in the current directory. That is, be sure to enter the following two lines at the beginning of file.

```
#include <itron.h>  
#include <kernel.h>  
#include "kernel_id.h"
```

3. No return value is provided for the task start function. Therefore, declare the task start function as a void function.

4. A function that is declared to be static cannot be registered as a task.

5. It isn't necessary to describe ext_tsk() at the exit of task start function.⁴⁰If you exit the task from the subroutine in task start function, please describe ext_tsk() in the subroutine.

6. It is also possible to describe the task startup function, using the infinite loop.

```
#include <itron.h>  
#include <kernel.h>  
#include "kernel_id.h"  
  
void task(void)  
{  
    /* process */  
}
```

Figure 7.1 Example Infinite Loop Task Described in C Language

⁴⁰ The task is ended by ext_tsk() automatically if #pramga TASK is declared in the MR30. Similarly, it is ended by ext_tsk when returned halfway of the function by return sentence.

```

#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"

void task(void)
{
    for(;;){
        /* process */
    }
}

```

Figure 7.2 Example Task Terminating with ext_tsk() Described in C Language

- 7. To specify a task, use the string written in the task definition item “name” of the configuration file.⁴¹**

```
wup_tsk(ID_main);
```

- 8. To specify an event flag, semaphore, or mailbox, use the respective strings defined in the configuration file.**

For example, if an event flag is defined in the configuration file as shown below,

```

flag[1]{
    name    = ID_abc;
};

```

To designate this eventflag, proceed as follows.

```
set_flg(ID_abc, &setptn);
```

- 9. To specify a cyclic or alarm handler, use the string written in the cyclic or alarm handler definition item “name” of the configuration file.**

```
sta_cyc(ID_cyc);
```

- 10. When a task is reactivated by the sta_tsk() service call after it has been terminated by the ter_tsk() service call, the task itself starts from its initial state.⁴² However, the external variable and static variable are not automatically initialized when the task is started. The external and static variables are initialized only by the startup program (crt0mr.a30), which actuates before MR30 startup.**

- 11. The task executed when the MR30 system starts up is setup.**

- 12. The variable storage classification is described below.**

The MR30 treats the C language variables as indicated in Table 7.1 C Language Variable Treatment.

Table 7.1 C Language Variable Treatment

Variable storage class	Treatment
Global Variable	Variable shared by all tasks
Non-function static variable	Variable shared by the tasks in the same file
Auto Variable Register Variable Static variable in function	Variable for specific task

7.1.2 Writing a Kernel (OS Dependent) Interrupt Handler

When describing the kernel (OS-dependent) interrupt handler in C language, observe the following precautions.

⁴¹ The configurator generates the file “kernel_id.h” that is used to convert the ID number of a task into the string to be specified. This means that the #define declaration necessary to convert the string specified in the task definition item “name” into the ID number of the task is made in “kernel_id.h.” The same applies to the cyclic and alarm handlers.

⁴² The task starts from its start function with the initial priority in a wakeup counter cleared state.

1. Describe the kernel(OS-dependent) interrupt handler as a function⁴³
2. Be sure to use the void type to declare the interrupt handler start function return value and argument.
3. At the beginning of file, be sure to include "itron.h","kernel.h" which is in the system directory as well as "kernel_id.h" which is in the current directory.
4. Do not use the ret_int service call in the interrupt handler.⁴⁴
5. The static declared functions can not be registered as an interrupt handler.

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"

void inthand(void)
{
    /* process */
    iwup_tsk(ID_main);
}
```

Figure 7.3 Example of Kernel(OS-dependent) Interrupt Handler

7.1.3 Writing Non-kernel (OS-independent) Interrupt Handler

When describing the non-kernel(OS-independent) interrupt handler in C language, observe the following precautions.

1. Be sure to declare the return value and argument of the interrupt handler start function as a void type.
2. No service call can be issued from a non-kernel(an OS-independent) interrupt handler.
NOTE: If this restriction is not observed, the software may malfunction.
3. A function that is declared to be static cannot be registered as an interrupt handler.
4. If you want multiple interrupts to be enabled in a non-kernel(an OS-independent) interrupt handler, always make sure that the non-kernel(OS-independent) interrupt handler is assigned a priority level higher than other kernel(OS-dependent) interrupt handlers.⁴⁵

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"

void inthand(void)
{
    /* process */
}
```

Figure 7.4 Example of Non-kernel(OS-independent) Interrupt Handler

7.1.4 Writing Cyclic Handler/Alarm Handler

When describing the cyclic or alarm handler in C language, observe the following precautions.

⁴³ A configuration file is used to define the relationship between handlers and functions.

⁴⁴ When an kernel(OS-dependent) interrupt handler is declared with #pragma INTHANDLER ,code for the ret_int service call is automatically generated.

⁴⁵ If you want the non-kernel(OS-independent) interrupt handler to be assigned a priority level lower than kernel(OS-dependent) interrupt handlers, change the description of the non-kernel(OS-independent) interrupt handler to that of the kernel (OS-dependent) interrupt handler.

1. Describe the cyclic or alarm handler as a function.⁴⁶
2. Be sure to declare the return value and argument of the interrupt handler start function as a void type.
3. At the beginning of file, be sure to include "itron.h","kernel.h" which is in the system directory as well as "kernel_id.h" which is in the current directory.
4. The static declared functions cannot be registered as a cyclic handler or alarm handler.
5. The cyclic handler and alarm handler are invoked by a subroutine call from a system clock interrupt handler.

```
#include <itron.h>
#include <kernel.h>
#include "kernel_id.h"

void cychand(void)
{
    /*process */
}
```

Figure 7.5 Example Cyclic Handler Written in C Language

⁴⁶ The handler-to-function name correlation is determined by the configuration file.

7.2 Program Coding Procedure in Assembly Language

This section describes how to write an application using the assembly language.

7.2.1 Writing Task

This section describes how to write an application using the assembly language.

1. Be sure to include "mr30.inc" at the beginning of file.
2. For the symbol indicating the task start address, make the external declaration.⁴⁷
3. Be sure that an infinite loop is formed for the task or the task is terminated by the ext_tsk service call.

```
.INCLUDE mr30.inc ----- (1)
.GLB      task      ----- (2)

task:
        ; process
        jmp      task      ----- (3)
```

Figure 7.6 Example Infinite Loop Task Described in Assembly Language

```
.INCLUDE mr30.inc
.GLB      task

task:
        ; process
        ext_tsk
```

Figure 7.7 Example Task Terminating with ext_tsk Described in Assembly Language

4. The initial register values at task startup are indeterminate except the PC, SB, R0 and FLG registers.
5. To specify a task, use the string written in the task definition item "name" of the configuration file.

```
wup_tsk  #ID_task
```

6. To specify an event flag, semaphore, or mailbox, use the respective strings defined in the configuration file.

For example, if a semaphore is defined in the configuration file as shown below,:

```
semaphore[1]{
        name          = abc;
};
```

To specify this semaphore, write your specification as follows:

```
sig_sem  #ID_abc
```

7. To specify a cyclic or alarm handler, use the string written in the cyclic or alarm handler definition item "name" of the configuration file

For example, if you want to specify a cyclic handler "cyc," write your specification as follows:

```
sta_cyc  #ID_cyc
```

⁴⁷ Use the .GLB pseudo-directive

8. Set a task that is activated at MR30 system startup in the configuration file ⁴⁸

7.2.2 Writing Kernel(OS-dependent) Interrupt Handler

When describing the kernel(OS-dependent) interrupt handler in assembly language, observe the following precautions

1. At the beginning of file, be sure to include "mr30.inc" which is in the system directory.
2. For the symbol indicating the interrupt handler start address, make the external declaration(Global declaration).⁴⁹
3. Make sure that the registers used in a handler are saved at the entry and are restored after use.
4. Return to the task by ret_int service call.

```
.INCLUDE mr30.inc          ----- (1)
.GLB    inth               ----- (2)

inth:
; Registers used are saved to a stack ----- (3)
iwup_tsk #ID_task1
:
process
:

; Registers used are restored ----- (3)

ret_int                   ----- (4)
```

Figure 7.8 Example of kernel(OS-depend) interrupt handler

7.2.3 Writing Non-kernel(OS-independent) Interrupt Handler

1. For the symbol indicating the interrupt handler start address, make the external declaration (public declaration).
2. Make sure that the registers used in a handler are saved at the entry and are restored after use.
3. Be sure to end the handler by REIT instruction.
4. No service calls can be issued from a non-kernel(an OS-independent) interrupt handler.
NOTE: If this restriction is not observed, the software may malfunction.
5. If you want multiple interrupts to be enabled in a non-kernel(an OS-independent) interrupt handler, always make sure that the non-kernel(OS-independent) interrupt handler is assigned a priority level higher than other non-kernel(OS-dependent) interrupt handlers.⁵⁰

```
.GLB    inthand           ----- (1)

inthand:
; Registers used are saved to a stack ----- (2)
; interrupt process
; Registers used are restored ----- (2)
REIT                                         ----- (3)
```

Figure 7.9 Example of Non-kernel(OS-independent) Interrupt Handler of Specific Level

7.2.4 Writing Cyclic Handler/Alarm Handler

When describing the cyclic or alarm handler in Assembly Language, observe the following precautions.

⁴⁸ The relationship between task ID numbers and tasks(program) is defined in the configuration file.

⁴⁹ Use the .GLB pseudo-directive.

⁵⁰ If you want the non-kernel(OS-independent) interrupt handler to be assigned a priority level lower than kernel(OS-dependent) interrupt handlers, change the description of the non-kernel(OS-independent) interrupt handler to that of the kernel (OS-dependent) interrupt handler.

1. At the beginning of file, be sure to include "mr30.inc" which is in the system directory.
2. For the symbol indicating the handler start address, make the external declaration.⁵¹
3. Always use the RTS instruction (subroutine return instruction) to return from cyclic handlers and alarm handlers.

For examples:

```
.INCLUDE      mr30.inc      ----- (1)
.GLB          cychand      ----- (2)

cychand:
    :
    ; handler process
    :
    rts                ----- (3)
```

Figure 7.10 Example Handler Written in Assembly Language

⁵¹ Use the .GLB pseudo-directive.

7.3 Modifying MR30 Startup Program

MR30 comes with two types of startup programs as described below.

- **start.a30**
This startup program is used when you created a program using the assembly language.
- **crt0mr.a30**
This startup program is used when you created a program using the C language.
This program is derived from "start.a30" by adding an initialization routine in C language.

The startup programs perform the following:

- Initialize the processor after a reset.
- Initialize C language variables (crt0mr.a30 only).
- Set the system timer.
- Initialize MR30's data area.

Copy these startup programs from the directory indicated by environment variable "LIB30" to the current directory.

If necessary, correct or add the sections below:

- **Setting processor mode register**
Set a processor mode matched to your system to the processor mode register. (76th line in crt0mr.a30)
- **Adding user-required initialization program**
When there is an initialization program that is required for your application, add it to the 175th line in the C language startup program (crt0mr.a30).
- **Initialization of the standard I/O function**
Comment out the 133th – 134th line in the C language startup program (crt0mr.a30) if no standard I/O function is used.

7.3.1 C Language Startup Program (crt0mr.a30)

Figure 7.11 shows the C language startup program(crt0mr.a30).

```
1 ; *****
2 ;
3 ; MR30 start up program for C language
4 ; COPYRIGHT(C) 2003,2006 RENESAS TECHNOLOGY CORPORATION
5 ; AND RENESAS SOLUTIONS CORPORATION ALL RIGHTS RESERVED
6 ;
7 ; *****
8 ; $Id: crt0mr.a30 519 2006-04-24 13:36:30Z inui $
9 ;
10 .list OFF
11 .include c_sec.inc
12 .include mr30.inc
13 .include sys_rom.inc
14 .include sys_ram.inc
15 .list ON
16
17 ;-----
18 ; SBDATA area definition
19 ;-----
20 .glb __SB__
21 .SB __SB__
22
23 ;=====
24 ; Initialize Macro declaration
25 ;-----
26 N_BZERO .macro TOP_,SECT_
27 mov.b #00H, R0L
28 mov.w #(TOP_ & 0FFFFH), A1
29 mov.w #sizeof SECT_, R3
30 sstr.b
31 .endm
32
33 N_BCOPY .macro FROM_,TO_,SECT_
34 mov.w #(FROM_ & 0FFFFH), A0
35 mov.b #(FROM_ >> 16), R1H
36 mov.w #TO_, A1
37 mov.w #sizeof SECT_, R3
38 smovf.b
39 .endm
40
41 BZERO .macro TOP_,SECT_
42 push.w #sizeof SECT_ >> 16
43 push.w #sizeof SECT_ & 0ffffh
44 pusha TOP_ >> 16
45 pusha TOP_ & 0ffffh
46
47 .glb _bzero
48 jsr.a _bzero
49 .endm
50 ;
51
52 BCOPY .macro FROM_,TO_,SECT_
53 push.w #sizeof SECT_ >> 16
54 push.w #sizeof SECT_ & 0ffffh
55 pusha TO_ >> 16
56 pusha TO_ & 0ffffh
57 pusha FROM_ >> 16
58 pusha FROM_ & 0ffffh
59
60 .glb _bcopy
61 jsr.a _bcopy
62 .endm
63
64 ;=====
65 ; Interrupt section start
66 ;-----
67 .glb __SYS_INITIAL
68 .section MR_KERNEL, CODE, ALIGN
69 __SYS_INITIAL:
70 ;-----
71 ; after reset, this program will start
72 ;-----
73 ldc #(__Sys_Sp&0FFFFH), ISP ; set initial ISP
74
```

```

75     mov.b    #2H,0AH
76     mov.b    #00,PMOD                      ; Set Processor Mode Register
77     mov.b    #0H,0AH
78     ldc      #00H,FLG
79     ldc      #(__Sys_Sp&0FFFFH),fb
80     ldc      #__SB__,sb
81
82 ; +-----+
83 ; |      ISSUE SYSTEM CALL DATA INITIALIZE      |
84 ; +-----+
85 ; For PD30
86     __INIT_ISSUE_SYSCALL
87
88 ; +-----+
89 ; |      MR RAM DATA 0(zero) clear      |
90 ; +-----+
91     N_BZERO MR_RAM_top,MR_RAM
92
93
94 ;=====
95 ; NEAR area initialize.
96 ;-----
97 ; bss zero clear
98 ;-----
99     N_BZERO bss_SE_top,bss_SE
100    N_BZERO bss_SO_top,bss_SO
101
102    N_BZERO bss_NE_top,bss_NE
103    N_BZERO bss_NO_top,bss_NO
104
105 ;-----
106 ; initialize data section
107 ;-----
108    N_BCOPY data_SEI_top,data_SE_top,data_SE
109    N_BCOPY data_SOI_top,data_SO_top,data_SO
110    N_BCOPY data_NEI_top,data_NE_top,data_NE
111    N_BCOPY data_NOI_top,data_NO_top,data_NO
112
113 ;=====
114 ; FAR area initialize.
115 ;-----
116 ; bss zero clear
117 ;-----
118    BZERO    bss_FE_top,bss_FE
119    BZERO    bss_FO_top,bss_FO
120
121 ;-----
122 ; Copy edata_E(O) section from edata_EI(OI) section
123 ;-----
124    BCOPY    data_FEI_top,data_FE_top,data_FE
125    BCOPY    data_FOI_top,data_FO_top,data_FO
126
127    ldc      #__Sys_Sp&0FFFFH),    sp
128    ldc      #__Sys_Sp&0FFFFH),    fb
129
130 ;=====
131 ; Initialize standard I/O
132 ;-----
133 ; .glb    __init
134 ; jsr.a    __init
135
136 ;-----
137 ; Set System IPL
138 ; and
139 ; Set Interrupt Vector
140 ;-----
141     mov.b    #0,R0L
142     mov.b    #__SYS_IPL,R0H
143     ldc      R0,FLG                      ; set system IPL
144     ldc      #((__INT_VECTOR>>16)&0FFFFH),INTBH
145     ldc      #((__INT_VECTOR&0FFFFH),INTBL
146
147 .IF USE_TIMER
148 ; +-----+
149 ; |      System timer interrupt setting      |
150 ; +-----+
151     mov.b    #stmr_mod_val,stmr_mod_reg    ;set timer mode
152 ;     mov.b    #1H,0AH
153 ;     bset     6,07H
154     mov.b    #stmr_int_IPL,stmr_int_reg    ;set timer IPL

```

```

155 ; bclr      6,07H
156 ; mov.b     #0,0AH
157 ; mov.w     #stmr_cnt,stmr_ctr_reg      ;set interval count
158 ; or.b      #stmr_bit+1,stmr_start      ;system timer start
159 .ENDIF
160
161 ; +-----+
162 ; |      System timer initialize      |
163 ; +-----+
164 .IF      USE_SYSTEM_TIME
165     MOV.W   #__D_Sys_TIME_L, __Sys_time+4
166     MOV.W   #__D_Sys_TIME_M, __Sys_time+2
167     MOV.W   #__D_Sys_TIME_H, __Sys_time
168 .ENDIF
169
170 ; +-----+
171 ; |      User Initial Routine ( if there are )      |
172 ; +-----+
173 ;
174
175
176 ; jmp      __MR_INIT      ; for Separate ROM
177
178 ; +-----+
179 ; |      Initalization of System Data Area      |
180 ; +-----+
181 .GLB      __init_sys, __init_tsk, __END_INIT
182 JSR.W     __init_sys
183 JSR.W     __init_tsk
184
185 .IF      MR_TIMEOUT
186 .GLB      __init_tout
187 JSR.W     __init_tout
188 .ENDIF
189
190 .IF      NUM_FLG
191 .GLB      __init_flg
192 JSR.W     __init_flg
193 .ENDIF
194
195 .IF      NUM_SEM
196 .GLB      __init_sem
197 JSR.W     __init_sem
198 .ENDIF
199
200 .IF      NUM_DTQ
201 .GLB      __init_dtq
202 JSR.W     __init_dtq
203 .ENDIF
204
205 .IF      NUM_VDTQ
206 .GLB      __init_vdtq
207 JSR.W     __init_vdtq
208 .ENDIF
209
210 .IF      NUM_MBX
211 .GLB      __init_mbx
212 JSR.W     __init_mbx
213 .ENDIF
214
215 .IF      ALARM_HANDLER
216 .GLB      __init_alh
217 JSR.W     __init_alh
218 .ENDIF
219
220 .IF      CYCLIC_HANDLER
221 .GLB      __init_cyh
222 JSR.W     __init_cyh
223 .ENDIF
224
225 .IF      NUM_MPF
226 ; Fixed Memory Pool
227 .GLB      __init_mpf
228 JSR.W     __init_mpf
229 .ENDIF
230
231 .IF      NUM_MPL
232 ; Variable Memory Pool
233 .GLB      __init_mpl
234 JSR.W     __init_mpl

```

```

235 .ENDIF
236
237
238 ; For PD30
239 __LAST_INITIAL
240
241 __END_INIT:
242 ; +-----+
243 ; | Start initial active task |
244 ; +-----+
245 __START_TASK
246
247 .glb __rdyq_search
248 jmp.W __rdyq_search
249
250 ; +-----+
251 ; | Define Dummy |
252 ; +-----+
253 .glb __SYS_DMY_INH
254 __SYS_DMY_INH:
255 reit
256
257 .IF CUSTOM_SYS_END
258 ; +-----+
259 ; | Syscall exit routine to customize
260 ; +-----+
261 .GLB __sys_end
262 __sys_end:
263 ; Customize here.
264 REIT
265 .ENDIF
266
267 ; +-----+
268 ; | exit() function |
269 ; +-----+
270 .glb __exit,$exit
271 __exit:
272 $exit:
273 jmp __exit
274
275 .if USE_TIMER
276 ; +-----+
277 ; | System clock interrupt handler |
278 ; +-----+
279 .SECTION MR_KERNEL, CODE, ALIGN
280 .glb __SYS_STMR_INH, __SYS_TIMEOUT
281 .glb __DBG_MODE, __SYS_ISS
282 __SYS_STMR_INH:
283 ; process issue system call
284 ; For PD30
285 __ISSUE_SYSCALL
286
287
288
289 ; System timer interrupt handler
290 __STMR_hdr
291 ret_int
292 .endif
293
294 .end

```

Figure 7.11 C Language Startup Program (crt0mr.a30)

The following explains the content of the C language startup program (crt0mr.a30).

- 1. Incorporate a section definition file [11 in Figure 7.11]**
- 2. Incorporate an include file for MR30 [12 in Figure 7.11]**
- 3. Incorporate a system ROM area definition file [13 in Figure 7.11]**
- 4. Incorporate a system RAM area definition file [14 in Figure 7.11]**
- 5. This is the initialization program __SYS_INITIAL that is activated immediately after a reset. [69 - 249 in Figure 7.11]**
 - ◆ Setting the System Stack pointer [73 in Figure 7.11]

- ◆ Setting the processor mode register [75- 77 in Figure 7.11]
 - ◆ Setting the SB,FB register [78 - 80 in Figure 7.11]
 - ◆ Initial set the C language. [99 - 126 in Figure 7.11]
 - ◆ Setting OS interrupt disable level [141 - 143 in Figure 7.11]
 - ◆ Setting the address of interrupt vector table [144 and 155 in Figure 7.11]
 - ◆ Set MR30's system clock interrupt [151-158 in Figure 7.11]
 - ◆ Initialization of standard I/O function[133-134 in Figure 7.11]
- When using no standard input/output functions, remove the lines 133 and 134 in Figure 7.11.
- ◆ Initial set MR30's system timer [165-167 in Figure 7.11]

- 6. Initial set parameters inherent in the application [176 in Figure 7.11]**
- 7. Initialize the RAM data used by MR30 [181- 235 in Figure 7.11]**
- 8. Sets the bit which shows the end of start-up processing[239 in Figure 7.11]**
- 9. Activate the initial startup task. [245-249 in Figure 7.11]**
- 10. This is a system clock interrupt handler [279-292 in Figure 7.11]**

7.4 Memory Allocation

This section describes how memory is allocated for the application program data.

Use the section file provided by MR30 to set memory allocation.

MR30 comes with the following two types of section files:

- **asm_sec.inc**
This file is used when you developed your applications with the assembly language.
Refer to 7.4.1 for details about each section.
- **c_sec.inc**
This file is used when you developed your applications with the C language.
c_sec.inc is derived from "asm_sec.inc" by adding sections generated by C compiler NC30.
Refer to 7.4.2 for details about each section.

Modify the section allocation and start address settings in this file to suit your system.

The following shows how to modify the section file.

e.g.

If you want to change the program section start address from F0000H to F1000H

```
.section      program
.org      0F0000H ; Correct this address to F1000H
```

↓

```
.section      program
.org      0F1000H ;
```

7.4.1 Section Allocation of start.a30

The section allocation of the sample startup program for the assembly language "start.a30" is defined in "asm_sec.inc".

Edit "asm_sec.inc" if section reallocation is required.

The following explains each section that is defined in the sample section definition file "asm_sec.inc".

- **MR_RAM_DBG section**
This section is stored MR30's debug function RAM data.
This section must be mapped in the Internal RAM area.
- **MR_RAM section**
This section is where the RAM data, MR30's system management data, is stored that is referenced in absolute addressing.
This section must be mapped between 0 and FFFFH(near area).
- **stack section**
This section is provided for each task's user stack and system stack.
This section must be mapped between 0 and FFFFH(near area).
- **MR_HEAP section**
This section stores the variable-size memory pool.
- **MR_KERNEL section**
This section is where the MR30 kernel program is stored.
- **MR_CIF section**
This section stores the MR30 C language interface library.
- **MR_ROM section**
This section stores data such as task start addresses that are referenced by the MR30 kernel.
- **program section**
This section stores user programs.
This section is not used by the MR30 kernel at all. Therefore, you can use this section as desired.
- **INTERRUPT_VECTOR section**
- **FIX_INTERRUPT_VECTOR section**
This section stores interrupt vectors. The start address of this section varies with the type of M16C/60 series microcomputer used. The address in the sample startup program is provided for use by the M16C/60 series micro-computers. This address must be modified if you are using a microcomputer of some other group.

7.4.2 Section Allocation of crt0mr.a30

The section allocation of the sample startup program for the C language "crt0mr.a30" is defined in "c_sec.inc".

Edit "c_sec.inc" if section reallocation is required.

The sections defined in the sample section definition file "c_sec.inc" include the following sections that are defined in the section definition file "asm_sec.inc" of the sample startup program for the assembly language.

- data_SE section
- bss_SE section
- data_SO section
- bss_SO section
- data_NE section
- bss_NE section
- data_NO section
- bss_NO section
- rom_NE section
- rom_NO section
- data_FE section
- bss_FE section
- data_FO section
- bss_FO section
- rom_FE section
- rom_FO section
- data_SEI section
- data_SOI section
- data_NEI section
- data_NOI section
- data_FEI section
- data_FOI section

These sections are those that are generated by NC30. These sections are not defined in the section file for the assembly language.

Refer to the NC30 manual for details.

The diagram below shows the section allocation in the sample startup program. (See Figure 7.12 Selection Allocation in C Language Startup Program)

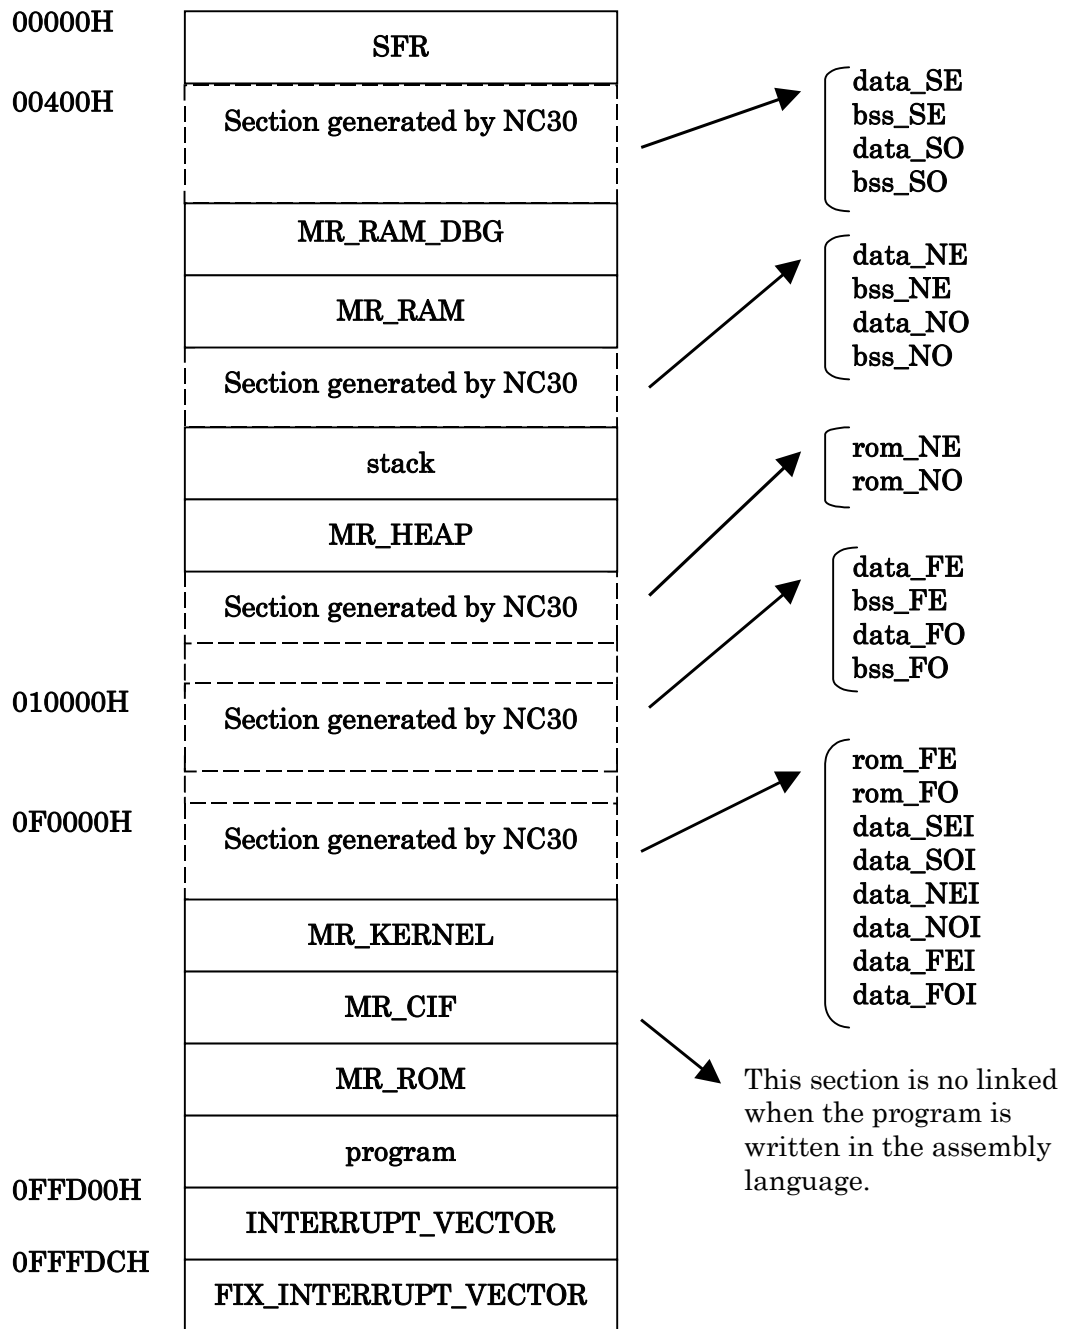


Figure 7.12 Selection Allocation in C Language Startup Program

8. Using Configurator

8.1 Configuration File Creation Procedure

When applications program coding and startup program modification are completed, it is then necessary to register the applications program in the MR30 system.

This registration is accomplished by the configuration file.

8.1.1 Configuration File Data Entry Format

This chapter describes how the definition data are entered in the configuration file.

Comment Statement

A statement from `'''` to the end of a line is assumed to be a comment and not operated on.

End of statement

Statements are terminated by `';`.

Numerical Value

Numerical values can be entered in the following format.

1. Hexadecimal Number

Add `"0x"` or `"0X"` to the beginning of a numerical value, or `"h"` or `"H"` to the end. If the value begins with an alphabetical letter between A and F with `"h"` or `"H"` attached to the end, be sure to add `"0"` to the beginning. Note that the system does not distinguish between the upper- and lower-case alphabetical characters (A-F) used as numerical values.⁵²

2. Decimal Number

Use an integer only as in `'23'`. However, it must not begin with `'0'`.

3. Octal Numbers

Add `'0'` to the beginning of a numerical value of `'O'` or `'o'` to end.

4. Binary Numbers

Add `'B'` or `'b'` to the end of a numerical value. It must not begin with `'0'`.

Table 8.1 Numerical Value Entry Examples

Hexadecimal	0xf12
	0Xf12
	0a12h
	0a12H
	12h
Decimal	12H
	32
Octal	017
	17o
	17O
Binary	101110b
	101010B

⁵² The system distinguishes between the upper- and lower-case letters except for the numbers A-F and a-f.

It is also possible to enter operators in numerical values. Table 8.2 Operators lists the operators available.

Table 8.2 Operators

Operator	Priority	Direction of computation
()	High	From left to right
- (Unary_minus)		From right to left
* / %		From left to right
+ - (Binary_minus)	Low	From left to right

Numerical value examples are presented below.

- 123
- 123 + 0x23
- (23/4 + 3) * 2
- 100B + 0aH

Symbol

The symbols are indicated by a character string that consists of numerals, upper- and lower-case alphabetical letters, _(underscore), and ?, and begins with a non-numeric character.

Example symbols are presented below.

- _TASK1
- IDLE3

Function Name

The function names are indicated by a character string that consists of numerals, upper and lower-case alphabetical letters, '\$'(dollar) and '_'(underscore), begins with a non-numeric character, and ends with '()'.

The following shows an example of a function name written in the C language.

- main()
- func()

When written in the assembly language, the start label of a module is assumed to be a function name.

Frequency

The frequency is indicated by a character string that consist of numerals and . (period), and ends with MHz. The numerical values are significant up to six decimal places. Also note that the frequency can be entered using decimal numbers only.

Frequency entry examples are presented below.

- 16MHz
- 8.1234MHz

It is also well to remember that the frequency must not begin with . (period).

Time

The time is indicated by a character string that consists of numerals and . (period), and ends with ms. The time values are effective up to three decimal places when the character string is terminated with ms. Also note that the

time can be entered using decimal numbers only.

- 10ms
- 10.5ms

It is also well to remember that the time must not begin with . (period).

8.1.2 Configuration File Definition Items

The following definitions⁵³ are to be formulated in the configuration file

- System definition
- System clock definition
- Respective maximum number of items
- Task definition
- Eventflag definition
- Semaphore definition
- Mailbox definition
- Data queue definition
- Short data queue definition
- Fixed-size Memory Pool definition
- Variable-size Memory Pool definition
- Cyclic handler definition
- Alarm handler definition
- Interrupt vector definition

[(System Definition Procedure)]

<< Format >>

```
// System Definition
system{
    stack_size      = System stack size ;
    priority        = Maximum value of priority ;
    system_IPL      = Kernel mask level(OS interrupt disable level) ;
    timeout         = Timeout function ;
    task_pause      = Task Pause ;
    tic_deno        = Time tick denominator ;
    tic_num         = Time tick numerator ;
    message_pri     = Maximum message priority value ;
};
```

⁵³ All items except task definition can omitted. If omitted, definitions in the default configuration file are referenced.

1. System stack size

[(Definition format)]	Numeric value
[(Definition range)]	6 to 0xFFFF
[(Default value)]	400H

Define the total stack size used in service call and interrupt processing.

2. Maximum value of priority (value of lowest priority)

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	63

Define the maximum value of priority used in MR30's application programs. This must be the value of the highest priority used.

3. Kernel mask level (OS interrupt disable level)

[(Definition format)]	Numeric value
[(Definition range)]	1 to 7
[(Default value)]	7

Set the IPL value in service calls, that is, the OS interrupt disable level.

4. Timeout function

[(Definition format)]	Symbol
[(Definition range)]	YES or NO
[(Default value)]	NO

Specify YES when using or NO when not using tslp_tsk, twai_flg, twai_sem, tsnd_dtq, trcv_dtq, tget_mpf, vtsnd_dtq, vtrcv_dtq and trcv_msg.

5. Task Pause

[(Definition format)]	Symbol
[(Definition range)]	YES or NO
[(Default value)]	NO

Specify YES when using or NO when not using the Task Pause function of OS Debug Function of the debugger.

6. Time tick denominator

[(Definition format)]	Numeric value
[(Definition range)]	Fixed to 1
[(Default value)]	1

Set the denominator of the time tick.

7. Time tick numerator

[(Definition format)]	Numeric value
[(Definition range)]	1 to 65,535
[(Default value)]	1

Set the numerator of the time tick. The system clock interrupt interval is determined by the time tick denominator and numerator that are set here. The interval is the time tick numerator divided by time tick denominator [ms]. That is, the time tick numerator [ms].

The tic_num value that can be specified for the M32C/82 or 83 operating with 20 MHz is 26 ms because of the microcomputer specification.

8. Maximum message priority value

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	None

Define the maximum value of message priority.

[(System Clock Definition Procedure)]

<< Format >>

```
// System Clock Definition
clock{
    mpu_clock      = MPU clock ;
    timer          = Timers used for system clock ;
    IPL            = System clock interrupt priority level ;
};
```

<< Content >>

1. MPU clock

[(Definition format)]	Frequency(in MHz)
[(Definition range)]	None
[(Default value)]	20MHz

Define the MPU operating clock frequency of the microcomputer in MHz units.

2. Timers used for system clock

[(Definition format)]	Symbol
[(Definition range)]	A0, A1, A2, A3, A4, A5,A6,A7,B0, B1, B2, B3, B4, B5, OTHER, NOTIMER
[(Default value)]	NOTIMER

Define the hardware timers used for the system clock.

If you do not use a system clock, define "NOTIMER."

3. System clock interrupt priority level

[[Definition format]]	Numeric value
[[Definition range]]	1 to Kernel mask(OS interrupt disable) level in system definition
[[Default value]]	4

Define the priority level of the system clock timer interrupt. The value set here must be smaller than the kernel mask(OS interrupt disable level).

Interrupts whose priority levels are below the interrupt level defined here are not accepted during system clock interrupt handler processing.

[[Definition respective maximum numbers of items]]

This definition is to be given only in forming the separate ROMs.⁵⁴

Here, define respective maximum numbers of items to be used in two or more applications.

<< Format >>

```
// Max Definition
maxdefine{
    max_task    = the maximum number of tasks defined ;
    max_flag    = the maximum number of eventflags defined ;
    max_dtq     = the maximum number of data queues defined ;
    max_mbx     = the maximum number of mailboxes defined ;
    max_sem     = the maximum number of semaphores defined ;
    max_mpf     = the maximum number of fixed-size
memory pools defined ;
    max_mpl     = the maximum number of variable-size
memory pools defined ;
    max_cyh     = the maximum number of cyclic handlers
defined ;
    max_alh     = the maximum number of alarm handlers
defined ;
    max_vdtq    = the maximum number of short data queues defined ;
};
```

<< Contents >>

1. The maximum number of tasks defined

[[Definition format]]	Numeric value
[[Definition range]]	1 to 255
[[Default value]]	None

Define the maximum number of tasks defined.

⁵⁴ For details of forming the into separate ROMs, see page - 285 -.

2. The maximum number of eventflags defined

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	None

3. The maximum number of data queues defined.

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	None

Define the maximum number of data queues defined.

4. The maximum number of mailboxes defined

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	None

Define the maximum number of mailboxes defined.

5. The maximum number of semaphores defined

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	None

Define the maximum number of semaphores defined.

6. The maximum number of fixed-size memory pools defined

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	None

7. The maximum number of variable length memory blocks defined.

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	None

Define the maximum number of variable length memory blocks defined.

8. The maximum number of cyclic activation handlers defined

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	None

The maximum number of cyclic handler defined

9. The maximum number of alarm handler defined

[(Definition format)]	Numeric value
[(Definition range)]	1 to 255
[(Default value)]	None

Define the maximum number of alarm handlers defined.

10. The maximum number of short data queues defined.

[(Definition format)] Numeric value

[(Definition range)] 1 to 255

[(Default value)] None

Define the maximum number of short data queues defined.

[(Task definition)]

<< Format >>

```
// Tasks Definition
task[ ID No. ]{
    name           = ID name ;
    entry_address  = Start task of address ;
    stack_size     = User stack size of task ;
    priority       = Initial priority of task ;
    context        = Registers used ;
    stack_section  = Section name in which the stack is located ;
    initial_start  = TA ACT attribute (initial startup state) ;
    exinf         = Extended information ;
};
:
:
```

The ID number must be in the range of 1 to 255. The ID number can be omitted.

If omitted, numbers are automatically assigned sequentially beginning with the smallest.

<< Content >>

Define the following for each task ID number.

1. Task ID name

[(Definition format)] Symbol

[(Definition range)] None

[(Default value)] None

Define the ID name of a task. Note that the function name defined here is output to the kernel_id.h file, as shown below.

```
#define Task ID Name task ID
```

2. Start address of task

[(Definition format)] Symbol or function name

[(Definition range)] None

[(Default value)] None

Define the entry address of a task. When written in the C language, add () at the end or _at the beginning of the function name you have defined.

The function name defined here causes the following declaration statement to be output in the kernel_id.h file:

#pragma TASK Function Name

3. User stack size of task

[(Definition format)]	Numeric value
[(Definition range)]	6 or more
[(Default value)]	256

Define the user stack size for each task. The user stack means a stack area used by each individual task. MR30 requires that a user stack area be allocated for each task, which amount to at least 12 bytes.

4. Initial priority of task

[(Definition format)]	Numeric value
[(Definition range)]	1 to (maximum value of priority in system definition)
[(Default value)]	1

Define the priority of a task at startup time.

As for MR30's priority, the lower the value, the higher the priority.

5. Registers Used

[(Definition format)]	Symbol[,Symbol,...]
[(Definition range)]	Selected from R0,R1,R2,R3,A0,A1,SB,FB
[(Default value)]	All registers

Define the registers used in a task. MR30 handles the register defined here as a context. Specify the R0 register because task startup code is set in it when the task starts.

However, the registers used can only be selected when the task is written in the assembly language. Select all registers when the task is written in the C language. When selecting a register here, be sure to select all registers that store service call parameters used in each task.

MR30 kernel does not change the registers of bank.

If this definition is omitted, it is assumed that all registers are selected.

6. Section name in which the stack is located

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	stack

Define the section name in which the stack is located. The section defined here must always have an area allocated for it in the section file (asm_sec.inc or c_sec.inc).

If no section names are defined, the stack is located in the stack section.

7. TA_ACT attribute (initial startup state)

[(Definition format)]	Symbol
[(Definition range)]	ON or OFF
[(Default value)]	OFF

Define the initial startup state of a task.

If this attribute is specified ON, the task goes to a READY state at the initial system startup time.

The task startup code of the initial startup task is 0. One or more tasks must have TA_ACT attribute.

8. Extended information

[(Definition format)]	Numeric value
[(Definition range)]	0 to 0xFFFF
[(Default value)]	0

Define the extended information of a task. This information is passed to the task as argument when it is restarted by a queued startup request, for example.

[(Eventflag definition)]

This definition is necessary to use Eventflag function.

<< Format >>

```
// Eventflag Definition
flag[ ID No. ] {
    name           = Name ;
    wait_queue     = Selecting an event flag waiting queue ;
    initial_pattern = Initial value of the event flag ;
    wait_multi     = Multi-wait attribute ;
    clear_attribute = Clear attribute ;
};
:
:
```

The ID number must be in the range of 1 to 255. The ID number can be omitted.

If omitted, numbers are automatically assigned sequentially beginning with the smallest.

<< Content >>

Define the following for each eventflag ID number.

1. ID Name

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	None

Define the name with which an eventflag is specified in a program.

2. Selecting an event flag waiting queue

[(Definition format)]	Symbol
[(Definition range)]	TA_TFIFO or TA_TPRI
[(Default value)]	TA_TFIFO

Select a method in which tasks wait for the event flag. If TA_TFIFO is selected, tasks are enqueued in order of FIFO. If TA_TPRI is selected, tasks are enqueued in order of priority beginning with the one that has the highest priority.

3. Initial value of the event flag

[(Definition format)]	Numeric value
[(Definition range)]	0 to 0xFFFF
[(Default value)]	0

Specify the initial bit pattern of the event flag.

4. Multi-wait attribute

[(Definition format)]	Symbol
[(Definition range)]	TA_WMUL or TA_WSGL
[(Default value)]	TA_WSGL

Specify whether multiple tasks can be enqueued in the eventflag waiting queue. If TA_WMUL is selected, the TA_WMUL attribute is added, permitting multiple tasks to be enqueued. If TA_WSGL is selected, the TA_WSGL attribute is added, prohibiting multiple tasks from being enqueued.

5. Clear attribute

[(Definition format)]	Symbol
[(Definition range)]	YES or NO
[(Default value)]	NO

Specify whether the TA_CLR attribute should be added as an eventflag attribute. If YES is selected, the TA_CLR attribute is added. If NO is selected, the TA_CLR attribute is not added.

[(Semaphore definition)]

This definition is necessary to use Semaphore function.

<< Format >>

```
// Semaphore Definition
semaphore[ ID No. ]{
    name           = ID name;
    wait_queue     = Selecting a semaphore waiting queue;
    initial_count  = Initial value of semaphore counter;
    max_count      = Maximum value of the semaphore counter;
};
:
:
```

The ID number must be in the range of 1 to 255. The ID number can be omitted.

If omitted, numbers are automatically assigned sequentially beginning with the smallest.

<< Content >>

Define the following for each semaphore ID number.

1. ID Name

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	None

Define the name with which a semaphore is specified in a program.

2. Selecting a semaphore waiting queue

[(Definition format)]	Symbol
[(Definition range)]	TA_TFIFO or TA_TPRI
[(Default value)]	TA_TFIFO

Select a method in which tasks wait for the semaphore. If TA_TFIFO is selected, tasks are enqueued in order of FIFO. If TA_TPRI is selected, tasks are enqueued in order of priority beginning with the one that has the highest priority.

3. Initial value of semaphore counter

[(Definition format)]	Numeric value
[(Definition range)]	0 to 65535
[(Default value)]	1

Define the initial value of the semaphore counter.

4. Maximum value of the semaphore counter

[(Definition format)]	Numeric value
[(Definition range)]	1 to 65535
[(Default value)]	1

Define the maximum value of the semaphore counter.

[(Data queue definition)]

This definition must always be set when the data queue function is to be used.

<< Format >>

```
// Dataqueue Definition
dataqueue[ ID No. ] {
    name           = ID name ;
    buffer_size    = Number of data queues ;
    wait_queue     = Select data queue waiting queue ;
};
:
:
```

The ID number must be in the range 1 to 255. The ID number can be omitted. If omitted, ID numbers are automatically assigned in order of numbers beginning with the smallest.

<< Content >>

For each data queue ID number, define the items described below.

1. ID name

[(Definition format)] Symbol

[(Definition range)] None

[(Default value)] None

Define the name by which the data queue is specified in a program.

2. Number of data

[(Definition format)] Numeric Value

[(Definition range)] 0 to 0x3FFF

[(Default value)] 0

Specify the number of data that can be transmitted. What should be specified here is the number of data, and not a data size.

3. Selecting a data queue waiting queue

[(Definition format)] Symbol

[(Definition range)] TA_TFIFO or TA_TRPI

[(Default value)] TA_TFIFO

Select a method in which tasks wait for data queue transmission. If TA_TFIFO is selected, tasks are enqueued in order of FIFO. If TA_TRPI is selected, tasks are enqueued in order of priority beginning with the one that has the highest priority.

[(Long data queue definition)]

This definition must always be set when the long data queue function is to be used.

<< Format >>

```
// Vdataqueue Definition
vdataqueue [ ID No. ] {
    name           = ID name ;
    buffer_size    = Number of data queues ;
    wait_queue     = Select data queue waiting queue ;
};
:
:
```

The ID number must be in the range 1 to 255. The ID number can be omitted. If omitted, ID numbers are automatically assigned in order of numbers beginning with the smallest.

<< Content >>

For each long data queue ID number, define the items described below.

1. ID name

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	None

Define the name by which the short data queue is specified in a program.

2. Number of data

[(Definition format)]	Numeric Value
[(Definition range)]	0 to 0x1FFF
[(Default value)]	0

Specify the number of data that can be transmitted. What should be specified here is the number of data, and not a data size.

3. Selecting a data queue waiting queue

[(Definition format)]	Symbol
[(Definition range)]	TA_TFIFO or TA_TRPI
[(Default value)]	TA_TFIFO

Select a method in which tasks wait for short data queue transmission. If TA_TFIFO is selected, tasks are enqueued in order of FIFO. If TA_TPRI is selected, tasks are enqueued in order of priority beginning with the one that has the highest priority.

[(Mailbox definition)]

This definition must always be set when the mailbox function is to be used.

<< Format >>

```
// Mailbox Definition
mailbox[ ID No. ] {
    name           = ID name ;
    wait_queue     = Select mailbox waiting queue ;
    message_queue  = Select message queue ;
    max_pri        = Maximum message priority ;
};
:
:
```

The ID number must be in the range 1 to 255. The ID number can be omitted. If omitted, ID numbers are automatically assigned in order of numbers beginning with the smallest.

<< Content >>

For each mailbox ID number, define the items described below.

1. ID name

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	None

Define the name by which the mailbox is specified in a program.

2. Select mailbox waiting queue

[(Definition format)]	Symbol
[(Definition range)]	TA_TFIFO or TA_TPRI
[(Default value)]	TA_TFIFO

Select a method in which tasks wait for the mailbox. If TA_TFIFO is selected, tasks are enqueued in order of FIFO. If TA_TPRI is selected, tasks are enqueued in order of priority beginning with the one that has the highest priority.

3. Select message queue

[(Definition format)]	Symbol
[(Definition range)]	TA_MFIFO or TA_MPRI
[(Default value)]	TA_MFIFO

Select a method by which a message queue of the mailbox is selected. If TA_MFIFO is selected, messages are enqueued in order of FIFO. If TA_MPRI is selected, messages are enqueued in order of priority beginning with the one that has the highest priority.

4. Maximum message priority

[(Definition format)]	Numeric Value
[(Definition range)]	1 to "maximum value of message priority" that was specified in "definition of maximum number of items"
[(Default value)]	1

Specify the maximum priority of message in the mailbox.

[(Fixed-size memory pool definition)]

This definition must always be set when the fixed-size memory pool function is to be used.

<< Format >>

```
// Fixed Memory pool Definition
memorypool[ ID No. ]{
    name          = ID name ;
    section       = Section Name ;
    num_block     = Number of blocks in memory pool ;
    siz_block     = Block size of Memory pool ;
    siz_block     = Select memory pool waiting queue ;
};
```

The ID number must be in the range 1 to 255. The ID number can be omitted. If omitted, ID numbers are automatically assigned in order of numbers beginning with the smallest.

<< Content >>

For each memory pool ID number, define the items described below.

1. ID name

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	None

Define the name by which the memory pool is specified in a program.

2. Section name

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	MR_HEAP

Define the name of the section in which the memory pool is located. The section defined here must always have an area allocated for it in the section file (asm_sec.inc or c_sec.inc).

If no section names are defined, the memory pool is located in the MR_HEAP section.

3. Number of block

[(Definition format)]	Numeric value
[(Definition range)]	1 to 65,535
[(Default value)]	1

Define the total number of blocks that comprise the memory pool.

4. Size (in bytes)

[(Definition format)]	Numeric value
[(Definition range)]	2 to 65,535
[(Default value)]	256

Define the size of the memory pool per block. The RAM size to be used as a memory pool is determined by this definition: (number of blocks) x (size) in bytes.

5. Selecting a memory pool waiting queue

[(Definition format)]	Symbol
[(Definition range)]	TA_TFIFO or TA_TPRI
[(Default value)]	TA_TFIFO

Select a method in which tasks wait for acquisition of the fixed-size memory pool. If TA_TFIFO is selected, tasks are enqueued in order of FIFO. If TA_TPRI is selected, tasks are enqueued in order of priority beginning with the one that has the highest priority.

[(Variable-size memory pool definition)]

This definition is necessary to use Variable-size memory pool function.

<< Format >>

```
// Variable-Size Memory pool Definition
variable_memorypool[ ID No. ]{
    name           = ID Name ;
    max_memsize    = The maximum memory block size to be allocated ;
    mpl_section    = Section name ;
    heap_size      = Memory pool size ;
};
```

The ID number must be in the range 1 to 255. The ID number can be omitted. If omitted, ID numbers are automatically assigned in order of numbers beginning with the smallest.

1. ID name

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	None

Define the name by which the memory pool is specified in a program.

2. The maximum memory block size to be allocated

[(Definition format)]	Numeric value
[(Definition range)]	1 to 65520
[(Default value)]	None

Specify, within an application program, the maximum memory block size to be allocated.

3. Section name

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	MR_HEAP

Define the name of the section in which the memory pool is located. The section defined here must always have an area allocated for it in the section file (asm_sec.inc or c_sec.inc).

If no section names are defined, the memory pool is located in the MR_HEAP section.

4. Memory pool size

[(Definition format)]	Numeric value
[(Definition range)]	16 to 0xFFFF
[(Default value)]	None

Specify a memory pool size.

Round off a block size you specify to the optimal block size among the four block sizes, and acquires memory having the rounded-off size from the memory pool.

The following equations define the block sizes:

$$\begin{aligned}a &= (((\text{max_memsize} + (X - 1)) / (X \times 8)) + 1) \times 8 \\b &= a \times 2 \\c &= a \times 4 \\d &= a \times 8\end{aligned}$$

max_memsize: the value specified in the configuration file

X: data size for block control (8 byte per a block control)

Variable-size memory pool function needs 8 byte RAM area per a block control. Memory pool size needs a size more than a, b, c or d that can be stored max_memsize + 8.

[[Cyclic handler definition]]

This definition is necessary to use Cyclic handler function.

<< Format >>

```
// Cyclic Handler Definition
cyclic_hand[ ID No. ]{
    name           = ID name ;
    interval_counter = Activation cycle ;
    start          = TA STA attribute ;
    phsatr         = TA PHS attribute ;
    phs_counter    = Activation phase ;
    entry_address  = Start address ;
    exitf          = Extended information ;
};
:
:
```

The ID number must be in the range of 1 to 255. The ID number can be omitted.

If omitted, numbers are automatically assigned sequentially beginning with the smallest.

<< Content >>

Define the following for each cyclic handler ID number.

1. ID name

[[Definition format]] Symbol

[[Definition range]] None

[[Default value]] None

Define the name by which the memory pool is specified in a program.

2. Activation cycle

[[Definition format]] Numeric value

[[Definition range]] 1 to 0x7FFFFFFF

[[Default value]] None

Define the activation cycle at which time the cyclic handler is activated periodically. The activation cycle here must be defined in the same unit of time as the system clock's unit time that is defined in system clock definition item. If you want the cyclic handler to be activated at 1-second intervals, for example, the activation cycle here must be set to 1000.

3. TA_STA attribute

[[Definition format]] Symbol

[[Definition range]] ON or OFF

[[Default value]] OFF

Specify the TA_STA attribute of the cyclic handler. If ON is selected, the TA_STA attribute is added; if OFF is selected, the TA_STA attribute is not added.

4. TA_PHS attribute

[[Definition format]] Symbol

[[Definition range]] ON or OFF

[[Default value]] OFF

Specify the TA_PHS attribute of the cyclic handler. If ON is selected, the TA_PHS attribute is added; if OFF is selected, the TA_PHS attribute is not added.

5. Activation phase

[(Definition format)]	Numeric value
[(Definition range)]	0 to 0x7FFFFFFF
[(Default value)]	None

Define the activation phase of the cyclic handler. The time representing this startup phase must be defined in ms units.

6. Start Address

[(Definition format)]	Symbol or Function Name
[(Definition range)]	None
[(Default value)]	None

Define the start address of the cyclic handler.

Note that the function name defined here will have the declaration statement shown below output to the kernel_id.h file.

```
#pragma CYCHANDLER function name
```

7. Extended information

[(Definition format)]	Numeric value
[(Definition range)]	0 to 0xFFFF
[(Default value)]	0

Define the extended information of the cyclic handler. This information is passed as argument to the cyclic handler when it starts.

[(Alarm handler definition)]

This definition is necessary to use Alarm handler function.

<< Format >>

```
// Alarm Handler Definition
alarm_handl[ ID No. ]{
    name      = ID name;
    entry_address = Start address;
    exitf      = Extended information;
};
:
:
```

The ID number must be in the range of 1 to 255. The ID number can be omitted.

If omitted, numbers are automatically assigned sequentially beginning with the smallest.

<< Content >>

Define the following for each alarm handler ID number.

1. ID name

[(Definition format)]	Symbol
[(Definition range)]	None
[(Default value)]	None

Define the name by which the alarm handler is specified in a program.

2. Start address

[(Definition format)] Symbol or Function Name

[(Definition range)] None

Define the start address of the alarm handler. The function name defined here causes the following declaration statement to be output in the kernel_id.h file.

3. Extended information

[(Definition format)] Numeric value

[(Definition range)] 0 to 0xFFFF

[(Default value)] 0

Define the extended information of the alarm handler. This information is passed as argument to the alarm handler when it starts.

[[Interrupt vector definition]]

This definition is necessary to use Interrupt function.

<< Format >>

```
// Interrupt Vector Definition
interrupt_vector[ Vector No. ] {
    os_int          = Kernel-managed (OS dependent) interrupt handler;
    entry_address   = Start address;
    pragma_switch   = Switch passed to PRAGMA extended function;
};
:
:
```

The vector number can be written in the range of 0 to 63 and 247 to 255. However, whether or not the defined vector number is valid depends on the microcomputer used

The relationship between interrupt causes and interrupt vector numbers for the M16C/80 series is shown in Table 8.3 Interrupt Causes and Vector Numbers.

Configurator can't create an Initialize routine (interrupt control register, interrupt causes etc.) for this defined interrupt. You need to create that.

<< Content >>

1. Kernel (OS dependent) interrupt handler

[[Definition format]] Symbol

[[Definition range]] YES or NO

Define whether the handler is a kernel(OS dependent) interrupt handler. If it is a kernel(OS dependent) interrupt handler, specify YES; if it is a non-kernel(OS independent) interrupt handler, specify No.

If this item is defined as YES, the declaration statement shown below is output to the kernel_id.h file.

```
#pragma INTHANDLER /V4 function name
```

If this item is defined as NO, the declaration statement shown below is output to the kernel_id.h file.

```
#pragma INTERRUPT /V4 function name
```

2. Start address

[[Definition format]] Symbol or function name

[[Definition range]] None

[[Default value]] __SYS_DMY_INH

Define the entry address of the interrupt handler. When written in the C language, add () at the end or at the beginning of the function name you have defined.

3. Switch passed to PRAGMA extended function

[[Definition format]] Symbol

[[Definition range]] E, F, or B

[[Default value]] None

Specify the switch to be passed to #pragma INTHANDLER or #pragma INTERRUPT. If "E" is specified, the "/E" switch is assumed, in which case multiple interrupts (another interrupt within an interrupt) are enabled. If "F" is specified, the "/F" switch is assumed, in which case the FREIT instruction is output at return from the interrupt handler. If "B" is specified, the "/B" switch is assumed, in which case register bank 1 is specified.

Two or more switches can be specified at the same time. For kernel (OS dependent) interrupt handlers, however, only the "E" switch can be specified. For non-kernel (OS independent) interrupt handlers, the "E," "F," and "B" switches can be specified, subject to a limitation that "E" and "B" cannot be specified at the same time.

[Precautions]

1. Regarding the method for specifying a register bank

A kernel (OS dependent) interrupt handler that uses register bank 1 cannot be written in C language. Such an interrupt handler can only be written in assembly language. When writing in assembly language, make sure the statements at the entry and exit of the interrupt handler are written as shown below.

(Always be sure to clear the B flag before issuing the ret_int service call.)

Example: interrupt;

```
fset      B
fclr      B
ret_int
```

Internally in the MR30 kernel, register banks are not switched over.

2. Regarding the method for specifying a high-speed interrupt

To ensure an effective use of high-speed interrupts, make sure the registers of register bank 1 are used in the high-speed interrupt. Note also that high-speed interrupts cannot be used for the kernel (OS dependent) interrupt handler.

3. Do not use NMI and watchdog timer interrupts in the kernel (OS dependent) interrupt.

Table 8.3 Interrupt Causes and Vector Numbers

Interrupt cause	Interrupt vector number	Section Name
DMA0	8	INTERRUPT_VECTOR
DMA1	9	INTERRUPT_VECTOR
DMA2	10	INTERRUPT_VECTOR
DMA3	11	INTERRUPT_VECTOR
Timer A0	12	INTERRUPT_VECTOR
Timer A1	13	INTERRUPT_VECTOR
Timer A2	14	INTERRUPT_VECTOR
Timer A3	15	INTERRUPT_VECTOR
Timer A4	16	INTERRUPT_VECTOR
UART0 transmit	17	INTERRUPT_VECTOR
UART0 receive	18	INTERRUPT_VECTOR
UART1 transmit	19	INTERRUPT_VECTOR
UART1 receive	20	INTERRUPT_VECTOR
Timer B0	21	INTERRUPT_VECTOR
Timer B1	22	INTERRUPT_VECTOR
Timer B2	23	INTERRUPT_VECTOR
Timer B3	24	INTERRUPT_VECTOR
Timer B4	25	INTERRUPT_VECTOR
INT5 external interrupt	26	INTERRUPT_VECTOR
INT4 external interrupt	27	INTERRUPT_VECTOR
INT3 external interrupt	28	INTERRUPT_VECTOR
INT2 external interrupt	29	INTERRUPT_VECTOR
INT1 external interrupt	30	INTERRUPT_VECTOR
INT0 external interrupt	31	INTERRUPT_VECTOR
Timer B5	32	INTERRUPT_VECTOR
UART2 transmit /NACK	33	INTERRUPT_VECTOR
UART2 receive /ACK	34	INTERRUPT_VECTOR
UART3 transmit /NACK	35	INTERRUPT_VECTOR
UART3 receive /ACK	36	INTERRUPT_VECTOR
UART4 transmit /NACK	37	INTERRUPT_VECTOR
UART4 receive /ACK	38	INTERRUPT_VECTOR
BUS conflict (UART2)	39	INTERRUPT_VECTOR
BUS conflict (UART3)	40	INTERRUPT_VECTOR
BUS conflict (UART4)	41	INTERRUPT_VECTOR
A/D	42	INTERRUPT_VECTOR
Key input interrupt	43	INTERRUPT_VECTOR
User Software interrupt	44	INTERRUPT_VECTOR
:		INTERRUPT_VECTOR
:		INTERRUPT_VECTOR
User Software interrupt	54	INTERRUPT_VECTOR
Software interrupt for MR30	55	INTERRUPT_VECTOR
User Software interrupt	56	INTERRUPT_VECTOR
User Software interrupt	57	INTERRUPT_VECTOR
Software interrupt for MR30	58	INTERRUPT_VECTOR
:		INTERRUPT_VECTOR
Software interrupt for MR30	62	INTERRUPT_VECTOR
Software interrupt for MR30	63	INTERRUPT_VECTOR
Undefined instruction	247	FIX_INTERRUPT_VECTOR
Over flow	248	FIX_INTERRUPT_VECTOR
BRK instruction	249	FIX_INTERRUPT_VECTOR
Address match	250	FIX_INTERRUPT_VECTOR
		FIX_INTERRUPT_VECTOR
Watch dog timer	252	FIX_INTERRUPT_VECTOR
		FIX_INTERRUPT_VECTOR
NMI	254	FIX_INTERRUPT_VECTOR
Reset	255	FIX_INTERRUPT_VECTOR

8.1.3 Configuration File Example

The following is the configuration file example.

```
1 ///////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////
2 //
3 //   kernel.cfg : building file for MR30 Ver.4.00
4 //
5 //   Generated by M3T-MR30 GUI Configurator at 2005/02/28 19:01:20
6 //
7 ///////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////
8
9 // system definition
10 system{
11     stack_size      = 256;
12     sysm_IPL = 4;
13     message_pri     = 64;
14     timeout        = NO;
15     task_pause      = NO;
16     tick_nume = 10;
17     tick_deno = 1;
18 };
19
20 // max definition
21 maxdefine{
22     max_task = 3;
23     max_flag = 4;
24     max_sem = 3;
25     max_dtq = 3;
26     max_mbx = 4;
27     max_mpf = 3;
28     max_mpl = 3;
29     max_cyh = 4;
30     max_alh = 2;
31 };
32
33 // system clock definition
34 clock{
35     timer_clock      = 20.000000MHz;
36     timer           = A0;
37     IPL             = 3;
38 };
39
40 task[] {
41     entry_address    = task1();
42     name             = ID_task1;
43     stack_size       = 256;
44     priority         = 1;
45     initial_start    = OFF;
46     exinf            = 0x0;
47 };
48 task[] {
49     entry_address    = task2();
50     name             = ID_task2;
51     stack_size       = 256;
52     priority         = 5;
53     initial_start    = ON;
54     exinf            = 0xFFFF;
55 };
56 task[3] {
57     entry_address    = task3();
58     name             = ID_task3;
59     stack_size       = 256;
60     priority         = 7;
61     initial_start    = OFF;
62     exinf            = 0x0;
63 };
64
65 flag[] {
66     name             = ID_flg1;
67     initial_pattern  = 0x00000000;
68     wait_queue       = TA_TFIFO;
69     clear_attribute  = NO;
70     wait_multi       = TA_WSGL;
71 };
72 flag[1] {
73     name             = ID_flg2;
74     initial_pattern  = 0x00000001;
75     wait_queue       = TA_TFIFO;
```

```

76     clear_attribute = NO;
77     wait_multi      = TA_WMUL;
78 };
79 flag[2]{
80     name          = ID_flg3;
81     initial_pattern = 0x0000ffff;
82     wait_queue     = TA_TPRI;
83     clear_attribute = YES;
84     wait_multi      = TA_WMUL;
85 };
86 flag[] {
87     name          = ID_flg4;
88     initial_pattern = 0x00000008;
89     wait_queue     = TA_TPRI;
90     clear_attribute = YES;
91     wait_multi      = TA_WSGL;
92 };
93
94 semaphore[] {
95     name          = ID_seml;
96     wait_queue     = TA_TFIFO;
97     initial_count  = 0;
98     max_count= 10;
99 };
100 semaphore[2]{
101     name          = ID_seml;
102     wait_queue     = TA_TFIFO;
103     initial_count  = 5;
104     max_count= 10;
105 };
106 semaphore[] {
107     name          = ID_seml;
108     wait_queue     = TA_TPRI;
109     initial_count  = 255;
110     max_count= 255;
111 };
112
113 dataqueue[] {
114     name          = ID_dtq1;
115     wait_queue     = TA_TFIFO;
116     buffer_size    = 10;
117 };
118 dataqueue[2]{
119     name          = ID_dtq2;
120     wait_queue     = TA_TPRI;
121     buffer_size    = 5;
122 };
123 dataqueue[3]{
124     name          = ID_dtq3;
125     wait_queue     = TA_TFIFO;
126     buffer_size    = 256;
127 };
128
129 mailbox[] {
130     name          = ID_mbx1;
131     wait_queue     = TA_TFIFO;
132     message_queue  = TA_MFIFO;
133     max_pri       = 4;
134 };
135 mailbox[] {
136     name          = ID_mbx2;
137     wait_queue     = TA_TPRI;
138     message_queue  = TA_MPRI;
139     max_pri       = 64;
140 };
141 mailbox[] {
142     name          = ID_mbx3;
143     wait_queue     = TA_TFIFO;
144     message_queue  = TA_MPRI;
145     max_pri       = 5;
146 };
147 mailbox[4]{
148     name          = ID_mbx4;
149     wait_queue     = TA_TPRI;
150     message_queue  = TA_MFIFO;
151     max_pri       = 6;
152 };
153
154 memorypool[] {
155     name          = ID_mpf1;

```

```

156     wait_queue      = TA_TFIFO;
157     section         = MR_RAM;
158     siz_block= 16;
159     num_block= 5;
160 };
161 memorypool[2]{
162     name             = ID_mpf2;
163     wait_queue      = TA_TPRI;
164     section         = MR_RAM;
165     siz_block= 32;
166     num_block= 4;
167 };
168 memorypool[3]{
169     name             = ID_mpf3;
170     wait_queue      = TA_TFIFO;
171     section         = MPF3;
172     siz_block= 64;
173     num_block= 256;
174 };
175
176 variable_memorypool[] {
177     name             = ID_mpl1;
178     max_memsize      = 8;
179     heap_size= 16;
180 };
181 variable_memorypool[] {
182     name             = ID_mpl2;
183     max_memsize      = 64;
184     heap_size= 256;
185 };
186 variable_memorypool[3] {
187     name             = ID_mpl3;
188     max_memsize      = 256;
189     heap_size= 1024;
190 };
191
192 cyclic_hand[] {
193     entry_address     = cyh1();
194     name              = ID_cyh1;
195     exinf             = 0x0;
196     start             = ON;
197     phsatr            = OFF;
198     interval_counter  = 0x1;
199     phs_counter       = 0x0;
200 };
201 cyclic_hand[] {
202     entry_address     = cyh2();
203     name              = ID_cyh2;
204     exinf             = 0x1234;
205     start             = OFF;
206     phsatr            = ON;
207     interval_counter  = 0x20;
208     phs_counter       = 0x10;
209 };
210 cyclic_hand[] {
211     entry_address     = cyh3;
212     name              = ID_cyh3;
213     exinf             = 0xFFFF;
214     start             = ON;
215     phsatr            = OFF;
216     interval_counter  = 0x20;
217     phs_counter       = 0x0;
218 };
219 cyclic_hand[4] {
220     entry_address     = cyh4();
221     name              = ID_cyh4;
222     exinf             = 0x0;
223     start             = ON;
224     phsatr            = ON;
225     interval_counter  = 0x100;
226     phs_counter       = 0x80;
227 };
228
229 alarm_hand[] {
230     entry_address     = alm1();
231     name              = ID_alm1;
232     exinf             = 0xFFFF;
233 };
234 alarm_hand[2] {
235     entry_address     = alm2;

```

```
236     name      = ID_alm2;
237     exinf      = 0x12345678;
238 };
239
240
241 //
242 // End of Configuration
243 //
```

8.2 Configurator Execution Procedures

8.2.1 Configurator Overview

The configurator is a tool that converts the contents defined in the configuration file into the assembly language include file, etc. Figure 8.1 outlines the operation of the configurator.

When used on HEW, the configurator is automatically started, and an application program is built.

1. Executing the configurator requires the following input files:

- Configuration file (XXXX.cfg)
This file contains description of the system's initial setup items. It is created in the current directory.
- Default configuration file (default.cfg)
This file contains default values that are referenced when settings in the configuration file are omitted. This file is placed in the directory indicated by environment variable "LIB30" or the current directory. If this file exists in both directories, the file in the current directory is prioritized over the other.
- makefile template files (makefile.dos, makefile, Makefile)
This file is used as a template file when generating makefile.⁵⁵ (Refer to Section 6.2.4)
- include template file (mr30.inc, sys_ram.inc)
This file serves as the template file of include file "mr30.inc" and "sys_ram.inc". It resides in the directory indicated by environment variable "LIB30."
- MR30 version file (version)
This file contains description of MR30's version. It resides in the directory indicated by environment variable "LIB30." The configurator reads in this file and outputs MR30's version information to the startup message.

2. When the configurator is executed, the files listed below are output.

Do not define user data in the files output by the configurator. Starting up the configurator after entering data definitions may result in the user defined data being lost.

- System data definition file (sys_rom.inc, sys_ram.inc)
This file contains definition of system settings.
- Include file (mr30.inc)
This is an include file for the assembly language.
- System generation procedure description file (makefile)
This file is used to generate the system automatically.

⁵⁵ This makefile is a system generation procedure description file that can be processed by UNIX standard make commands or those conforming to UNIX standards.

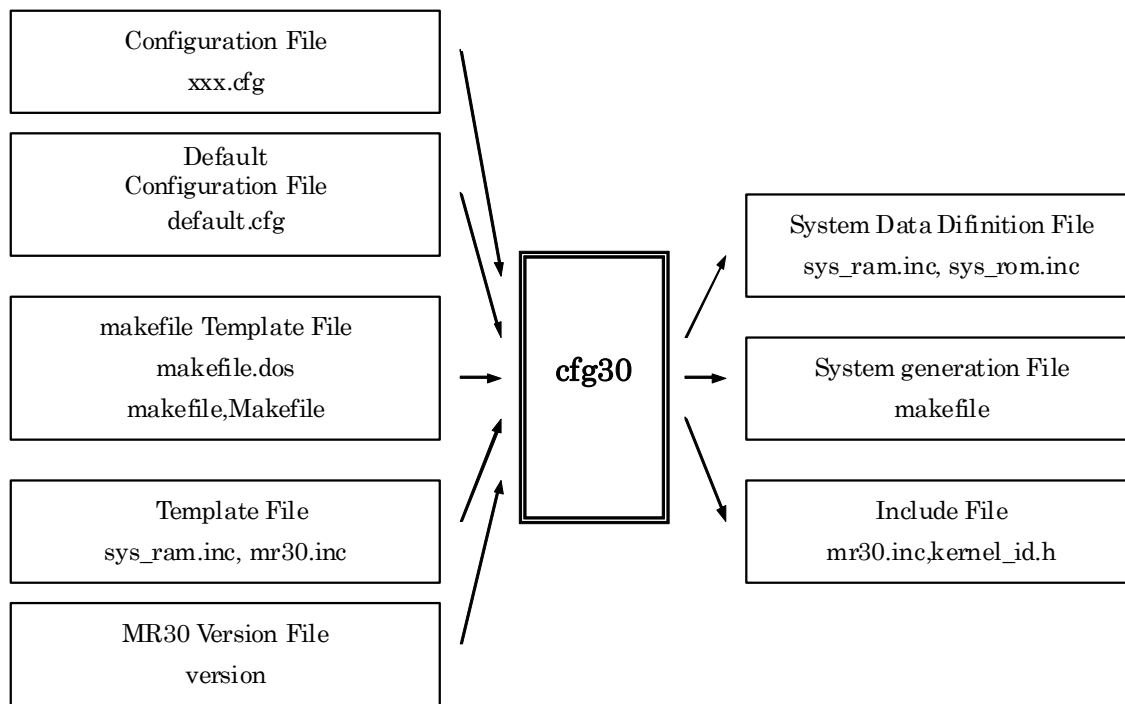


Figure 8.1 The operation of the Configurator

8.2.2 Setting Configurator Environment

Before executing the configurator, check to see if the environment variable "LIB30" is set correctly.

The configurator cannot be executed normally unless the following files are present in the directory indicated by the environment variable "LIB30":

- Default configuration file (default.cfg)
This file can be copied to the current directory for use. In this case, the file in the current directory is given priority.
- System RAM area definition database file (sys_ram.inc)
- mr30.inc template file (mr30.inc)
- Section definition file(c_sec.inc or asm_sec.inc)
- Startup file(crt0mr.a30 or start.a30)
- makefile template file(makefile.dos)
- MR30 version file(version)

8.2.3 Configurator Start Procedure

Start the configurator as indicated below.

```
A> cfg30 [-vmV] Configuration file name
```

Normally, use the extension .cfg for the configuration file name.

Command Options

-v Option

Displays the command option descriptions and detailed information on the version.

-V Option

Displays the information on the files generated by the command.

-m Option

Creates the UNIX standard or UNIX-compatible system generation procedure description file (makefile). If this option is not selected, makefile creation does not occur.⁵⁶

If the startup file (crt0mr.a30 or start.a30) and the section definition file are not in the current directory, the configurator copies them to the current directory from the directory indicated by the environment variable "LIB30".

8.2.4 makefile generate Function

The configurator follows the procedure below to generate makefile.

1. Examine the source file's dependency relationship.

Assuming that the files bearing extensions .c and .a30 in the current directory respectively to be the C language and the assembly language files, the configurator examines the dependency relationship of the files to be included by those.

Consequently, observe the following precautions when creating a source file:

- ◆ The source file must be placed in the current directory.
- ◆ Use the extension '.c' for the C language source file and '.a30' for the assembly language source file.

2. Write the file dependency relationship to makefile

Using "makefile" or "Makefile" in the current directory or "makefile.dos" in the directory indicated by the environment variable "LIB30" as a template file, the configurator creates "makefile" in the current directory.

8.2.5 Precautions on Executing Configurator

The following lists the precautions to be observed when executing the configurator:

- If you have re-run the configurator, always be sure to execute make clean or delete all object files (extension .r30) and execute the make command. In this case, an error may occur during linking.
- Do not modify the startup program name and the section definition file name. Otherwise, an error may be encountered when executing the configurator.
- The configurator cfg30 can only generate UNIX standard makefile or one conforming to UNIX standards. Namely, it does not generate MS-DOS standard makefile.

8.2.6 Configurator Error Indications and Remedies

If any of the following messages is displayed, the configurator is not normally functioning. Therefore, correct the configuration file as appropriate and then execute the configurator again.

Error messages

cfg30 Error : syntax error near line xxx (xxxx.cfg)

There is a syntax error in the configuration file.

⁵⁶ UNIX standard "makefile" and one conforming to UNIX standards have a function to delete the work file by a "clean" target. Namely, if you want to delete the object file generated by the make command, for example, enter the following:
> make clean

cfg30 Error : not enough memory

Memory is insufficient.

cfg30 Error : illegal option --> <x>

The configurator's command option is erroneous.

cfg30 Error : illegal argument --> <xx>

The configurator's startup format is erroneous.

cfg30 Error : can't write open <XXXX>

The XXXX file cannot be created. Check the directory attribute and the remaining disk capacity available.

cfg30 Error : can't open <XXXX>

The XXXX file cannot be accessed. Check the attributes of the XXXX file and whether it actually exists.

cfg30 Error : can't open version file

The MR30 version file "version" cannot be found in the directory indicated by the environment variable "LIB30".

cfg30 Error : can't open default configuration file

The default configuration file cannot be accessed. "default.cfg" is needed in the current directory or directory "LIB30" specifying.

cfg30 Error : can't open configuration file <xxxx.cfg>

The configuration file cannot be accessed. Check that the file name has been properly designated.

cfg30 Error : illegal XXXX --> <xx> near line xxx (xxxx.cfg)

The value or ID number in definition item XXXX is incorrect. Check the valid range of definition.

cfg30 Error : Unknown XXXX --> <xx> near line xx (xxxx.cfg)

The symbol definition in definition item XXXX is incorrect. Check the valid range of definition.

cfg30 Error : too big XXXX's ID number --> <xx> (xxxx.cfg)

A value is set to the ID number in XXXX definition that exceeds the total number of objects defined. The ID number must be smaller than the total number of objects.

cfg30 Error : too big task[x]'s priority --> <xx> near line xxx (xxxx.cfg)

The initial priority in task definition of ID number x exceeds the priority in system definition.

cfg30 Error : too big IPL --> <xx> near line xxx (xxxx.cfg)

The system clock interrupt priority level for system clock definition item exceeds the value of IPL within service call of system definition item.

cfg30 Error : system timer's vector <x> conflict near line xxx

A different vector is defined for the system clock timer interrupt vector. Confirm the vector No.x for interrupt vector definition.

cfg30 Error : XXXX is not defined (xxxx.cfg)

"XXXX" item must be set in your configuration file.

cfg30 Error : system's default is not defined

These items must be set in the default configuration file.

cfg30 Error : double definition <XXXX> near line xxx (xxx.cfg)

XXXX is already defined. Check and delete the extra definition.

cfg30 Error : double definition XXXX[x] near line xxx (default.cfg)

cfg30 Error : double definition XXXX[x] near line xxx (xxxx.cfg)

The ID number in item XXXX is already registered. Modify the ID number or delete the extra definition.

cfg30 Error : you must define XXXX near line xxx (xxxx.cfg)

XXXX cannot be omitted.

cfg30 Error : you must define SYMBOL near line xxx (xxxx.cfg)

This symbol cannot be omitted.

cfg30 Error : start-up-file (XXXX) not found

The start-up-file XXXX cannot be found in the current directory. The startup file "start.a30" or "crt0mr.a30" is required in the current directory.

cfg30 Error : bad start-up-file(XXXX)

There is unnecessary start-up-file in the current directory.

cfg30 Error : no source file

No source file is found in the current directory.

cfg30 Error : zero divide error near line xxx (xxxx.cfg)

A zero divide operation occurred in some arithmetic expression.

cfg30 Error : task[X].stack_size must set XX or more near line xxx (xxxx.cfg)

You must set more than XX bytes in task[x].stack_size.

cfg30 Error : "R0" must exist in task[x].context near line xxx (xxxx.cfg)

You must select R0 register in task[x].context.

cfg30 Error : can't define address match interrupt definition for Task Pause Function near line xxx (xxxx.cfg)

Another interrupt is defined in interrupt vector definition needed by Task Pause Function.

cfg30 Error : Set system timer [system.timeout = YES] near line xxx (xxxx.cfg)

Set clock.timer symbol except "NOTIMER".

cfg30 Error : Initial Start Task not defined

No initial startup task is defined in the configuration file.

Warning messages

The following message are a warning. A warning can be ignored providing that its content is understood.

cfg30 Warning : system is not defined (xxxx.cfg)

cfg30 Warning : system.XXXX is not defined (xxxx.cfg)

System definition or system definition item XXXX is omitted in the configuration file.

cfg30 Warning : system.message_size is not defined (xxxx.cfg)

The message size definition is omitted in the system definition. Please specify message size (16 or 32) of the Mailbox function.

cfg30 Warning : task[x].XXXX is not defined near line xxx (xxxx.cfg)

The task definition item XXXX in ID number is omitted.

cfg30 Warning : Already definition XXXX near line xxx (xxxx.cfg)

XXXX has already been defined. The defined content is ignored, check to delete the extra definition.

cfg30 Warning : interrupt_vector[x]'s default is not defined (default.cfg)

The interrupt vector definition of vector number x in the default configuration file is missing.

cfg30 Warning : interrupt_vector[x]'s default is not defined near line xxx (xxxx.cfg)

The interrupt vector of vector number x in the configuration file is not defined in the default configuration file.

cfg30 Warning : system.stack_size is an uneven number near line xxx

cfg30 Warning : task[x].stack_size is an uneven number near line xxx

Please set even size in system.stack_size or task[x].stack_size.

Other messages

The following message are a warning message that is output only when generating makefile. The configurator skips the sections that have caused such a warning as it generates makefile.

cfg30 Error : xxxx (line xxx): include format error.

The file read format is incorrect. Rewrite it to the correct format.

cfg30 Warning : xxxx (line xxx): can't find <XXXX>

cfg30 Warning : xxxx (line xxx): can't find "XXXX"

The include file XXXX cannot be found. Check the file name and whether the file actually exists.

cfg30 Warning : over character number of including path-name

The path-name of include file is longer than 255 characters.

8.2.7 Editing makefile

Here you edit makefile the configurator generated, and set compilation options, libraries, and so on. The procedure for setting them is given below.

1. NC30WA command options

You define command options of the C compiler in "CFLAGS". Be sure to define the "-c" option.

2. AS30 command options

You define command options of the assembler in "ASFLAGS".

3. LN30 command options

You define command options of the linker in "LDFLAGS". There are no particular options you need to specify.

4. Specifying libraries

You define libraries in "LIBS".

The configurator picks up necessary libraries from the configuration file and from the current directory, and defines them in 'LIBS'. Either add or delete libraries when necessary.

If you create the own makefile for MR30 system, be sure to describe the following 4 items in the makefile.

1. MR30 Library Specifications

you must specify libraries mr30.lib and c30mr.lib.

2. Assemble Option Specifications

Make sure to specify assemble option "-F" when assembling the source file, described in the assemble language, which issues the service call.

3. Process Before Linking

Before executing a link, make sure to execute the following two processes, in the order as are listed.

1. mkmrtbl

2. as30 mrtable.a30

MR30 comes equipped with the mkmrtbl utility. Execute it in the directory where Configurator (cfg30) executes. If that is not the same directory where the service call file (XXX.mrc) and the r30 file are output by C Compiler or Assembler, you need to specify the directory at parameters of mr30tbl as following. .

Ex) mkmrtbl outputdir

If you use Service call Issue Function on Renesas debugger, you need to add \$(LIB30) at parameter of mkmrtbl.

Once mkmrtbl is executed, the mrtable.a30 file will be created. After these two processes are completed, execute the link including the mrtable.r30 file.

8.2.8 About an error when you execute make

The following warning message of mr30tbl is displayed when you execute make.

mr30tbl Warning : You need not specify systime.timeout YES in configuration file

Unless the following service calls are used, there is no need to set "Timeout=YES" in the system definition of a configuration file.

tslp_tsk, twai_flg, trcv_mbx, twai_sem, tsnd_dtq, trcv_dtq, vtsnd_dtq, vtrcv_dtq

This warning will disappear when you define "TIMEOUT = NO;" of the system definition in your configuration file.

If you don't use the following service call, you had better to define "TIMEOUT = NO;" in the configuration file

9. Sample Program Description

9.1 Overview of Sample Program

As an example application of MR30, the following shows a program that outputs a string to the standard output device from one task and another alternately.

Table 9.1 Functions in the Sample Program

Function Name	Type	ID No.	Priority	Description
main()	Task	1	1	Starts task1 and task2.
task1()	Task	2	2	Outputs "task1 running."
task2()	Task	3	3	Outputs "task2 running."
cyh1()	Handler	1		Wakes up task1().

The content of processing is described below.

- The main task starts task1, task2, and cyh1, and then terminates itself.
- task1 operates in order of the following.
 1. Gets a semaphore.
 2. Goes to a wakeup wait state.
 3. Outputs "task1 running."
 4. Frees the semaphore.
- task2 operates in order of the following.
 1. Gets a semaphore.
 2. Outputs "task2 running."
 3. Frees the semaphore.

cyh1 starts every 100 ms to wake up task1.

9.2 Program Source Listing

```
1 /*****
2 *
3 *
4 * COPYRIGHT(C) 2003(2005) RENESAS TECHNOLOGY CORPORATION
5 * AND RENESAS SOLUTIONS CORPORATION ALL RIGHTS RESERVED
6 *
7 *
8 * $Id: demo.c,v 1.2 2005/06/15 05:29:02 inui Exp $
9 *****/
10
11 #include <itron.h>
12 #include <kernel.h>
13 #include "kernel_id.h"
14 #include <stdio.h>
15
16
17 void main( VP_INT stacd )
18 {
19     sta_tsk(ID_task1,0);
20     sta_tsk(ID_task2,0);
21     sta_cyc(ID_cyh1);
22 }
23 void task1( VP_INT stacd )
24 {
25     while(1){
26         wai_sem(ID_sem1);
27         slp_tsk();
28         printf("task1 running\n");
29         sig_sem(ID_sem1);
30     }
31 }
32
33 void task2( VP_INT stacd )
34 {
35     while(1){
36         wai_sem(ID_sem1);
37         printf("task2 running\n");
38         sig_sem(ID_sem1);
39     }
40 }
41
42 void cyh1( VP_INT exinf )
43 {
44     iwup_tsk(ID_task1);
45 }
46
```


9.3 Configuration File

```
1 //*****
2 //
3 //  COPYRIGHT(C) 2003,2005 RENESAS TECHNOLOGY CORPORATION
4 //  AND RENESAS SOLUTIONS CORPORATION ALL RIGHTS RESERVED
5 //
6 //      MR30 System Configuration File.
7 //      "$Id: smp.cfg,v 1.5 2005/06/15 05:41:54 inui Exp $"
8 //
9 //*****
10
11 // System Definition
12 system{
13     stack_size      = 1024;
14     priority        = 10;
15     system_IPL      = 4;
16     task_pause      = NO;
17     timeout         = YES;
18     tic_nume        = 1;
19     tic_deno        = 1;
20     message_pri     = 255;
21 };
22 //System Clock Definition
23 clock{
24     mpu_clock       = 20MHz;
25     timer           = A0;
26     IPL             = 4;
27 };
28 //Task Definition
29 //
30 task[] {
31     entry_address   = main();
32     name            = ID_main;
33     stack_size      = 100;
34     priority        = 1;
35     initial_start   = ON;
36 };
37 task[] {
38     entry_address   = task1();
39     name            = ID_task1;
40     stack_size      = 500;
41     priority        = 2;
42 };
43 task[] {
44     entry_address   = task2();
45     name            = ID_task2;
46     stack_size      = 500;
47     priority        = 3;
48 };
49
50 semaphore[] {
51     name            = ID_sem1;
52     max_count       = 1;
53     initial_count   = 1;
54     wait_queue      = TA_TPRI;
55 };
56
57
58
59 cyclic_hand [1] {
60     name            = ID_cyh1;
61     interval_counter = 100;
62     start           = OFF;
63     phsatr          = OFF;
64     phs_counter     = 0;
65     entry_address   = cyh1();
66     exinf           = 1;
67 };
```

9.4 Generation of application using M3T-MR30/4 in High - performance Embedded Workshop 4


An explanation is given here of the method for creating an application using the M3T-MR30/4 at the High-performance Embedded Workshop 4. The procedure is explained, taking the sample program attached to the M3T-MR30/4 as an example.

1. Generation of new project work space
As illustrated below, create a work space as an application project.

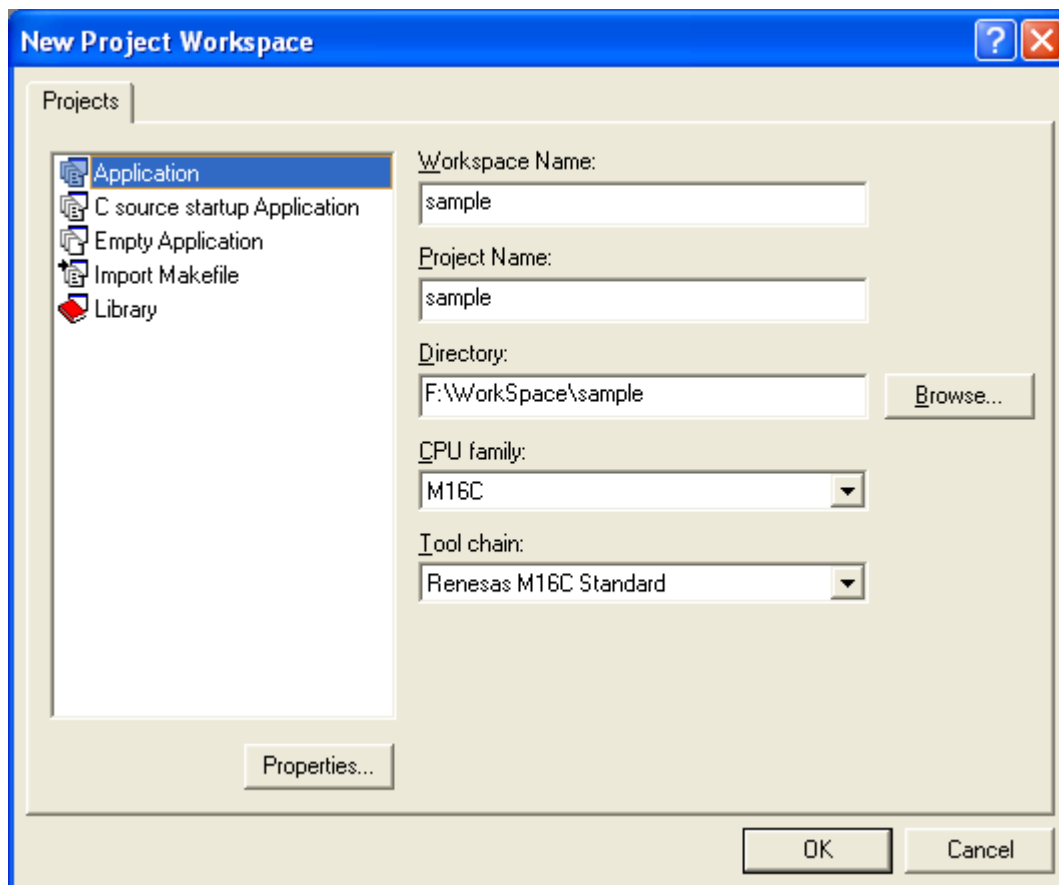


2. Tool Chain Setting


According to the operating environment, set up CPU series, CPU type and the toolchain version.

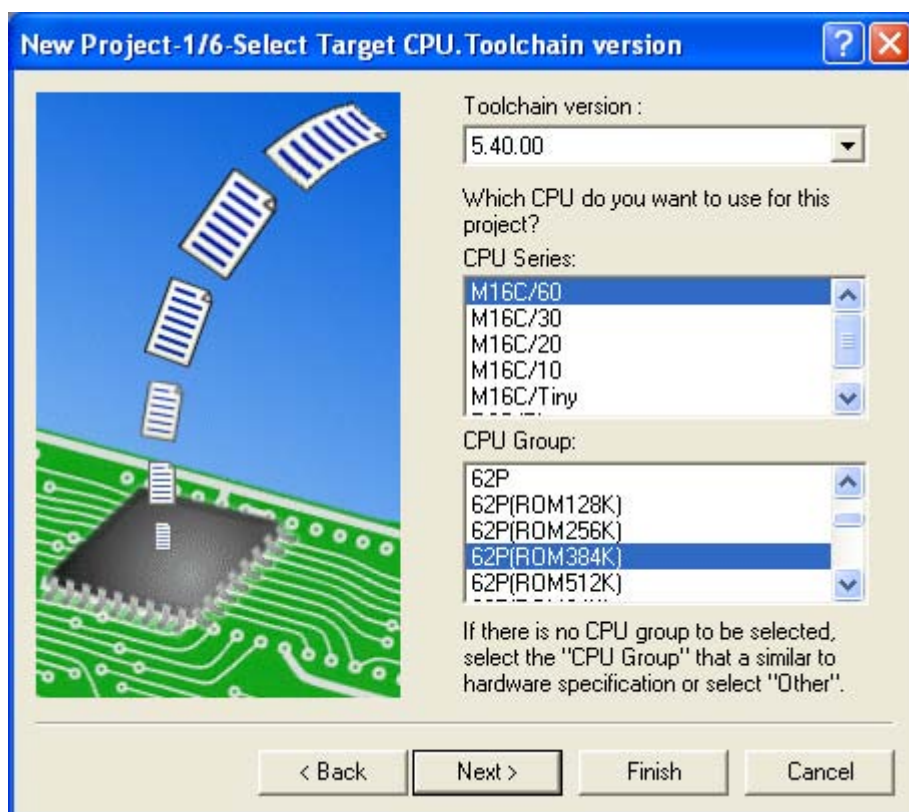

3. Selection of RTOS
In the dialog on New Project-2/6-Select RTOS, select “MR30” from the RTOS item. For the startup file type, select “Default C Linkage”.

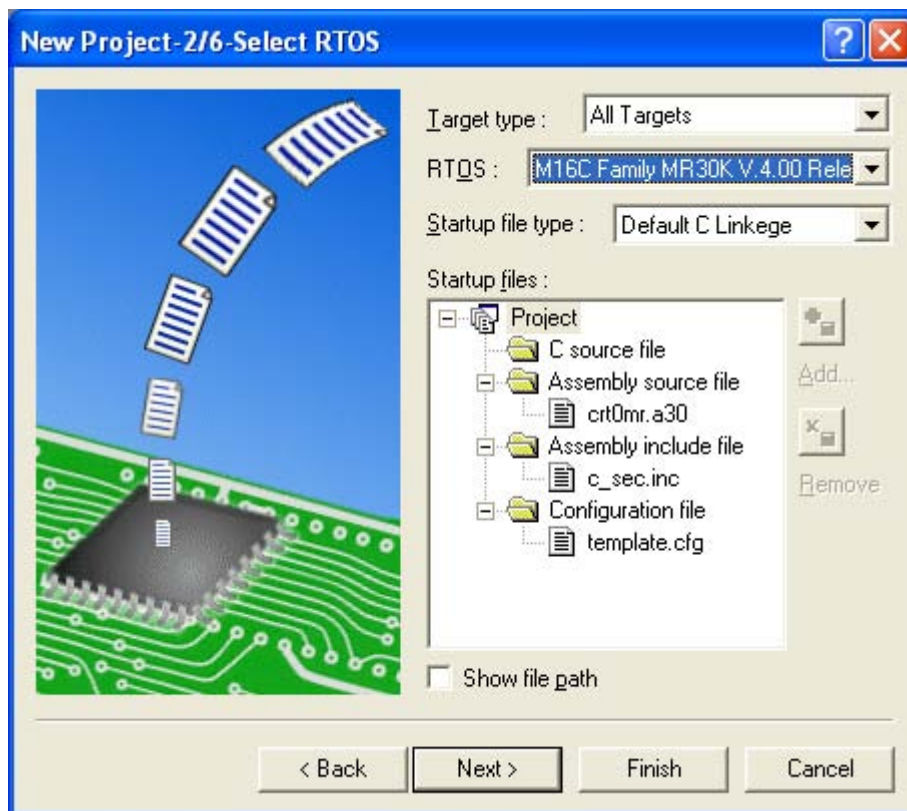


4. Generated File Setting
Select “None” in “Generate main () Function”.

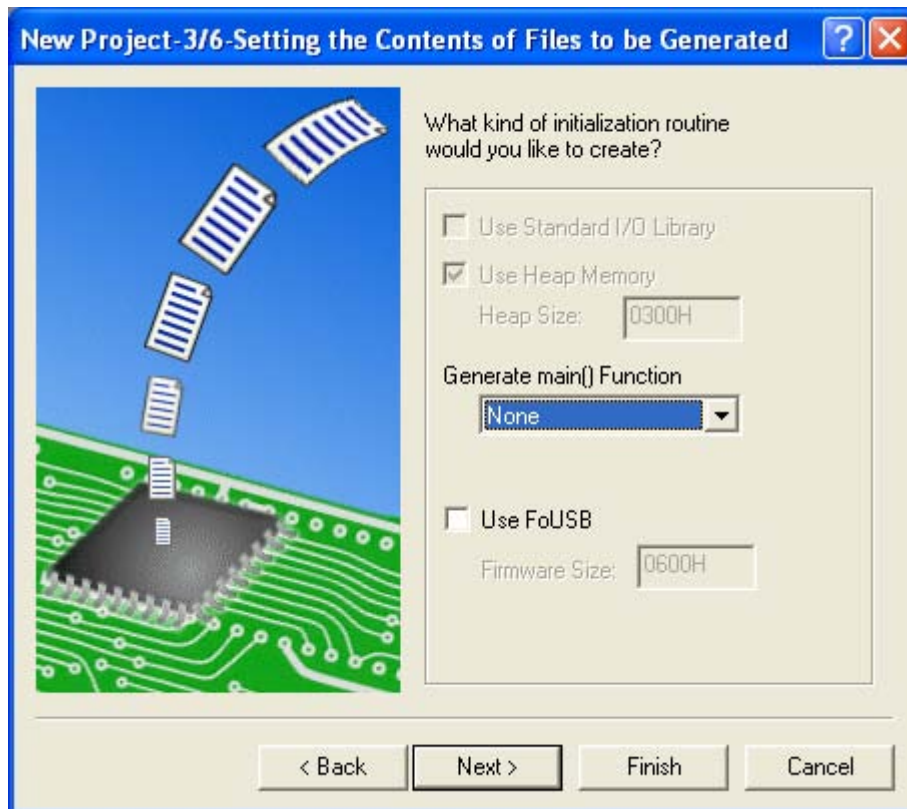

5. Completion of Project Generation

Press the “Finish” button if selection of a debugger and a simulator is unnecessary.


Since the project summary is displayed as shown below, press the “OK” button located in the lowermost part to generate the project.

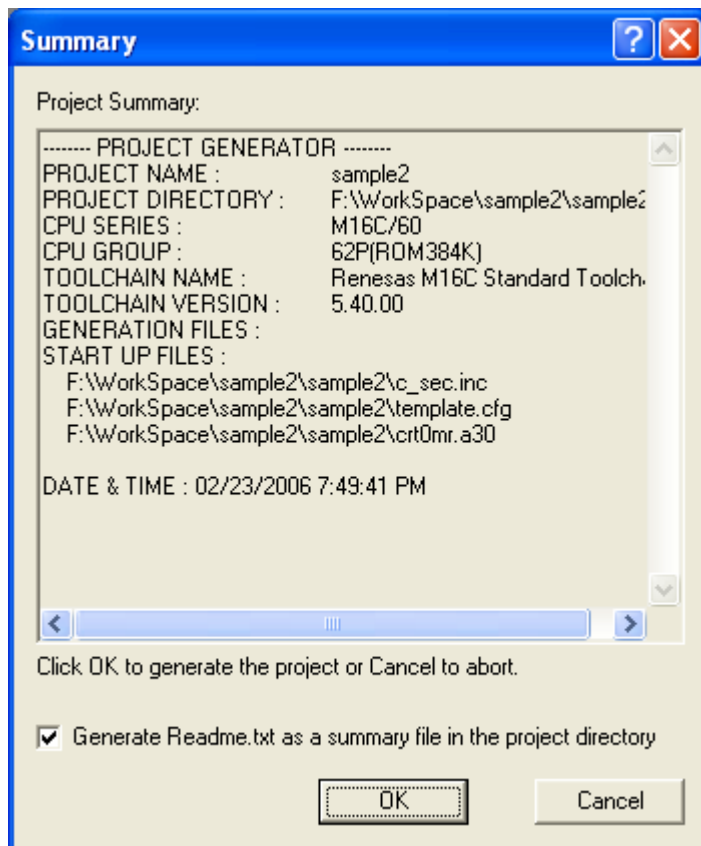

6. Link Option Setting


Specify the library “mr30.lib,c30mr.lib” in the link option.

“nc30lib.lib” must be specified because this sample program is using the printf function.

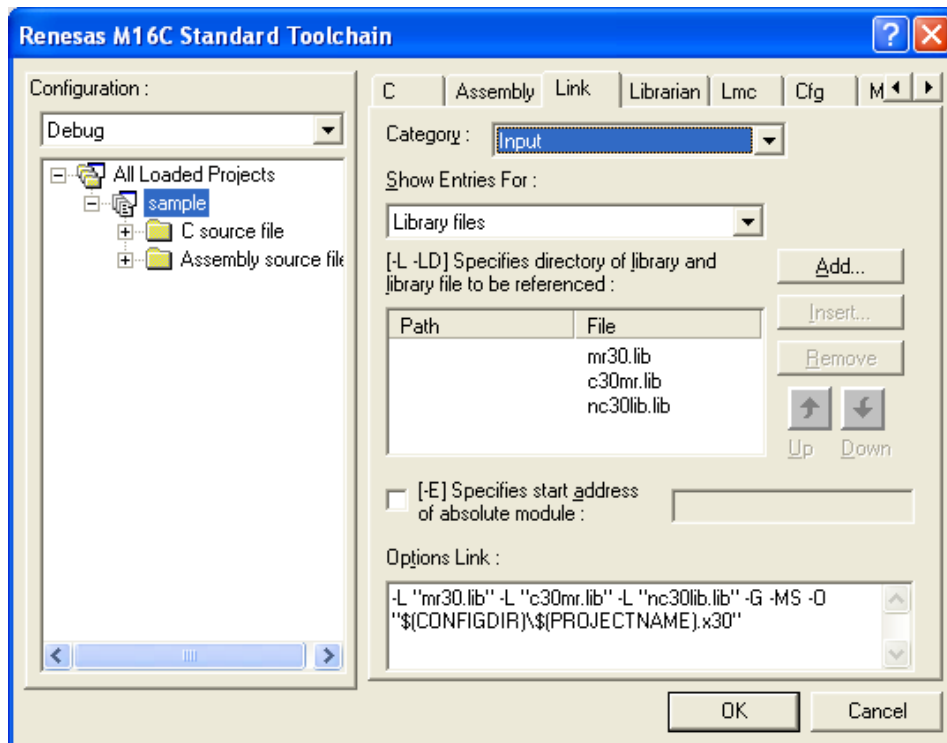


7. M3T-MR30/4 Relative Option Setting

Select the “4.0” in the “Category: uITRON specification” of “RTOS” tab.

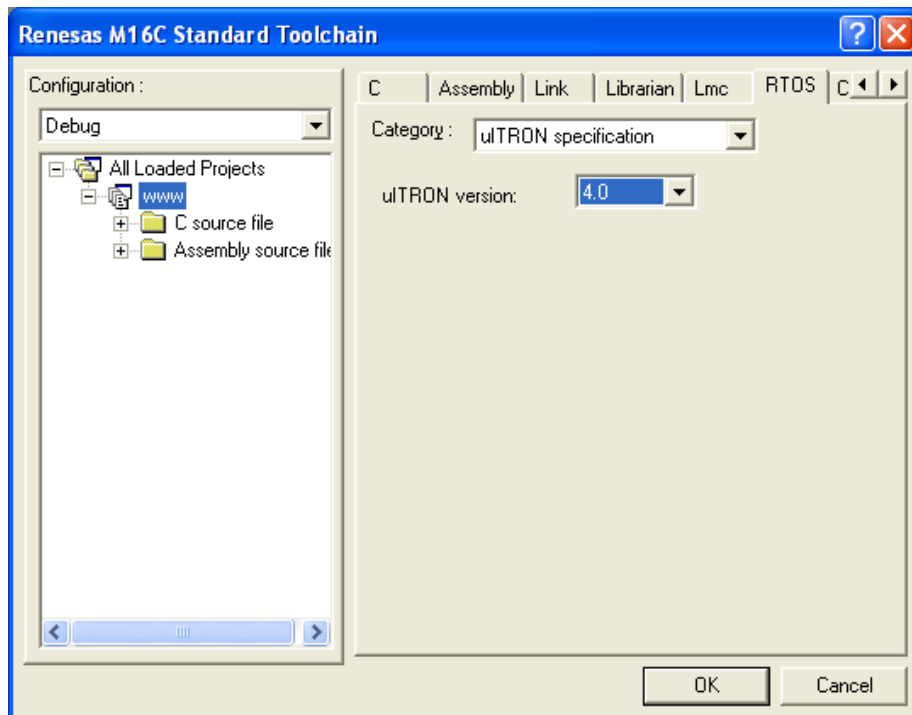

8. Adding Sample Program File to Project

Add “demo.c” and “smp.cfg” provided in the sample program to the project. Delete the sample configuration file “template.cfg” already registered from the project, and add “smp.cfg” to the project. In cases where the cfg file was generated with the GUI configurator, register the cfg file thus generated in the project.

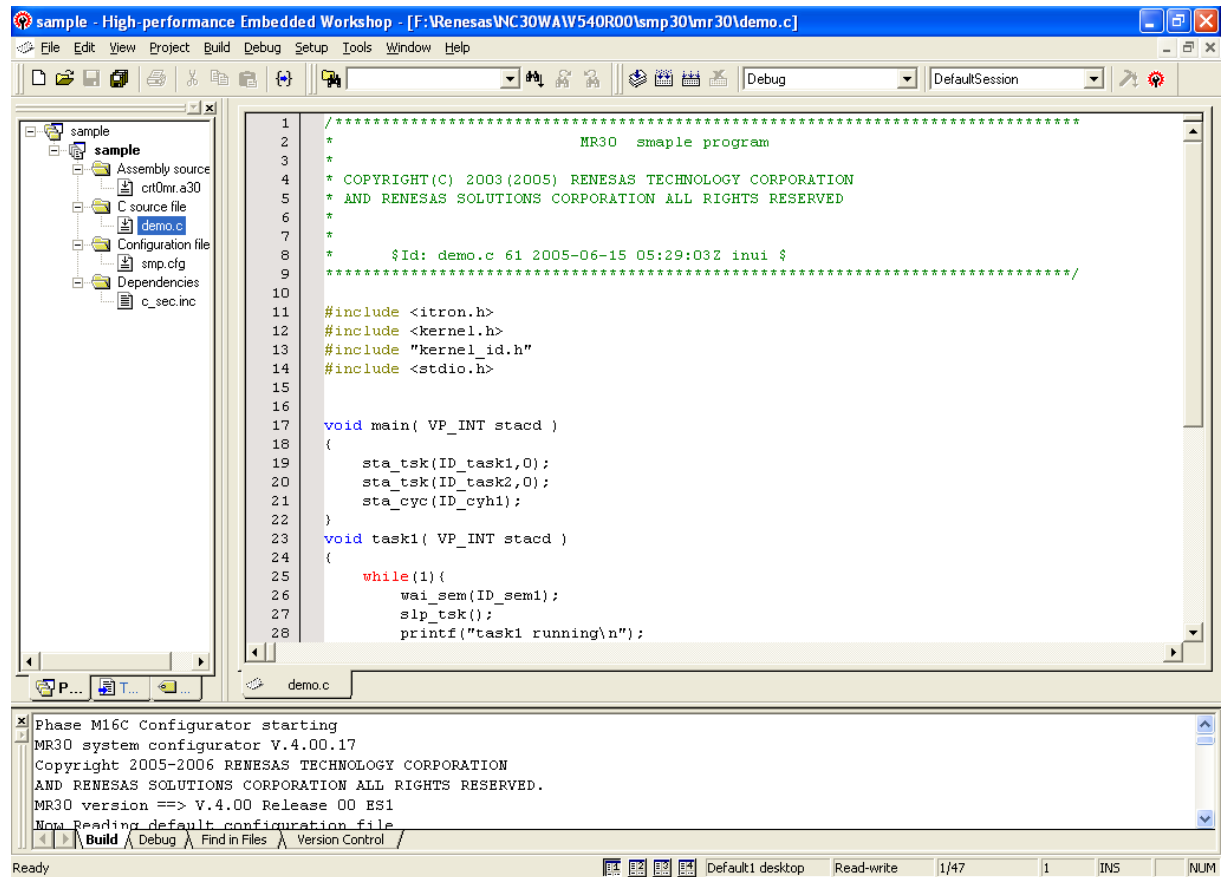

9. Execution of “Build”

Select “Build” -> “Build All” to execute Build.⁵⁷

⁵⁷ In the sample program, timeout=YES is specified with the configuration file, but since no service call having the timeout function is used, there arises a warning when “mr30tnl” is executed. There is no problem, however, in operation, etc.

10. Stack Size Calculation Method

10.1 Stack Size Calculation Method

The MR30 provides two kinds of stacks: the system stack and the user stack. The stack size calculation method differ between the stacks.

- User stack

This stack is provided for each task. Therefore, writing an application by using the MR30 requires to allocate the stack area for each stack.

- System stack

This stack is used inside the MR30 or during the execution of the handler.

When a task issues a service call, the MR30 switches the user stack to the system stack. (See Figure 10.1 System Stack and User Stack

)

The system stack uses interrupt stack(ISP).

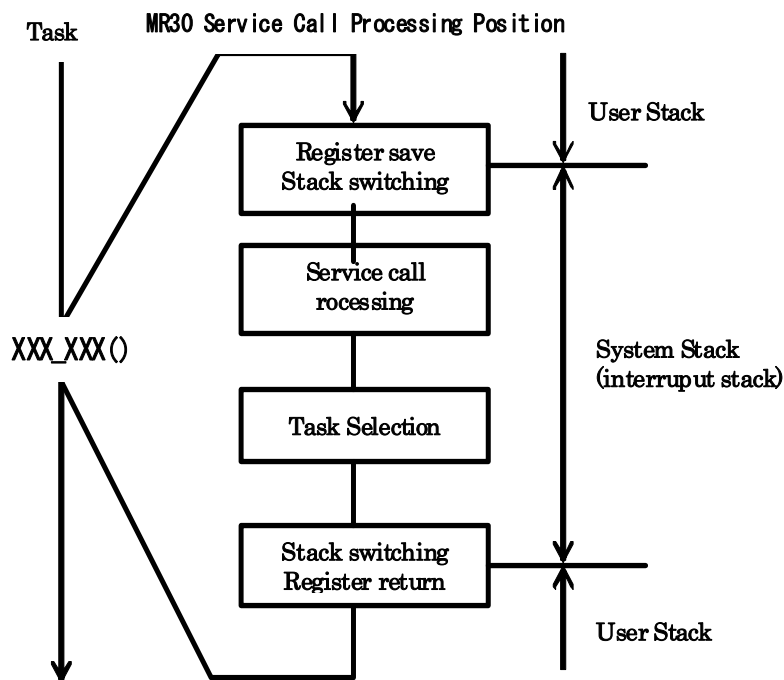


Figure 10.1 System Stack and User Stack

The sections of the system stack and user stack each are located in the manner shown below. However, the diagram shown below applies to the case where the stack areas for all tasks are located in the stack section during configuration.

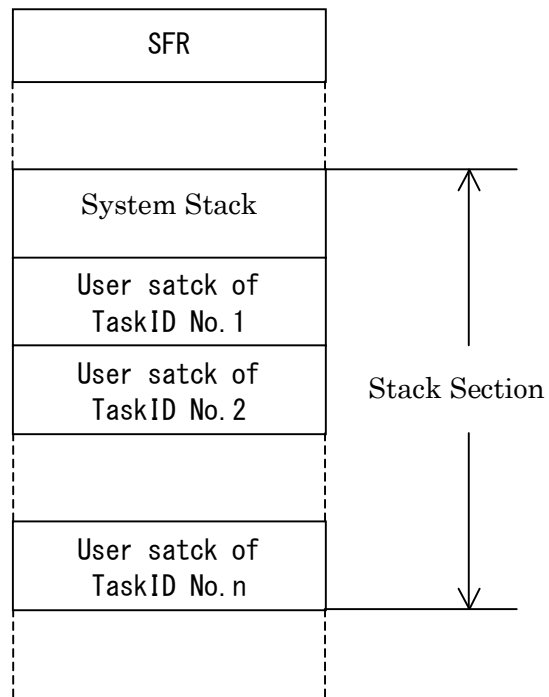


Figure 10.2 Layout of Stacks

10.1.1 User Stack Calculation Method

User stacks must be calculated for each task. The following shows an example for calculating user stacks in cases when an application is written in the C language and when an application is written in the assembly language.

- When an application is written in the C language

Using the stack size calculation utility STK Viewer⁵⁸, calculate the stack size of each task. The necessary stack size of a task is the sum of the stack size output by STK Viewer plus a context storage area of 30 bytes⁵⁹. The following shows how to calculate a stack size using

- When an application is written in the assembly language

- ◆ **Sections used in user program**

The necessary stack size of a task is the sum of the stack size used by the task in subroutine call plus the size used to save registers to a stack in that task.

- ◆ **Sections used in MR30**

The sections used in MR30 refer to a stack size that is used for the service calls issued.

MR30 requires that if you issue only the service calls that can be issued from tasks, 6 bytes of area be allocated. Also, if you issue the service calls that can be issued from both tasks and handlers, see the stack sizes listed in Table 10.2 Stack Sizes Used by Service Calls Issued from Handlers (in bytes) to ensure that the necessary stack area is allocated.

Furthermore, when issuing multiple service calls, include the maximum value of the stack sizes used by those service calls as the sections used by MR30 as you calculate the necessary stack size.

Therefore,

User stack size =

Sections used in user program + size of registers used + Sections used in MR30

(Size of registers used should be added 2bytes by each register.)

Figure 3.1 shows an example for calculating a user stack. In the example below, the registers used by the task are R0, R1, and A0.

⁵⁸ STK Viewer is a utility to calculate the stack size included with Renesas C Compiler NC30WA.

⁵⁹ If written in the C language, this size is fixed.

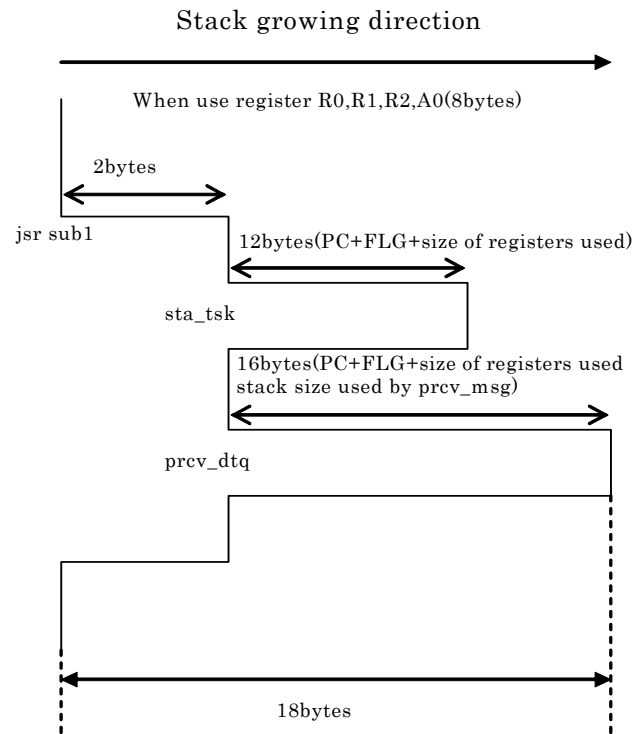


Figure 10.3 Example of Use Stack Size Calculation

10.1.2 System Stack Calculation Method

The system stack is most often consumed when an interrupt occurs during service call processing followed by the occurrence of multiple interrupts.⁶⁰ The necessary size (the maximum size) of the system stack can be obtained from the following relation:

$$\text{Necessary size of the system stack} = \alpha + \sum \beta_i + \gamma$$

- α

The maximum system stack size among the service calls to be used.⁶¹

When sta_tsk, ext_tsk, slp_tsk and dly_tsk are used for example, according to the Table 10.1 Stack Sizes Used by Service Calls Issued from Tasks (in bytes), each of system stack size is the following.

Service Call name	System Stack Size
sta_tsk	2bytes
ext_tsk	0bytes
slp_tsk	2bytes
dly_tsk	4bytes

Therefore, the maximum system stack size among the service calls to be used is the 8 bytes of dly_tsk.

- β_i

The stack size to be used by the interrupt handler.⁶² The details will be described later.

- γ

Stack size used by the system clock interrupt handler. This is detailed later.

⁶⁰ After switchover from user stack to system stack

⁶¹ Refer from Table 10.1 Stack Sizes Used by Service Calls Issued from Tasks (in bytes) to Table 10.3 Stack Sizes Used by Service Calls Issued from Tasks and Handlers (in bytes) for the system stack size used for each individual service call.

⁶² OS-dependent interrupt handler (not including the system clock interrupt handler here) and OS-independent interrupt handler.

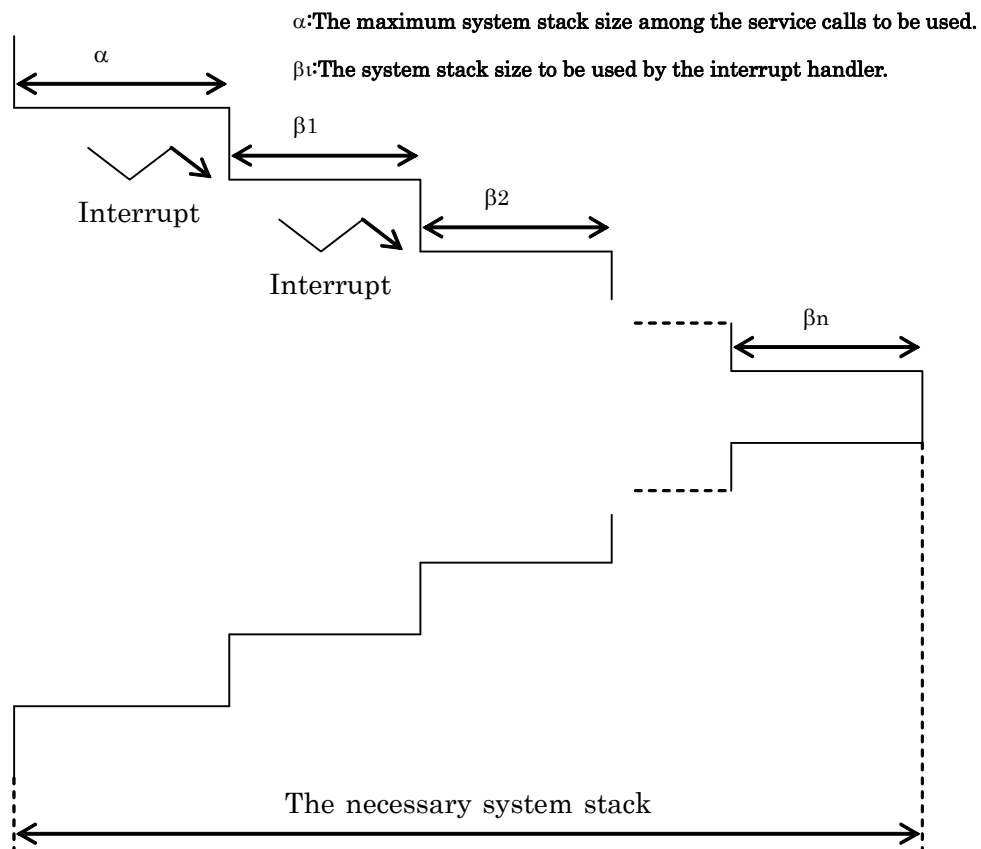


Figure 10.4 System Stack Calculation Method

[(Stack size β i used by interrupt handlers)]

The stack size used by an interrupt handler that is invoked during a service call can be calculated by the equation below.

The stack size β i used by an interrupt handler is shown below.

- ◆ C language

Using the stack size calculation utility STK Viewer⁶³, calculate the stack size of each interrupt handler.

Refer to the manual of STK Viewer for detailed use of STK Viewer.

- ◆ Assembly language


The stack size to be used by OS-dependent interrupt handler

= register to be used + user size + stack size to be used by service call

The stack size to be used by OS-independent interrupt handler

= register to be used + user size

User size is the stack size of the area written by user.

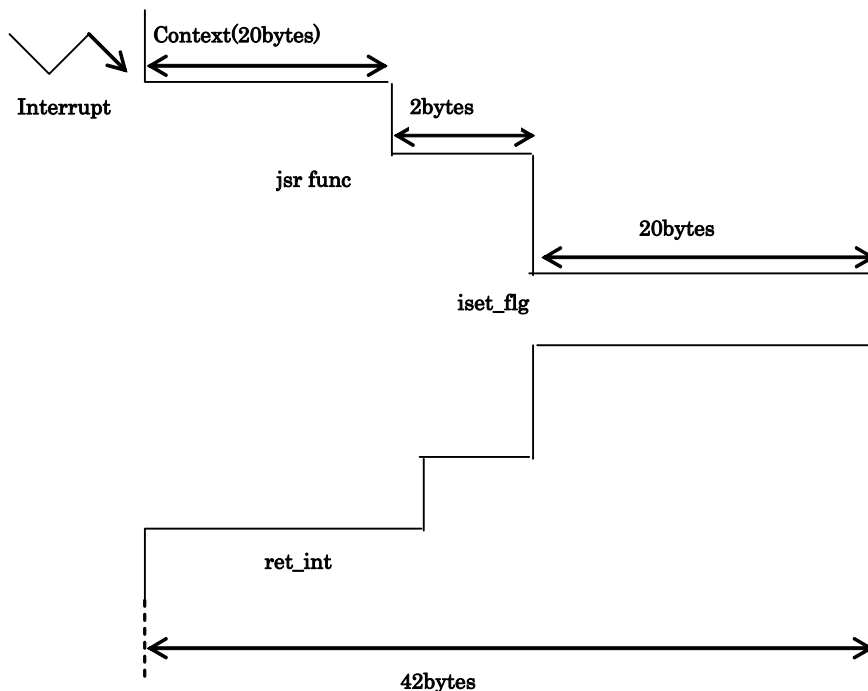

Context: 20 bytes when written in C language.
When written in assembly language,
Context = size of registers used + 4(PC+FLG)bytes

Figure 10.5 Stack size to be used by Kernel Interrupt Handler

⁶³ STK Viewer is a utility to calculate the stack size included with Renesas C Compiler NC30WA..

[(System stack size γ used by system clock interrupt handler)]

When you do not use a system timer, there is no need to add a system stack used by the system clock interrupt handler.

The system stack size γ used by the system clock interrupt handler is whichever larger of the two cases below:

- ◆ 24 + maximum size used by cyclic handler
- ◆ 24 + maximum size used by alarm handler
- ◆
- ◆ C language

Using the stack size calculation utility STK Viewer⁶⁴, calculate the stack size of each Alarm or Cyclic handler.

Refer to the manual of STK Viewer for detailed use of STK Viewer.

- ◆ Assembly language

The stack size to be used by Alarm or Cyclic handler

= register to be used + user size + stack size to be used by service call

If neither cyclic handler nor alarm handler is used, then

$$\gamma = 14\text{bytes}$$

When using the interrupt handler and system clock interrupt handler in combination, add the stack sizes used by both.

⁶⁴ STK Viewer is a utility to calculate the stack size included with Renesas C Compiler NC30WA.

10.2 Necessary Stack Size

Table 10.1 Stack Sizes Used by Service Calls Issued from Tasks (in bytes) lists the stack sizes (system stack) used by service calls that can be issued from tasks.

Table 10.1 Stack Sizes Used by Service Calls Issued from Tasks (in bytes)

Service call	Stack size		Service call	Stack size	
	User stack	System stack		User stack	System stack
act_tsk	0	2	rcv_mbx	(5)	20
can_act	10	0	prcv_mbx	14(5)	0
sta_tsk	0	2	trcv_mbx	(5)	20
ext_tsk	0	0	ref_mbx	10	0
ter_tsk	0	4	get_mpf	(5)	24
chg_pri	0	22	pget_mpf	16(5)	0
get_pri	10(5)	0	tget_mpf	(5)	24
ref_tsk	22	0	rel_mpf	0	4
ref_tst	10	0	ref_mpf	10	0
slp_tsk	0	2	pget_mpl	(5)	32
tslp_tsk	0	4	rel_mpl	0	50
wup_tsk	0	4	ref_mpl	12	0
can_wup	10	0	set_tim	10	0
rel_wai	0	4	get_tim	10	0
sus_tsk	0	2	sta_cyc	10	0
rsm_tsk	0	2	stp_cyc	10	0
frsm_tsk	0	2	ref_cyc	10	0
dly_tsk	0	4	sta_alm	10	0
sig_sem	0	4	stp_alm	10	0
wai_sem	0	20	ref_alm	10	0
pol_sem	10	0	rot_rdq	0	0
twai_sem	0	22	get_tid	10(5)	0
ref_sem	10	0	loc_cpu	4	0
set_flg	0	8	unl_cpu	0	0
clr_flg	10	0	ref_ver	12	0
wai_flg	(5)	20	vsnd_dtq	0	20
pol_flg	10(5)	0	vpsnd_dtq	0	4
twai_flg	(7)	20	vtsnd_dtq	(5)	22
ref_flg	10	0	vfsnd_dtq	0	4
snd_dtq	0	20	vrcv_dtq	(7)	4
psnd_dtq	0	4	vprcv_dtq	(7)	4
tsnd_dtq	(5)	22	vtrcv_dtq	(7)	4
fsnd_dtq	0	4	vref_dtq	10	0
rcv_dtq	(5)	4	vrst_dtq	0	18
prcv_dtq	(5)	4	vrst_vdtq	0	18
trcv_dtq	(5)	4	vrst_mbx	10	0
ref_dtq	10	0	vrst_mpf	0	18
snd_mbx	0	18	vrst_mpl	60	0
dis_dsp	4	0	ena_dsp	0	0

(): Stack sizes used by service call in C programs.

Table 10.2 Stack Sizes Used by Service Calls Issued from Handlers (in bytes) lists the stack sizes (system stack) used by service calls that can be issued from handlers.

Table 10.2 Stack Sizes Used by Service Calls Issued from Handlers (in bytes)

Service call	Stack size	Service call	Stack size
iact_tsk	14	iprcv_mbx	14(5)
ican_act	10	iref_mbx	10
ista_tsk	14	ipget_mpf	16(5)
ichg_pri	32	irel_mpf	18
iget_pri	10(5)	iref_mpf	10
iref_tsk	22	iset_tim	10
iref_tst	10	iget_tim	10
iwup_tsk	16	ista_cyc	10
ican_wup	10	istp_cyc	10
irel_wai	14	iref_cyc	10
isus_tsk	12	ista_alm	10
irms_tsk	12	istp_alm	10
ifrm_tsk	12	iref_alm	10
isig_sem	16	irot_rdq	10
ipol_sem	10	iget_tid	10(5)
iref_sem	10	iloc_cpu	4
iset_flg	24	iunl_cpu	10
iclr_flg	10	ret_int	10
ipol_flg	10(5)	iref_ver	12
iref_flg	10	vipsnd_dtq	18
ipsnd_dtq	18	vifsnd_dtq	18
ifsnd_dtq	18	viprcv_dtq	20(7)
iprcv_dtq	18(5)	viref_dtq	10
iref_dtq	10	isnd_mbx	30
iref_mpl	12		

(): Stack sizes used by service call in C programs.

Table 10.3 Stack Sizes Used by Service Calls Issued from Tasks and Handlers (in bytes) lists the stack sizes (system stack) used by service calls that can be issued from both tasks and handlers. If the service call issued from task, system uses user stack. If the service call issued from handler, system uses system stack.

Table 10.3 Stack Sizes Used by Service Calls Issued from Tasks and Handlers (in bytes)

Service call	Stack size	Service call	Stack size
sns_ctx	10	sns_loc	10
sns_dsp	10	sns_dpn	10

11. Note

11.1 The Use of INT Instruction

MR30 has INT instruction interrupt numbers reserved for issuing service calls as listed in Table 11.1 Interrupt Number Assignment. For this reason, when using software interrupts in a user application, do not use interrupt numbers 63 through 48 and be sure to use some other numbers.

Table 11.1 Interrupt Number Assignment

Interrupt No.	Service calls Used
32	Service calls that can be issued from only task context
33	Service calls that can be issued from only non-task context. Service calls that can be issued from both task context and non-task context.
34	ret_int service call
35	dis_dsp service call
36	loc_cpu, iloc_cpu service call
37	ext_tsk service call
38	tsnd_dtq, twai_flg, vtsnd_dtq service call
39	Reserved for future extension
40	Reserved for future extension

11.2 The Use of registers of bank

The registers of bank is 0, when a task starts on MR30.

MR30 does not change the registers of bank in processing kernel.

You must pay attention to the followings.

- Don't change the registers of bank in processing a task.
- If an interrupt handler with registers of bank 1 have multiple interrupts of an interrupt handler with registers of bank 1, the program can not execute normally.

11.3 Regarding Delay Dispatching

MR30 has four service calls related to delay dispatching.

- `dis_dsp`
- `ena_dsp`
- `loc_cpu,iloc_cpu`
- `unl_cpu,iunl_cpu`

The following describes task handling when dispatch is temporarily delayed by using these service calls.

1. When the execution task in delay dispatching should be preempted

While dispatch is disabled, even under conditions where the task under execution should be preempted, no time is dispatched to new tasks that are in an executable state. Dispatching to the tasks to be executed is delayed until the dispatch disabled state is cleared. When dispatch is being delayed.

- Task under execution is in a RUN state and is linked to the ready queue
- Task to be executed after the dispatch disabled state is cleared is in a READY state and is linked to the highest priority ready queue (among the queued tasks).

2. `isus_tsk,irms_tsk` during dispatch delay

In cases when `isus_tsk` is issued from an interrupt handler that has been invoked in a dispatch disabled state to the task under execution (a task to which `dis_dsp` was issued) to place it in a SUSPEND state. During delay dispatching.

- The task under execution is handled inside the OS as having had its delay dispatching cleared. For this reason, in `isus_tsk` that has been issued to the task under execution, the task is removed from the ready queue and placed in a SUSPEND state. Error code `E_OK` is returned. Then, when `irms_tsk` is issued to the task under execution, the task is linked to the ready queue and error code `E_OK` is returned. However, tasks are not switched over until delay dispatching is cleared.
- The task to be executed after disabled dispatching is re-enabled is linked to the ready queue.

3. `rot_rdq, irot_rdq` during dispatch delay

When `rot_rdq` (`TPRI_RUN = 0`) is issued during dispatch delay, the ready queue of the own task's priority is rotated. Also, when `irot_rdq` (`TPRI_RUN = 0`) is issued, the ready queue of the executed task's priority is rotated. In this case, the task under execution may not always be linked to the ready queue. (Such as when `isus_tsk` is issued to the executed task during dispatch delay.)

4. Precautions

- No service call (e.g., `slp_tsk, wai_sem`) can be issued that may place the own task in a wait state while in a state where dispatch is disabled by `dis_dsp, loc_cpu` or `iloc_cpu`.
- `ena_dsp` and `dis_dsp` cannot be issued while in a state where interrupts and dispatch are disabled by `loc_cpu, iloc_cpu`.
- Disabled dispatch is re-enabled by issuing `ena_dsp` once after issuing `dis_dsp` several times.
The above status transition can be summarized in Table 3.3.

11.4 Regarding Initially Activated Task

MR30 allows you to specify a task that starts from a READY state at system startup. This specification is made by setting the configuration file.

Refer to 8.1.2 for details on how to set.

11.5 Cautions for each microcontroller

11.5.1 To use the M16C/62 group MCUs

- To use the memory expansion function in memory space expansion mode 1 (1.2M available memory)
Locate the MR30 kernel (MR_KERNEL section) between addresses 30000H and FFFFFH.
- To use the memory expansion function in memory space expansion mode 2 (4M available memory)
Locate the MR30 kernel (MR_KERNEL section) between addresses 3C0000H and 3FFFFFFH.

11.5.2 To use the M16C/6N group MCUs

Please append the following program to the point of the MR30's system timer setting in the startup program. (The setting point of MR30's system timer is lines 160 in crt0mr.a30 or lines 73 in start.a30. These startup files are in "MR30's install directory\LIB30" directory.)

If you select no division by changing the value of the peripheral function clock register, need not append the following program.

```
+-----+
;|      System timer interrupt setting      |
+-----+
      mov.b  #stmr_mod_val,stmr_mod_reg      ; set timer mode
;      mov.b  #1H,0AH
;      bset   6,07H
      mov.b  #stmr_int_IPL,stmr_int_reg      ; set timer IPL
;      bclr   6,07H
;      mov.b  #0,0AH
      mov.w  #stmr_cnt_stmr_ctr_reg ; set interval count

      mov.b  stmr_mod_reg,R0L                <---- append
      and.b  #0C0H,R0L                      <---- append
      jnz    __MR_SYSTIME_END                <---- append
      mov.w  #stmr_cnt/2,stmr_ctr_reg        <---- append
__MR_SYSTIME_END:                          <---- append

      or.b   #stmr_bit+1,stmr_start
```

12. Separate ROMs

12.1 How to Form Separate ROMs

This chapter describes how to form the MR30's kernel and application programs into separate ROMs.

Figure 12.1 shows an instance in which the sections common to two different applications together with the kernel are allocated in the kernel ROM and the applications are allocated in separate ROMs.

Here is how to divide a ROM based on this example.

1. System configuration

Here you set up a system configuration of application programs.

Here, descriptions are given on the supposition that the system configuration of two application programs is as shown below.

	Application 1	Application 2
The number of Tasks	4	5
The number of Eventflags	1	3
The number of Semaphores	4	2
The number of Mailboxes	3	5
The number of Fixed-size memory pools	3	1
The number of Cyclic handlers	3	3

2. Preparing configuration files

Prepare configuration files based on the result brought by setting up the system configuration.

- maxdefine definition

You must specify the greater of the two numbers of definitions as to the respective applications for a value to be set in the maxdefine definition division. Thus the individual items must be equal in number to each other in these applications.

e.g.

```
maxdefine{
    max_task      = 5;
    max_flag      = 3;
    max_sem       = 4;
    max_mbx       = 5;
    max_mpl       = 3;
    max_cyh       = 3;
};
```

No means is available to deal with variable-length memory pools in the maxdefine definition. So if you use the variable-length memory pool functions in either of two applications, give the same definitions of variable-length memory pools in the two configuration files.

- **system definition**

You need to make the following items, which are dealt with in the system definition, common to two applications.

- ◆ timeout
- ◆ task_pause
- ◆ priority

- **clock definition**

The value assigned to this item in one of two applications can be different from its counterpart. Avoid defining this item in one application and omitting it in the other application. Be sure to deal with this item in the same manner, either define or omit, in two applications.

- **task definition**

- ◆ initial_start

Switch this item ON only in the task first started up after the System is started up, and switch this item OFF in any other tasks.

Other definitions, though different from each other between two configuration files, raise no problem.

3. Changing the processor mode register

You change the processor mode register for a startup program in compliance with the system.

4. Preparing application programs

You prepare two application programs.

5. Changing of the section name of start-up program

Change the name of the section name of start-up program(start.a30,crt0mr.a30) from MR_KERNEL section to other name.

e.g.

```
[before] .section MR_KERNEL, CODE, ALIGN
```

```
[after] .section MR_STARTUP, CODE, ALIGN
```

6. Locating respective sections

Programs to be located in the kernel ROM and in the application ROM are given below.

- Programs to be located in the kernel ROM

- ◆ MR30's kernel(MR_KERNEL section)
- ◆ Programs common to two applications(program section)

This example assumes that the task identified by 1 is a program common to two applications. Locating a common program in the application ROM raises no problem. With a common program located in the kernel ROM, the system calls given below cannot be issued, so be careful.

```
get_mpf, get_pri, get_tid, iprcv_dtq, pget_mpf, pget_mpl, pol_flg, prcv_dtq, prcv_mbx, rcv_dtq, rcv_mbx,  
tget_mpf, trcv_dtq, trcv_mbx, tsnd_dtq, twai_flg, viprcv_dtq, vprcv_dtq, vrcv_dtq, vtrcv_dtq, vtsnd_dtq,  
wai_flg
```

To issue these system calls from a common program, locate it in the application ROM.

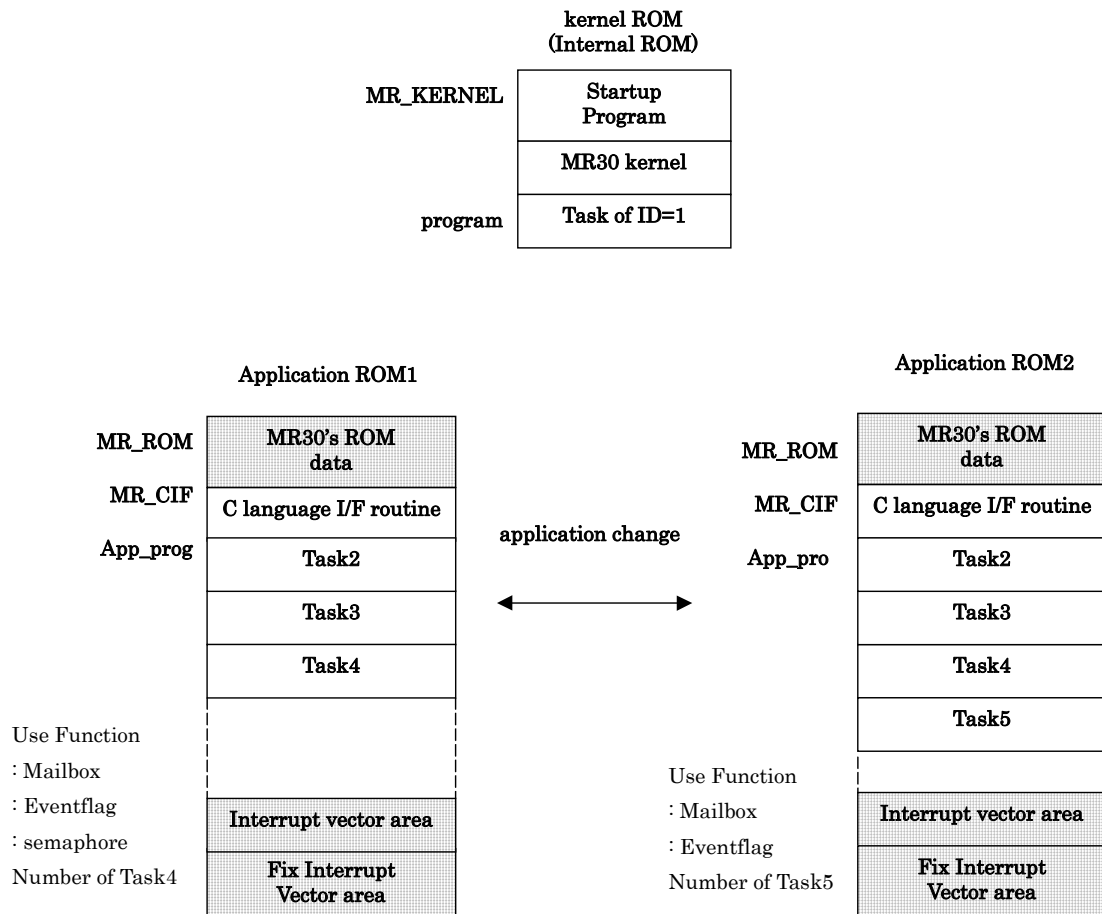


Figure 12.1 ROM separate

- Programs to be located in the application ROM
 - ◆ MR30's ROM data (the MR_ROM section)
 - ◆ C language I/F routines (the MR_CIF section)
 - ◆ Application programs (the app_prog section)
 - ◆ Interrupt vector area (the INTERRUPT_VECTOR section)
 - ◆ Fixed interrupt vector area (FIX_INTERRUPT_VECTOR section)
- How to locate individual programs is given below.
 - ◆ Changing the section name of user program

In dealing with application programs written in C language, you change the section name of the programs to be located in the application ROM by use of #pragma SECTION as shown below. In NC30WA, the section name of user program, if not given, turns to program section. So you need to assign a different section name to the task you locate in the application ROM.⁶⁵

```
#pragma SECTION program app_prog/* Changing section of program */
/* The section names of task2 and task3 turn to app_prog */
void task2(void){
    :
}

void task3(void){
    :
}
```

- ◆ Locating sections

Here you change the section files (c_sec.inc, asm_sec.inc), and set addresses of programs you locate in the application ROM. In this instance, the respective first addresses of the sections given below must agree with each other between two applications. Also, you need to invariably locate the MR_ROM section at the beginning of the

⁶⁵ You need not change the names of sections for tasks to be located in the kernel ROM.

application ROM. The sequence of other sections are free of restrictions.

- MR30's RAM data (MR_RAM, MR_RAM_DBG section)
- MR_HEAP section
- MR30's kernel(MR_KERNEL section)
- MR30's ROM data(MR_ROM section)
- Interrupt vector area(INTERRUPT_VECTOR section)

Settings of the section files are given below.

```
.section MR_RAM_DBG,DATA      ; MR30's RAM data
.org 500H                    ; The address common to two applications
.section MR_RAM,DATA         ; MR30's RAM data
.org 600H                    ; The address common to two applications
:
.section MR_HEAP,DATA        ; MR30's RAM data
.org 10000H                  ; The address common to two applications
:
.section MR_ROM,ROMDATA      ; MR30's ROM data
.org 0e0000H                ; The address common to two applications
:
.section MR_STARTUP,CODE     ; start-up program
.org 0e1000H                ; The address common to two applications
.section MR_CIF,CODE         ; C language I/F routine
:
.section app_prog,CODE       ; Use Program
:
.section INTERRUPT_VECTOR    ; Interrupt Vector
.org 0efd00H                ; The address common to two applications
.section MR_KERNEL,CODE     ; MR30's kernel
.org 0f0000H                ; The address common to two applications
:
.section FIX_INTERRUPT_VECTOR ; Fixed Interrupt Vector
.org 0fffd0cH               ; The address common to two applications
```

The memory map turns to give below.(See Figure 12.2)

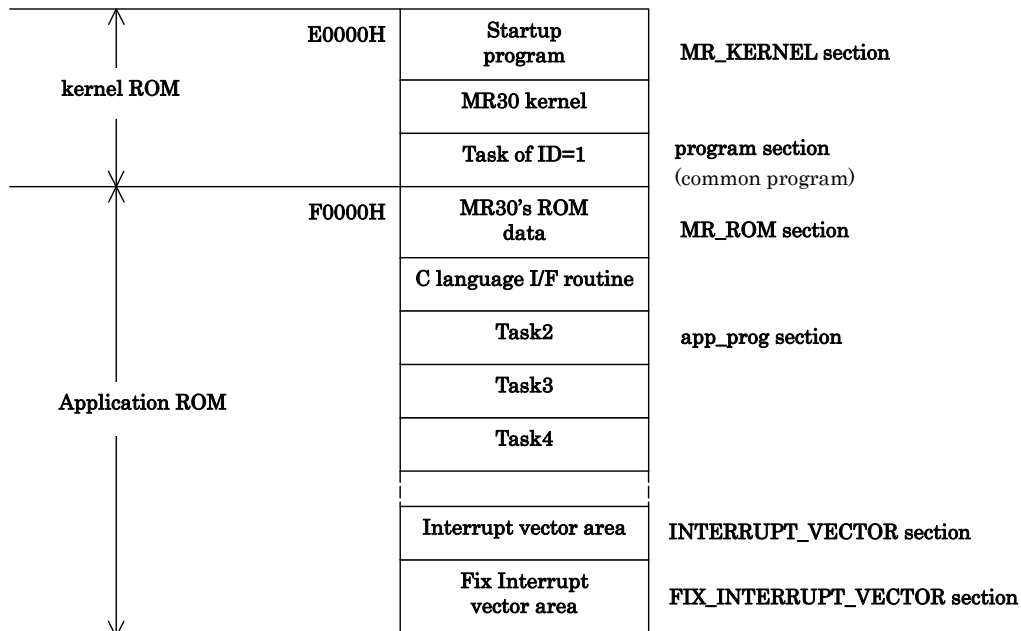


Figure 12.2 Memory map

7. Executing the configurator cfg30.

8. Create an mrc file in which every system call is described. (Compiling the source program cre-

ates a file having the extension mrc in the work directory. Create an mrc file making reference to this.) Executing make clean in makefile created by cfg30 deletes the mrc file, so be careful.

9. Generating a system

You execute the make command to generate a system.⁶⁶

10. Carrying out steps 4 through 9 with respect to application 2 allows you to generate the system for application 2.

The steps given above allows you to form the separate ROMs.

⁶⁶ If the file mrtable.a30 is not held in the current directory, execute make command to generate a system.

13. Appendix

13.1 Common Constants and Packet Format of Structure

----Common formats----

TRUE 1 /* True */
FALSE 0 /* False */

----Formats related to task management----

TSK_SELF 0 /* Specifies the issuing task itself */
TPRI_RUN 0 /* Specifies priority of task being executed then */

```
typedef struct t_rtsk {  
    STAT     tskstat;       /* Task status */  
    PRI     tskpri;        /* Current priority of task */  
    PRI     tskbpri;       /* Base priority of task */  
    STAT     tskwait;      /* Reason for which task is kept waiting */  
    ID     wid;            /* Object ID for which task is kept waiting */  
    TMO     tskatr;        /* Remaining time before task times out */  
    UINT    actcnt;        /* Number of activation requests */  
    UINT    wupcnt;        /* Number of wakeup requests */  
    UINT    suscnt;        /* Number of suspension requests */  
}
```

} T_RTSK;

```
typedef struct t_rtst {  
    STAT     tskstat;       /* Task status */  
    STAT     tskwait;      /* Reason for which task is kept waiting */  
}
```

} T_RTST;

----Formats related to semaphore----

```
typedef struct t_rsem {  
    ID     wtskid;        /* ID number of task at the top of waiting queue */  
    INT    semcnt;        /* Current semaphore count value */  
}
```

} T_RSEM;

----Formats related to eventflag----

wfmod:

TWF_ANDW H'0000 /* AND wait */
TWF_ORW H'0001 /* OR wait */

```
typedef struct t_rflg {  
    ID     wtskid;        /* ID number of task at the top of waiting queue */  
    UINT   flgptn;        /* Current bit pattern of eventflag */  
}
```

} T_RFLG;

----Formats related to data queue and short data queue----

```
typedef struct t_rdtq {  
    ID     stskid;        /* ID number of task at the top of transmission waiting queue */  
    ID     rtskid;        /* ID number of task at the top of reception waiting queue */  
    UINT   sdtqcnt;       /* Number of data bytes contained in data queue */  
}
```

} T_RDTQ;

----Formats related to mailbox----

```
typedef struct t_msg {  
    VP     msghead;       /* Message header */  
}
```

} T_MSG;

```
typedef struct t_msg_pri {  
    T_MSG   msgque;        /* Message header */  
    PRI    msgpri;        /* Message priority */  
}
```

} T_MSG_PRI;

```
typedef struct t_mbx {  
    ID     wtskid;        /* ID number of task at the top of waiting queue */  
    T_MSG   *pk_msg;       /* Next message to be received */  
}
```

} T_RMBX;

----Formats related to fixed-size memory pool----

```
typedef struct t_rmpf {  
    ID     wtskid;        /* ID number of task at the top of memory acquisition waiting queue */  
    UINT   frbcnt;        /* Number of memory blocks */  
}
```

} T_RMPF;

----Formats related to Variable-size Memory pool----

```
typedef struct t_rmpl {  
    ID      wtskid;          /* ID number of task at the top of memory acquisition waiting queue */  
    SIZE    fmplsz;          /* Total size of free areas */  
    UINT    fblksiz;         /* Maximum memory block size that can be acquired immediately */  
} T_RMPL;
```

----Formats related to cyclic handler----

```
typedef struct t_rcyc {  
    STAT    cycstat;         /* Operating status of cyclic handler */  
    RELTIM   lefttim;        /* Remaining time before cyclic handler starts */  
} T_RCYC;
```

----Formats related to alarm handler----

```
typedef struct t_ralm {  
    STAT    almstat;         /* Operating status of alarm handler */  
    RELTIM   lefttim;        /* Remaining time before alarm handler starts */  
} T_RALM;
```

----Formats related to system management----

```
typedef struct t_rver {  
    UH      maker;           /* Maker */  
    UH      prid;            /* Type number */  
    UH      spver;           /* Specification version */  
    UH      prver;           /* Product version */  
    UH      prno[4];         /* Product management information */  
} T_RVER;
```

13.2 Assembly Language Interface

When issuing a service call in the assembly language, you need to use macros prepared for invoking service calls.

Processing in a service call invocation macro involves setting each parameter to registers and starting execution of a service call routine by a software interrupt. If you issue service calls directly without using a service call invocation macro, your program may not be guaranteed of compatibility with future versions of MR30.

The table below lists the assembly language interface parameters. The values set forth in μ ITRON specifications are not used for the function code.

Task Management Function

ServiceCall	INTNo.	Parameter					ReturnParameter	
		FuncCode R0	R1	R3	A0	A1 FuncCode	R0	A0
ista_tsk	33	8	stacd	–	tskid	–	ercd	–
sta_tsk	32	6	stacd	–	tskid	–	ercd	–
act_tsk	32	0	–	–	tskid	–	ercd	–
iact_tsk	33	2	–	–	tskid	–	ercd	–
ter_tsk	32	10	–	–	tskid	–	ercd	–
can_act	33	4	–	–	tskid	–	actcnt	–
ican_act	33	4	–	–	tskid	–	actcnt	–
chg_pri	32	12	–	tskpri	tskid	–	ercd	–
ichg_pri	33	14	–	tskpri	tskid	–	ercd	–
rot_rdq	32	140	–	tskpri	–	–	ercd	–
irotd_rdq	33	142	–	tskpri	–	–	ercd	–
rel_wai	32	32	–	–	tskid	–	ercd	–
irel_wai	33	34	–	–	tskid	–	ercd	–
ref_tst	33	20	–	–	tskid	pk_rtst	ercd	–
iref_tst	33	20	–	–	tskid	pk_rtst	ercd	–
ref_tsk	33	18	–	–	tskid	pk_rtsk	ercd	–
iref_tsk	33	18	–	–	tskid	pk_rtsk	ercd	–
ext_tsk	37	–	–	–	–	–	–	–
get_tid	33	144	–	–	–	–	ercd	tskid
iget_tid	33	144	–	–	–	–	ercd	tskid
get_pri	33	16	–	–	tskid	–	ercd	tskpri
iget_pri	33	16	–	–	tskid	–	ercd	tskpri

Task Dependent Synchronization Function

ServiceCall	INTNo.	Parameter					ReturnParameter
		FuncCode R0	R1	R3	A0	A1 FuncCode	R0
slp_tsk	32	22	–	–	–	–	ercd
wup_tsk	32	26	–	–	tskid	–	ercd
iwup_tsk	33	28	–	–	tskid	–	ercd
can_wup	33	30	–	–	tskid	–	wupcnt
ican_wup	33	30	–	–	tskid	–	wupcnt
tslp_tsk	32	24	tmout	tmout	–	–	ercd
sus_tsk	32	36	–	–	tskid	–	ercd
isus_tsk	33	38	–	–	tskid	–	ercd
rsm_tsk	32	40	–	–	tskid	–	ercd
irsm_tsk	33	42	–	–	tskid	–	ercd
frsm_tsk	32	40	–	–	tskid	–	ercd
ifrsm_tsk	33	42	–	–	tskid	–	ercd

Synchronization & Communication Function

ServiceCall	INTNo.	Parameter						ReturnParameter			
		FuncCode R0	R1	R2	R3	A0	A1 FuncCode	R0	R1	R2	R3
wai_sem	32	50	–	–	–	semid	–	ercd	–	–	–
pol_sem	33	52	–	–	–	semid	–	ercd	–	–	–
ipol_sem	33	52	–	–	–	semid	–	ercd	–	–	–
sig_sem	32	46	–	–	–	semid	–	ercd	–	–	–
isig_sem	33	48	–	–	–	semid	–	ercd	–	–	–
twai_sem	32	54	tmout	–	tmout	semid	–	ercd	–	–	–
ref_sem	33	56	–	–	–	semid	pk_rsem	ercd	–	–	–
iref_sem	33	56	–	–	–	semid	pk_rsem	ercd	–	–	–
wai_flg	32	64	wfmode	–	waitptn	flgid	–	ercd	–	flgptn	–
twai_flg	38	tmout	wfmode	tmout	waitptn	flgid	68	ercd	–	flgptn	–
pol_flg	33	66	wfmode	–	waitptn	flgid	–	ercd	–	flgptn	–
ipol_flg	33	66	wfmode	–	waitptn	flgid	–	ercd	–	flgptn	–
set_flg	32	58	–	–	setptn	flgid	–	ercd	–	–	–
iset_flg	33	60	–	–	setptn	flgid	–	ercd	–	–	–
ref_flg	33	70	–	–	–	flgid	pk_rflg	ercd	–	–	–
iref_flg	33	70	–	–	–	flgid	pk_rflg	ercd	–	–	–
clr_flg	33	62	–	–	clrptn	flgid	–	ercd	–	–	–
iclr_flg	33	62	–	–	clrptn	flgid	–	ercd	–	–	–
snd_dtq	32	72	data	–	–	dtqid	–	ercd	–	–	–
psnd_dtq	32	74	data	–	–	dtqid	–	ercd	–	–	–
ipsnd_dtq	33	76	data	–	–	dtqid	–	ercd	–	–	–
fsnd_dtq	32	80	data	–	–	dtqid	–	ercd	–	–	–
ifsnd_dtq	33	82	data	–	–	dtqid	–	ercd	–	–	–
tsnd_dtq	38	tmout	data	tmout	–	dtqid	78	ercd	–	–	–

Synchronization & Communication Function

ServiceCall	INTNo.	Parameter						ReturnParameter			
		FuncCode R0	R1	R2	R3	A0	A1 FuncCode	R0	R1	R2	R3
rcv_dtq	32	84	–	–	–	dtqid	–	ercd	data	–	–
prcv_dtq	32	86	–	–	–	dtqid	–	ercd	data	–	–
iprcv_dtq	33	88	–	–	–	dtqid	–	ercd	data	–	–
trcv_dtq	32	90	tmout	–	tmout	dtqid	–	ercd	data	–	–
ref_dtq	33	92	–	–	–	dtqid	pk_rdtq	ercd	–	–	–
iref_dtq	33	92	–	–	–	dtqid	pk_rdtq	ercd	–	–	–
snd_mbx	32	94	–	–	–	mbxid	pk_msg	ercd	–	–	–
isnd_mbx	33	96	–	–	–	mbxid	pk_msg	ercd	–	–	–
rcv_mbx	32	98	–	–	–	mbxid	–	ercd	pk_msg	–	–
prcv_mbx	33	100	–	–	–	mbxid	–	ercd	pk_msg	–	–
iprcv_mbx	33	100	–	–	–	mbxid	–	ercd	pk_msg	–	–
trcv_mbx	32	102	tmout	–	tmout	mbxid	–	ercd	pk_msg	–	–
ref_mbx	33	104	–	–	–	mbxid	pk_rmbx	ercd	–	–	–
iref_mbx	33	104	–	–	–	mbxid	pk_rmbx	ercd	–	–	–

Interrupt Management Functions

ServiceCall	INTNo.	Parameter	ReturnParameter
		FuncCode R0	R0
loc_cpu	36	–	ercd
iloc_cpu	36	–	ercd
dis_dsp	35	–	ercd
ena_dsp	32	150	ercd
unl_cpu	32	146	ercd
iunl_cpu	33	148	ercd
sns_ctx	33	152	ercd
sns_loc	33	154	ercd
sns_dsp	33	156	ercd
sns_dpn	33	158	ercd

Memorypool Management Functions

ServiceCall	INTNo.	Parameter						ReturnParameter			
		FuncCode R0	R1	R2	R3	A0	A1 FuncCode	R0	R1	R2	R3
get_mpf	32	108	–	–	–	mpfid	–	ercd	p_blk	–	–
pget_mpf	33	106	–	–	–	mpfid	–	ercd	p_blk	–	–
ipget_mpf	33	106	–	–	–	mpfid	–	ercd	p_blk	–	–
tget_mpf	32	110	tmout	–	tmout	mpfid	–	ercd	p_blk	–	–
rel_mpf	32	112	blk	–	–	mpfid	–	ercd	–	–	–
irel_mpf	33	114	blk	–	–	mpfid	–	ercd	–	–	–
ref_mpf	33	116	–	–	–	mpfid	pk_rmpf	ercd	–	–	–
iref_mpf	33	116	–	–	–	mpfid	pk_rmpf	ercd	–	–	–
pget_mpl	32	118	–	–	–	mplid	–	ercd	p_blk	–	–
rel_mpl	32	120	blk	–	–	mplid	–	ercd	–	–	–
ref_mpl	33	122	–	–	–	mplid	pk_rmpl	ercd	–	–	–
iref_mpl	33	122	–	–	–	mplid	pk_rmpl	ercd	–	–	–

Time Management Functions

ServiceCall	INTNo.	Parameter					ReturnParameter
		FuncCode R0	R1	R3	A0	A1 FuncCode	R0
set_tim	33	124	–	–	p_systim	–	ercd
iset_tim	33	124	–	–	p_systim	–	ercd
get_tim	33	126	–	–	p_systim	–	ercd
iget_tim	33	126	–	–	p_systim	–	ercd
sta_cyc	33	128	–	–	cycid	–	ercd
ista_cyc	33	128	–	–	cycid	–	ercd
stp_cyc	33	130	–	–	cycid	–	ercd
istp_cyc	33	130	–	–	cycid	–	ercd
ref_cyc	33	132	–	–	cycid	pk_rcyc	ercd
iref_cyc	33	132	–	–	cycid	pk_rcyc	ercd
dly_tsk	32	44	tmout	tmout	–	–	ercd
sta_alm	33	134	almtim	almtim	almid	–	ercd
ista_alm	33	134	almtim	almtim	almid	–	ercd
stp_alm	33	136	–	–	almid	–	ercd
istp_alm	33	136	–	–	almid	–	ercd
ref_alm	33	138	–	–	almid	pk_ralm	ercd
iref_alm	33	138	–	–	almid	pk_ralm	ercd

System Management Functions

ServiceCall	INTNo.	Parameter		ReturnParameter
		FuncCode R0	A0	R0
ref_ver	33	160	pk_rver	ercd
iref_ver	33	160	pk_rver	ercd

Extended Function(Reset functions)

ServiceCall	INTNo.	Parameter		ReturnParameter
		FuncCode R0	A0	R0
vrst_vdtq	32	192	vdtqid	ercd
vrst_dtq	32	184	dtqid	ercd
vrst_mbx	33	186	mbxid	ercd
vrst_mpf	32	188	mpfid	ercd
vrst_mpl	33	190	mplid	ercd

Extended Function(Long data queue functions)

ServiceCall	INTNo.	Parameter						ReturnParameter			
		FuncCode R0	R1	R2	R3	A0	A1 FuncCode	R0	R1	R2	R3
vsnd_dtq	32	162	data	–	data	vdtqid	–	ercd	–	–	–
vpsnd_dtq	32	164	data	–	data	vdtqid	–	ercd	–	–	–
vipsnd_dtq	33	166	data	–	data	vdtqid	–	ercd	–	–	–
vfsnd_dtq	32	170	data	–	data	vdtqid	–	ercd	–	–	–
vifsnd_dtq	33	172	data	–	data	vdtqid	–	ercd	–	–	–
vtsnd_dtq	38	tmout	data	tmout	data	vdtqid	168	ercd	–	–	–
vrcv_dtq	32	174	–	–	–	vdtqid	–	ercd	data	–	data
vprcv_dtq	32	176	–	–	–	vdtqid	–	ercd	data	–	data
viprcv_dtq	33	178	–	–	–	vdtqid	–	ercd	data	–	data
vtrcv_dtq	32	180	tmout	–	tmout	vdtqid	–	ercd	data	–	data
vref_dtq	33	182	–	–	–	vdtqid	pk_rdtq	ercd	–	–	–
viref_dtq	33	182	–	–	–	vdtqid	pk_rdtq	ercd	–	–	–

Real-time OS for M16C/10,M16C/20,M16C/30,M16C/60,M16C/Tiny, R8C/Tiny Series
M3T-MR30/4 User's Manual

Publication Date: June. 1, 2008 Rev.2.00

Published by: Sales Strategic Planning Div.
Renesas Technology Corp.

Edited by: Application Engineering Department 1
Renesas Solutions Corp.

© 2006,2008. Renesas Technology Corp. and Renesas Solutions Corp.,
All rights reserved. Printed in Japan.

M3T-MR30/4 V.4.00 User's Manual



Renesas Electronics Corporation

1753, Shimonumabe, Nakahara-ku, Kawasaki-shi, Kanagawa 211-8668 Japan

REJ10J1249-0200