

# Smart Configurator for RH850 V1.3.0

## Release Note

### Introduction

Thank you for using the Smart Configurator for RH850.

This document describes the restrictions and points for caution. Read this document before using the product.

### Contents

1. Introduction.....	3
1.1 System requirements.....	3
1.1.1 PC.....	3
1.1.2 Development Environments .....	3
2. Support List .....	4
2.1 Support Devices List.....	4
2.2 Support Components List.....	5
2.3 New support .....	8
3. Changes .....	8
3.1 Correction of issues/limitations.....	8
3.1.1 Fixed the CSI pin setting error issue for CSI Master and CSI Slave component.....	8
3.1.2 Fixed the CSIG receive function wrong generated code issue for CSIG with CSI Master component and CSI Slave component.....	8
3.1.3 Fixed the redundant code issue that the redundant code caused build warning.....	8
3.1.4 Fixed the MSPI slave code issue that inconsistent variable type declaration caused build warning....	9
3.1.5 Fixed the empty macro value issue for AD Converter component.....	10
3.1.6 Fixed CSIH code build warning issue using GHS compiler. ....	10
3.1.7 Fixed the link error issue when DMAC end error interrupt function isn't generated. ....	11
3.2 Specification changes .....	12
3.2.1 Improved the AD convertor to support all physical channels when using 10bit mode or 12 bit mode.	13
3.2.2 Improve the include path declaration in .ipcf file to support IAR Embedded Workbench for RH850 V2.21. ....	13
4. List of RENESAS TOOL NEWS AND TECHNICAL UPDATE .....	14
5. Points for Limitation .....	15
5.1 List of Limitation.....	15
5.2 Details of Limitation .....	15
5.2.1 Note on using DTS .....	15
6. Points for Caution .....	16
6.1 List of Caution.....	16

---

6.2	Details of Caution .....	17
6.2.1	About the I/O define header file.....	17
6.2.2	About loading the project on CS+ .....	17
6.2.3	About the sample projects.....	17
6.2.4	About the decimal point.....	17
6.2.5	Note on pins sharing functions. ....	17
6.2.6	Note on Interrupt Controller resource name.....	18
	Revision History.....	19

## 1. Introduction

Smart Configurator is a utility for combining software to meet your needs. It supports the following three functions related to the embedding of Renesas drivers in your systems: importing middleware, generating driver code, and setting pins.

### 1.1 System requirements

The operating environment is as follows.

#### 1.1.1 PC

- IBM PC/AT compatibles (Windows® 10, Windows® 8.1)
- Processor: 1 GHz or higher (must support hyper-threading, multi-core CPUs)
- Memory capacity: 2 GB or more recommended. Minimum requirement is 1 GB or more (64-bit Windows requires 2 GB or more)
- Hard disk capacity: 200 MB or more spare capacity
- Display: 1024 x 768 or higher resolution, 65,536 or more colors
- All other necessary software environments in addition to Windows OS: Java Runtime Environment

#### 1.1.2 Development Environments

- Renesas electronics Compiler for RH850 [CC-RH] V2.03.00 or later
- GHS Multi V7.1.6 or later
- IAR Embedded Workbench for RH850 V2.21 or later

## 2. Support List

### 2.1 Support Devices List

Below is a list of devices supported by the Smart Configurator for RH850 V1.3.0.

**Table 2-1 Support Devices**

<b>Group (HW Manual number)</b>	<b>PIN</b>	<b>Device name</b>
RH850/F1KM-S1 Group (R01UH0684JJ0100)	48pin	R7F701693, R7F701694, R7F701695
	64pin	R7F701690, R7F701691, R7F701692
	80pin	R7F701687, R7F701688, R7F701689
	100pin	R7F701684, R7F701685, R7F701686
RH850/F1KM-S4 Group (R01UH0684JJ0100)	100pin	R7F701644, R7F701645
	144pin	R7F701646, R7F701647
	176pin	R7F701648, R7F701649
	232pin	R7F701650, R7F701651
RH850/U2A16 Group (R01UH0864EJ0061)	292pin	R7F702300
	516pin	R7F702300
RH850/U2A8 Group (R01UH0864EJ0061)	292pin	R7F702301

## 2.2 Support Components List

Below is a list of Components supported by the Smart Configurator for RH850 V1.3.0.

**Table 2-2 Support Components**

✓: Support, -: Non-support

No	Components	Mode	RH850 F1KM	RH850 U2A	Remarks
1	A/D Converter	-	✓	✓	
2	CSI Master	Master Transmit	✓	-	
		Master Receive	✓	-	
		Master Transmit/Receive	✓	-	
3	CSI Slave	Slave Transmit	✓	-	
		Slave Receive	✓	-	
		Slave Transmit/Receive	✓	-	
4	Data CRC	-	✓	✓	
5	DMA Controller	-	✓	✓	
6	DTS Controller	-	-	✓	
7	Error Control Module	-	-	✓	
8	ATOM Signal Output Mode Compare	-	-	✓	
9	ATOM Signal Output Mode Immediate	-	-	✓	
10	ATOM Signal Output Mode PWM	-	-	✓	
11	ATOM Signal Output Mode Serial	-	-	✓	
12	Dead Time Module	-	-	✓	
13	GTM Clock	-	-	✓	
14	TIM Bit Compression Mode	-	-	✓	
15	TIM Gated Periodic Sampling Mode	-	-	✓	
16	TIM Input Event Mode	-	-	✓	
17	TIM Input Prescaler Mode	-	-	✓	
18	TIM Pulse Integration Mode	-	-	✓	
19	TIM PWM Measurement Mode	-	-	✓	

Table 2-3 Support Components

✓: Support, -: Non-support

No	Components	Mode	RH850 F1KM	RH850 U2A	Remarks
20	TIM Serial Shift Mode	-	-	✓	
21	Time Base Unit	-	-	✓	
22	Interrupt Controller	-	✓	✓	Only table reference method
23	Key Return	-	✓	-	
24	MSPI Master	Transmit	-	✓	No support LVDS mode
		Receive	-	✓	
		Transmit/Receive	-	✓	
25	MSPI Slave	Transmit	-	✓	
		Receive	-	✓	
		Transmit/Receive	-	✓	
26	OS Timer	-	✓	✓	
27	Ports	-	✓	✓	
28	Real-Time Clock	-	✓	✓	
29	RIIC	Master	✓	✓	
		Slave	✓	✓	
30	SCI3 Asynchronous Mode	Transmission	-	✓	
		Reception	-	✓	
		Transmission / Reception	-	✓	
		Multi-processor Transmission	-	✓	
		Multi-processor Reception	-	✓	
		Multi-processor Transmission / Reception	-	✓	
31	SCI3 Clock Synchronous Mode	Transmission	-	✓	
		Reception	-	✓	
		Transmission / Reception	-	✓	
32	Stand-by Controller	-	✓	✓	Only Stop and DeepStop mode
33	Clock Divider	-	✓	✓	
34	Delay Count	-	✓	✓	

Table 2-4 Support Components

✓ : Support, -: Non-support

No	Components	Mode	RH850 F1KM	RH850 U2A	Remarks
35	External Event Count	-	✓	✓	
36	Input Interval Timer	-	✓	✓	
37	Input Period Count Detection	-	✓	✓	
38	Input Position Detection	-	✓	✓	
39	Input Pulse Interval Judgment	-	✓	✓	
40	Input Pulse Interval Measurement	-	✓	✓	
41	Input Signal Width Judgement	-	✓	✓	
42	Input Signal Width Measurement	-	✓	✓	
43	Interval Timer	-	✓	✓	
44	One-Pulse Output	-	✓	✓	
45	One-Shot Pulse output	-	✓	✓	
46	Overflow Interrupt Output (Input Period Count Detection)	-	✓	✓	
47	Overflow Interrupt Output (Width Measurement)	-	✓	✓	
48	PWM Output	-	✓	✓	
49	Triangle PWM Output	-	✓	✓	
50	Triangle PWM Output with Dead Time	-	-	✓	
51	UART Interface	Transmission	✓	✓	
		Reception	✓	✓	
		Transmission / Reception	✓	✓	
52	Window Watchdog Timer	-	✓	✓	

## 2.3 New support

None

## 3. Changes

This chapter describes changes to the Smart Configurator for RH850 V1.3.0.

### 3.1 Correction of issues/limitations

**Table 3-1 List of Correction of issues/limitations**

✓: Applicable, -: Not Applicable

No	Description	RH850 F1KM	RH850 U2A	Remarks
1	Fixed the CSI pin setting error issue for CSI Master and CSI Slave component.	✓	-	
2	Fixed the CSIG receive function wrong generated code issue for CSIG with CSI Master component and CSI Slave component.	✓	-	
3	Fixed the redundant code issue that the redundant code caused build warning.	-	✓	
4	Fixed the MSPI slave code issue that inconsistent variable type declaration caused build warning.	-	✓	
5	Fixed the empty macro value issue for AD Converter component.	-	✓	
6	Fixed CSIH code build warning issue using GHS compiler.	✓	-	
7	Fixed the link error issue when DMAC end error interrupt function isn't generated.	-	✓	

#### 3.1.1 Fixed the CSI pin setting error issue for CSI Master and CSI Slave component.

When using CSI master or CSI slave as transmit mode or transmit/receive mode, data cannot be sent correctly because CSIGNSOand CSIHmSOpin setting code is wrong.

Please refer to the document number [R20TS0569](#) of RENESAS TOOL NEWS.

This issue has been fixed from SC for RH850 V1.3.0.

#### 3.1.2 Fixed the CSIG receive function wrong generated code issue for CSIG with CSI Master component and CSI Slave component.

When using CSI master or CSI slave as receive mode or transmit/receive mode, transmission process does not work from the second time because the variable of receive count initialization is wrong.

Please refer to the document number [R20TS0576](#) of RENESAS TOOL NEWS.

This issue has been fixed from SC for RH850 V1.3.0.

#### 3.1.3 Fixed the redundant code issue that the redundant code caused build warning.

When all the interrupts on RH850U2A RTC page are not selected, "R\_Config\_RTCA0\_disable\_interrupt()" is generated and cause build warning,

This issue has been fixed from SC for RH850 1.3.0.

### 3.1.4 Fixed the MSPI slave code issue that inconsistent variable type declaration caused build warning.

When using “Fixed buffer memory mode” and set “Frame length” to number smaller than 8, the generated code “R\_Config\_MSPIIn\_Receive” has a data type conversion problem:

The screenshot shows the 'Channel setting' tab in the Smart Configurator. Under 'Basic setting', 'Channel mode' is set to 'Fixed buffer memory mode' and 'Frame length' is set to 7. Both are highlighted with red boxes. Other settings include 'FIFO buffer stage size' at 8, 'Start address' at 0x0000, 'Delay time' at 1, 'Idle time' at 1, and 'Communication direction' at MSB.

```
MD_STATUS R_Config_MSPI01_Receive(uint8_t* rx_buf)
{
    uint16_t count;
    uint8_t * addr = (uint16_t *) (_MSPI0_RAM_ADDRESS + _MSPI0_RAM_START_ADDRESS);
    for (count = 0U; count < _MSPI0_FRAME_COUNT; count = count + 1U)
    {
        *rx_buf++ = *addr++;
    }

    return MD_OK;
}
```

This issue has been fixed from SC for RH850 1.3.0.

**3.1.5 Fixed the empty macro value issue for AD Converter component.**

When using ADCJ0 and set the following setting, some macro value in Config\_ADCJ0.h is empty:

```
#define _ADC0_AVSEG_E0VCC_INPUT_CHANNEL (0xUL)
#define _ADC0_AVSEG_E0VCC_RECOVERY_COUNT (0x00000100UL)
#define _ADC0_AVSEG_E0VCC_ERROR_COUNT (0x0000001UL)
#define _ADC0_AVSEG_AWOVDD_INPUT_CHANNEL (0xUL)
#define _ADC0_AVSEG_AWOVDD_RECOVERY_COUNT (0x00000100UL)
#define _ADC0_AVSEG_AWOVDD_ERROR_COUNT (0x0000001UL)
#define _ADC0_AVSEG_ISOVDV_INPUT_CHANNEL (0xUL)
#define _ADC0_AVSEG_ISOVDV_RECOVERY_COUNT (0x00000100UL)
#define _ADC0_AVSEG_ISOVDV_ERROR_COUNT (0x0000001UL)
```

This issue has been fixed from SC for RH850 1.3.0.

**3.1.6 Fixed CSIH code build warning issue using GHS compiler.**

When creating project using RH850F1KM-S4 100 pin, and creating CSI Master component for CSIH1, the generated code has a GHS build warning.

This issue has been fixed from SC for RH850 1.3.0.

**3.1.7 Fixed the link error issue when DMAC end error interrupt function isn't generated.**

When using DMA Controller, "Enable transfer end interrupt" is not selected, the generated code has a build error.

This issue has been fixed from SC for RH850 1.3.0.

## 3.2 Specification changes

**Table 3-2 List of Specification changes**

✓ : Applicable, -: Not Applicable

No	Description	RH850F 1KM	RH850 U2A	Remarks
1	Improved the AD convertor to support all physical channels when using 10bit mode or 12 bit mode.	✓	-	
2	Improved the include path declaration in .ipcf file to support IAR Embedded Workbench for RH850 V2.21.	✓	✓	

### 3.2.1 Improved the AD convertor to support all physical channels when using 10bit mode or 12 bit mode.

When using A/D Converter as 10bit mode or 12 mode, all physical channels (ADCA0I0 to ADCA0I15, ADCA0I0S to ADCA0I19S ) can be selected.

Basic setting

Setting Scan group 1

Common operation setting

12/10 bit select mode 12-bit mode

Sampling control setting

Sampling time 18 cycles

Scan group selecting

Use scan group 1

Start pointer of virtual channel 0

End pointer of virtual channel 0

Use scan group 2

Start pointer of virtual channel 0

End pointer of virtual channel 0

Use scan group 3

Start pointer of virtual channel 0

End pointer of virtual channel 0

Virtual channel setting

Virtual channel 00

Physical channel select ADCA0I0S

Upper limit/lower limit table select Not checked

Enable virtual channel end interrupt

### 3.2.2 Improve the include path declaration in .ipcf file to support IAR Embedded Workbench for RH850 V2.21.

When using "IAR RH850 Toolchain", the "<includePath> part" in ".ipcf" file is updated:

```
<includePath>  
<path>${PROJ_DIR}\src\smc_gen\Config_ADCA0</path>  
<path>${PROJ_DIR}\src\smc_gen\general</path>  
<path>${PROJ_DIR}\src\smc_gen\r_pincfg</path>  
</includePath>
```

#### 4. List of RENESAS TOOL NEWS AND TECHNICAL UPDATE

Below is a list of notifications delivered by RENESAS TOOL NEWS and TECHNICAL UPDATE.

Issue date	Document No.	Description	Applicable MCUs	Fixed version
Mar.16, 2019	R20TS0407	1. Build error occurs when setting not to generate clocks 2. RAM size display error <a href="https://www.renesas.com/document/tnn/notes-rh850-smart-configurator">https://www.renesas.com/document/tnn/notes-rh850-smart-configurator</a>	RH850F1 KM	V1.2.0
Jun. 01, 2016	R20TS0431	When using PLL0 Clock <a href="https://www.renesas.com/document/tnn/notes-rh850-smart-configurator-0">https://www.renesas.com/document/tnn/notes-rh850-smart-configurator-0</a>	RH850F1 KM	V1.2.0
Jul.01, 2019	R20TS0441	1. When using PWM output and triangle PWM output slave setting 2. Port input buffer setting error 3. Port drive strength control setting error 4. Port register setting error <a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850</a>	RH850F1 KM	V1.2.0
Aug.01, 2019	R20TS0463	1. When using the input pulse interval measurement function 2. When using the Clocked Serial Interface in Master mode <a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-0">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-0</a>	RH850F1 KM	V1.2.0
Oct.16, 2019	R20TS0500	1. When using data CRC 2. When using one-pulse outputs <a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-1">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-1</a>	RH850F1 KM	V1.2.0
Apr.16, 2020	R20TS0569	When using CSI master and CSI slave <a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-2">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-2</a>	RH850F1 KM	V1.3.0
May.16, 2020	R20TS0576	When using CSI master and CSI slave <a href="https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-3">https://www.renesas.com/document/tnn/notes-smart-configurator-rh850-3</a>	RH850F1 KM	V1.3.0

## 5. Points for Limitation

This section describes points for limitation regarding the Smart Configurator for RH850 V1.3.0.

### 5.1 List of Limitation

**Table 5-1 List of Limitation**

✓ : Applicable, -: Not Applicable

No	Description	RH850 F1KM	RH850 U2A	Remarks
1	Note on using DTS	-	✓	

### 5.2 Details of Limitation

#### 5.2.1 Note on using DTS

Missing function prototypes in generated code when using DTS components. Manually add the following function prototype to the user code editing area located under Global functions in r\_cg\_dts.h of the generated code.

Additional function prototype:

- void R\_DTS\_Suspend(void);
- void R\_DTS\_Resume(void);

Source example

```

; /*****
; Global functions
; *****/
; /* Start user code for function. Do not edit comment generated here */
; void R_DTS_Suspend(void);
; void R_DTS_Resume(void);
; /* End user code. Do not edit comment generated here */
;

```

## 6. Points for Caution

This section describes points for caution regarding the Smart Configurator for RH850 V1.3.0.

### 6.1 List of Caution

**Table 6-1 List of Caution**

✓ : Applicable, -: Not Applicable

No	Description	RH850 F1KM	RH850 U2A	Remarks
1	About the I/O define header file	✓	✓	
2	About loading the project on CS+	✓	✓	
3	About the sample projects	✓	-	
4	About the decimal point	✓	✓	
5	Note on pins sharing functions.	✓	✓	
6	Note on Interrupt Controller resource name	✓	-	

## 6.2 Details of Caution

### 6.2.1 About the I/O define header file

Please use Renesas iodef.h for the header file that defines the register. Because RH850 Smart Configurator V1.2.0 outputs code conforming to the definition in Renesas iodef.h, a build error occurs when using the register definition file provided by other environments

### 6.2.2 About loading the project on CS+

When launching RH850 Smart Configurator from CS+, please set 'RH850 Build tool CC-RH plugin' and 'RH850 Build tool GHS CCRH850 plugin' to enable. If these plugins are disabled, the error occurs when CS+ project that includes the setting of RH850 Smart Configurator is loaded.

### 6.2.3 About the sample projects

The RH850 Smart Configurator does not output the processing after resetting the microcontroller (including the startup routine).

Therefore, we provide sample projects that include sample startup routines and other necessary processing so that user applications can be built immediately after peripheral modules are set up using the RH850 Smart Configurator.

Please refer to the user guide for about sample projects.

<https://www.renesas.com/search/keyword-search.html#genre=document&q=r20an0516>

### 6.2.4 About the decimal point

For error-free operation of the RH850 Smart Configurator, use a period (".") as the decimal point and a comma (",") as the digit grouping separator. Which of "." (period), "," (comma) or " " (space) is used as the decimal point or digit grouping separator differs depending on the language setting of the Windows OS that is used. For example, if you use a comma (",") as the decimal point, the RH850 Smart Configurator may not work correctly. This will occur when you are using Windows OS with language set to other than Japanese or English. If you are using the RH850 Smart Configurator on Windows OS with language set to other than Japanese or English, change the language setting to Japanese or English.

### 6.2.5 Note on pins sharing functions.

When function shared pin selects a shared pin, shared pin displays an error.

But the shared pin can be selected correctly and work correctly.

Example) For RH850/U2A RSENT0

Assign RSENT0RX and RSENT0SPCO to the T24 pin

When assigned: T24 pin displays an error

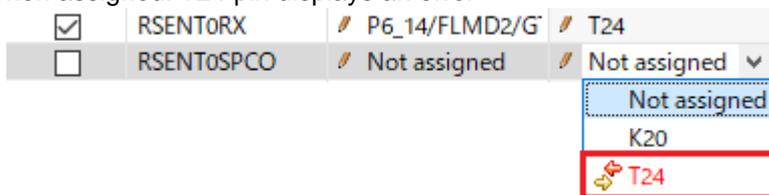


Figure 6-1 pins sharing function sample when assigned

After assignment

<input checked="" type="checkbox"/>	RSENT0RX	P6_14/FLMD2/G	T24
<input checked="" type="checkbox"/>	RSENT0SPCO	P6_14/FLMD2/G	T24

Figure 6-2 pins sharing function sample after assigned

### 6.2.6 Note on Interrupt Controller resource name

In RH850 Smart Configurator V1.2.0, the resource name of the interrupt controller has been changed to "INTC". The resource name of the interrupt controller of the previous version is automatically changed from "ICU" to "INTC".

Therefore, the following file name and macro name are changed.

File name change

Before change	After change
r_cg_icu.h	r_cg_intc.h

Macro name change

File name	Before change	After change
r_smc_interrupt.h	ICU_XXX_PRIORITY	INTC_XXX_PRIORITY

**Revision History**

Rev.	Date	Description	
		Page	Summary
1.00	July.20.19	-	Create new
1.20	Jan.16.20	-	Update to Rev.1.2.0
1.30	Jan.20.21	All	Update to Rev.1.3.0: 1. update format 2. update all changes 3. Page 3, GHS Multi V7.6.1 is changed to GHS Multi V7.1.6

## General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity.

Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

### 2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

### 3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

### 4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

### 5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

### 6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).

### 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

### 8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
  - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
  - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)

## Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

## Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/).