

---

# RX210, RX21A, and RX220 Groups

R01AN1011EJ0111

Rev. 1.11

July 1, 2014

## Pulse Period Measurement Using MTU2a

---

### Abstract

This document describes a method to measure a pulse period input to the input capture input pin (MTIOC0A) using multi-function timer pulse unit 2 (hereinafter referred to as MTU) in the RX210, RX21A, and RX220 Groups.

### Products

- RX210, RX21A, and RX220 Groups

When using this application note with other Renesas MCUs, careful evaluation is recommended after making modifications to comply with the alternate MCU.

## Contents

1. Specifications .....	3
2. Operation Confirmation Conditions .....	4
3. Reference Application Note.....	4
4. Hardware .....	5
4.1 Pins Used.....	5
5. Software .....	5
5.1 Operation Overview .....	6
5.1.1 Measuring a Pulse Period.....	6
5.1.2 Operation When an Input Capture and Overflow Occur Simultaneously .....	7
5.2 File Composition .....	8
5.3 Option-Setting Memory .....	8
5.4 Constants .....	8
5.5 Variables .....	9
5.6 Functions.....	9
5.7 Function Specifications .....	10
5.8 Flowcharts.....	12
5.8.1 Main Processing .....	12
5.8.2 Port Initialization .....	12
5.8.3 Peripheral Function Initialization.....	13
5.8.4 Error Processing.....	14
5.8.5 MTU0 Input Capture A Interrupt Handler.....	14
5.8.6 MTU0 Overflow Interrupt Handler.....	15
6. Applying This Application Note to the RX21A or RX220 Group.....	16
7. Sample Code.....	17
8. Reference Documents.....	17

### 1. Specifications

Using the input capture function of the MTU, measure the period of two consecutive rising edges of the pulse input to the MTIOC0A pin. Measurement starts from the first rising edge of the input pulse and a period is calculated from the second rising edge.


Details

- Resolution: 160 ns
- Maximum measurable period: Approximately 687 seconds

Table 1.1 lists the Peripheral Function and Its Application and Figure 1.1 shows the Connection Diagram.

**Table 1.1 Peripheral Function and Its Application**

Peripheral Function	Application
MTU2a channel 0 (hereinafter referred to as MTU0)	Measure a pulse period

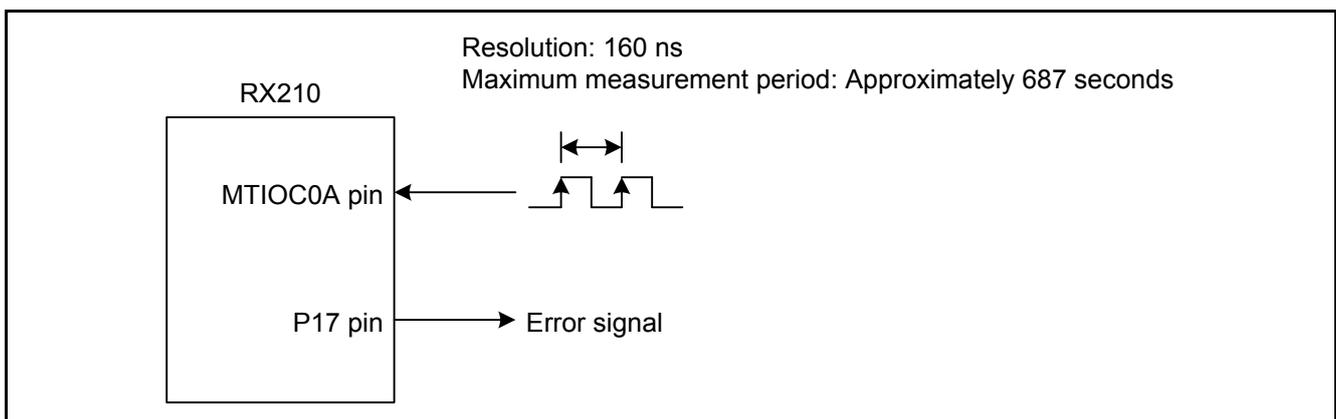

**Figure 1.1 Connection Diagram**

## 2. Operation Confirmation Conditions

The sample code accompanying this application note has been run and confirmed under the conditions below.

**Table 2.1 Operation Confirmation Conditions**

Item	Contents
MCU used	R5F52108ADFP (RX210 Group)
Operating frequencies	- Main clock: 20 MHz - PLL: 100 MHz (main clock divided by 2 and multiplied by 10) - System clock (ICLK): 50 MHz (PLL divided by 2) - Peripheral module clock B (PCLKB): 25 MHz (PLL divided by 4)
Operating voltage	5.0 V
Integrated development environment	Renesas Electronics Corporation High-performance Embedded Workshop Version 4.09.01
C compiler	Renesas Electronics Corporation C/C++ Compiler Package for RX Family V.1.02 Release 01 Compile options -cpu=rx200 -output=obj="\$(CONFIGDIR)\\$(FILELEAF).obj" -debug -nologo (The default setting is used in the integrated development environment.)
iodefine.h version	Version 1.2A
Endian	Little endian
Operating mode	Single-chip mode
Processor mode	Supervisor mode
Sample code version	Version 1.10
Board used	Renesas Starter Kit for RX210 (product part no.:R0K505210C000BE)

## 3. Reference Application Notes

For additional information associated with this document, refer to the following application notes.

- RX210 Group Initial Setting Rev. 2.00 (R01AN1002EJ)
- RX21A Group Initial Setting Rev. 1.10 (R01AN1486EJ)
- RX220 Group Initial Setting Rev. 1.10 (R01AN1494EJ)

The initial setting functions in the reference application notes are used in the sample code in this application note. The revision numbers of the reference application notes are current as of when this application note was made. However the latest version is always recommended. Visit the Renesas Electronics Corporation website to check and download the latest version.

## 4. Hardware

### 4.1 Pins Used

Table 4.1 lists the Pins Used and Their Functions.

The pins described here are for 100-pin products. When the product with less than 100-pin is used, select appropriate pins for the product used.

**Table 4.1 Pins Used and Their Functions**

Pin Name	I/O	Function
PB3/MTIOC0A	Input	Input a measurement pulse
P17	Output	Output an error signal

## 5. Software

This software calculates the period between two consecutive rising edges of a pulse input to the MTIOC0A pin. The number of overflows is counted in the overflow interrupt handler of the MTU0.TCNT register. When the number of overflows exceeds 65,535, an error signal is output and measurement stops. The pulse period is calculated in the MTU0 input capture A interrupt handler based on the number of overflows and the MTU0.TGRA register value.

Formula for calculating a pulse period:  $160 \text{ ns} \times (\text{number of overflows} \times 10000\text{h} + \text{MTU0.TGRA})$

Below are the settings for the peripheral functions used in the software.

### MTU0

- Count clock: Rising edge of PCLKB/4 (PCLKB = 25 MHz)
- Operating mode: Normal mode
- Synchronous operation: Not used
- Counter clear: Input capture of TGRA
- Timer general register (TGRA): Use as the input capture register  
Input capture at a rising edge of the MTIOC0A pin

### Interrupts

- Input capture A interrupt (TGIA0)
  - Interrupt priority level: 3
  - Interrupt source: MTU0.TGRA input capture
- Overflow interrupt (TCIV0)
  - Interrupt priority level: 4
  - Interrupt source: MTU0.TCNT overflow

### 5.1 Operation Overview

#### 5.1.1 Measuring a Pulse Period

- (1) When the TSTR.CST0 bit is set to 1, the MTU0 counter starts counting.
- (2) When the MTIOC0A pin level changes from low to high, the MTU0.TCNT register value is transferred to the MTU0.TGRA register and the counter is cleared. At the same time, an MTU0 input capture A interrupt request is generated.
- (3) In the input capture A interrupt handler, the measurement start flag is set to 1 (measurement starts) and the number of overflows is cleared.
- (4) When the MTIOC0A pin level changes from low to high, the same operation as (2) is performed.
- (5) A pulse period is calculated (pulse period 1 in Figure 5.1) based on the number of overflows of the MTU0.TCNT register (0 in (5) of Figure 5.1) and the MTU0.TGRA register value ((B) in Figure 5.1) in the input capture A interrupt handler. Then the number of overflows is cleared.
- (6) When the MTU0.TCNT register overflows, an overflow interrupt request is generated.
- (7) The number of overflows is counted in the overflow interrupt handler.
- (8) When the MTIOC0A pin level changes from low to high, the same operation as (2) is performed.
- (9) A pulse period is calculated (pulse period 2 in Figure 5.1) based on the number of overflows in the MTU0.TCNT register (1 in (9) of Figure 5.1) and the MTU0.TGRA register value ((C) in Figure 5.1) in the input capture A interrupt handler. Then the number of overflows is cleared.

Figure 5.1 shows the Timing Diagram of the Pulse Period Measurement. (1) to (9) in the figure correspond to (1) to (9) in the description above.

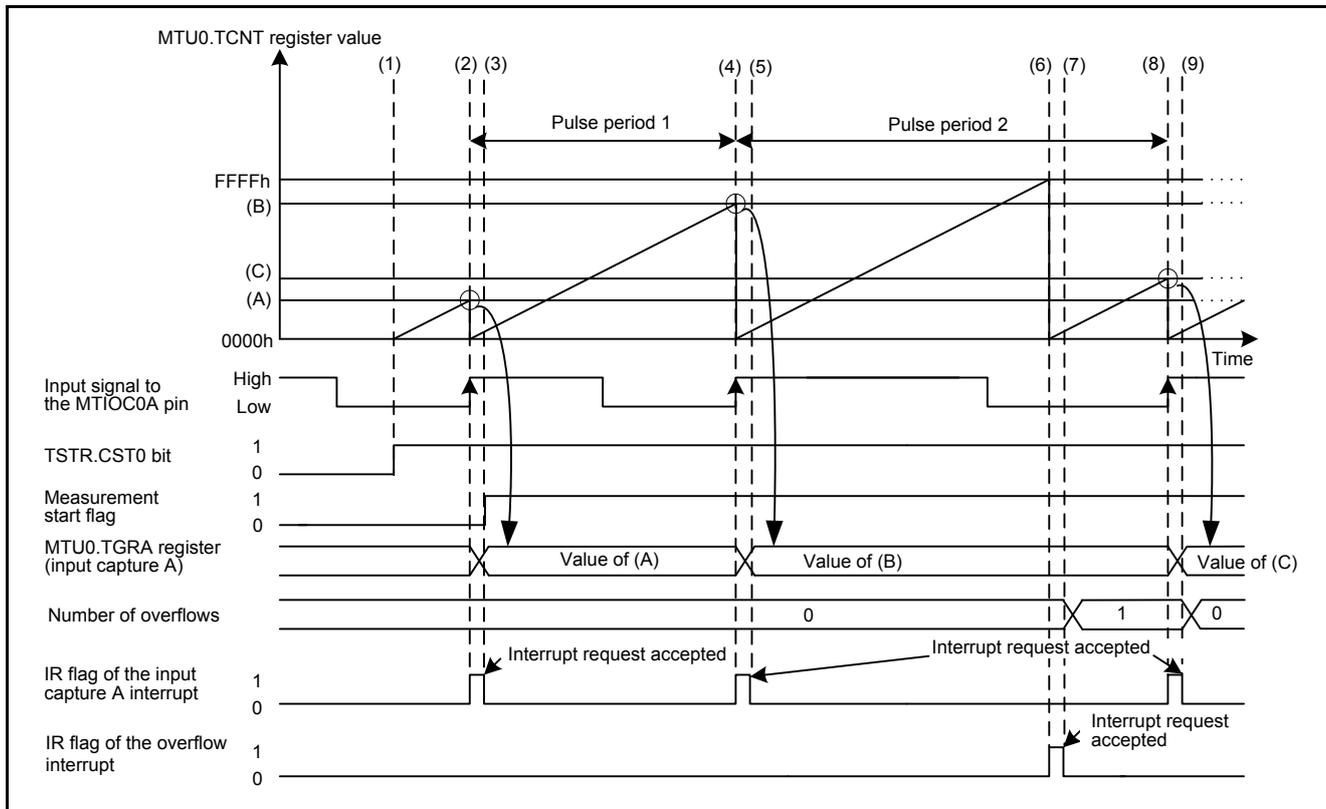


Figure 5.1 Timing Diagram of the Pulse Period Measurement

5.1.2 Operation When an Input Capture and Overflow Occur Simultaneously

- (1) When a rising edge occurs on the signal input to the MTIOC0A pin while the MTU0.TCNT register value is FFFFh, the MTU0.TCNT register is cleared and the input capture A interrupt request is generated after FFFFh in the MTU0.TCNT register is transferred to the MTU0.TGRA register.
- (2) In the input capture A interrupt handler, the number of overflows is cleared.
- (3) When the MTU0.TCNT register value overflows while an interrupt handler (hereinafter referred to as interrupt handler A) other than the overflow interrupt handler and input capture A interrupt handler is being executed, the overflow interrupt handler is delayed.
- (4) When a rising edge occurs on the signal input to the MTIOC0A pin while interrupt handler A is being executed, the MTU0.TCNT register value is transferred to the MTU0.TGRA register and the input capture A interrupt request is generated (input capture A interrupt handler is delayed).
- (5) When interrupt handler A is completed, the overflow interrupt which has the higher interrupt priority level is executed first. In the overflow interrupt handler, the number of overflows increments by 1. In the input capture A interrupt handler which is subsequently accepted, the pulse period is calculated. Then the number of overflows is cleared.

Figure 5.2 shows the Timing Diagram When an Input Capture and Overflow Occur Simultaneously. (1) to (5) in the figure correspond to (1) to (5) in the description above.

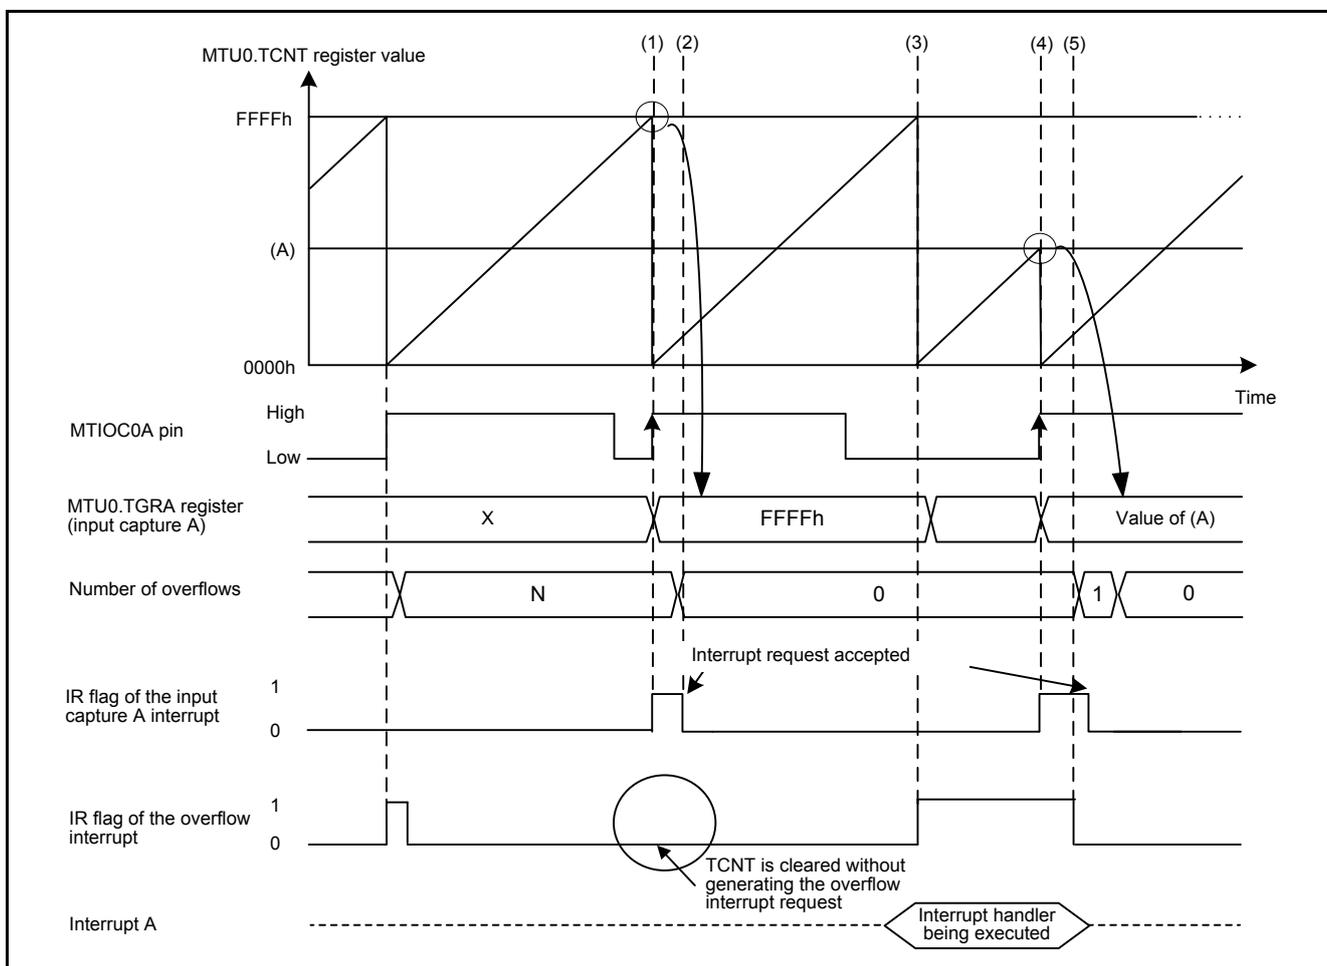


Figure 5.2 Timing Diagram When an Input Capture and Overflow Occur Simultaneously

Notes when embedding the sample codes

When embedding the sample code of this application note in the user system, note the following:

- When an interrupt used in this application note is delayed for a prolonged time due to other interrupt handlers, the sample code may not be executed properly.
- When the measured pulse period is short, the software cannot perform the processes in time and the pulse period cannot be measured properly.

## 5.2 File Composition

Table 5.1 lists the Files Used in the Sample Code. Files generated by the integrated development environment are not included in this table.

**Table 5.1 Files Used in the Sample Code**

File Name	Outline	Remarks
main.c	Main processing	
r_init_stop_module.c	Stop processing for active peripheral functions after a reset	
r_init_stop_module.h	Header file for r_init_stop_module.c	
r_init_non_existent_port.c	Nonexistent port initialization	
r_init_non_existent_port.h	Header file for r_init_non_existent_port.c	
r_init_clock.c	Clock initialization	
r_init_clock.h	Header file for r_init_clock.c	

## 5.3 Option-Setting Memory

Table 5.2 lists the Option-Setting Memory Configured in the Sample Code. When necessary, set a value suited to the user system.

**Table 5.2 Option-Setting Memory Configured in the Sample Code**

Symbol	Address	Setting Value	Contents
OFS0	FFFF FF8Fh to FFFF FF8Ch	FFFF FFFFh	The IWDT is stopped after a reset. The WDT is stopped after a reset.
OFS1	FFFF FF8Bh to FFFF FF88h	FFFF FFFFh	The voltage monitor 0 reset is disabled after a reset. HOCO oscillation is disabled after a reset.
MDES	FFFF FF83h to FFFF FF80h	FFFF FFFFh	Little endian

## 5.4 Constants

Table 5.3 lists the Constants Used in the Sample Code.

**Table 5.3 Constants Used in the Sample Code**

Constant Name	Setting Value	Contents
P_OVF_ERR	PORT1.PODR.BIT.B7	Port output data register for error signal output
PD_OVF_ERR	PORT1.PDR.BIT.B7	Port direction register for error signal output

## 5.5 Variables

Table 5.4 lists the Global Variables.

**Table 5.4 Global Variables**

Type	Variable Name	Contents	Function Used
unsigned short	mtu0_ovf_cnt	Overflow counter of the MTU0.TCNT register	Excep_MTU0_TGIA0, Excep_MTU0_TCIV0
unsigned long	pulse_cnt	Pulse period measurement counter	Excep_MTU0_TCIV0
unsigned char	start_flag	Measurement start flag 0: Measurement stopped 1: Measurement starts	Excep_MTU0_TGIA0, Excep_MTU0_TCIV0
unsigned char	error_flag	Measurement error flag 0: Normal 1: Error	Excep_MTU0_TGIA0

## 5.6 Functions

Table 5.5 lists the Functions Used in the Sample Code.

**Table 5.5 Functions Used in the Sample Code**

Function Name	Outline
main	Main processing
port_init	Port initialization
R_INIT_StopModule	Stop processing for active peripheral functions after a reset
R_INIT_NonExistentPort	Nonexistent port initialization
R_INIT_Clock	Clock initialization
peripheral_init	Peripheral function initialization
error_proc	Error processing
Excep_MTU0_TGIA0	MTU0 input capture A interrupt handler
Excep_MTU0_TCIV0	MTU0 overflow interrupt handler

## 5.7 Function Specifications

The following tables list the sample code function specifications.

main	
<b>Outline</b>	Main processing
<b>Header</b>	None
<b>Declaration</b>	void main(void)
<b>Description</b>	Start the count operation for MTU0 after initialization.
<b>Arguments</b>	None
<b>Return Value</b>	None
port_init	
<b>Outline</b>	Port initialization
<b>Header</b>	None
<b>Declaration</b>	void port_init(void)
<b>Description</b>	Initialize ports.
<b>Arguments</b>	None
<b>Return Value</b>	None
R_INIT_StopModule	
<b>Outline</b>	Stop processing for active peripheral functions after a reset
<b>Header</b>	r_init_stop_module.h
<b>Declaration</b>	void R_INIT_StopModule(void)
<b>Description</b>	Configure the setting to enter the module-stop state.
<b>Arguments</b>	None
<b>Return Value</b>	None
<b>Remarks</b>	Transition to the module-stop state is not performed in the sample code. For details on this function, refer to the Initial Setting application note for the product used.
R_INIT_Non_ExistentPort	
<b>Outline</b>	Nonexistent port initialization
<b>Header</b>	r_init_non_existent_port.h
<b>Declaration</b>	void R_INIT_NonExistentPort(void)
<b>Description</b>	Initialize the port direction registers for ports that do not exist in products with less than 100 pins.
<b>Arguments</b>	None
<b>Return Value</b>	None
<b>Remarks</b>	The number of pins in the sample code is set for the 100-pin package (PIN_SIZE=100). After this function is called, when writing in byte units to the PDR registers or PODR registers which have nonexistent ports, set the corresponding bits for nonexistent ports as follows: set the I/O select bits in the PDR registers to 1 and set the output data store bits in the PODR registers to 0. For details on this function, refer to the Initial Setting application note for the product used.

---

R_INIT_Clock	
<b>Outline</b>	Clock initialization
<b>Header</b>	r_init_clock.h
<b>Declaration</b>	void R_INIT_Clock(void)
<b>Description</b>	Initialize clocks.
<b>Arguments</b>	None
<b>Return Value</b>	None
<b>Remarks</b>	The sample code selects processing which uses PLL as the system clock without using the sub-clock. For details on this function, refer to the Initial Setting application note for the product used.

---

peripheral_init	
<b>Outline</b>	Peripheral function initialization
<b>Header</b>	None
<b>Declaration</b>	void peripheral_init(void)
<b>Description</b>	Initialize peripheral functions used.
<b>Arguments</b>	None
<b>Return Value</b>	None

---

error_proc	
<b>Outline</b>	Error processing
<b>Header</b>	None
<b>Declaration</b>	void error_proc(void)
<b>Description</b>	Output an error signal and enter an infinite loop.
<b>Arguments</b>	None
<b>Return Value</b>	None

---

Excep_MTU0_TGIA0	
<b>Outline</b>	MTU0 input capture A interrupt handler
<b>Header</b>	None
<b>Declaration</b>	void Excep_MTU0_TGIA0(void)
<b>Description</b>	When the measurement start flag is 1 (measurement starts), calculate a pulse period and reset the overflow counter.
<b>Arguments</b>	None
<b>Return Value</b>	None

---

Excep_MTU0_TCIV0	
<b>Outline</b>	MTU0 overflow interrupt handler
<b>Header</b>	None
<b>Declaration</b>	void Excep_MTU0_TCIV0(void)
<b>Description</b>	When the measurement start flag is 1 (measurement starts), the number of overflows is counted. When the number of overflows exceeds 65535, the MCU enters error processing.
<b>Arguments</b>	None
<b>Return Value</b>	None

---

### 5.8 Flowcharts

#### 5.8.1 Main Processing

Figure 5.3 shows the Main Processing.

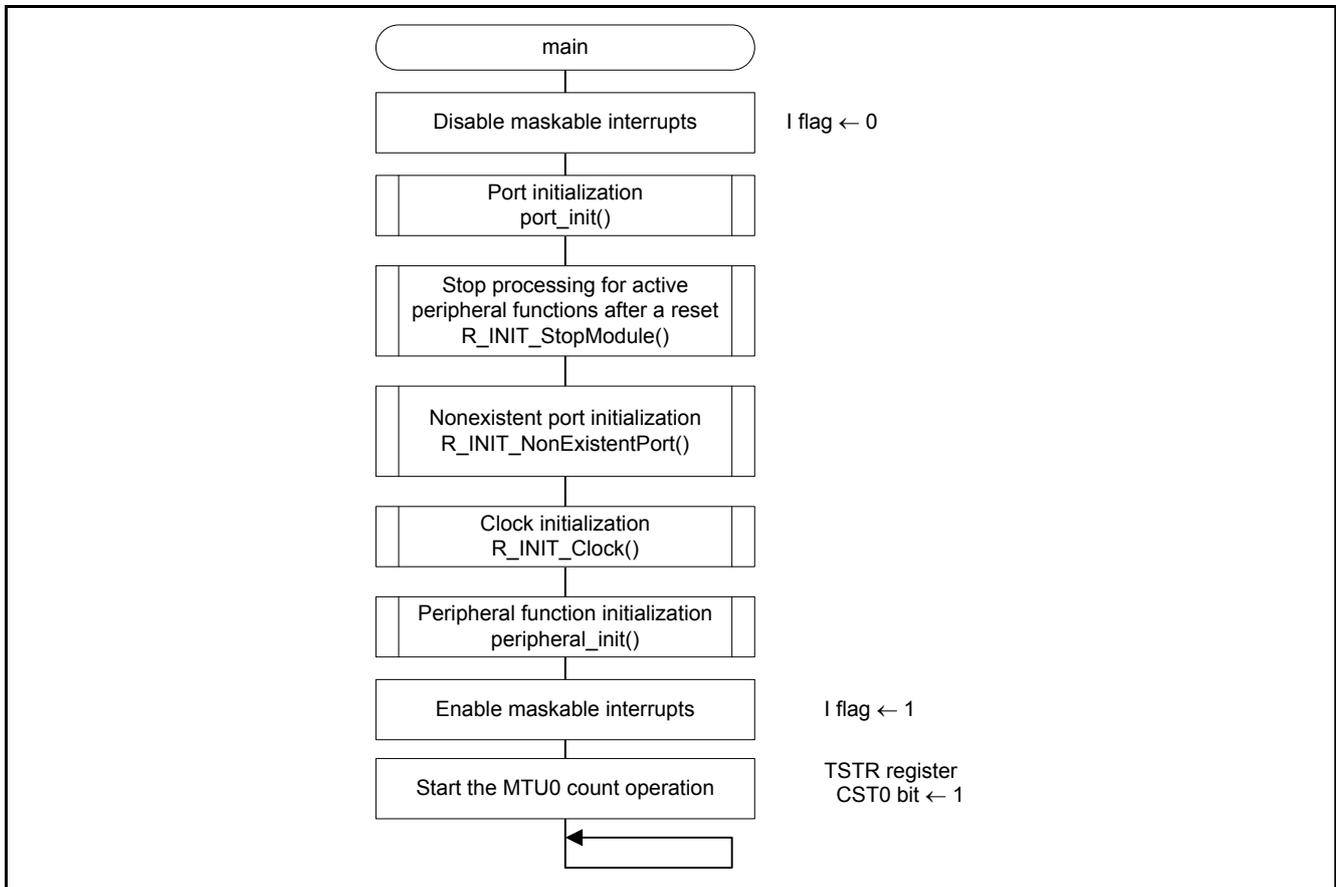


Figure 5.3 Main Processing

#### 5.8.2 Port Initialization

Figure 5.4 shows the Port Initialization.

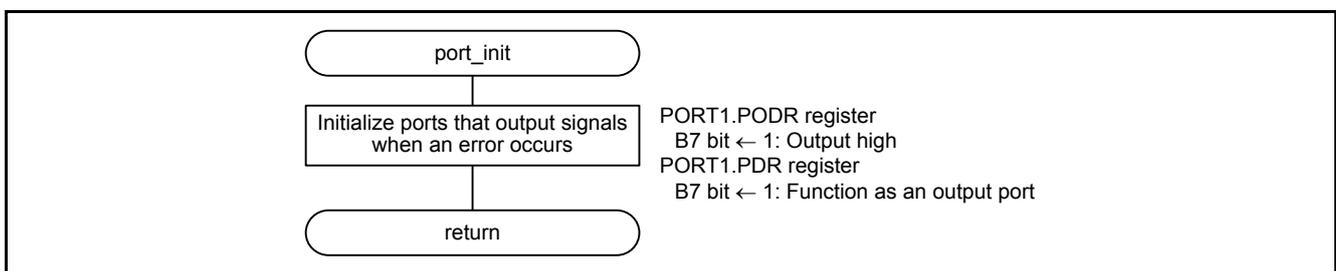


Figure 5.4 Port Initialization

5.8.3 Peripheral Function Initialization

Figure 5.5 shows the Peripheral Function Initialization.

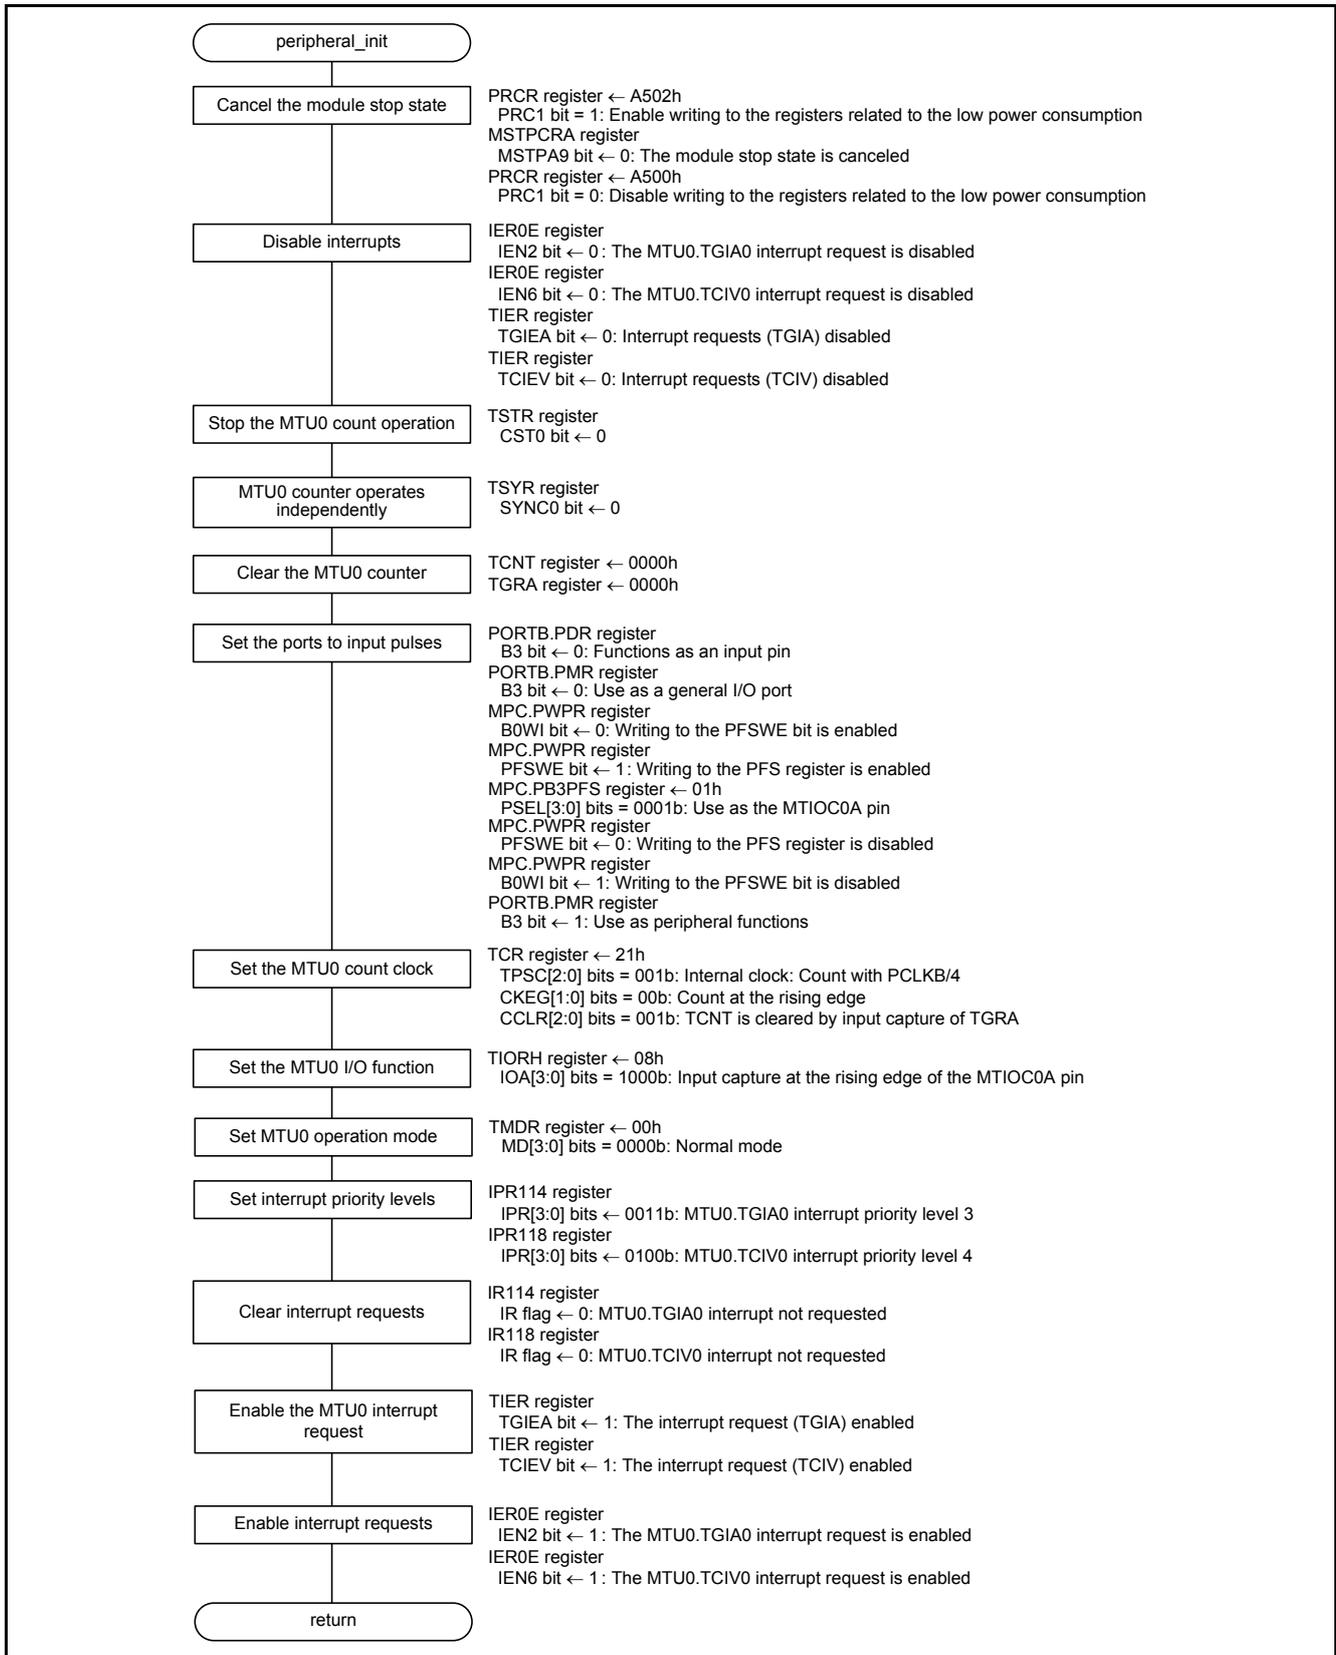


Figure 5.5 Peripheral Function Initialization

5.8.4 Error Processing

Figure 5.6 shows the Error Processing.

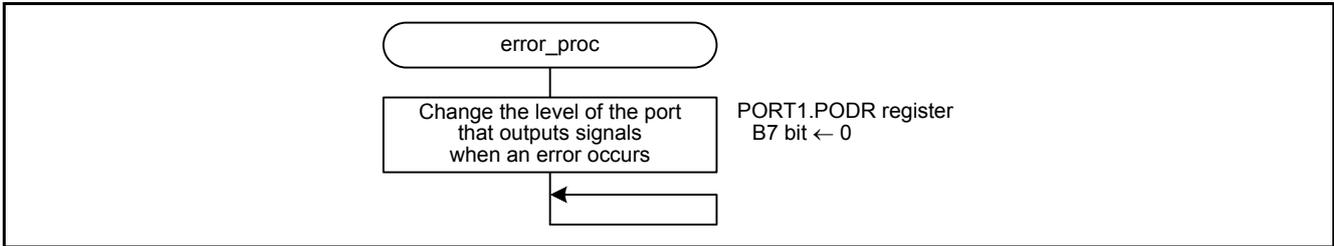


Figure 5.6 Error Processing

5.8.5 MTU0 Input Capture A Interrupt Handler

Figure 5.7 shows the MTU0 Input Capture A Interrupt Handler.

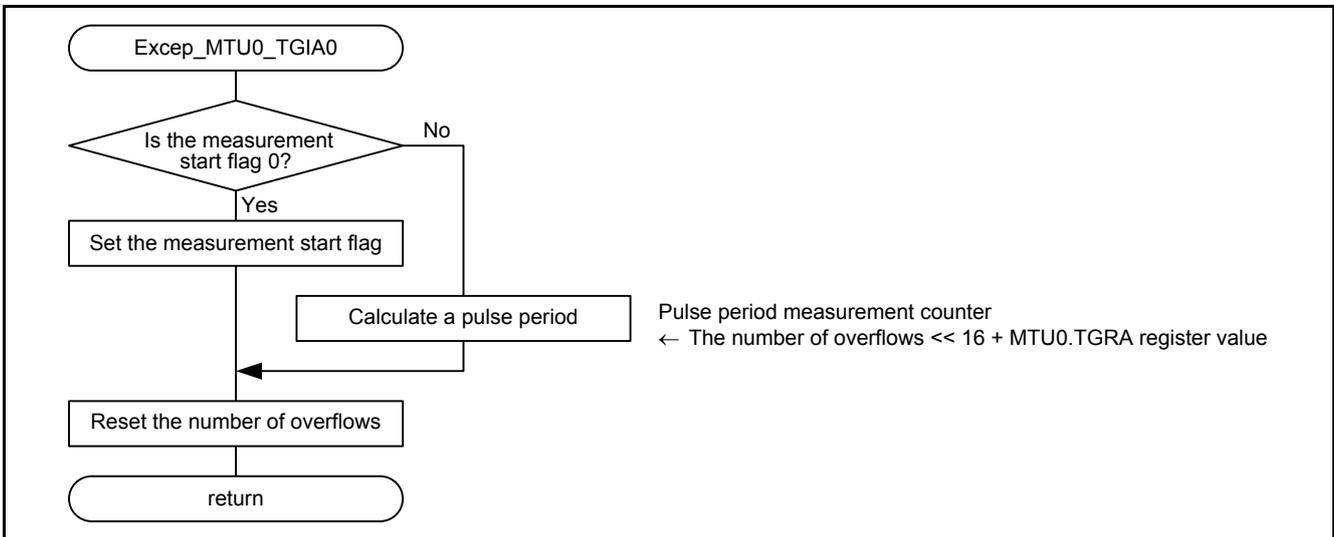


Figure 5.7 MTU0 Input Capture A Interrupt Handler

### 5.8.6 MTU0 Overflow Interrupt Handler

Figure 5.8 shows the MTU0 Overflow Interrupt Handler.

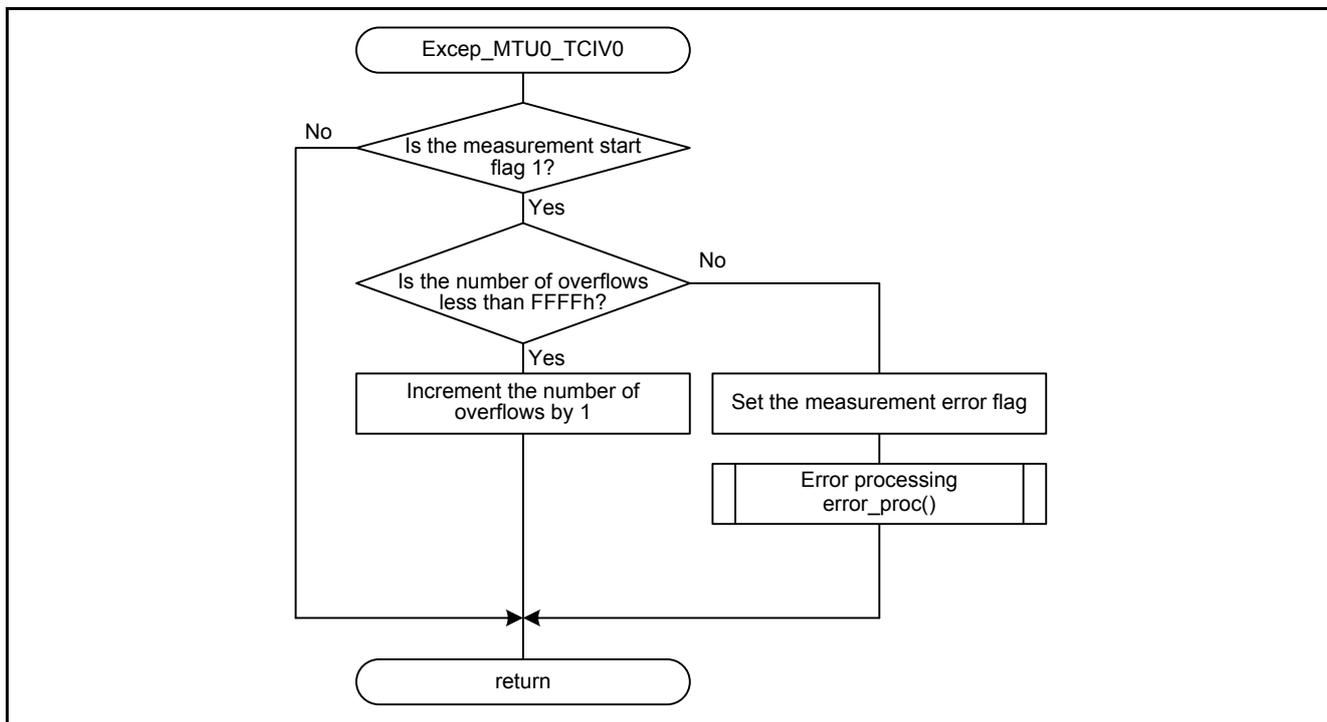


Figure 5.8 MTU0 Overflow Interrupt Handler

## 6. Applying This Application Note to the RX21A or RX220 Group

The sample code accompanying this application note has been confirmed to operate with the RX210 Group. To make the sample code operate with the RX21A or RX220 Group, use this application note in conjunction with the Initial Setting application note for each group.

For details on using this application note with the RX21A and RX220 Groups, refer to “5. Applying the RX210 Group Application Note to the RX21A Group” in the RX21A Group Initial Setting application note, and “4. Applying the RX210 Group Application Note to the RX220 Group” in the RX220 Group Initial Setting application note.

## 7. Sample Code

Sample code can be downloaded from the Renesas Electronics website.

## 8. Reference Documents

User's Manual: Hardware

RX210 Group User's Manual: Hardware Rev.1.50 (R01UH0037EJ)

RX21A Group User's Manual: Hardware Rev.1.00 (R01UH0251EJ)

RX220 Group User's Manual: Hardware Rev.1.10 (R01UH0292EJ)

The latest versions can be downloaded from the Renesas Electronics website.

Technical Update/Technical News

The latest information can be downloaded from the Renesas Electronics website.

User's Manual: Development Tools

RX Family C/C++ Compiler Package V.1.01 User's Manual Rev.1.00 (R20UT0570EJ)

The latest version can be downloaded from the Renesas Electronics website.

## Website and Support

Renesas Electronics website

<http://www.renesas.com>

Inquiries

<http://www.renesas.com/contact/>

<b>REVISION HISTORY</b>	RX210, RX21A, and RX220 Groups Application Note Pulse Period Measurement Using MTU2a
-------------------------	---

Rev.	Date	Description	
		Page	Summary
1.00	Sep. 1, 2012	—	First edition issued
1.10	Mar. 1, 2013	1	Added details in the Products
		4	Table 2.1 Operation Confirmation Conditions: Updated information
		5	4.1 Pins Used: Added the explanation 5 Software: Changed interrupt priority levels of input capture A interrupt (TGIA0) and overflow interrupt (TCIV0)
		6	5.1.1 Measuring a Pulse Period: Changed explanations.
		7	5.1.2 Operation When an Input Capture and Overflow Occur Simultaneously: Changed explanations Figure 5.2: Revised
		8	File names revised
		9	Table 5.4 Global Variables: Changed function names in the Function Used Table 5.5 Functions Used in the Sample Code: Changed function names
		10	5.7 Function Specifications: - R_INIT_StopModule: Added the specification - Changed names and the explanations of the following functions: - non_existent_port_init to R_INIT_NonExistentPort - clock_init to R_INIT_Clock
		12	Figure 5.3: Added R_INIT_StopModule. Changed the names of the following functions: - non_existent_port_init to R_INIT_NonExistentPort - clock_init to R_INIT_Clock
		13	Figure 5.5: Changed interrupt priority levels of input capture A interrupt (TGIA0) and overflow interrupt (TCIV0) Fixed typo in MPC.PB3PFS register (PSEL bits)
		14	Figure 5.7: Changed a function name, and the processing. Figure 5.8: Changed a function name
		15	7. Reference Documents: Updated the revision of the User's Manual: Hardware
		1.11	July 1, 2014
4	3. Reference Application Notes: Added the Initial Setting application notes for the RX21A and RX220 Groups.		
10, 11	Modified the description of reference application note in the following functions: R_INIT_StopModule, R_INIT_NonExistentPort, and R_INIT_Clock.		
16	6. Applying This Application Note to the RX21A or RX220 Group: Added.		
17	8. Reference Documents: Added the User's Manual: Hardware for the RX21A and RX220 Groups.		

All trademarks and registered trademarks are the property of their respective owners.

## General Precautions in the Handling of MPU/MCU Products

The following usage notes are applicable to all MPU/MCU products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

### 1. Handling of Unused Pins

Handle unused pins in accordance with the directions given under Handling of Unused Pins in the manual.

- The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

### 2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

- The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.  
In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

### 3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

- The reserved addresses are provided for the possible future expansion of functions. Do not access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

### 4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

- When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.

### 5. Differences between Products

Before changing from one product to another, i.e. to a product with a different part number, confirm that the change will not lead to problems.

- The characteristics of an MPU or MCU in the same group but having a different part number may differ in terms of the internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
  2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
  3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
  4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
  5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the products quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.  
Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.
  6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
  7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
  8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
  9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
  10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
  11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
  12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.  
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.



### SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

#### **Renesas Electronics America Inc.**

2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.  
Tel: +1-408-588-6000, Fax: +1-408-588-6130

#### **Renesas Electronics Canada Limited**

1101 Nicholson Road, Newmarket, Ontario L3Y 9C3, Canada  
Tel: +1-905-898-5441, Fax: +1-905-898-3220

#### **Renesas Electronics Europe Limited**

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.  
Tel: +44-1628-585-100, Fax: +44-1628-585-900

#### **Renesas Electronics Europe GmbH**

Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

#### **Renesas Electronics (China) Co., Ltd.**

Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

#### **Renesas Electronics (Shanghai) Co., Ltd.**

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

#### **Renesas Electronics Hong Kong Limited**

Unit 1601-1613, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852-2886-9022/9044

#### **Renesas Electronics Taiwan Co., Ltd.**

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

#### **Renesas Electronics Singapore Pte. Ltd.**

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

#### **Renesas Electronics Malaysia Sdn.Bhd.**

Unit 906, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jin Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

#### **Renesas Electronics Korea Co., Ltd.**

12F., 234 Teheran-ro, Gangnam-Ku, Seoul, 135-920, Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5141