

## Abstract

Crosstalk in a system is a fairly simple concept. It is the unwanted coupling of one signal on to the path of a second signal. In a Time of Flight (TOF) application, crosstalk can be from an electrical connection but also from optical coupling. To mitigate the effect of crosstalk, Intersil has provided a calibration/correction scheme inside the chip. To achieve sound calibration, care must be taken in the setup to ensure that only crosstalk is measured and corrected. This application note addresses the optical setup when doing crosstalk calibration. It does this by describing areas that deserve careful attention and recommends a process that produces good results.

## Crosstalk Definition

Crosstalk in an ISL29501 application can simply be defined as a signal that reaches the detector that was not reflected from a target. This can be from parasitic electric and magnetic fields on the circuit board, decoupling and internal paths within the chip. Optical crosstalk can come from a direct path, bouncing within a glass cover or window or from reflections in the cavity surrounding the optical components.

## Crosstalk Measurement

A crosstalk measurement is very similar to a ISL29501 distance measurement, but is different in two important ways. The first is that there must be no return signal reflected from a target. In the optical setup, the user must ensure that the optical pulses sent out by the emitter do not reach the Photo Diode (PD). With no return signal, anything left over is considered crosstalk. The second difference is that we only are interested in the signal magnitude. The distance has no meaning in a crosstalk measurement.

Crosstalk is a good predictor of system performance. At the maximum range, the signal to crosstalk ratio will limit system performance. Every effort should be made to minimize crosstalk in the application design.

A crosstalk measurement is setup as described above and is done after a magnitude calibration is performed. Registers 0x24 to 0x2B, 0x2F, and 0x30 should all be at their default or 0.

## Eliminating the Return Signal

There are a couple of ways to eliminate the return signal to ensure a measurement contains only crosstalk. One way, called the infinity method, makes a measurement where there is no possibility of any return signal reaching the PD. A very large room with low reflectivity walls might work. The trouble is, that with more power or if the system has lenses, the room becomes increasingly large. Another variation of the infinity method is to point the emitter toward the night sky with no obstacles in the emitter cone of light/signal. This is not convenient or practical for production.

## Covering the Emitter and PD

An alternate method is to cover the optical components and make a measurement. Previously, Intersil recommended using the piece of cardboard provided in the evaluation kit to cover both the emitter and PD. This works fairly well for initial evaluation. This becomes a problem when the optical components are covered by glass, which we expect will be the case in almost all applications. [Figure 1](#) shows the reflections inside the glass when both optical components are covered.

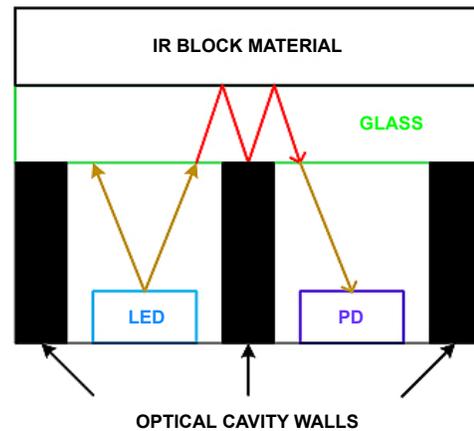


FIGURE 1. REFLECTIONS WITH COVERED EMITTER AND PD

The light from the emitter strikes the bottom of the glass and ~96% continues to the black cardboard. This material has some reflectivity, let's assume ~10%. This means that of the original signal that struck the glass, 9.6% will bounce back toward the cavity wall. Just to make the math simple, let's assume that 9.6% of the remaining light reflects off the cavity barrier, and 9.6% of that from the 2<sup>nd</sup> cardboard bounce. This implies that the PD will see  $0.096 * 0.096 * 0.096 = 0.000885$ . The amount of light at the angle shown will be small but it is important to realize that ~0.088% of that incident ray will reach the PD. This is optical crosstalk caused by the setup and has no relevance to the crosstalk in normal operation. If this setup were used for calibration, the calibration factors would be wrong. This would introduce large errors in distance measurements as well as reduce the range significantly.

## Covering the PD Only

This is the new recommended method. The problem with covering both components is that a large reflection bounces off the optical blocker and reflects back into the glass. By covering only the PD, we allow most of the light to pass through the glass with only a small amount left bouncing within the glass. Any reflection off the walls or the room will return to the covered PD and at a very low magnitude and with an effective cover be eliminated. [Figure 2](#) shows the light rays with only the PD covered.

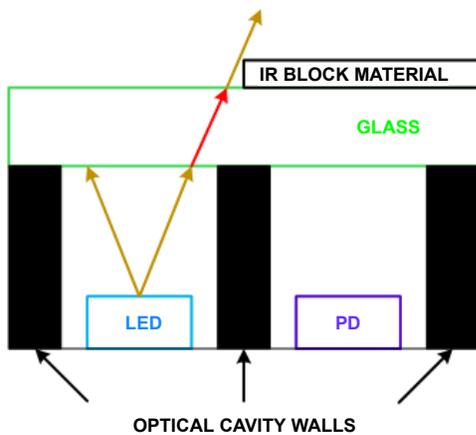


FIGURE 2. LIGHT PATH WITH ONLY THE PD COVERED

The drawing shows that the light passes through the glass and any reflection from the environment will strike the back of the light blocker. The blocker looks different than in [Figure 1 on page 1](#). This is not accidental, we are recommending a different material.

## Light Blocker

The light cover (blocker) has only 1 critical parameter: it must not allow 850nm light to pass through it. It does not matter if it absorbs or reflects, the light signal must not pass through. Future evaluation kits will use the following Poron: 4701-60-20031-04, Product # 2304547. There is nothing magical about this material, it was available and easy to cut to size. The sizing is less critical, but it's also important for it to work properly. This material is thin, making it easier to position it out of the Field of View (FOV) of the emitter. There are many materials that can accomplish this but they must block all emitted IR light from passing to the PD.

## Configuring for Crosstalk Calibration

[Figure 3](#) shows the Sand Tiger evaluation kit with glass configured for crosstalk calibration using the new method. Notice that there is a space (Y direction) between the LED source and the light blocker. The blocker must be completely out of the beam of the emitted light. The space is wider than this absolute minimum to allow the light to reflect and bounce a couple of times within the glass before it strikes the blocker. Each bounce within the glass before reaching the blocker will reduce the optical power of any light by >96%. The second requirement is that the blocker completely covers the FOV of the PD (hidden by

blocker). This guarantees that any light passed through the glass and is reflected back by the environment cannot directly strike the PD. The last requirement is that the blocker is flat against the glass.

Why use tape? The tape is not a requirement, but it makes it easy to compare crosstalk with and without the cover. It also brings the blocker down to the glass. Could I use a finger? The answer is not easily. The trouble is that it is hard to keep the blocker flat against the glass. A finger is thick and might enter the FOV of the emitter which causes it to light up (with IR). This could reflect back into the glass as additional, setup introduced, crosstalk. The goal is to block the light path to the PD without introducing additional crosstalk into the setup.



FIGURE 3. SAND TIGER CONFIGURED FOR CROSSTALK CALIBRATION

## Remaining Crosstalk

The recommendations thus far drastically reduce the crosstalk, however, some light through multiple bounces will still reach the PD. Anti-reflective coatings can reduce their magnitude but never completely eliminate it. Although there is still some crosstalk in the system, if the above steps are followed, it should closely match the crosstalk in the system during normal operation. If this is true, crosstalk calibration will measure the crosstalk accurately, program calibration coefficients back into the chip and that quantity will be subtracted in real time from each distance measurement.

## Calibration Without Glass

The technique described works just as well when no glass is present. Why not use the old method covering both the emitter and PD? The old method works reasonably well without glass because the cardboard and the optical components are very close to each other. There are sill bounces off the cardboard and case, but since they are so close together it takes many, many bounces for light from the emitter to reach the PD.

## Summary and Final Thoughts

It is important to note that both electrical and optical crosstalk are almost directly proportional to emitter current. For this reason, the emitter current must be set to normal application conditions before doing crosstalk calibration.

The following list summarizes the considerations in crosstalk calibration:

1. Magnitude calibration must be done first and the coefficients loaded into registers 0x2C to 0x2E.
2. Use a 850nm optical blocker over the PD only.
3. Ensure that the light blocker is positioned completely out of the FOV of the emitter and completely covers the FOV of the PD.
4. Ensure that the light blocker is reasonably flat against the glass, particularly the edge nearest the emitter.

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.  
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.  
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.  
Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.  
(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.  
(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



### SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

**Renesas Electronics America Inc.**  
1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.  
Tel: +1-408-432-8888, Fax: +1-408-434-5351

**Renesas Electronics Canada Limited**  
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

**Renesas Electronics Europe Limited**  
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K  
Tel: +44-1628-651-700, Fax: +44-1628-651-804

**Renesas Electronics Europe GmbH**  
Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

**Renesas Electronics (China) Co., Ltd.**  
Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

**Renesas Electronics (Shanghai) Co., Ltd.**  
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

**Renesas Electronics Hong Kong Limited**  
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852-2886-9022

**Renesas Electronics Taiwan Co., Ltd.**  
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

**Renesas Electronics Singapore Pte. Ltd.**  
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

**Renesas Electronics Malaysia Sdn.Bhd.**  
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

**Renesas Electronics India Pvt. Ltd.**  
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

**Renesas Electronics Korea Co., Ltd.**  
17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5338